
AD-A032 333 NAVAL POSTGRADUATE SCHOOL MONTEREY CALIF F/G 9/2
THE IMPLEMENTATION OF A FINITE ELEMENT COMPUTER CODE AND ASSOCI--ETC(U)
DEC 76 D M LOSH

UNCLASSIFIED NL

1 OF 1
ADA032333

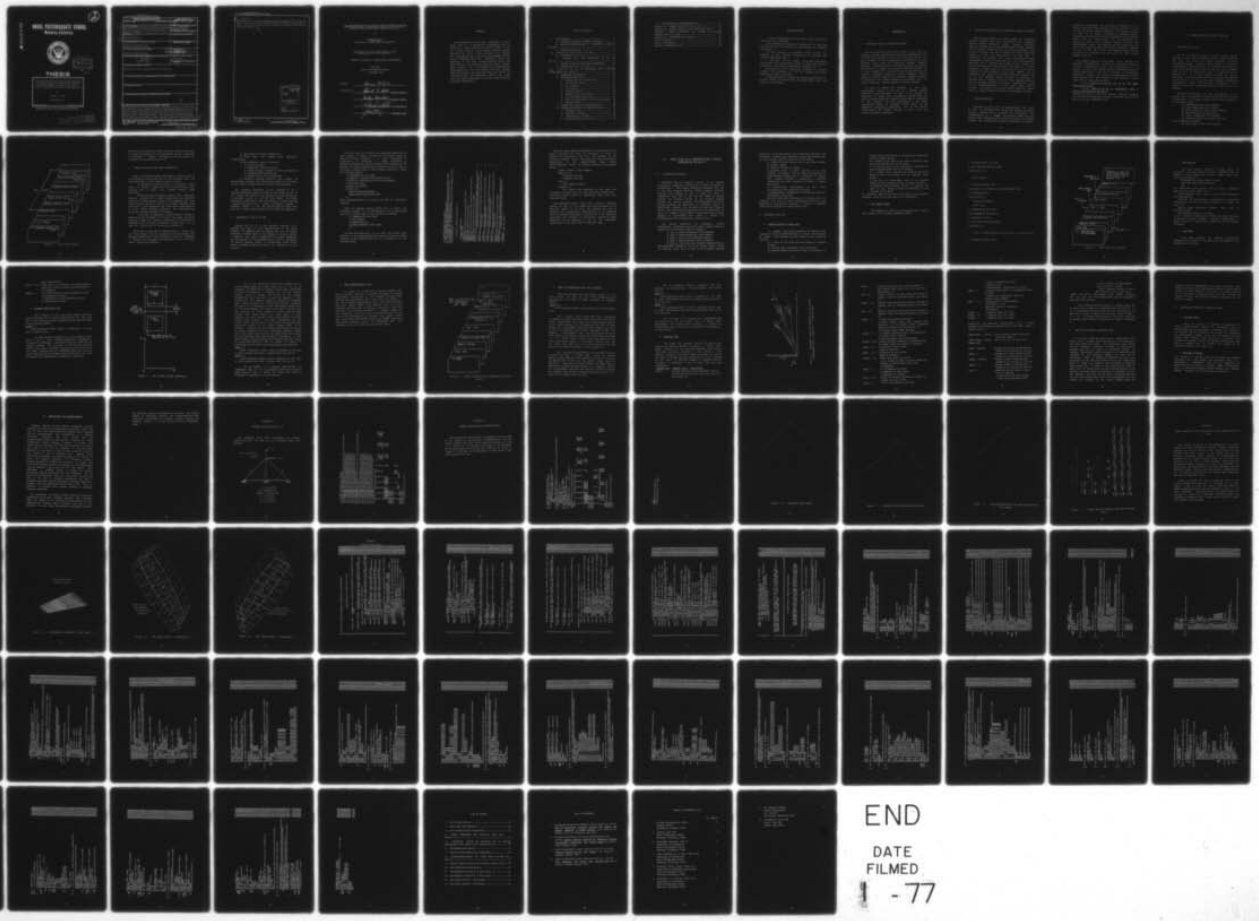

END

DATE FILMED
1 -77

AD A032333

(2)

NAVAL POSTGRADUATE SCHOOL
Monterey, California



DDC
RECEIVED
NOV 22 1976
B

THESIS

THE IMPLEMENTATION OF A FINITE ELEMENT COMPUTER CODE AND ASSOCIATED PRE-AND POSTPROCESSOR INTO AE4101 AND AE4102 (FLIGHT VEHICLE STRUCTURAL ANALYSIS I AND II

by

Dennis M. Losh

December 1976

Thesis Advisor: Robert E. Ball

Approved for public release; distribution unlimited.

COPY AVAILABLE TO DDC DOES NOT PERMIT FULLY LEGIBLE PRODUCTION

Unclassified

SECURITY CLASSIFICATION OF THIS PAGE (When Data Entered)

REPORT DOCUMENTATION PAGE		READ INSTRUCTIONS BEFORE COMPLETING FORM
1. REPORT NUMBER	2. GOVT ACCESSION NO.	3. RECIPIENT'S CATALOG NUMBER
4. TITLE (and Subtitle) The Implementation of a Finite Element Computer Code and Associated Pre-and Postprocessor Into AE4101 and AE4102 (Flight Vehicle Structural Analysis I and II)		5. TYPE OF REPORT & PERIOD COVERED Master's Thesis; December 1976
		6. PERFORMING ORG. REPORT NUMBER
7. AUTHOR(s) Dennis M. Losh		8. CONTRACT OR GRANT NUMBER(s)
9. PERFORMING ORGANIZATION NAME AND ADDRESS Naval Postgraduate School Monterey, California 93940		10. PROGRAM ELEMENT, PROJECT, TASK AREA & WORK UNIT NUMBERS
11. CONTROLLING OFFICE NAME AND ADDRESS Naval Postgraduate School Monterey, California 93940		12. REPORT DATE December 1976
		13. NUMBER OF PAGES 91
14. MONITORING AGENCY NAME & ADDRESS(if different from Controlling Office) 90 p.		15. SECURITY CLASS. (of this report) Unclassified
		15a. DECLASSIFICATION/DOWNGRADING SCHEDULE

16. DISTRIBUTION STATEMENT (of this Report)

Approved for public release; distribution unlimited.

17. DISTRIBUTION STATEMENT (of the abstract entered in Block 20, if different from Report)

18. SUPPLEMENTARY NOTES

19. KEY WORDS (Continue on reverse side if necessary and identify by block number)

20. ABSTRACT (Continue on reverse side if necessary and identify by block number)

The objectives of the project described in this thesis were to: 1) provide the documentation that is needed for a Naval Postgraduate School student to use the general purpose finite element computer program called SAP IV, and 2) to make available, and prepare the users manual for a pre-and postprocessor program called SUBROUTINE PSAP. This subroutine, which was developed at the NASA Langley Research Center, has been modified to specifically plot the finite element model geometry for SAP IV models and to postprocess

OVER

DD FORM 1 JAN 73 1473 (Page 1)

EDITION OF 1 NOV 65 IS OBSOLETE S/N 0102-014-6601

Unclassified

SECURITY CLASSIFICATION OF THIS PAGE (When Data Entered)

251 450 4B

20. (continued)
displacement data for those models on the NPS Calcomp Model 765 Plotter. The input and output for SAP IV and SUBROUTINE PSAP are discussed in detail. The codes have been used successfully in AE 4102, Flight Vehicle Structural Analysis II.

ACCESSION for
NTIS White Section
DDC Buff Section
UNANNOUNCED
JUSTIFICATION
BY
DISTRIBUTION/AVAILABILITY CODES
Dist. AVAIL. and/or SPECIAL
A

THE IMPLEMENTATION OF A FINITE ELEMENT COMPUTER CODE AND ASSOCIATED PRE-AND POSTPROCESSOR INTO AE4101 AND AE4102 (FLIGHT VEHICLE STRUCTURAL ANALYSIS I AND II)

by

Dennis M. Losh
Lieutenant
B.S., United States Naval Academy, 1970

Submitted in partial fulfillment of the requirements for the degree of

MASTER OF SCIENCE IN AERONAUTICAL ENGINEERING

from the

NAVAL POSTGRADUATE SCHOOL

December 1976

Author: Dennis M Losh

Approved by: Robert E Ball
Thesis Advisor

Gilles Cantin
Second Reader

Leonard W Ledd
Chairman, Department of Aeronautics

J K Boston
Academic Dean

ABSTRACT

The objectives of the project described in this thesis were to : 1) provide the documentation that is needed for a Naval Postgraduate School student to use the general purpose finite element computer program called SAP IV, and 2) to make available, and prepare the users manual for, a pre-and postprocessor program called SUBROUTINE PSAP. This subroutine, which was developed at the NASA Langley Research Center, has been modified to specifically plot the finite element model gecmetry for SAP IV models and to postprocess displacement data for those models on the NPS Calcomp Model 765 Plotter. The input and output for SAP IV and SUBROUTINE PSAP are discussed in detail. The codes have been used successfully in AE 4102, Flight Vehicle Structural Analysis II.

TABLE OF CONTENTS

I. INTRODUCTION..... 8

A. SIRUCTURAL ANALYSIS SOFTWARE PACKAGES..... 8

B. PRE-AND POSTPROCESSORS FOR STRUCTURAL ANALYSIS PROGRAMS..... 9

C. THESIS MOTIVATION..... 9

II. GUIDE TO THE USE OF SAP IV AT NPS..... 11

A. DESCRIPTION OF SAP IV..... 11

B. COMPUTER CARD DECK PREPARATION AT NPS FOR SAP IV..... 12

C. HELPFUL POINTS ON DATA DECK PREPARATION..... 15

D. ALTERATION OF SAP IV AT NPS..... 16

III. *GUIDE TO THE USE OF SUBROUTINE PSAP, A PRE-AND* POSTPROCESSOR FOR SAP IV..... 20

A. SUBROUTINE DESCRIPTION..... 20

B. SUBROUTINE PSAP USE..... 21

1. General Set-up of Input Deck..... 21

2. Job Control Cards..... 22

3. Main Program..... 25

4. Title Card..... 25

5. Namelist OPTION..... 26

6. Geometry Input Data Deck..... 28

7. Case Indentification Card..... 31

8. Deck of Displacement Data to be Plotted.. 33

9. Namelist PICT..... 34

C. METHOD FOR ALTERING SUBROUTINE PSAP..... 38

D. SIGNIFICANT ASPECTS OF SUBROUTINE PSAP..... 39

1. Exploded Plots..... 39

2. Portions of Models..... 39

3. Specification of View..... 40

4. Possible Sources of Errors..... 40

IV. CONCLUSIONS AND RECOMMENDATIONS..... 42
Appendix A: EXAMPLE PROBLEM USING SAP IV..... 44
Appendix B: EXAMPLE PROBLEM USING SUBROUTINE PSAP..... 46
Appendix C: SAMPLE SUBROUTINE PSAP OUTPUTS FOR A FINITE ELEMENT MODEL OF A WING..... 53
Appendix D: SUBROUTINE PSAP LISTING..... 59
LIST OF FIGURES..... 60
LIST OF REFERENCES..... 89
INITIAL DISTRIBUTION LIST..... 90

ACKNOWLEDGEMENT

I wish to acknowledge the help that I have received in the course of my research.

I am particularly indebted to Professor R. E. Ball, who provided me with the guidance and aid necessary to complete the project.

I am also grateful to Professor Gilles Cantin, who provided me with valuable information in starting and carrying through my work.

I also wish to give credit to the NPS programming consultants, and in particular Sharon D. Raney, for the fine assistance I received in debugging my computer runs.

My gratitude is also heartfully extended to Richard Citerley for providing me with the computer card decks necessary to begin my project.

I especially want to express my sincere appreciation to my wife, Karen, for her patience and perseverance with the typing of this thesis.

I. INTRODUCTION

A. STRUCTURAL ANALYSIS SOFTWARE PACKAGES

The past decade has seen great strides in the field of computer software packages that have been developed for use in structural analysis. A great deal of time and effort has been expended in the development and distribution of these packages. Today there are structural analysis computer programs for almost every conceivable structure an engineer could desire to analyze. The types of analyses performed by a given package vary widely and may include features for linear or nonlinear materials, static analysis, dynamic analysis, buckling analysis, and nonlinear dynamic analysis, to name only a few. These programs can be grouped into two major categories - special purpose or general purpose.

In order to expose the students at the Naval Postgraduate School to the use of a general purpose structural analysis program, as well as to provide the capability of using such a program in research work, the finite element structural analysis program SAP IV (Reference 1) was acquired and made operational at the Naval Postgraduate School by Professor Gilles Cantin of the Mechanical Engineering Department. SAP IV can perform linear static and dynamic analyses on one-, two-, and three-dimensional structures.

B. PRE-AND POSTPROCESSORS FOR STRUCTURAL ANALYSIS PROGRAMS

After the development of a large number of structural analysis programs, users began to recognize that a disparity existed between efficient general purpose structural analysis programs and optimum utilization of these programs. Many of today's software structural analysis packages, such as SAP IV, require the user to prepare and reduce tremendous amounts of data. The need existed for some aids in processing and reducing these large quantities of data. Consequently, there have been many pre- and postprocessors developed for a specific use as well as for a general use basis during the past several years. The value of a given processing package lies in its ability to aid the user in preparing his model geometry, in his data checks, and in processing the output in an easily understood fashion. One of the most effective means utilized in preparing or reducing data is through the use of visual displays, whether they be designed primarily for graphic presentations, such as the Stromberg-Carlson, or for paper plots, such as Calcomp. This ability to visually display input and output data is a highly valuable tool for the structural analyst.

C. THESIS MOTIVATION

The desire to have a pre- and postprocessor that could be used in conjunction with the general purpose structural analysis program SAP IV prompted the acquisition and implementation of a general use plotting package by this author. After researching the possible options, an existing program was obtained from Anamet Laboratories, San Carlos,

California. The program was originally developed at the Langley Research Center, Hampton, Virginia by Gary L. Giles for use with modern digital computers. The program, details of which can be found in Reference 2, generates oblique orthographic projections of three-dimensional finite element models and is distinguished by its provisions for generality, ease of use, different display options, and computational speed. The computer code was written for use on CDC 6000 series machines and had to be modified somewhat for use on the NPS 360/67. The modified version of the program is now available for use with the NPS Calcomp Plotter Model 765.

The primary purpose of this thesis is to provide the necessary documentation in order that students enrolled at the Naval Postgraduate School, and specifically in the courses AE 4101, 4102 (Flight Vehicle Structural Analysis I and II respectively), can, with a minimum of difficulty, effectively utilize SAP IV and its now-functional pre-and postprocessor PSAP. The remainder of this thesis is broken down into two major subdivisions,

1) II. GUIDE TO THE USE OF SAP IV AT THE NAVAL POSTGRADUATE SCHOOL

2) III. GUIDE TO THE USE OF SUBROUNTINE PSAP, A PRE-AND POSTPROCESSOR FOR SAP IV

Appendices A and B of this work provide detailed examples for the input preparation and output reduction of data using both SAP IV and SUBROUTINE PSAP.

II. GUIDE TO THE USE OF SAP IV AT NPS

A. DESCRIPTION OF SAP IV

SAP IV is a general purpose structural analysis digital computer program that can provide a finite element solution for both the static and dynamic analysis of linear structural systems. A detailed user's manual is contained in Reference 1. The program has the capacity to analyze very large three-dimensional systems, as well as small systems, with no loss in efficiency. SAP IV, which is coded in FORTRAN IV , is a very flexible program and can be considered a very efficient aid to the analyst. The purpose of this section is to provide the necessary additional documentation, above that provided in Reference 1, for a student at the Naval Postgraduate School to make use of the program.

The methods of analysis and the construction of the program are not included in this section, but can be found in Reference 1. The program contains nine finite elements of the following types:

(a) three-dimensional truss element,

(b) three-dimensional beam element,

(c) plane stress and plane strain element,

(d) two-dimensional solid element,

(e) three- dimensional solid element,

(f) variable-number-nodes thick shell and three-dimensional element,

(g) thin plate or thin shell element,

(h) boundary element,

(i) pipe element (tangent and bend).

There are numerous options and combinations of static and dynamic analysis that are available to the user of the program. Reference 1 provides specific details of the many available user options.

B. COMPUTER CARD DECK PREPARATION AT NPS FOR SAP IV

Figure 1 outlines the overall computer card deck necessary to access and utilize SAP IV as it is currently operational at NPS. A complete detailed breakdown of the necessary IBM job control cards follows on the next page.

```
//  ( STANDARD GREEN JOB CARD )
//GO EXEC PGM=SAP,REGION=260K
//STEPLIB DD UNIT=2321,VOL=SER=CEL002,DISP=SHR,
//   DSN=F0559.SAPLM
//GO.FT01F001 DD UNIT=SYSDA,SPACE=(CYL,(6,6)),
//   DCB=(RECFM=VSB,LRECL=1284,BLKSIZE=2572)
//GO.FT02F001 DD UNIT=SYSDA,SPACE=(CYL,(6,6)),
//   DCB=(RECFM=VSB,LRECL=1284,BLKSIZE=2572)
//GO.FT03F001 DD UNIT=SYSDA,SPACE=(CYL,(6,6)),
//   DCB=(RECFM=VSB,LRECL=1284,BLKSIZE=2572)
//GO.FT04F001 DD UNIT=SYSDA,SPACE=(CYL,(6,6)),
//   DCB=(RECFM=VSB,LRECL=1284,BLKSIZE=2572)
//GO.FT05F001 DD DDNAME=SYSIN

//GO.FT06F001 DD SYSOUT=A,SPACE=(CYL,(3,1)),
//   DCB=(RECFM=FBA,LRECL=133,BLKSIZE=1330)
//GO.FT07F001 DD UNIT=SYSDA,SPACE=(CYL,(6,6)),
//   DCB=(RECFM=VSB,LRECL=1284,BLKSIZE=2572)
//GO.FT08F001 DD UNIT=SYSDA,SPACE=(CYL,(6,6)),
//   DCB=(RECFM=VSB,LRECL=1284,BLKSIZE=2572)
//GO.FT09F001 DD UNIT=SYSDA,SPACE=(CYL,(6,6)),
//   DCB=(RECFM=VSB,LRECL=1284,BLKSIZE=2572)
//GO.FT10F001 DD UNIT=SYSDA,SPACE=(CYL,(6,6)),
//   DCB=(RECFM=VSB,LRECL=1284,BLKSIZE=2572)
//GO.FT11F001 DD SYSOUT=B,SPACE=(TRK,(20,2)),
//   DCB=(RECFM=FB,LRECL=80,BLKSIZE=7200)
//GO.SYSIN DD *


    ( SAP IV ---  DATA )


/ ( STANDARD NPS EOF CARD )
```

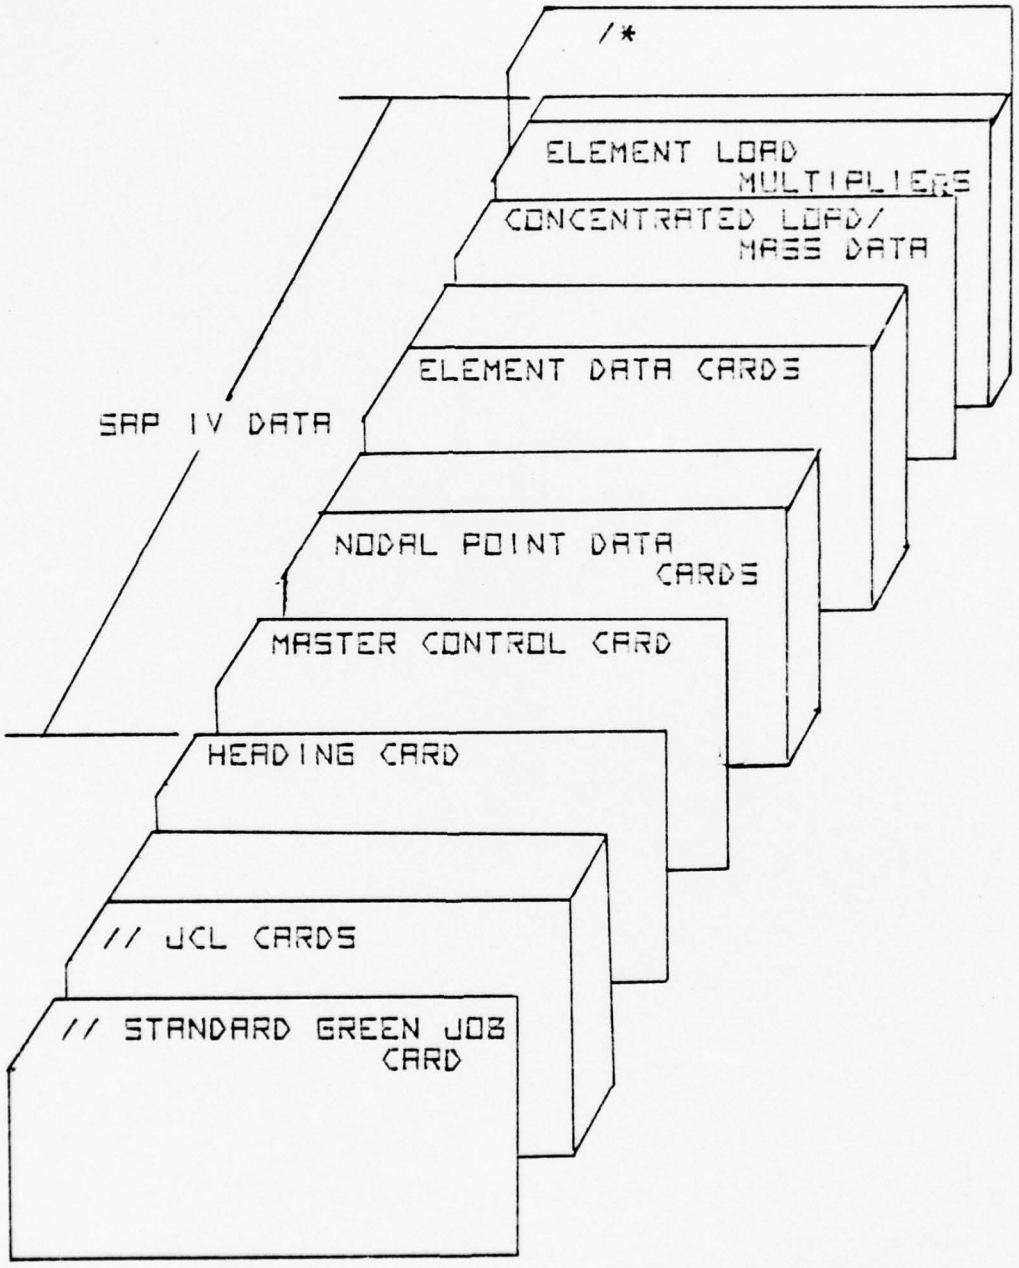


Figure 1 - SAP IV DECK SET-UP

After the //GO.SYSIN DD * card, the deck of SAP IV data that is prepared according to the instructions in the appendices of Reference 1 follows. Following the SAP IV data is the standard NPS end-of-file card (/*).

C. HELPFUL POINTS ON DATA DECK PREPARATION

There are several possible areas where a user can err in his preparation of data for SAP IV. The following items are representative of a few common sources of error.

1) Particular attention should be directed toward using the correct formats and correct card columns in key punching data on cards. (i.e., integer formats, right justified)

2) The program has several internal data generation features inherent in it. Simply because data were generated during the program execution does not necessarily mean they were generated correctly. Errors in the user- prepared input cards used in data generation can cause severe discrepancies to occur during program execution. The generated data should be carefully checked for accuracy.

3) In order to terminate a given problem a number of blank cards are necessary at the end of the input data deck. Specific points of interest pertaining to the problem of termination can be found in Reference 1 under note (1) on page II.1 and in note (1) on the top of page V.2.

SAP IV has a wide range of options where a clever user can fully exploit the full capabilities of the program. The detailed decription of these features is found in Reference 1; however, the following list summarizes a few of the more useful options and features.

1) Data check only mode of execution.

2) Nodal point and element data generation capabilities.

3) Five different types of analysis.

a. static analysis

b. eigenvalue /vector solution

c. forced dynamic response by mode superposition

d. response spectrum analysis

e. direct step by step integration

4) Automatic punched computer card output of displacement results. This feature was added to the program by this author to make possible graphic postprocessing.

The foregoing discussion is not intended to be a complete diagnostic summary of SAP IV, but rather an aid to the student who desires to get started using the program as it currently exists on the NPS IBM 360/67. The above discussion, along with a copy of Reference 1, should provide a jumping off place for a novice structural analyst. A complete example of the job control cards and input data deck for a static truss analysis can be found in Appendix A.

D. ALTERATION OF SAP IV AT NPS

Because SAP IV is a very flexible program, it is possible for a user to make modifications to the basic program. The computer code is complex, but it is not overly difficult to modify parts of the program in order to satisfy a specific user need. A method that has proven successful for this author, in the modification of a SAP IV subroutine to provide punched output of displacement data, and to create a personal version of SAP IV, is outlined in this section.

The first step is to define the subroutine name that the user wishes to modify. A listing of the source program is available through Professor R. E. Ball, Department of Aeronautics, or Professor G. Cantin, Department of Mechanical Engineering. Having defined those portions of the program for which modification is desired, the next step is to obtain a punched copy of those desired routines by using the following format.

```
 // (STANDARD NPS JOB CARD)
//SYSPRINT DD SYSOUT=A,SPACE=(TRK,(10,1))
//SYSUT1 DD DISP=SHR,UNIT=2321,VOL=SER=CEL001,
// DSN=F0099.SAPSR
//SYSUT2 DD SYSOUT=B
//SYSIN DD *
   PUNCH TYPORG=PO,MAXNAME=2
   MEMBER NAME=(SUBROUTINE NAME)
/*
```

NOTE: SUBROUTINE NAME is the name of the SAP IV subroutine required.

With the desired routine decks now in hand, the necessary changes can be incorporated into the subroutine deck and an object deck is then obtained as follows:

```
// (STANDARD NPS JOB CARD)
// EXEC FORTCD
// FORT.SYSIN DD *
(MODIFIED FORTRAN SOURCE DECK)
/*
```

The next and final step is to take the object deck obtained in the previous step and insert it into the proper position in the control cards that are illustrated on the following page.

```
// (STANDARD GREEN JOB CARD)
// EXEC LGO,PARM.LINK='OVLY,XREF,LIST'
//LINK.SYSLMOD DD DSN=F0559.SAPLM(SAP),UNIT=2321,VOL=SER=CEL002,
//    DISP=(NEW,KEEP),SPACE=(CYL,(35,2,2)),LABEL=RETPD=90
//LINK.SYSUT1   DD  SPACE=(CYL,(2,1))
//LINK.LIBRARY DD DSN=F0099.SAPLM,UNIT=2321,VOL=SER=CEL001,DISP=SHR
//LINK.SYSIN DD *

    ( MODIFIED FORTRAN OBJECT DECK )

   INCLUDE LIBRARY(SAP)
      ENTRY MAIN
  OVERLAY A
  INSERT ADDSTF,BOUND,CLAMP,INL,RUSS,SESOL,TRUSS
  OVERLAY A
  INSERT BEAM,NEWBM,SLAVE,TEAM,NEWB
  OVERLAY A
  INSERT CROSS,DOT,ELAW,FORMB,PLANE,PLNAX,POSINV,QUAD,VECTOR
  OVERLAY A
  INSERT BRICK8,DERIV,LOAD,LOSTR,PRIST,THREED
  OVERLAY A
  INSERT CSTSTR,LCTMOM,LCT9ST,LSTSTR,QDCOS,QTSHEL,SHELL,SLCCT,SLST,     X
                STRETR,TDCOS,TPLATE,TRFPRD,QTSARG,TRIARG,TRANSF
  OVERLAY A
  INSERT CROSS2,DER3DS,FACEPR,FNCT,INP21,SOL21,SSLAW,ST8R21,THDFE,      X
                VECTR2,GAUSS
  OVERLAY A
  INSERT BENDDC,BENDKS,PINVER,PIPE,PIPEK,PIPES2,PIPES3,SELECT,          X
                TANGDC,TANGKS,PIPEC
  OVERLAY A
  INSERT BANDET,DECOMP,EIGSOL,INVECT,JACOBI,MODES,REDBAK,SBLOCK,        X
                SCHECK,SECNTD,SOLEIG,SSPCEB
  OVERLAY A
  INSERT DISPLR,DISPLY,ELOUTH,EMID,GMTN,HISTRY,LOAD1,LOAD2,PPLOT,       X
                RESPON,STRSD1
  OVERLAY A
  INSERT ELOUTR,EMIDR,RESPEC,SD,SPECTR,STRESR
  OVERLAY A
  INSERT ADDMAS,ELOUTS,EMIDS,GROUND,INCLY,INOUT,INTHIS,LOADV,           X
                PLOAD,REDVK,SDSPLY,SOLSTP,SPLOT,STEP,TRIFAC
  NAME SAP
/ ( STANDARD NPS EOF CARD )
```

There are many options available in the creation of load module libraries and they are discussed in detail in Reference 4, sections II. and III. The portion of the preceding example control card deck that would necessitate modification is the //LINK.SYSLMOD card, where F0559.SAPLM(SAP) should be changed according the following format :

General format: Lnnnn. anyname

where L is :

S-student data set

F-faculty data set

nnnn is :

user number assigned

anyname is :

any unique name assigned by the user (1-6 characters in length with the first character alphabetic), and CEL002, should reflect an appropriate data cell with available space.

The procedure outlined above will create a modified version of SAP IV on a chosen data cell available to the user for a period of 90 days. The program can now be executed with appropriate modifications to the //STEPLIB card as discussed previously in section II. B. Any questions concerning the creation of load module libraries or their execution can be answered by any of the programing consultants on the first floor of Ingersoll Hall.

III. GUIDE TO THE USE OF SUBROUTINE PSAP, A PRE-AND POSTPROCESSOR FOR SAP IV

A. SUBROUTINE DESCRIPTION

SUBROUTINE PSAP is a modified version of the oblique orthographic projection program that is found in Appendix B of Reference 2. The program, originally developed for use at the NASA Langley Research Center, Hampton, Virginia, required some changes so that it could be used in conjunction with SAP IV and the NPS Model 765 Calcomp Plotter. The original version of the plotting package allowed for various geometry and displacement data input options. However, the subroutine, as currently filed, is constructed strictly for use with the input and output of SAP IV. With some slight modifications to the subroutine, it could be adapted to any number of different types of input geometry or displacement data decks. A method for accomplishing this is outlined in section III. C.

The current capability for generating oblique orthographic projections of SAP IV finite element models is limited to the following types of elements:

1) Type 1, Three-Dimensional Truss Elements
2) Type 2, Three-Dimensional Beam Elements
3) Type 3, Plane Stress Membrane Elements
4) Type 4, Two-Dimensional Finite Elements
5) Type 6, Plate and Shell Elements (Quadrilateral).

The undeformed topology of the finite element model, useful in checking input data, as well as the displaced topology

projection of the same model, can be obtained from PSAP. The subroutine contains many different options and permutations of those options, some of which are listed below.

1) plots of models annotated with grid point numbers of element numbers

2) plots of portions of models

3) exploded plots of model sections (i.e., line elements coincident with the edges of triangular or quadrilateral elements may be difficult to single out; program provides a capability to separate elements so that their absence or presence is easily detectable)

4) displacements superimposed on grid point coordinates of the undeformed structure

5) displacements represented as vectors extending the undisplaced grid points.

There are many more combinations of options that are available and will be more specifically outlined in the remainder of this section. Appendix B details a complete input-output example of a pin-jointed truss.

B. SUBROUTINE PSAP USE

1. General Set-up of Input Deck

In general, the correct sequence of computer cards required to utilize SUBROUTINE PSAP is shown schematically in Figure 2 and consists of eight separate major groups as follows:

1) a group of JCL cards and main program to allocate storage

2) a single card containing title information

3) Namelist OPTION containing values to determine if

proper storage allocation is available and specifying various program options

4) a geometry deck (SAP IV data deck) containing grid points and connectivity of the model

5) an optional single title card used to identify the deck of displacement data to be plotted

6) a single card containing the value of the total number of SAP IV load cases and an optional scale factor

7) the deck of displacement data to be plotted (output of the execution of SAP IV-static analysis)

8) Namelist PICT containing values to specify the type of plot desired and what information is to be included on the plots.

By repeating parts of the basic input data to the program, different plots of the same data can be generated.

2. Job Control Cards

The sequence of cards on the following page depicts the necessary JCL to execute SUBROUTINE PSAP.

```
// (STANDARD GREEN JOB CARD)
// EXEC FORTCLGP,REGION.GO=180K
//FORT.SYSIN DD *

   ( MAIN PROGRAM )

/ ( STANDARD NPS EOF CARD )
//LINK.USDD DD UNIT=2321,VOL=SER=CEL002,DISP=SHR,
// DSN=F0559.PSAPLM
//LINK.SYSIN DD *
     INCLUDE USDD(PSAP)
     ENTRY MAIN
/ ( STANDARD NPS EOF CARD )
//GO.FT10F001 DD UNIT=SYSDA,
// SPACE=(CYL,(3,1)),
// DCB=(RECFM=VS,BLKSIZE=3520)
//GO.SYSIN DD *

   ( DATA --- STARTING WITH THE TITLE CARD --- SEE FIGURE 2)

/ ( STANDARD NPS EOF CARD )
```

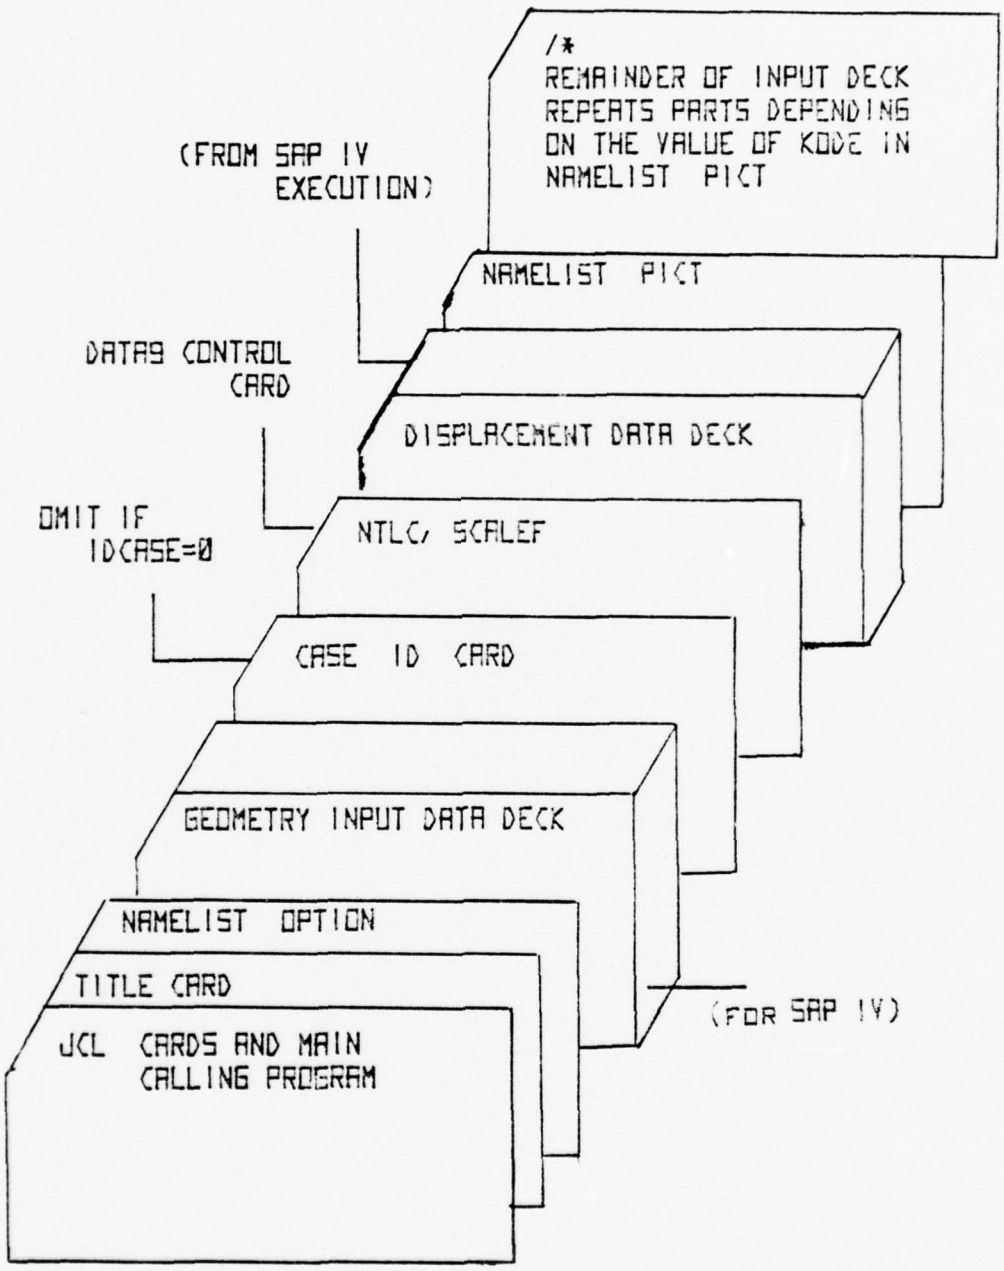


Figure 2 - PSAP INPUT CARD SEQUENCE

3. Main Program

The main program consists of three cards. It allocates the proper storage and calls SUBROUTINE PSAP. An example of a main program for a finite element model that contains 400 nodes is :

```
DIMENSION ZZZ (2800), DISPD (5,3,400)
CALL PSAP (ZZZ, 2800,DISPD,400)
END
```

The definition of the arguments used in calling SUBROUTINE PSAP (ZZZ, NZ, DISPD, NON) are :

ZZZ-blankcommon array used to store nodal coordinates and displacements

NZ-length of array ZZZ (NZ is determined by multiplying the number of nodes in the model by seven, i.e., NZ=no. of nodes * 7)

DISPD-a three dimensional working array used in subroutine DATA9

NON-number of nodes in the model

It is crucial to dimension ZZZ (7*NON) and DISPD (5,3,NON) correctly in the main program. Improper dimensioning of these arrays can cause output errors that are not readily traceable.

4. Title Card

This card contains any desired alphanumeric information in columns 1 to 80. The title will appear at the beginning of the plots.

5. Namelist OPTION

Namelists are a convenient means of inputing the names of several parameters along with their corresponding values. For the NPS IBM 360/67, the format for using namelists is as follows:

1) card 1-&name-beginning in card column 2 where name is the name of the subject namelist

2) succeeding cards- beginning in card column 2, the names of the variables and their values separated by commas

3) final card -&END-starting in card column 2.

An example of a namelist format is shown below:

```
col
2
↓
&OPTION
NNDEST = 400,NUDISP =1,
PSIZE =8.0
&END
```

Any or all parts of a defined namelist may be included, and each parameter may be specified in any order between the &name card and the &END card.

The description of the variable names in Namelist OPTION and their default values are contained in Reference 2. They are given here to assist the user in data preparation.

FORTRAN name - Default value - Description

NNDEST - 1 The number of nodes(NON) as defined in the program

NUDISP - 1 0 x-direction displacements not to be input
1 x-direction displacements to be input

NVDISP - 1 0 y-direction displacements not to be input
1 y-direction displacements to be input

NWDISP - 1 0 z-direction displacements not to be input
1 z-direction displacements to be input
(NOTE: when SAP IV displacement data is to be used, NUDISP=NVDISP=NWDISP=1; for no displacement data NUDISP=NVDISP=NWDISP=0)

KGEOM - 9 Specifies the subroutine and corresponding method of input for model geometry
1 subroutine GEOM1, a user-supplied subroutine
2 subroutine GEOM2, a user-supplied subroutine
9 subroutine GEOM9, reads in grid points and element data specifically from a SAP IV data deck

KATA - 9 Specifies the subroutine and corresponding method of input for displacement data
1 subroutine DATA1, a user-supplied subroutine
2 subroutine DATA2, a user-supplied subroutine
9 subroutine DATA9, reads a punched output displacement deck from execution of SAP IV

NVALUS - 0 NOT INCORPORATED-ALLOW DEFAULT

IRESEQ - 1 Grid point numbers are stored in the program from 1 to the total number of grid points
0 no internal resequencing of grid points necessary; they are already in ascending order starting with 1
1 resequence grid points from lowest grid point number to highest grid point number

KPLOT - 1 Specifies the type of output device to be used (ALLOW DEFAULT)

XSPACE - 5.0 Space between plots in the y-direction,in inches(see Figure 3 for an explanation of

axis orientation)

PSIZE - 10.0 Paper size in x-direction, in inches(used in scaling of plots to insure this dimension is not exceeded)

IDCASE - 0 0 no identification card preceeds the deck of displacement values
1 identification card preceeds the deck of displacement values

6. Geometry Input Data Deck

This portion of the input deck contains the grid point locations and the element connectivity. The deck has one of the following forms, depending on the value of KGEOM in the Namelist OPTION.

KGEOM = 9

Calls subroutine GEOM9, which is constructed to read SAP IV geometry data.

(a) When KGEOM is specified as 9, the complete input deck of SAP IV data, prepared according to Appendices I through IV of Reference 1, is placed after the &END card of Namelist OPTION. The portions of SAP IV data deck that involve load, mass, or dynamic analysis data are not part of the input geometry data to SUBROUTINE PSAP. Only the grid point locations and the element connectivity data are used to generate the orthographic projection of the model.

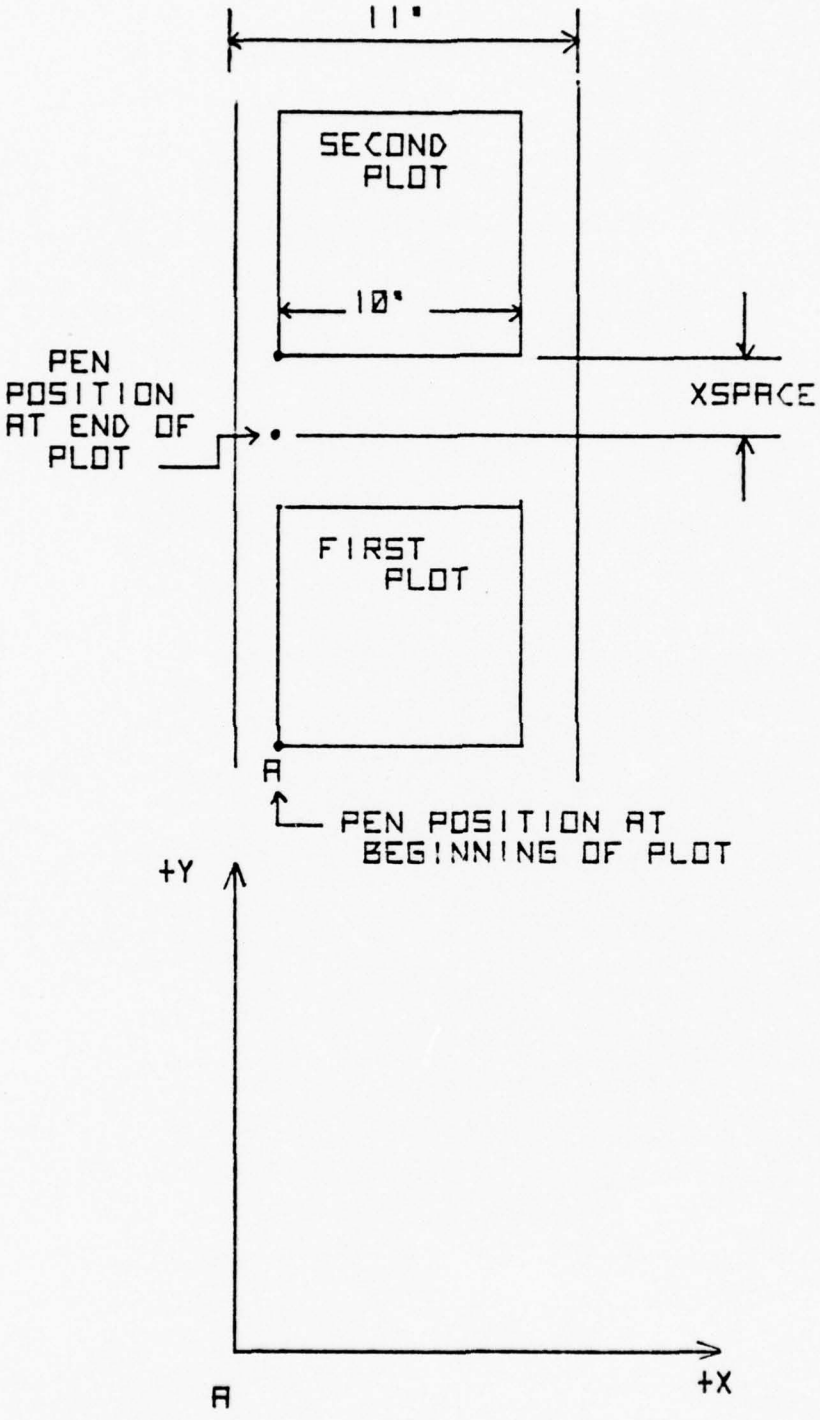


Figure 3 - NPS CALCOMP PLOTTER ORIENTATION

(b) It is possible to input only a portion of the finite element model for a data check. To do so, it is necessary to modify SAP IV element control cards (described in detail in Reference 1, Appendix IV) for the desired element types to reflect the portion of the element connectivity cards that will be input. For example, if only connectivity for element numbers 15 through 50 of element type 1 (truss elements) of a SAP IV data deck are available for input, it is necessary to alter the element control card for the truss elements. The field on the SAP IV control card that defines the total number of truss elements (card columns 6-10) would reflect the upper bound, in this case-50, and card columns 65-70 would reflect the lower bound, in this case-15. All nodal coordinates for the entire model may be input, or only those that specifically define the portion of the finite element model to be plotted. In either case, the nodal coordinates that relate to element numbers 15-50 must be specified. Unknown results will occur when trying to plot an element whose node points are not specified. The above feature is valuable in a case where several different people are preparing different parts of a large data base for a SAP IV problem and desire to individually check their inputs graphically for accuracy.

KGEOM = 1

Calls subroutine GEOM1, which is prepared by the user to read geometry data from a program other than SAP IV.

KGEOM = 2

Calls subroutine GEOM2, which is prepared by the user to read geometry data from a program other than SAP IV.

Use of KGEOM=1 or 2 requires modification of SUBROUTINE PSAP to fit the specific format of the user's input geometry data. A method for doing this will be discussed in paragarph C. of this section.

7. Case Indentification Card

If IDCASE =0 is specified in Namelist OPTION, this card is omitted. The card, if present, contains any desired alphanumeric information in card columns 1-80 which will identify all displacements for a given case. For IDCASE = 1 and SAP IV punched displacement data, a case identification card must appear before each Namelist PICT for every different load case that is plotted in addition to load case one. This is illustrated in Figure 4. A maximum number of five different load cases can be obtained from SAP IV. The case ID card information, if present, will appear before each load case's DISPLACEMENT DATA TO BE PLOTTED section in the printed computer output from SUBROUTINE PSAP. This information does not appear on any Calcomp plots.

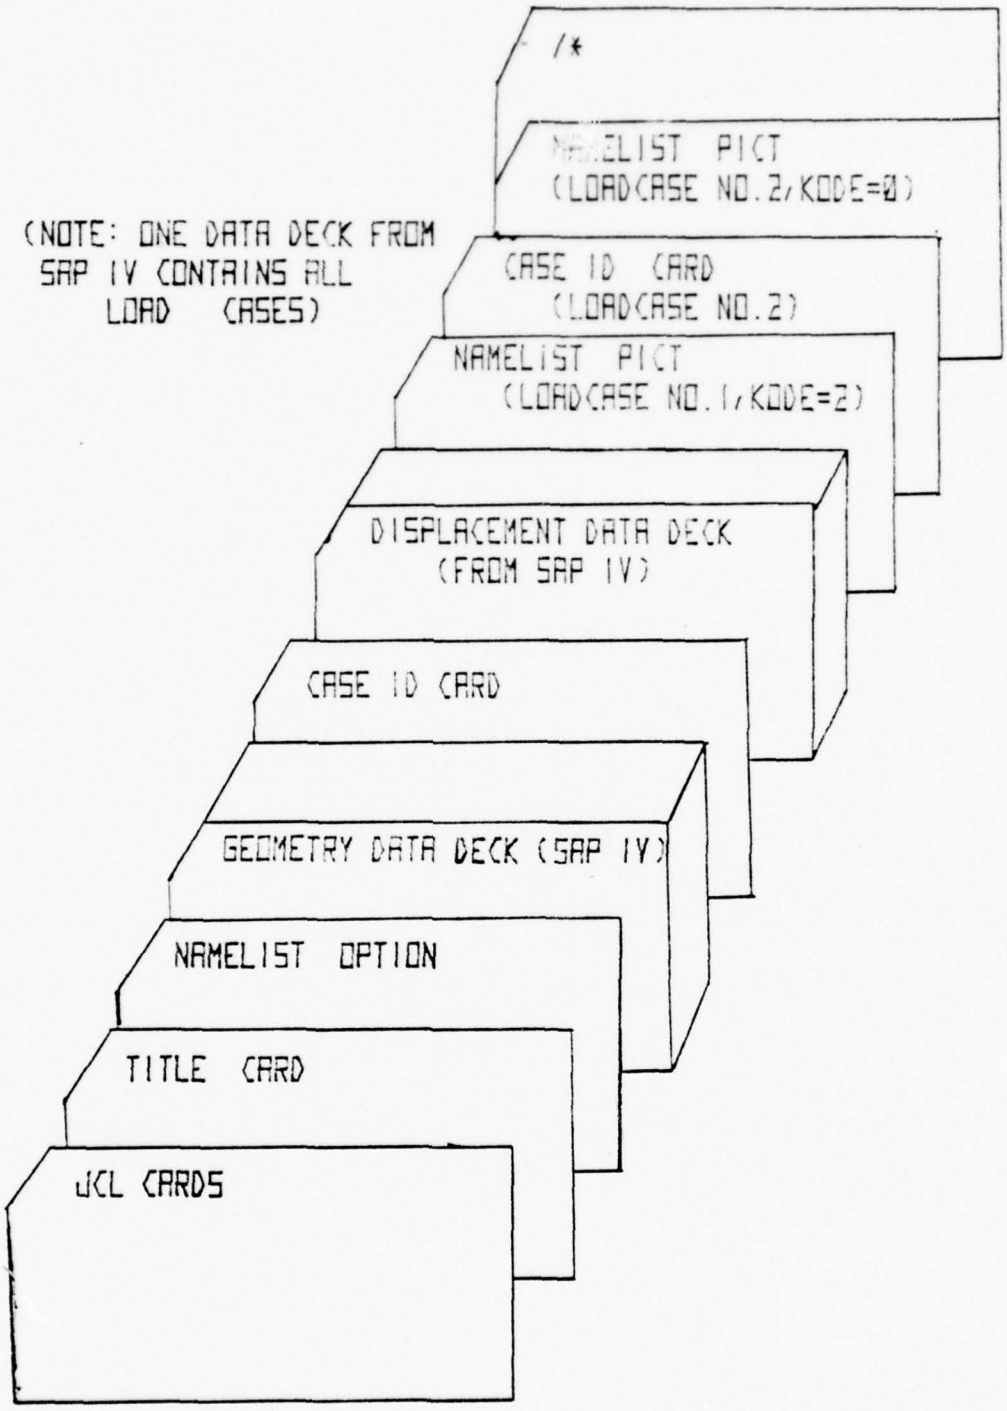


Figure 4 - SAMPLE SUBROUTINE PSAP EXECUTION DECK WITH IDCASE=1

8. Deck of Displacement Data to be Plotted

This deck contains the displacement values of the nodal points. The deck has one of the following forms, depending on the value of KDATA specified in Namelist OPTION.

KDATA = 9

Calls subroutine DATA9, which reads SAP IV displacement data.

(a) A single card, format (I5,F10.0), containing the number of total load cases (NTLC) that are in the SAP IV output displacement data deck, and a scale factor (SCALEF) that is used in scaling the displacement data, must be input before the displacement deck. This card controls the input of SAP IV displacement data through subroutine DATA9. For example, a displacement deck from an execution of SAP IV that contains the maximum of five load cases would have NTLC = 5. The scale factor could be any value desired by the user, with default equal to 1. The DATA9 control card for the above case would be a 5 in card column five and the desired scale factor (SCALEF) in card columns 6-15.

(b) The deck of displacement data obtained from SAP IV follows the DATA 9 control card. Since the maximum number of load cases that are punched out by SAP IV is five, the maximum NTLC is five and the actual number must be specified. Note that if NUDISP, NVDISP, and NWDISP are all specified as zeroes through default or in Namelist OPTION, the displacement data deck and the DATA 9 control card are not required. This feature enables preprocessing only of a given finite element model by PSAP.

(c) The parameter DMAGS in Namelist PICT also provides for magnification of displacements. (See section III.B.9)

KDATA = 1

Calls subroutine DATA1, which is prepared by the user to read displacement data from a program other than SAP IV to be plotted.

KDATA = 5

Calls subroutine DATA 5, which is prepared by the user to read displacement data from a program other than SAP IV to be plotted.

Use of KDATA =1 or 5 requires that SUBROUTINE PSAP be modified to fit the format that the user's input displacement data specifically requires. A method for accomplishing this change will be discussed in parapgraph C. of this section.

9. Namelist PICT

The format for Namelist PICT is the same as that required for Namelist OPTION. It requires a single card, &PICT, followed by the specified parameter cards and the &END cards, all cards beginning in card column 2. This namelist contains the values needed to specify the type of plot that is desired and what information is to be included on the plots. A detailed summary of Namelist PICT is contained in Reference 2 and is given here for user convenience.

FORTRAN name - Default value - Description

KHORZ - 1 Integer designating the horizontal axes of the viewing plane where 1=X_o, 2=Y_o, and 3=Z_o. (see Figure 5.)

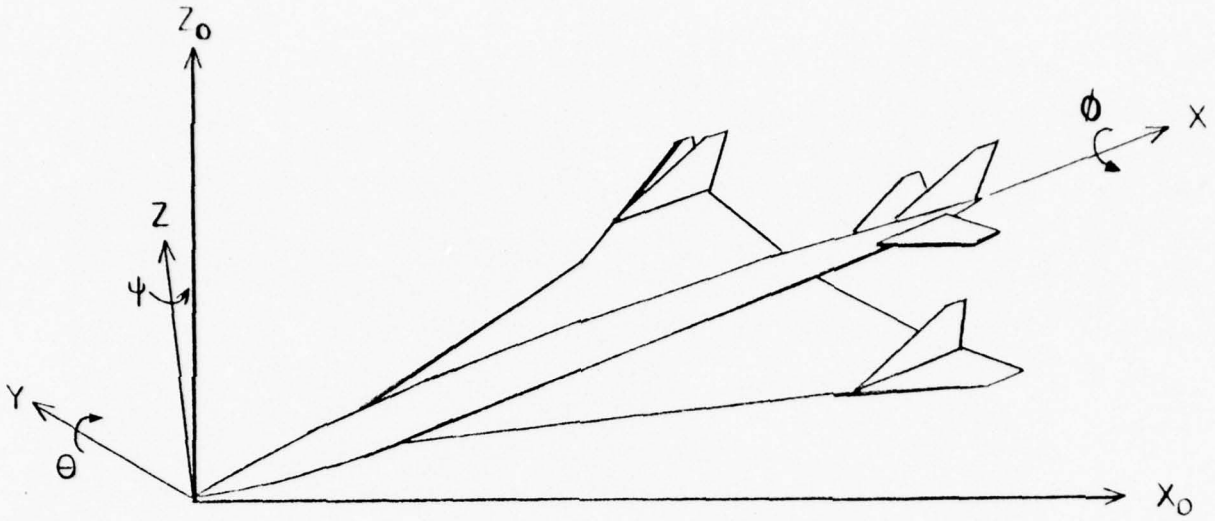


Figure 5 - COORDINATE SYSTEM AND ROTATIONS FOR AN OBLIQUE ORTHOGRAPHIC PROJ. SHOWN IN X - Z VIEWING PLANE

KVERT - 2 Integer designating the vertical axes of the viewing plane where 1=X_o, 2=Y_o, and 3=Z_o. (see Figure 5.)

PHI - 0.0 Angular rotation of model about its X-axis in degrees (must be performed third, see Figure 5.)

THETA - 0.0 Angular rotation of model about its Y-axis in degrees (must be performed second, see Figure 5.)

PSI - 0.0 Angular rotation of model about its Z-axis in degrees (must be performed first, see Figure 5.)

NEWFR - 1 1 Frame change before plotting
(a frame change resets the Y-origin past previous plot by XSPACE given in Namelist OPTION and resets the X-origin at 0.0)
0 no frame change before plotting

ISCALE - 1 1 automatic scaling of plot and computation of proper origin location
2 user-specified origin and scaling

PLOTSZ - 10.0 Maximum dimension desired on completed plot, in inches (used for scaling if ISCALE=1)

XORGN - 0.0 X-location of plot origin
(used if ISCALE=2)

YORGN - 0.0 Y-location of plot origin
(used if ISCALE=2)

PSCALE - 1.0 Model size reduction factor
(i.e., PSCALE is equal to actual model size divided by desired plot size, used if ISCALE=2)

NOTAT - 0 0 no numbering on plots
1 numbering of grid points
2 numbering of elements

XLHT - 0.15 Height of integers specified by NOTAT, in inches (must be $\geq$ 0.07)

KDISP - 0 0 plot of undeformed structure

	1 plot of deformed structure
	2 exploded plot
	3 displacements represented by vectors
IDMAG - 2	1 direct magnification of displacement data by DMAGS
	2 scaling of displacement data to a maximum value ofDMAGS
DMAGS - 1.0	Magnification of displacements (if KDISP= 1 or 3)
	Reduction factor of elements (if KDISP=2)
KSYMXY - 0	1 symmetry about X-Y plane
KSYMXZ - 0	1 symmetry about X-Z plane
KSYMYZ - 0	1 symmetry about Y-Z plane

Symmetries are performed consecutively (i.e., a plate quadrant with KSYMXZ and KSYMYZ equal to one would yield a complete plate).

XXMAX,XXMIN - 1.0E+20	Locate cutting planes parallel to principal planes
YYMAX,YYMIN - 1.0E-20	(X-Y, X-Z, Y-Z) to limit plot
ZZMAX,ZZMIN	
NDMAX - 9999999	Maximum grid point identification number to be included in the plot
NDMIN - 0	Minimum grid point identification number to be included in the plot
NELMAX - 9999999	Maximum element identification number to be included in the plot
NELMIN - 0	Minimum element identification number to be included in the plot
KODE - 0	Specifies control option after a plot is complete
	0 last plot, exit from program
	1 read another Namelist PICT

2 read a new set of displacement data (see NOTE 1 below)

3 read a complete new set of input data starting with a title card.

(NOTE 1: For SAP IV displacement data, KODE=2 signifies that the next load case displacements will be assigned to the model nodal points.)

The previous sections describe a complete basic set of input data, if KODE =0 in Namelist PICT. For KODE = 1, 2, or 3, additional sections of the deck must be repeated. The deck must end with a Namelist PICT having a value of KODE = 0 in it. An example input data deck and output plots for the simple truss problem of Appendix A is found in Appendix B.

C. METHOD FOR ALTERING SUBROUTINE PSAP

In the event a user has geometry and displacement data decks from a program other than SAP IV, it is possible to plot those decks with PSAP. The subroutine will handle rod-like elements, triangular elements, or quadrilateral elements when they are input in acceptable format. By studying subroutines GEOM9 and DATA9, and SUBROUTINE PSAP (Appendix D), the necessary sequence of input can be determined. PSAP is presently constructed so that a user may supply his own routines through the use of subroutines GEOM1 or GEOM2 for geometry data and DATA1 or DATA5 for displacement data. In order to add a subroutine to PSAP, it need only be placed after the main calling program in the sequence of control cards as discussed in paragraph II.B.2. The essential features for the input of the geometry data are the nodal points, with their X,Y,Z coordinates, and the connectivity sequence for the finite element model. The

necessary part of displacement data input is the node point number, with the U,V,W displacements. Adding a user-prepared subroutine through GEOM1 or 2 and DATA1 or 5 should prove to be a relatively straight-forward task for the user who desires to do so. The listing of GEOM9 in Appendix D can be used as a guide.

D. SIGNIFICANT ASPECTS OF SUBROUTINE PSAP

1. Exploded Plots

Often the absence or presence of elements in a finite element model cannot be determined from a conventional oblique orthographic projection. For example, a line element that is coincident with an edge of a triangular or quadrilateral element could not be detected. To show clearly each element, PSAP contains an algorithm for generating exploded oblique orthographic projections. This can be a valuable tool in checking the toplogy of an analytical model. (i.e., KDISP = 2)

2. Portions of Models

The ability to isolate a portion of a model for detailed examination is a very useful and desirable asset of a preprocessor. SUBROUTINE PSAP has the capability of specifying cutting planes (i.e.,XXMIN ,XXMAX ,YYMIN,YYMAX, etc.) or maximum and minumum element numbers (i.e., NELMIN, NELMAX). Examples of this are shown in Appendix D.

3. Specification of View

The specification of view of a model is done through the use of the parameters KVERT,KHORZ, PSI, THETA, and PHI that are found in Namelist PICT (Section III.B.9) The specific details of how this is accomplished can be found in Reference 2. There are a great number of possible combinations of the above parameters, and Appendix C illustrates various combinations that were used on a section of a finite element wing model. The Calcomp plots, along with the parameters as specified, are found in each figure.

4. Possible Sources of Errors

(a) The most probable source of error could be incorrect data deck preparation or deck sequencing. It is important to use Figure 2 as a guide while preparing the input for PSAP.

(6) Other errors may occur if the arrays ZZZ and DISPD are not dimensioned correctly as discussed in paragraph III.B.3. During the execution of the program several manipulations are performed with the two arrays, and it is possible for addresses of the data to be lost within the IBM 360/67. The 360 System error messages may not directly indicate that the dimensions of the arrays have been exceeded.

(c) A most important point to remember in generating a sequence of plots is that once a parameter has been assigned a value in a namelist, it retains that value until it is reassigned. For example, if PLOTSZ is assigned a value of 8.0 for the first in a series of plots and it is not

redefined in any subsequent Namelists PICT , the value of PLOTSZ will retain the value (8.0), as originally specified.

(d) It is possible to make any number of errors, however, and all of them cannot be anticipated. The error messages from the IBM 360/67 System will, in most cases, be straight-forward and facilitate easy trouble-shooting.

IV. CONCLUSIONS AND RECOMMENDATIONS

General purpose finite element structural analysis programs like SAP IV are significant analytical tools that can be used most effectively when coupled with a flexible pre- and postprocessor. The availability of a powerful structural analysis tool with partial pre- and postprocessing capability has now been provided for Naval Postgraduate School Students. However, at present this capability is limited to pre- and postprocessing the data of only five of the SAP IV elements. It does not appear feasible, at this time, to add any more capability as far as the number of SAP IV elements goes. However, other additional improvements to postprocessing at NPS should be made. For example, Appendix C of Reference 2 lists a program developed to produce contour plots of stress data from finite element models. The program, in all probability, could be adapted to SAP IV and the NPS IBM 360/67. This represents a possible avenue to further the present structural analysis capability for NPS students. SAP IV itself can be expanded. There is a great deal of work being done in the area of composite materials, and SAP IV possesses only very limited orthotropic material capability. However, there are subroutines within SAP IV that could be modified to reflect more current methods in handling composite materials.


In conclusion, the finite element method in structural engineering is the most powerful analysis tool available today and needs to be exploited by NPS students in both classroom and research work. Programs like SAP IV are available at many Navy laboratories, development centers,

and aerospace companies throughout the country. The current trends in structural analysis are toward computer-aided techniques, and exposure to a general purpose package for students enrolled in AE 4101 and AE 4102 is a significant asset.

APPENDIX A

EXAMPLE PROBLEM USING SAP IV

The schematic given below illustrates the example problem for which the data on the following page were prepared.

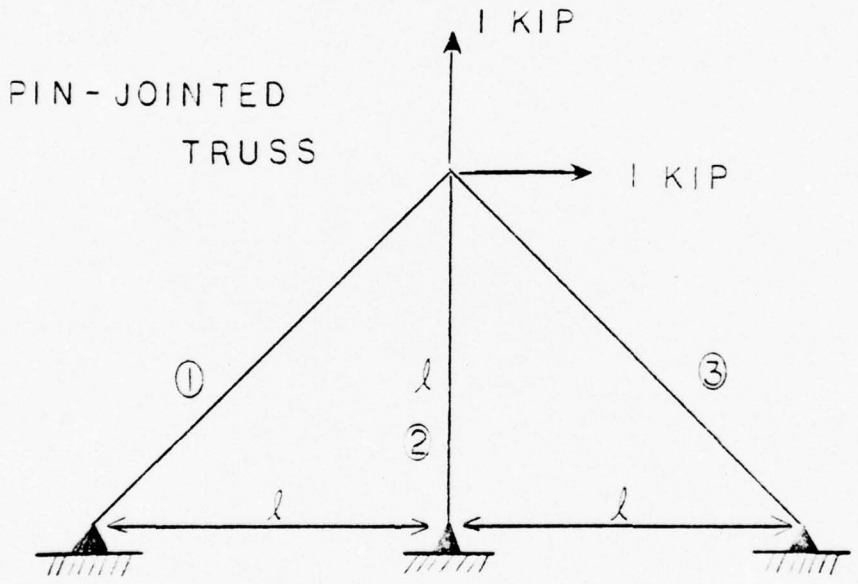

l = 100 inches
E = 10.1E+06 psi
ALPHA = 12.6E-06 psi
A = 0.5 sq.in.
A = 1.0 sq.in.
A = 0.75 sq.in.

```
// (STANDARD GREEN JOB CARD)
//GO EXEC PGM=SAP,REGION=260K
//STEPLIB DD UNIT=2321,VOL=SER=CEL002,DISP=SHR,DSN=F0559.SAPLM
//GO.FT01F001 DD UNIT=SYSDA,SPACE=(CYL,(6,6)),
//    DCB=(RECFM=VSB,LRECL=1284,BLKSIZE=2572)
//GO.FT02F001 DD UNIT=SYSDA,SPACE=(CYL,(6,6)),
//    DCB=(RECFM=VSB,LRECL=1284,BLKSIZE=2572)
//GO.FT03F001 DD UNIT=SYSDA,SPACE=(CYL,(6,6)),
//    DCB=(RECFM=VSB,LRECL=1284,BLKSIZE=2572)
//GO.FT04F001 DD UNIT=SYSDA,SPACE=(CYL,(6,6)),
//    DCB=(RECFM=VSB,LRECL=1284,BLKSIZE=2572)
//GO.FT05F001 DD DDNAME=SYSIN
//GO.FT06F001 DD SYSOUT=A,DCB=(RECFM=FBA,LRECL=133,BLKSIZE=1330),
//    SPACE=(CYL,(3,1))
//GO.FT07F001 DD UNIT=SYSDA,SPACE=(CYL,(6,6)),
//    DCB=(RECFM=VSB,LRECL=1284,BLKSIZE=2572)
//GO.FT08F001 DD UNIT=SYSDA,SPACE=(CYL,(6,6)),
//    DCB=(RECFM=VSB,LRECL=1284,BLKSIZE=2572)
//GO.FT09F001 DD UNIT=SYSDA,SPACE=(CYL,(6,6)),
//    DCB=(RECFM=VSB,LRECL=1284,BLKSIZE=2572)
//GO.FT10F001 DD UNIT=SYSDA,SPACE=(CYL,(6,6)),
//    DCB=(RECFM=VSB,LRECL=1284,BLKSIZE=2572)
//GO.FT11F001 DD SYSOUT=B,SPACE=(TRK,(20,2)),
//    DCB=(RECFM=FB,LRECL=80,BLKSIZE=7280)
//GO.SYSIN DD *
  SAP IV   -   EXAMPLE(INPUT DATA)
    4     1     1     0     0     0     1     0
    1     1     1     1     1     1     1          0.0          0.0          0.0
    2     1     1     1     1     1     1        100.           0.0          0.0
    3     1     1     1     1     1     1        200.           0.0          0.0
    4     0     0     1     1     1     1        100.0        100.0          0.0
    1     3     3
    1 10100000.0  .0000126           0          0.5          0.1
    2 10100000.0  .0000126           0          1.0          0.1
    3 10100000.0  .0000126           0         0.75          0.1
(BLANK CARD)
(BLANK CARD)
(BLANK CARD)
(BLANK CARD)
    1     1     4     1          0.0     0
    2     2     4     2          0.0     0
    3     3     4     3          0.0     0
    4     1  1000.          1000.
(BLANK CARD)
(BLANK CARD)
(BLANK CARD)
/ ( STANDARD NPS EOF CARD )
```

APPENDIX B

EXAMPLE PROBLEM USING SUBROUTINE PSAP

The pin-jointed truss problem in Appendix A is also used as an example in illustrating SUBROUTINE PSAP use. The entire computer card deck used to generate Figures 6, 7, and 8 is listed on the following two pages of this appendix. The printed computer output for this problem is shown in Figure 9. Note that the displacements of node number 4 have been magnified by 1000.

```
// (STANDARD GREEN JOB CARD)
// EXEC FORTCLGP,REGION.GO=180K
//FORT.SYSIN DD *
      DIMENSION ZZZ(100),DISPD(5,3,4)
      CALL PSAP(ZZZ,100,DISPD,4)
      END
/ ( STANDARD NPS EOF CARD )
//LINK.USDD DD UNIT=2321,VOL=SER=CEL002,DISP=SHR,DSN=F0559.PSAPLM
//LINK.SYSIN DD *
     INCLUDE USDD(PSAP)
     ENTRY MAIN
/ ( STANDARD NPS EOF CARD )
//GO.FT10F001 DD UNIT=SYSDA,
// SPACE=(CYL,(3,1)),
// DCB=(RECFM=VS,BLKSIZE=3520)
//GO.SYSIN DD *
   PIN-JOINTED TRUSS ----PSAP EXAMPLE---
 &OPTION
 NNCEST=4,NUDISP=1,NVDISP=1,NWDISP=1
 &END
  SAP IV  -  EXAMPLE(INPUT DATA)
    4     1     1     0     0     0     0     0
    1     1     1     1     1     1     1       0.0          0.0          0.0
    2     1     1     1     1     1     1     100.           0.0          0.0
    3     1     1     1     1     1     1     200.           0.0          0.0
    4     0     0     1     1     1     1     100.0        100.0          0.0
    1     3     3
    110100000.0   .0000126           0        0.5          0.1
    210100000.0   .0000126           0        1.0          0.1
    310100000.0   .0000126           0       0.75          0.1
(BLANK CARD)
(BLANK CARD)
(BLANK CARD)
(BLANK CARD)
    1     1     4     1          0.0     0
    2     2     4     2          0.0     0
    3     3     4     3          0.0     0
    1     1000.
   4    1 0.24072E-01 0.83420E-02 0.0          0.0          0.0          0.0
   3    1 0.0          0.0          0.0          0.0          0.0          0.0
   2    1 0.0          0.0          0.0          0.0          0.0          0.0
   1    1 0.0          0.0          0.0          0.0          0.0          0.0
 &PICT
 PLOTSZ=5.0,NOTAT=1,KODE=1
 &END
 &PICT
 NOTAT=2,KDISP=1,KODE=1,IDMAG=1
 &END
```

```
 &PICT
 NOTAT=1,KDISP=3,KODE=0
 &END
/ ( STANDARD NPS EOF CARD )
```

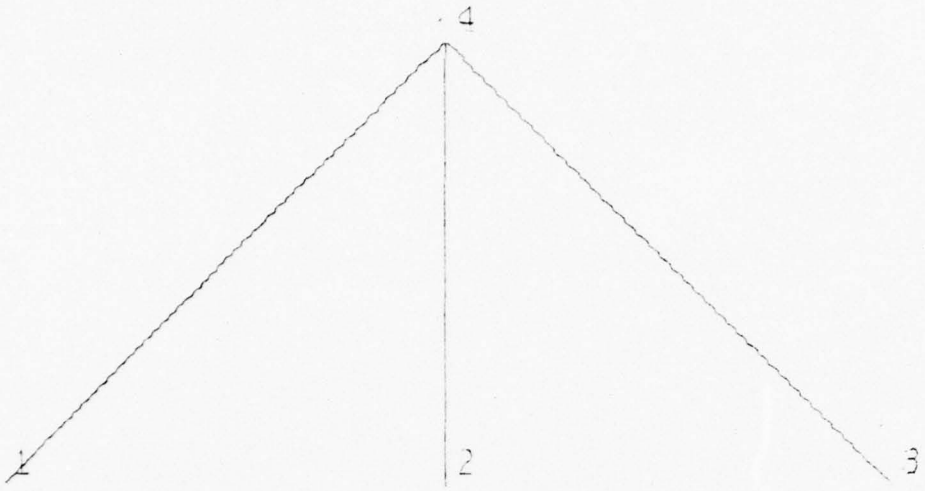


Figure 6 - UNDEFORMED TRUSS MODEL

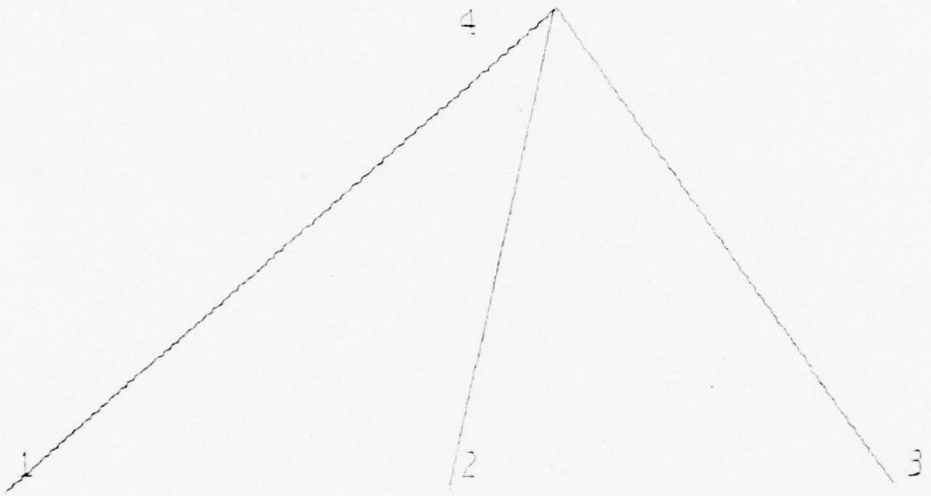


Figure 7 - DEFORMED TRUSS MODEL(NODE4 DISPLACED)

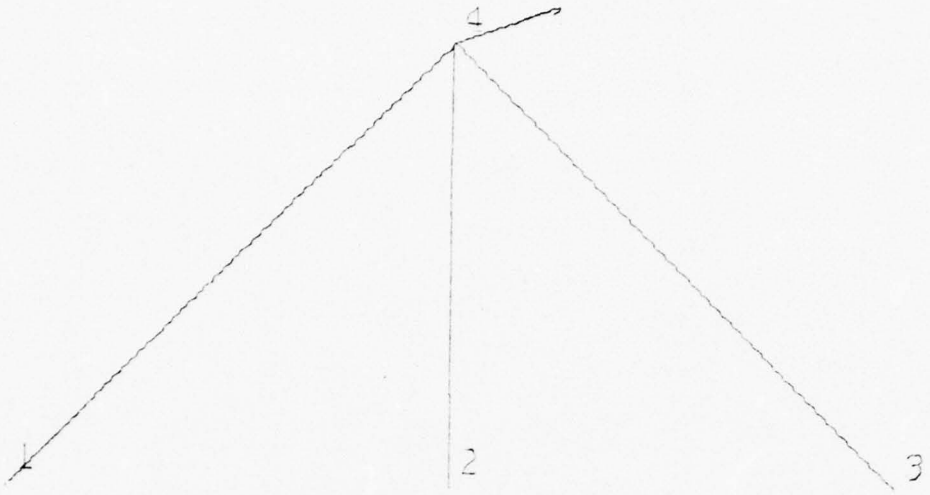


Figure 8 - DISPLACEMENTS(NODE4) FOR TRUSS MODEL PLOTTED AS A VECTOR

```
PIN-JOINTED TRUSS ----PSAP EXAMPLE---

BLANK COMMON STORAGE ZZZ REQUIRES AT LEAST    28 LOCATIONS FOR THIS CASE

GRID POINT INFORMATION

RESEQUENCED GRID POINT NUMBER   USER INPUT GRID POINT NUMBER        X           Y           Z
          1                          1          0.0         0.0         0.0
          2                          2       0.1000E 03     0.0         0.0
          3                          3       0.2000E 03     0.0         0.0
          4                          4       0.1000E 03     0.1000E 03  0.0

ELEMENT INFORMATION - WITH RESEQUENCED GRID POINTS

RESEQUENCED ELEMENT NUMBER   USER INPUT ELEMENT NUMBER      GRID POINTS  1   2   3   4
          1                          1                                  1   2   3   0
          2                          2                                  2   3   4   0
          3                          3                                  3   4   3   0

DISPLACEMENTS TO BE PLOTTED

RESEQUENCED GRID POINT NUMBER   USER INPUT GRID POINT NUMBER        X           Y           Z
          1                          1          0.0         0.0         0.0
          2                          3          0.0         0.0         0.0
          3                          4       0.2402E 02     3.8342F 01  0.0

EPICT
KHORZ=    1,KVERT=    2,ZMIN=   0.0          ,THETA=   0.0          ,PSI=  0.0          ,NEWFR=     1,ISCALE=
          1,PLOTS2=   5.0000000,YMIN=   0.0          ,YDMGN=   0.0          ,PSCALE=  1.0000000,NOTAT=      1,KDISP=
          1,IMAGE=    1.0000000,KODE=   0.9999999E 20,KSYMXY=   1,KSYMYZ=   0,KSYMZX=   0
XXMAX=    0.9999999E 20,YYMAX=  0.9999999E 20,ZZMAX=  0.9999999E 20,XXMIN=-0.9999999E 20,YYMIN=-0.9999999E 20,ZZMIN=-0.9999999E 20,
NDMAX=    9999999,NDMIN=  9999999,NELMAX=  9999999,NELMIN=  9999999,XLHT=  0.1499999E 01
CEND

EPICT
KHORZ=    1,KVERT=    2,ZMIN=   0.0          ,THETA=   0.0          ,PSI=  0.0          ,NEWFR=     1,ISCALE=
          1,PLOTS2=   5.0000000,YMIN=   0.0          ,YDMGN=   0.0          ,PSCALE=  0.5000000,NOTAT=      1,KDISP=
          1,IMAGE=    1.0000000,KODE=   0.9999999E 20,KSYMXY=   1,KSYMYZ=   0,KSYMZX=   0
XXMAX=    0.9999999E 20,YYMAX=  0.9999999E 20,ZZMAX=  0.9999999E 20,XXMIN=-0.9999999E 20,YYMIN=-0.9999999E 20,ZZMIN=-0.9999999E 20,
NDMAX=    9999999,NDMIN=  9999999,NELMAX=  9999999,NELMIN=  9999999,XLHT=  0.1499999E 01
CEND

EPICT
KHORZ=    1,KVERT=    2,ZMIN=   0.0          ,THETA=   0.0          ,PSI=  0.0          ,NEWFR=     1,ISCALE=
          1,PLOTS2=   5.0000000,YMIN=   0.0          ,YDMGN=   0.0          ,PSCALE=  40.000000,NOTAT=      1,KDISP=
          1,IMAGE=    1.0000000,KODE=   0.9999999E 20,KSYMXY=   1,KSYMYZ=   0,KSYMZX=   0
XXMAX=    0.9999999E 20,YYMAX=  0.9999999E 20,ZZMAX=  0.9999999E 20,XXMIN=-0.9999999E 20,YYMIN=-0.9999999E 20,ZZMIN=-0.9999999E 20,
NDMAX=    9999999,NDMIN=  9999999,NELMAX=  9999999,NELMIN=  9999999,XLHT=  0.1499999E 01
CEND
```

Figure 9 - SAMPLE COMPUTER PRINTOUT FROM PSAP OF TRUSS MODEL

APPENDIX C

SAMPLE SUBROUTINE PSAP OUTPUTS FOR A FINITE ELEMENT MODEL OF A WING

The figures contained in this appendix are of a finite element wing model developed in Flight Vehicle Structural Analysis II (AE 4102, QTR.IV, 1976). The original wing was designed in AE 4274, which is the latter half of the subsonic structural design sequence in the Department of Aeronautics. The finite element model of the wing was developed in AE 4102 as a class project. (The structural analysis and design sequences in the the Department of Aeronautics are constructed so that they interelate the two different areas.) Each student was assigned responsibility for a portion of the wing and the student whose design was used was the analysis leader.

Figure 10 shows the axis orientation used in the original definition of the wing as designed in AE 4274. Figure 11 and 12 show the entire model with over four hundred membrane elements and with different views of the model specified. In Figures 13 and 14 a single portion of the wing is shown with different rotation angles. The significant Namelist PICT values used to orient the model are included in the figures.

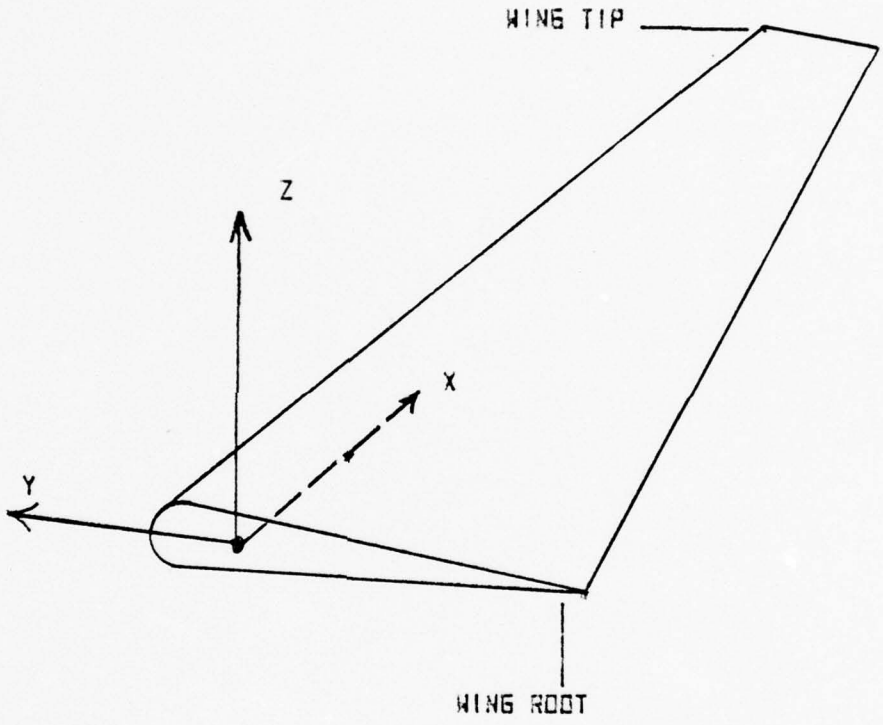


Figure 10 - WING MODEL AXIS ORIENTATION

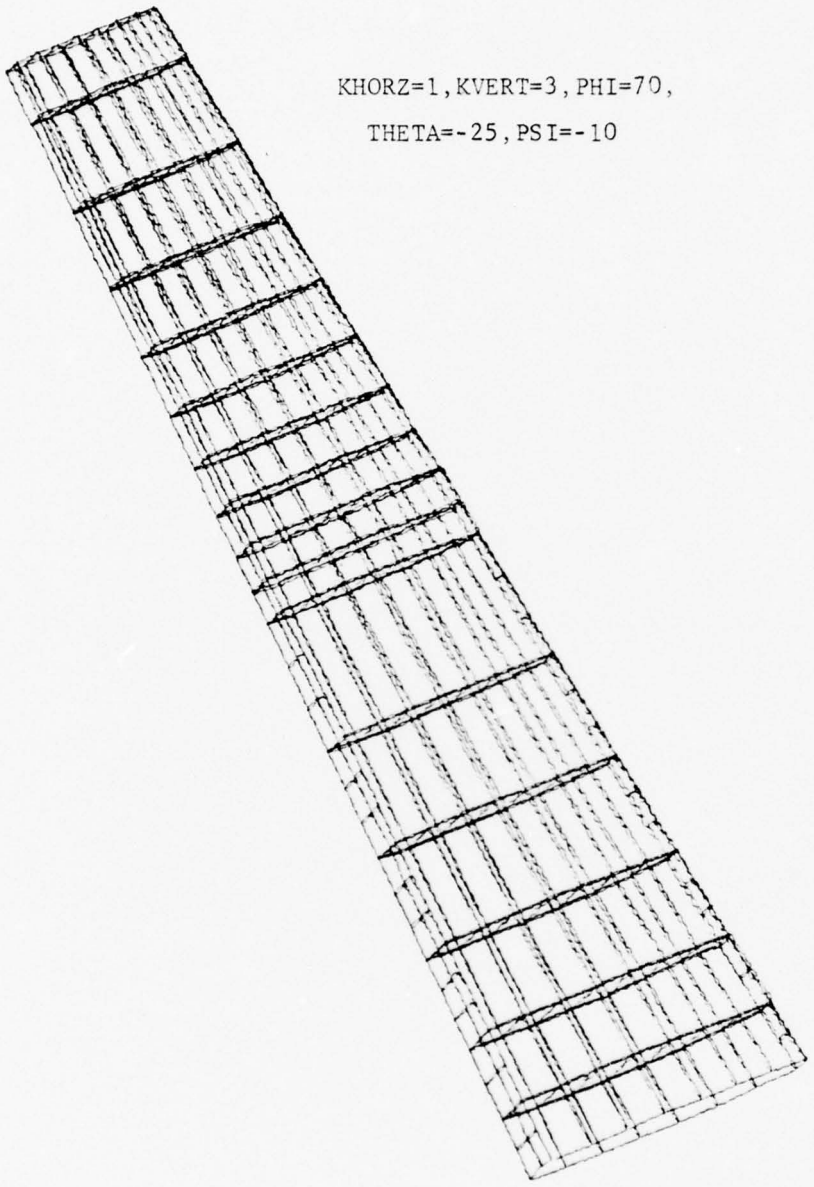


Figure 11 - ORTHOGRAPHIC PROJECTION OF WING MODEL -1

KHORZ=2,KVERT=3,PHI=60,

THETA=-25,PSI=-10

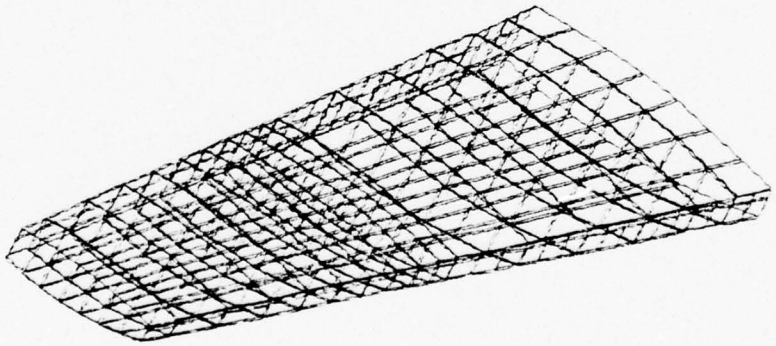


Figure 12 - ORTHOGRAPHIC PROJECTION OF WING MODEL -2

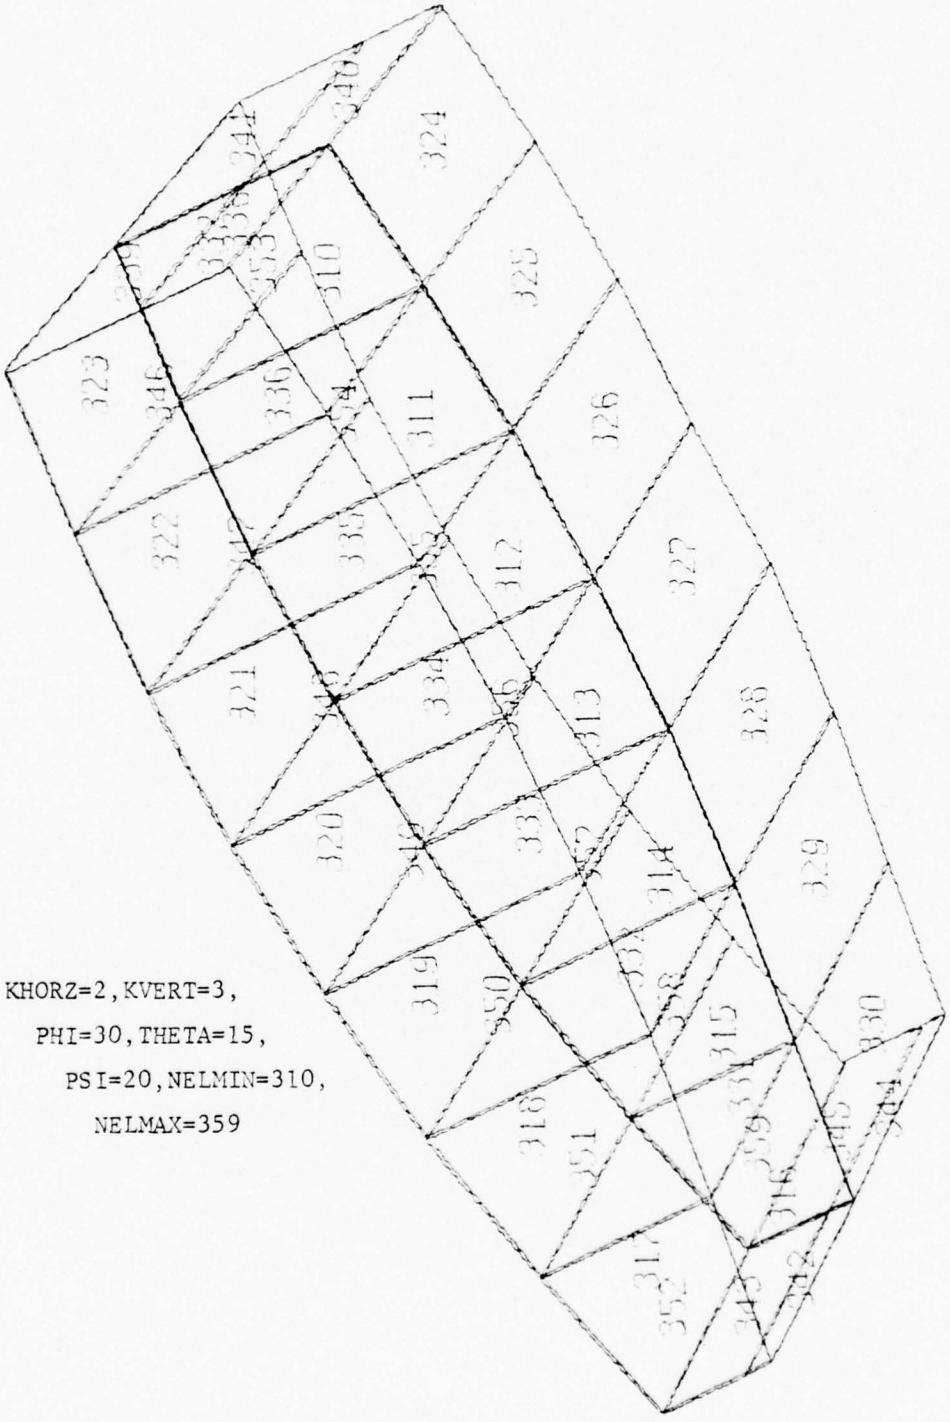


Figure 13 - WING MODEL SECTION - ORIENTATION -1

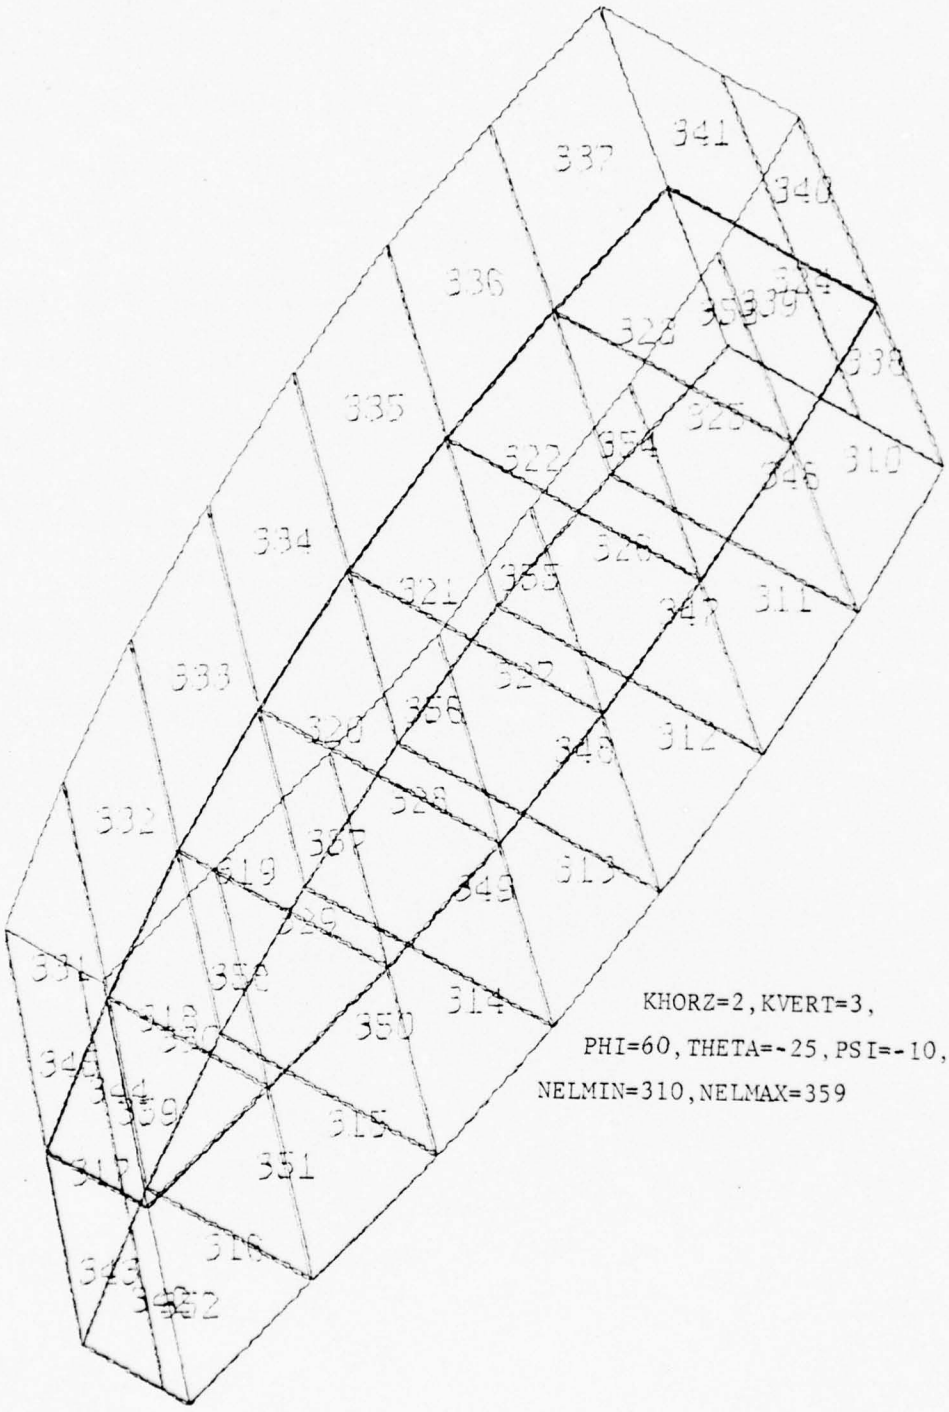


Figure 14 - WING MODEL SECTION - ORIENTATION -2

```
C
C *** THIS SECTION CONTAINS SUBROUTINE DOCUMENTATION                          DOC00010
C                                                                            DOC00020
C                                                                            DOC00030
C                                                                            DOC00040
C                                                                            DOC00050
C                        DESCRIPTION OF INPUT DATA CARDS                     DOC00060
C                                                                            DOC00070
C                                                                            DOC00080
C                                                                            DOC00090
C     TITLE CARD - CONTAINS ANY DESIRED ALPHANUMERIC INFORMATION IN COLS.    DOC00100
C                  1-80.                                                     DOC00110
C                                                                            DOC00120
C                                                                            DOC00130
C     NAMELIST OPTION - CONTAINS VALUES TO VERIFY STORAGE IN BLANK           DOC00140
C                       COMMON AND CONTROL VALUES NEEDED BY THE PROGRAM.     DOC00150
C                                                                            DOC00160
C         THE FOLLOWING VALUES ARE INCLUDED---                               DOC00170
C                                                                            DOC00180
C         NNDEST = ESTIMATE NUMBER OF GRID POINTS TO BE USED.  VALUE MUST    DOC00190
C                  BE GREATER THAN OR EQUAL TO THE ACTUAL NUMBER OF GRID     DOC00200
C                  POINTS.                                                   DOC00210
C               ** DEFAULT = 200 **                                          DOC00220
C         NUDISP = 0 FOR NO DISPLACEMENT DATA IN X-DIRECTION.                DOC00230
C                = 1 FOR DATA INCLUDING DISPLACEMENTS IN X-DIRECTION.        DOC00240
C               ** DEFAULT = 1 **                                            DOC00250
C         NVDISP = 0 FOR NO DISPLACEMENT DATA IN Y-DIRECTION.                DOC00260
C                = 1 FOR DATA INCLUDING DISPLACEMENTS IN Y-DIRECTION.        DOC00270
C               ** DEFAULT = 1 **                                            DOC00280
C         NWDISP = 0 FOR NO DISPLACEMENT DATA IN Z-DIRECTION.                DOC00290
C                = 1 FOR DATA INCLUDING DISPLACEMENTS IN Z-DIRECTION.        DOC00300
C               ** DEFAULT = 1 **                                            DOC00310
C                                                                            DOC00320
C         KGEOM SPECIFIES SUBROUTINE AND CORRESPONDING METHOD OF INPUT       DOC00330
C         FOR MODEL GEOMETRY.                                                DOC00340
C         KGEOM = 1 FOR USER SUPPLIED SUBROUTINE - GEOM1                     DOC00350
C               = 2 FOR USER SUPPLIED SUBROUTINE - GEOM2                     DOC00360
C               = 9 FOR SAP IV DATA DECK INPUT SUBROUTINE - GEOM9.            DOC00370
C               ** DEFAULT = 9 **                                            DOC00380
C         KDATA SPECIFIES SUBROUTINE AND CORRESPONDING METHOD OF INPUT       DOC00390
C         FOR DISPLACEMENT DATA.                                             DOC00400
C         KDATA = 1 FOR SUBROUTINE DATA1 TO READ IN DISPLACEMENT DATA        DOC00410
C                   -- SUPPLIED BY THE USER.                                 DOC00420
C               = 5 FOR SUBROUTINE DATA5 TO READ IN DISPLACEMENT DATA        DOC00430
C                   -- SUPPLIED BY THE USER.                                 DOC00440
C               = 9 FOR SUBROUTINE DATA9 TO READ SAP IV DATA.                DOC00450
C               ** DEFAULT = 9 **                                            DOC00460
C       NVALUS - NOT USED AT NPS ----- ALLOW DEFAULT                         DOC00470
C                                                                            DOC00480
```

```
C          ** DEFAULT = 0 **                                                    DOC00490
C        IRESEQ = 0 FOR NO RESEQUENCING OF GRID POINT NUMBERS.                  DOC00500
C               = 1 TO RESEQUENCE GRID POINT NUMBERS IN SAME ORDER              DOC00510
C                   AS THEY ARE INPUT.                                          DOC00520
C          ** DEFAULT = 1 **                                                    DOC00530
C        KPLOT SPECIFIES THE TYPE OF OUTPUT DEVICE TO BE USED.                  DOC00540
C        KPLOT = 1 FOR CALCOMP.                                                 DOC00550
C              = 2 FOR LANGLEY RESEARCH CENTER USE ONLY                         DOC00560
C              = 3 FOR LRC USE ONLY.                                            DOC00570
C              = 4 FOR   LRC USE ONLY                                           DOC00580
C          ** DEFAULT = 1 **                                                    DOC00590
C        XSPACE = SPACE BETWEEN PLOTS IN Y-DIRECTION, IN INCHES.                DOC00600
C          ** DEFAULT = 5.0 **                                                  DOC00610
C        PSIZE = PAPER SIZE IN Y-DIRECTION IN INCHES, USED IN SCALING OF        DOC00620
C                PLOTS TO INSURE THIS DIMENSION IS NOT EXCEEDED.                DOC00630
C          ** DEFAULT = 10.0 **                                                 DOC00640
C        IDCASE = 0 FOR NO TITLE CARD PRECEDING                                 DOC00650
C                   DECKS OF DISPLACEMENT VALUES.                               DOC00660
C               = 1 FOR TITLE CARD PRECEDING                                    DOC00670
C                   DECKS OF DISPLACEMENT VALUES.                               DOC00680
C          ** DEFAULT = 0 **                                                    DOC00690
C                                                                               DOC00700
C                                                                               DOC00710
C                                                                               DOC00720
C    MODEL GEOMETRY IS NOW INPUT IN ONE OF THE FOLLOWING FORMS,                 DOC00730
C       DEPENDING ON THE VALUE OF KGEOM SPECIFIED IN NAMELIST OPTION.           DOC00740
C                                                                               DOC00750
C                                                                               DOC00760
C      USE IF KGEOM = 1                                                         DOC00770
C        CALL SUBROUTINE GEOM1 WHICH IS PREPARED BY THE USER TO                 DOC00780
C        READ GEOMETRY DATA.                                                    DOC00790
C                                                                               DOC00800
C      USE IF KGEOM = 2                                                         DOC00810
C        CALL SUBROUTINE GEOM2 WHICH IS PREPARED BY THE USER TO                 DOC00820
C        READ GEOMETRY DATA.                                                    DOC00830
C                                                                               DOC00840
C                                                                               DOC00850
C                                                                               DOC00860
C      USE IF KGEOM = 9                                                         DOC00870
C                                                                               DOC00880
C         CALL SUBROUTINE GEOM9 WHICH READS SAP IV GEOMETRY DATA.               DOC00890
C                                                                               DOC00900
C                                                                               DOC00910
C                                                                               DOC00920
C    CASE IDENTIFICATION CARD.                                                  DOC00930
C                                                                               DOC00940
C         THIS CARD IS OMITTED IF IDCASE=0 IS SPECIFIED IN $OPTION.             DOC00950
C         IF PRESENT, THIS CARD CONTAINS ANY DESIRED ALPHANUMERIC               DOC00960
```

```
C        INFORMATION IN COLS.1-80.  WILL APPEAR BEFORE EACH DATA PLOT.   DOC00970
C                                                                        DOC00980
C                                                                        DOC00990
C    DATA TO BE PLOTTED IS NOW INPUT IN ONE OF THE FOLLOWING FORMS,      DOC01000
C         DEPENDING ON THE VALUE OF KDATA SPECIFIED IN NAMELIST OPTION.  DOC01010
C                                                                        DOC01020
C                                                                        DOC01030
C      USE IF KDATA = 1                                                  DOC01040
C        CALL SUBROUTINE DATA1 WHICH IS PREPARED BY THE USER             DOC01050
C                                                                        DOC01060
C                                                                        DOC01070
C                                                                        DOC01080
C      USE IF KDATA = 5                                                  DOC01090
C        CALL SUBROUTINE DATA5 WHICH IS PREPARED BY THE USER             DOC01100
C                                                                        DOC01110
C                                                                        DOC01120
C      USE IF KDATA = 9                                                  DOC01130
C                                                                        DOC01140
C         CALL SUBROUTINE DATA9 WHICH READS SAP IV DISPLACEMENT DATA.    DOC01150
C                                                                        DOC01160
C                                                                        DOC01170
C                                                                        DOC01180
C                                                                        DOC01190
C     NAMELIST PICT - CONTAINS VALUES NEEDED TO GENERATE PLOTS.          DOC01200
C                                                                        DOC01210
C         THE FOLLOWING VALUES ARE INCLUDED---                           DOC01220
C                                                                        DOC01230
C         KHORZ = INTEGER DESIGNATING HORIZONTAL AXIS OF VIEWING PLANE,  DOC01240
C                  WHERE 1=X, 2=Y, 3=Z.                                  DOC01250
C               ** DEFAULT = 1 **                                        DOC01260
C         KVERT = INTEGER DESIGNATING VERTICAL AXIS OF VIEWING PLANE,    DOC01270
C                  WHERE 1=X, 2=Y, 3=Z.                                  DOC01280
C               ** DEFAULT = 2 **                                        DOC01290
C         PHI = ANGULAR ROTATION OF MODEL ABOUT ITS X-AXIS, IN DEGREES   DOC01300
C               (MUST BE TAKEN THIRD).                                   DOC01310
C               ** DEFAULT = 0.0 **                                      DOC01320
C         THETA = ANGULAR ROTATION OF MODEL ABOUT ITS Y-AXIS, IN DEGREES DOC01330
C                 (MUST BE TAKEN SECOND).                                DOC01340
C               ** DEFAULT = 0.0 **                                      DOC01350
C         PSI = ANGULAR ROTATION OF MODEL ABOUT ITS Z-AXIS, IN DEGREES   DOC01360
C               (MUST BE TAKEN FIRST).                                   DOC01370
C               ** DEFAULT = 0.0 **                                      DOC01380
C         NEWFR = 1 FOR FRAME CHANGE BEFORE PLOT IS MADE.                DOC01390
C                 (A FRAME CHANGE RESETS THE Y-ORGIN PAST PREVIOUS PLOT  DOC01400
C                  BY XSPACE AND THE X-ORGIN AT 0.0).                    DOC01410
C         NEWFR .NE. 1 FOR NO FRAME CHANGE BEFORE PLOTTING.              DOC01420
C               ** DEFAULT = 1 **                                        DOC01430
C         ISCALE = 1 FOR INTERNAL ORGIN LOCATION AND SCALING.            DOC01440
```

```
C         = 2 FOR USER SPECIFIED ORGIN AND SCALING.                      DOC01450
C       ** DEFAULT = 1 **                                                DOC01460
C PLOTSZ = MAXIMUM DIMENSION DESIRED ON COMPLETED PLOT.                  DOC01470
C          (USED FOR SCALING IF ISCALE = 1)                              DOC01480
C       ** DEFAULT = 10.0 **                                             DOC01490
C XORGN = X-LOCATION OF PLOT ORIGIN (USED IF ISCALE = 2).                DOC01500
C       ** DEFAULT = 0.0 **                                              DOC01510
C YORGN = Y-LOCATION OF PLOT ORIGIN (USED IF ISCALE = 2).                DOC01520
C       ** DEFAULT = 0.0 **                                              DOC01530
C PSCALE = MODEL SIZE REDUCTION FACTOR, PSCALE = ACTUAL MODEL            DOC01540
C          SIZE/DESIRED PLOT SIZE (USED IF ISCALE = 2).                  DOC01550
C       ** DEFAULT = 1.0 **                                              DOC01560
C NOTAT = 0 FOR NO NUMBERING ON PLOTS.                                   DOC01570
C         1 FOR NUMBERING OF GRID POINTS.                                DOC01580
C         2 FOR NUMBERING OF ELEMENTS.                                   DOC01590
C       ** DEFAULT = 0 **                                                DOC01600
C XLHT = HEIGHT OF INTEGERS SPECIFIED BY NOTAT, IN INCHES.               DOC01610
C       ** DEFAULT = 0.15 **                                             DOC01620
C KDISP = 0 FOR UNDEFORMED PLOT.                                         DOC01630
C         1 FOR DEFORMED PLOT.                                           DOC01640
C         2 FOR EXPLODED PLOT.                                           DOC01650
C         3 FOR DISPLACEMENTS REPRESENTED BY VECTORS.                    DOC01660
C       ** DEFAULT = 0 **                                                DOC01670
C IDMAG = 1 FOR DIRECT SCALING OF DATA BY DMAGS.                         DOC01680
C         2 FOR SCALING OF DATA TO A MAX. VALUE OF DMAGS.                DOC01690
C       ** DEFAULT = 2 **                                                DOC01700
C DMAGS = MAGNIFICATION OF DISPLACEMENTS (IF KDISP=1).                   DOC01710
C         REDUCTION FACTOR OF ELEMENTS (IF KDISP=2).                     DOC01720
C       ** DEFAULT = 1.0 **                                              DOC01730
C KSYMXY = 1 FOR SYMMETRY ABOUT X-Y PLANE.                               DOC01740
C       ** DEFAULT = 0 **                                                DOC01750
C KSYMXZ = 1 FOR SYMMETRY ABOUT X-Z PLANE.                               DOC01760
C       ** DEFAULT = 0 **                                                DOC01770
C KSYMYZ = 1 FOR SYMMETRY ABOUT Y-Z PLANE.                               DOC01780
C       ** DEFAULT = 0 **                                                DOC01790
C XXMAX,YYMAX,ZZMAX,XXMIN,YYMIN,ZZMIN LOCATE CUTTING PLANES              DOC01800
C       PARALLEL TO PRINCIPAL (X-Y,X-Z,Y-Z) PLANES                       DOC01810
C       TO LIMIT PLOT.                                                   DOC01820
C       ** DEFAULT XXMAX=YYMAX=ZZMAX=1.0E+20 **                          DOC01830
C       ** DEFAULT XXMIN=YYMIN=ZZMIN=-1.0E+20 **                         DOC01840
C NDMAX = MAXIMUM GRID PT. TO BE INCLUDED IN PLOT.                       DOC01850
C       ** DEFAULT = 9999999999 **                                       DOC01860
C NDMIN = MINIMUM GRID PT. TO BE INCLUDED IN PLOT.                       DOC01870
C       ** DEFAULT = 0 **                                                DOC01880
C NELMAX = MAXIMUM ELEMENT NUMBER TO BE INCLUDED IN PLOT.                DOC01890
C       ** DEFAULT = 9999999999 **                                       DOC01900
C NELMIN = MINIMUM ELEMENT NUMBER TO BE INCLUDED IN PLOT.                DOC01910
C       ** DEFAULT = 0 **                                                DOC01920
```

```
C         KODE SPECIFIES CONTROL OPTION AFTER PLOT IS COMPLETE.                 DOC01930
C         KODE = 0, LAST PLOT, EXIT FROM PROGRAM.                               DOC01940
C              = 1, READ ANOTHER NAMELIST PICT.                                 DOC01950
C              = 2, READ A NEW SET OF DISPLACEMENT DATA, INCLUDING A            DOC01960
C                   CASE IDENTIFICATION CARD IF PRESENT.                        DOC01970
C              = 3, READ A COMPLETE NEW SET OF INPUT DATA,                      DOC01980
C                   INCLUDING A TITLE CARD.                                     DOC01990
C              ** DEFAULT = 0 **                                                DOC02000
                                                                                DOC02010
                                                                                DOC02020
                                                                                DOC02030
C    THE ABOVE COMPRISES A COMPLETE BASIC SET OF INPUT DATA IF                  DOC02040
C    KODE = 0 IN $PICT.  FOR KODE = 1, 2, OR 3, ADDITIONAL SECTIONS OF          DOC02050
C    THE BASIC DECK MUST BE REPEATED.  THE DECK MUST END WITH                   DOC02060
C    NAMELIST $PICT HAVING KODE = 0.                                            DOC02070
C                                                                               DOC02080
C                                                                               DOC02090
C                                                                               DOC02100
C*******************************************************************************DOC02110
C                                                                               DOC02120
C                                                                               DOC02130
C                      DESCRIPTION OF GRAPHICS SUBROUTINES                      DOC02140
C                                                                               DOC02150
C                                                                               DOC02160
C                                                                               DOC02170
C          THE SUBROUTINES USED IN THE ACTUAL CREATION OF PLOTS BY              DOC02180
C          THE CALCOMP MODEL 765 CAN BE FOUND IN NPS TECHNICAL NOTE             DOC02190
C          NUMBER 0211-03, "PLOTTING PACKAGE FOR NPS IBM 360/367".              DOC02200
C                                                                               DOC02210
C                                                                               DOC02220
C                                                                               DOC02230
C*******************************************************************************DOC02240
      SUBROUTINE PSAP(ZZZ, NZ, DISPD, NON)                                      DOC02250
C                                                                               DOC02260
C *** THIS IS THE MAIN SUBROUTINE WHICH CALLS OTHER SUBROUTINES                 DOC02270
C                                                                               DOC02280
      INTEGER NUMPT,XPT,YPT,ZPT,UPT,VPT,WPT                                     DOC02290
      COMMON/CDATA/NTIME,NTLC                                                   DOC02300
      COMMON/CONTRL/ KGEOM,KDATA,KPLOT,KSYMXY,KSYMXZ,KSYMYZ,NOTAT,XLHT,        DOC02310
     1KFORZ,KVERT,PHI,THETA,PSI,NEWFR,ISCALE,PLOTSZ,XORGN,YORGN,                DOC02320
     2PSCALE,KDISP,DMAG,KODE                                                    DOC02330
      COMMON/LIMITS/ XXMAX,YYMAX,ZZMAX,XXMIN,YYMIN,ZZMIN,NDMAX,NDMIN,           DOC02340
     1NELMAX,NELMIN                                                             DOC02350
      COMMON/CORGN/ XOABS,YOABS,XPMAX,XSPACE,PSIZE                              DOC02360
      COMMON/GLOOP/ ILOOP                                                       DOC02370
      COMMON/ABLK/ A(3,3)                                                       DOC02380
      COMMON/SAVEV/ DMAGS,IDMAG                                                 DOC02390
      COMMON/KOUNT/ NNODE,NNDEST,NUDISP,NVDISP,NWDISP                           DOC02400
```

```
      COMMON/VALUES/ NVALUS                                                  DOC02410
      COMMON/CASEID/ IDCASE                                                  DOC02420
      DIMENSION ZZZ(NZ),DISPD(5,3,NON)                                       DOC02430
      DIMENSION DSAV(3)                                                      DOC02440
      REAL*8 ABCD(10)                                                        DOC02450
      NAMELIST/PICT/ KHORZ,KVERT,PHI,THETA,PSI,NEWFR,ISCALE,                 DOC02460
     1PLOTSZ,XORGN,YORGN,PSCALE,NOTAT,KDISP,IDMAG,DMAGS,KODE,                DOC02470
     2KSYMXY,KSYMXZ,KSYMYZ,XXMAX,YYMAX,ZZMAX,XXMIN,                          DOC02480
     3YYMIN,ZZMIN,NDMAX,NDMIN,NELMAX,NELMIN,XLHT                             DOC02490
C                                                                            DOC02500
C *** TO ZERO NODE AND ELEMENT SUMMATION COUNTERS                            DOC02510
C                                                                            DOC02520
      ILOOP = 0                                                              DOC02530
      NNODE = 0                                                              DOC02540
      XCABS = 0.0                                                            DOC02550
      YCABS = 0.0                                                            DOC02560
      XPMAX = 0.0                                                            DOC02570
  500 CONTINUE                                                               DOC02580
      REWIND 10                                                              DOC02590
      XSTRT = 0.0                                                            DOC02600
      YSTRT = 0.0                                                            DOC02610
      WRITE(6,8)                                                             DOC02620
    8 FORMAT(1H1)                                                            DOC02630
C                                                                            DOC02640
C *** TO READ TITLE CARD FOR RUN                                             DOC02650
C                                                                            DOC02660
      READ(5,10,END=999) ABCD                                                DOC02670
   10 FORMAT(10A8)                                                           DOC02680
      WRITE(6,11) ABCD                                                       DOC02690
   11 FORMAT(///,20X,10A8,///)                                               DOC02700
      CALL INITAL                                                            DOC02710
      HEIGHT = 0.15                                                          DOC02720
      XSTRT = XSTRT+2.0*HEIGHT                                               DOC02730
      YSTRT = 1.0                                                            DOC02740
      CALL NOTATE(XSTRT,YSTRT,HEIGHT,ABCD, 0.0,80)                           DOC02750
      CALL CALPLT(-.5,0.0,-3)                                                DOC02760
C                                                                            DOC02770
C *** TO SET POINTERS FOR BLANK COMMON STORAGE ZZZ                           DOC02780
C *** (WITH INTEGER NAMES OF ARRAYS USED IN CALLED SUBROUTINES)              DOC02790
C                                                                            DOC02800
      NUMPT = 1                                                              DOC02810
      XPT = NUMPT+NNDEST                                                     DOC02820
      YPT = XPT+NNDEST                                                       DOC02830
      ZPT = YPT+NNDEST                                                       DOC02840
      UPT = ZPT+NNDEST                                                       DOC02850
      IF(NUDISP.EQ.0) VPT = UPT+1                                            DOC02860
      IF(NUDISP.NE.0) VPT = UPT+NNDEST                                       DOC02870
      IF(NVDISP.EQ.0) WPT = VPT+1                                            DOC02880
```

```
      IF(NVDISP.NE.0) WPT = VPT+NNDEST                                          DOC02890
      IF(NWDISP.EQ.0) NEND = WPT+1-1                                            DOC02900
      IF(NWDISP.NE.0) NEND = WPT+NNDEST-1                                       DOC02910
      WRITE(6,15) NEND                                                          DOC02920
   15 FORMAT(///,20X,'BLANK COMMON STORAGE ZZZ REQUIRES AT LEAST ',I6,          DOC02930
     1' LOCATIONS FOR THIS CASE'///)                                            DOC02940
      IF(KGEOM.EQ.1) CALL GEOM1                                                 DOC02950
     1(ZZZ(NUMPT),ZZZ(XPT),ZZZ(YPT),ZZZ(ZPT),ZZZ(UPT),ZZZ(VPT),ZZZ(WPT))       DOC02960
      IF(KGEOM.EQ.2) CALL GEOM2                                                 DOC02970
     1(ZZZ(NUMPT),ZZZ(XPT),ZZZ(YPT),ZZZ(ZPT),ZZZ(UPT),ZZZ(VPT),ZZZ(WPT))       DOC02980
      IF(KGEOM.EQ.9) CALL GEOM9                                                 DOC02990
     1(ZZZ(NUMPT),ZZZ(XPT),ZZZ(YPT),ZZZ(ZPT),ZZZ(UPT),ZZZ(VPT),ZZZ(WPT))       DOC03000
      CALL PNTOUT(1,                                                            DOC03010
     1ZZZ(NUMPT),ZZZ(XPT),ZZZ(YPT),ZZZ(ZPT),ZZZ(UPT),ZZZ(VPT),ZZZ(WPT))        DOC03020
  600 CONTINUE                                                                  DOC03030
      IF(IDCASE.EQ.0) GO TO 650                                                 DOC03040
      READ(5,10) ABCD                                                           DOC03050
      WRITE(6,11) ABCD                                                          DOC03060
  650 CONTINUE                                                                  DOC03070
      CALL ZEROD                                                                DOC03080
     1(ZZZ(NUMPT),ZZZ(XPT),ZZZ(YPT),ZZZ(ZPT),ZZZ(UPT),ZZZ(VPT),ZZZ(WPT))       DOC03090
      IF(KDATA.EQ.1) CALL DATA1                                                 DOC03100
     1(ZZZ(NUMPT),ZZZ(XPT),ZZZ(YPT),ZZZ(ZPT),ZZZ(UPT),ZZZ(VPT),ZZZ(WPT))       DOC03110
      IF(KDATA.EQ.5) CALL DATA5                                                 DOC03120
     1(ZZZ(NUMPT),ZZZ(XPT),ZZZ(YPT),ZZZ(ZPT),ZZZ(UPT),ZZZ(VPT),ZZZ(WPT))       DOC03130
      IF(KDATA.EQ.9) CALL DATA9                                                 DOC03140
     1(ZZZ(NUMPT),ZZZ(XPT),ZZZ(YPT),ZZZ(ZPT),ZZZ(UPT),ZZZ(VPT),ZZZ(WPT),      DOC03150
     2DISPD,NON)                                                                DOC03160
      CALL PNTOUT(2,                                                            DOC03170
     1ZZZ(NUMPT),ZZZ(XPT),ZZZ(YPT),ZZZ(ZPT),ZZZ(UPT),ZZZ(VPT),ZZZ(WPT))        DOC03180
  700 CONTINUE                                                                  DOC03190
      IF(KPLOT.EQ.4.AND.ILOOP.NE.0) GO TO 6000                                  DOC03200
      WRITE (6,1000)                                                            DOC03210
 1000  FORMAT(///)                                                              DOC03220
      READ(5,PICT)                                                              DOC03230
      WRITE(6,PICT)                                                             DOC03240
 6000 CONTINUE                                                                  DOC03250
      CALL DSCALE                                                               DOC03260
     1(ZZZ(NUMPT),ZZZ(XPT),ZZZ(YPT),ZZZ(ZPT),ZZZ(UPT),ZZZ(VPT),ZZZ(WPT))       DOC03270
      CALL BOUND                                                                DOC03280
     1(ZZZ(NUMPT),ZZZ(XPT),ZZZ(YPT),ZZZ(ZPT),ZZZ(UPT),ZZZ(VPT),ZZZ(WPT))       DOC03290
      CALL ROTAT                                                                DOC03300
      CALL PLOTX                                                                DOC03310
     1(ZZZ(NUMPT),ZZZ(XPT),ZZZ(YPT),ZZZ(ZPT),ZZZ(UPT),ZZZ(VPT),ZZZ(WPT))       DOC03320
      IF(NOTAT.EQ.1) CALL NDLET                                                 DOC03330
     1(ZZZ(NUMPT),ZZZ(XPT),ZZZ(YPT),ZZZ(ZPT),ZZZ(UPT),ZZZ(VPT),ZZZ(WPT))       DOC03340
      IF(KPLOT.EQ.4) CALL CALPLT( 0.0,0.0,-3)                                   DOC03350
      IF(KPLOT.EQ.4) CALL CCRT2                                                 DOC03360
```

```
      ILOCP = ILOOP+1                                                    DOC03370
      IF(KODE.EQ.0) GO TO 800                                            DOC03380
      GO TO (700,600,500), KODE                                          DOC03390
  800 CONTINUE                                                           DOC03400
  999 CALL PSTOP                                                         DOC03410
      RETURN                                                             DOC03420
      END                                                                DOC03430
      SUBROUTINE PSTOP                                                   DOC03440
C                                                                        DOC03450
C *** TC TERMINATE JOB.                                                  DOC03460
C                                                                        DOC03470
      COMMON/CONTRL/ KGEOM,KDATA,KPLOT,KSYMXY,KSYMXZ,KSYMYZ,NOTAT,XLHT,  DOC03480
     1KHORZ,KVERT,PHI,THETA,PSI,NEWFR,ISCALE,PLOTSZ,XORGN,YORGN,         DOC03490
     2PSCALE,KDISP,DMAG,KODE                                             DOC03500
      CALL CALPLT(0.0,0.0,-3)                                            DOC03510
      CALL PLOTE                                                         DOC03520
      STOP                                                               DOC03530
      END                                                                DOC03540
      SUBROUTINE INITAL                                                  DOC03550
C                                                                        DOC03560
C *** TO SET UP VALUES FOR CONTROL PARAMETERS                            DOC03570
C                                                                        DOC03580
      COMMON/CDATA/NTIME,NTLC                                            DOC03590
      COMMON/CONTRL/ KGEOM,KDATA,KPLOT,KSYMXY,KSYMXZ,KSYMYZ,NOTAT,XLHT,  DOC03600
     1KHORZ,KVERT,PHI,THETA,PSI,NEWFR,ISCALE,PLOTSZ,XORGN,YORGN,         DOC03610
     2PSCALE,KDISP,DMAG,KODE                                             DOC03620
      COMMON/LIMITS/ XXMAX,YYMAX,ZZMAX,XXMIN,YYMIN,ZZMIN,NDMAX,NDMIN,    DOC03630
     1NELMAX,NELMIN                                                      DOC03640
      COMMON/CORGN/ XOABS,YOABS,XPMAX,XSPACE,PSIZE                       DOC03650
      COMMON/SAVEV/ DMAGS,IDMAG                                          DOC03660
      COMMON/KOUNT/ NNODE,NNDEST,NUDISP,NVDISP,NWDISP                    DOC03670
      COMMON/SEQNCE/ IRESEQ                                              DOC03680
      COMMON/VALUES/ NVALUS                                              DOC03690
      COMMON/CASEID/ IDCASE                                              DOC03700
      NAMELIST/OPTION/ NNDEST,NUDISP,NVDISP,NWDISP,                      DOC03710
     1KGEOM,KDATA,NVALUS,IRESEQ,KPLOT,XSPACE,PSIZE,IDCASE                DOC03720
C                                                                        DOC03730
C *** DESCRIPTION OF VALUES IN $OPTION GIVEN IN SUBROUTINE DOCMNT        DOC03740
C                                                                        DOC03750
C                                                                        DOC03760
C *** TO SET DEFAULT VALUES FOR $OPTION                                  DOC03770
C                                                                        DOC03780
      NNDEST = 200                                                       DOC03790
      NUDISP = 1
      NVDISP = 1
      NWDISP = 1
      KGEOM=9                                                            DOC03830
      KDATA=9                                                            DOC03840
```

```
      NTIME=0                                                          DOC03850
      NVALUS = 0                                                       DOC03860
      IRESEQ = 1                                                       DOC03870
      KPLOT = 1                                                        DOC03880
      XSPACE=5.0                                                       DOC03890
      PSIZE=10.0                                                       DOC03900
      ICCASE = 0                                                       DOC03910
C                                                                      DOC03920
C *** TO SET DEFAULT VALUES FOR $PICT                                  DOC03930
C                                                                      DOC03940
      KHORZ = 1                                                        DOC03950
      KVERT = 2                                                        DOC03960
      PHI = 0.0                                                        DOC03970
      THETA = 0.0                                                      DOC03980
      PSI = 0.0                                                        DOC03990
      NEWFR = 1                                                        DOC04000
      ISCALE = 1                                                       DOC04010
      PLOTSZ = 10.0                                                    DOC04020
      XORGN = 0.0                                                      DOC04030
      YORGN = 0.0                                                      DOC04040
      PSCALE = 1.0                                                     DOC04050
      NOTAT = 0                                                        DOC04060
      XLHT = 0.15                                                      DOC04070
      KDISP = 0                                                        DOC04080
      IDMAG = 2                                                        DOC04090
      DMAGS = 1.0                                                      DOC04100
      KSYMXY = 0                                                       DOC04110
      KSYMXZ = 0                                                       DOC04120
      KSYMYZ = 0                                                       DOC04130
      XXMAX = 1.0E20                                                   DOC04140
      YYMAX = 1.0E20                                                   DOC04150
      ZZMAX = 1.0E20                                                   DOC04160
      XXMIN = -1.0E20                                                  DOC04170
      YYMIN = -1.0E20                                                  DOC04180
      ZZMIN = -1.0E20                                                  DOC04190
      NDMAX = 9999999                                                  DOC04200
      NDMIN = 0                                                        DOC04210
      NELMAX = 9999999                                                 DOC04220
      NELMIN = 0                                                       DOC04230
      KODE = 0                                                         DOC04240
      READ(5,OPTION,END=999)                                           DOC04250
      IF(KPLOT.LE.2) CALL CALCMP                                       DOC04260
      RETURN                                                           DOC04270
  999 CALL PSTOP                                                       DOC04280
      RETURN                                                           DOC04290
      END                                                              DOC04300
      SUBROUTINE BOUND(NUMPT,XPT,YPT,ZPT,UPT,VPT,WPT)                  DOC04310
C                                                                      DOC04320
```

```
C *** TO DETERMINE MAXIMUM DIMENSIONAL LIMITS OF BODY FOR USE                    DOC04330
C     IN SCALING PLOTS                                                          DOC04340
C                                                                               DOC04350
      COMMON/CONTRL/ KGEOM,KDATA,KPLOT,KSYMXY,KSYMXZ,KSYMYZ,NOTAT,XLHT,         DOC04360
     1KHORZ,KVERT,PHI,THETA,PSI,NEWFR,ISCALE,PLOTSZ,XORGN,YORGN,                DOC04370
     2PSCALE,KDISP,DMAG,KODE                                                    DOC04380
      COMMON/LIMITS/ XXMAX,YYMAX,ZZMAX,XXMIN,YYMIN,ZZMIN,NDMAX,NDMIN,           DOC04390
     1NELMAX,NELMIN                                                             DOC04400
      COMMON/XYZLIM/ XYZMAX(3),XYZMIN(3)                                        DOC04410
      COMMON/KOUNT/ NNODE,NNDEST,NUDISP,NVDISP,NWDISP                           DOC04420
      DIMENSION NUMPT(1),XPT(1),YPT(1),ZPT(1),UPT(1),VPT(1),WPT(1)              DOC04430
      DIMENSION NODE(4)                                                         DOC04440
      DO 5 I=1,3                                                                DOC04450
      XYZMIN(I) = +1.0E20                                                       DOC04460
      XYZMAX(I) = -1.0E20                                                       DOC04470
    5 CONTINUE                                                                  DOC04480
      REWIND 10                                                                 DOC04490
  100 CONTINUE                                                                  DOC04500
      READ(10,END=1000) NUMEL,NODE1,NODE2,NODE3,NODE4                           DOC04510
      IF(NUMEL.LT.NELMIN.OR.NUMEL.GT.NELMAX) GO TO 100                          DOC04520
      NODE(1) = NODE1                                                           DOC04530
      NODE(2) = NODE2                                                           DOC04540
      NODE(3) = NODE3                                                           DOC04550
      NODE(4) = NODE4                                                           DOC04560
      DO 10 I=1,4                                                               DOC04570
      ND = NODE(I)                                                              DOC04580
      IF(NODE(I).EQ.0) GO TO 15                                                 DOC04590
      IF(NUMPT(ND).LT.NDMIN.OR.NUMPT(ND).GT.NDMAX) GO TO 100                    DOC04600
   10 CONTINUE                                                                  DOC04610
   15 CONTINUE                                                                  DOC04620
      DO 20 I=1,4                                                               DOC04630
      IF(NODE(I).EQ.0) GO TO 25                                                 DOC04640
      ND = NODE(I)                                                              DOC04650
      IF(XPT(ND).GT.XXMAX) GO TO 20                                             DOC04660
      IF(XPT(ND).LT.XXMIN) GO TO 20                                             DOC04670
      IF(YPT(ND).GT.YYMAX) GO TO 20                                             DOC04680
      IF(YPT(ND).LT.YYMIN) GO TO 20                                             DOC04690
      IF(ZPT(ND).GT.ZZMAX) GO TO 20                                             DOC04700
      IF(ZPT(ND).LT.ZZMIN) GO TO 20                                             DOC04710
      IF(XPT(ND).GT.XYZMAX(1)) XYZMAX(1) = XPT(ND)                              DOC04720
      IF(XPT(ND).LT.XYZMIN(1)) XYZMIN(1) = XPT(ND)                              DOC04730
      IF(YPT(ND).GT.XYZMAX(2)) XYZMAX(2) = YPT(ND)                              DOC04740
      IF(YPT(ND).LT.XYZMIN(2)) XYZMIN(2) = YPT(ND)                              DOC04750
      IF(ZPT(ND).GT.XYZMAX(3)) XYZMAX(3) = ZPT(ND)                              DOC04760
      IF(ZPT(ND).LT.XYZMIN(3)) XYZMIN(3) = ZPT(ND)                              DOC04770
   20 CONTINUE                                                                  DOC04780
   25 CONTINUE                                                                  DOC04790
      GO TO 100                                                                 DOC04800
```

```
 1000 CONTINUE                                                          DOC04810
      DO 300 I=1,3                                                      DOC04820
      IF(I.EQ.1.AND.KSYMYZ.NE.1) GO TO 300                              DOC04830
      IF(I.EQ.2.AND.KSYMXZ.NE.1) GO TO 300                              DOC04840
      IF(I.EQ.3.AND.KSYMXY.NE.1) GO TO 300                              DOC04850
      XYZBIG = ABS(XYZMAX(I))                                           DOC04860
      IF(ABS(XYZMIN(I)).GT.XYZBIG) XYZBIG = ABS(XYZMIN(I))              DOC04870
      XYZMAX(I) = XYZBIG                                                DOC04880
      XYZMIN(I) = -XYZBIG                                               DOC04890
  300 CONTINUE                                                          DOC04900
      RETURN                                                            DOC04910
      END                                                               DOC04920
      SUBROUTINE ZEROD(NUMPT,XPT,YPT,ZPT,UPT,VPT,WPT)                   DOC04930
C                                                                       DOC04940
C *** INITIALIZES ALL DISPLACEMENTS TO ZERO.                            DOC04950
C                                                                       DOC04960
      COMMON/KOUNT/ NNODE,NNDEST,NUDISP,NVDISP,NWDISP                   DOC04970
      DIMENSION NUMPT(1),XPT(1),YPT(1),ZPT(1),UPT(1),VPT(1),WPT(1)      DOC04980
      IF(NUDISP.EQ.0) GO TO 200                                         DOC04990
      DO 150 I=1,NUDISP                                                 DOC05000
      UPT(I) = 0.0                                                      DOC05010
  150 CONTINUE                                                          DOC05020
  200 CONTINUE                                                          DOC05030
      IF(NVDISP.EQ.0) GO TO 300                                         DOC05040
      DO 250 I=1,NVDISP                                                 DOC05050
      VPT(I) = 0.0                                                      DOC05060
  250 CONTINUE                                                          DOC05070
  300 CONTINUE                                                          DOC05080
      IF(NWDISP.EQ.0) GO TO 400                                         DOC05090
      DO 350 I=1,NWDISP                                                 DOC05100
      WPT(I) = 0.0                                                      DOC05110
  350 CONTINUE                                                          DOC05120
  400 CONTINUE                                                          DOC05130
      RETURN                                                            DOC05140
      END                                                               DOC05150
      SUBROUTINE PNTOUT(IOUT,NUMPT,XPT,YPT,ZPT,UPT,VPT,WPT)             DOC05160
C                                                                       DOC05170
C *** FOR PRINTED OUTPUT OF INFORMATION IN BLANK COMMON - ZZZ           DOC05180
C                                                                       DOC05190
      COMMON/KOUNT/ NNODE,NNDEST,NUDISP,NVDISP,NWDISP                   DOC05200
      DIMENSION NUMPT(1),XPT(1),YPT(1),ZPT(1),UPT(1),VPT(1),WPT(1)      DOC05210
      GO TO (1000,2000), IOUT                                           DOC05220
 1000 CONTINUE                                                          DOC05230
C                                                                       DOC05240
C *** FOR OUTPUT OF GEOMETRY INFORMATION                                DOC05250
C                                                                       DOC05260
      WRITE(6,16)                                                       DOC05270
   16 FORMAT(///,5X,'GRID POINT INFORMATION',///)                       DOC05280
```

```
      WRITE(6,17)                                                       DOC05290
   17 FORMAT(5X,'RESEQUENCED',4X,'USER INPUT'/                          DOC05300
     15X,'GRID POINT',5X,'GRID POINT'/                                  DOC05310
     25X,'NUMBER',9X,'NUMBER',13X,'X',14X,'Y',14X,'Z'//)                DOC05320
      DO 30 I=1,NNODE                                                   DOC05330
      WRITE(6,18) I,NUMPT(I),XPT(I),YPT(I),ZPT(I)                       DOC05340
   18 FORMAT(2X,I10,5X,I10,3X,3E15.4)                                   DOC05350
   30 CONTINUE                                                          DOC05360
      WRITE(6,19)                                                       DOC05370
   19 FORMAT(///,5X,'ELEMENT INFORMATION - WITH RESEQUENCED GRID POINTS DOC05380
     1'///)                                                             DOC05390
      WRITE(6,21)                                                       DOC05400
   21 FORMAT(5X,'RESEQUENCED',4X,'USER INPUT',19X,'GRID POINTS'/        DOC05410
     15X,'ELEMENT',8X,'ELEMENT'/                                        DOC05420
     25X,'NUMBER',9X,'NUMBER',13X,'1',9X,'2',9X,'3',9X,'4'//)           DOC05430
      REWIND 10                                                         DOC05440
      I = 0                                                             DOC05450
   35 CONTINUE                                                          DOC05460
      I = I+1                                                           DOC05470
      READ(10,END=999) NUMEL,NODE1,NODE2,NODE3,NODE4                    DOC05480
      WRITE(6,22) I,NUMEL,NODE1,NODE2,NODE3,NODE4                       DOC05490
   22 FORMAT(2X,I10,5X,I10,4X,4I10)                                     DOC05500
      GO TO 35                                                          DOC05510
 2000 CONTINUE                                                          DOC05520
C                                                                       DOC05530
C *** FOR OUTPUT OF DISPLACEMENT DATA                                   DOC05540
C                                                                       DOC05550
      WRITE(6,210)                                                      DOC05560
  210 FORMAT(///,5X,'DISPLACEMENTS TO BE PLOTTED',///)                  DOC05570
      WRITE(6,17)                                                       DOC05580
      DO 230 I=1,NNODE                                                  DOC05590
      U = 0.0                                                           DOC05600
      IF(NUDISP.NE.0) U = UPT(I)                                        DOC05610
      V = 0.0                                                           DOC05620
      IF(NVDISP.NE.0) V = VPT(I)                                        DOC05630
      W = 0.0                                                           DOC05640
      IF(NWDISP.NE.0) W = WPT(I)                                        DOC05650
      WRITE(6,18) I,NUMPT(I),U,V,W                                      DOC05660
  230 CONTINUE                                                          DOC05670
  999 RETURN                                                            DOC05680
      END                                                               DOC05690
      SUBROUTINE PLOTX(NUMPT,XPT,YPT,ZPT,UPT,VPT,WPT)                   DOC05700
C                                                                       DOC05710
C *** FOR GENERATING PLOTS.                                             DOC05720
C                                                                       DOC05730
      COMMON/CONTRL/ KGEOM,KDATA,KPLOT,KSYMXY,KSYMXZ,KSYMYZ,NOTAT,XLHT, DOC05740
     1KHORZ,KVERT,PHI,THETA,PSI,NEWFR,ISCALE,PLOTSZ,XORGN,YORGN,        DOC05750
     2PSCALE,KDISP,DMAG,KODE                                            DOC05760
```

```
      COMMON/LIMITS/ XXMAX,YYMAX,ZZMAX,XXMIN,YYMIN,ZZMIN,NDMAX,NDMIN,    DOC05770
     1NELMAX,NELMIN                                                     DOC05780
      COMMON/XYZLIM/ XYZMAX(3),XYZMIN(3)                                DOC05790
      COMMON/CORGN/ XOABS,YOABS,XPMAX,XSPACE,PSIZE                      DOC05800
      COMMON/GLOOP/ ILOOP                                               DOC05810
      COMMON/ABLK/ A(3,3)                                               DOC05820
      COMMON/KOUNT/ NNODE,NNDEST,NUDISP,NVDISP,NWDISP                   DOC05830
      COMMON/PDELS/ DELX,DELY                                           DOC05840
      DIMENSION NUMPT(1),XPT(1),YPT(1),ZPT(1),UPT(1),VPT(1),WPT(1)      DOC05850
      DIMENSION NODE(4),X(4),Y(4),Z(4),XDISP(4),YDISP(4),ZDISP(4),      DOC05860
     1XROT(4),YROT(4)                                                   DOC05870
    1 FORMAT(8A10)                                                      DOC05880
    2 FORMAT(1X,8A10)                                                   DOC05890
C                                                                       DOC05900
C *** TO MAKE ALL GRID POINT NUMBERS NEGATIVE                           DOC05910
C                                                                       DOC05920
      DO 50 I=1,NNODE                                                   DOC05930
      NUMPT(I) = -NUMPT(I)                                              DOC05940
   50 CONTINUE                                                          DOC05950
      PI = 3.1415926                                                    DOC05960
      XMOVE = 0.0                                                       DOC05970
      IF(NEWFR.EQ.1) XMOVE = XPMAX+XSPACE                               DOC05980
      YMOVE = -YOABS                                                    DOC05990
      CALL CALPLT(YMOVE,XMOVE,-3)                                       DOC06000
      XCABS = XOABS+XMOVE                                               DOC06010
      YCABS = YOABS+YMOVE                                               DOC06020
      GO TO (701,701,703,701), KPLOT                                    DOC06030
  701 CONTINUE                                                          DOC06040
      GO TO 710                                                         DOC06050
  703 CONTINUE                                                          DOC06060
      IF(NEWFR.EQ.1) CALL NFRAME                                        DOC06070
  710 CONTINUE                                                          DOC06080
      DELX = 0.0                                                        DOC06090
      DELY = 0.0                                                        DOC06100
      IF(ISCALE.EQ.1) CALL XYSCAL                                       DOC06110
      CALL CALPLT(XORGN,YORGN,-3)                                       DOC06120
      XOABS = XOABS+XORGN                                               DOC06130
      YCABS = YOABS+YORGN                                               DOC06140
      XSHIFT = 0.0                                                      DOC06150
      YSHIFT = 0.0                                                      DOC06160
      ZSHIFT = 0.0                                                      DOC06170
      XPMAX = -1.0E20                                                   DOC06180
C                                                                       DOC06190
C *** LOOPS TO ACCOUNT FOR SYMMETRY                                     DOC06200
C                                                                       DOC06210
      ZSIGN = +1.0                                                      DOC06220
      DO 500 II=1,2                                                     DOC06230
      IF(II.EQ.2.AND.KSYMXY.NE.1) GO TO 500                             DOC06240
```

```
      IF(II.EQ.2.AND.KSYMXY.EQ.1) ZSIGN = -1.0                          DOC06250
      YSIGN = +1.0                                                      DOC06260
      DO 510 JJ=1,2                                                     DOC06270
      IF(JJ.EQ.2.AND.KSYMXZ.NE.1) GO TO 510                             DOC06280
      IF(JJ.EQ.2.AND.KSYMXZ.EQ.1) YSIGN = -1.0                          DOC06290
      XSIGN = +1.0                                                      DOC06300
      DO 520 KK=1,2                                                     DOC06310
      IF(KK.EQ.2.AND.KSYMYZ.NE.1) GO TO 520                             DOC06320
      IF(KK.EQ.2.AND.KSYMYZ.EQ.1) XSIGN = -1.0                          DOC06330
C                                                                       DOC06340
C *** TC DETERMINE PROJECTED COORDINATES OF ELEMENTS                    DOC06350
C                                                                       DOC06360
      REWIND 10                                                         DOC06370
  100 CONTINUE                                                          DOC06380
      READ(10,END=1000) NUMEL,NODE1,NODE2,NODE3,NODE4                   DOC06390
      IF(NUMEL.LT.NELMIN.OR.NUMEL.GT.NELMAX) GO TO 100                  DOC06400
      NODE(1) = NODE1                                                   DOC06410
      NODE(2) = NODE2                                                   DOC06420
      NODE(3) = NODE3                                                   DOC06430
      NODE(4) = NODE4                                                   DOC06440
      DO 10 I=1,4                                                       DOC06450
      ND = NODE(I)                                                      DOC06460
      IF(NODE(I).EQ.0) GO TO 11                                         DOC06470
C                                                                       DOC06480
C *** TC MAKE GRID POINT NUMBERS CONNECTED BY ELEMENTS POSITIVE         DOC06490
      NUMPT(ND) = IABS(NUMPT(ND))                                       DOC06500
      IF(NUMPT(ND).LT.NDMIN.OR.NUMPT(ND).GT.NDMAX) GO TO 100            DOC06510
      NEND = I                                                          DOC06520
   10 CONTINUE                                                          DOC06530
   11 CONTINUE                                                          DOC06540
      I = KHORZ                                                         DOC06550
      J = KVERT                                                         DOC06560
      DO 20 N=1,NEND                                                    DOC06570
      ND = NODE(N)                                                      DOC06580
      IF(XPT(ND).GT.XXMAX) GO TO 100                                    DOC06590
      IF(XPT(ND).LT.XXMIN) GO TO 100                                    DOC06600
      IF(YPT(ND).GT.YYMAX) GO TO 100                                    DOC06610
      IF(YPT(ND).LT.YYMIN) GO TO 100                                    DOC06620
      IF(ZPT(ND).GT.ZZMAX) GO TO 100                                    DOC06630
      IF(ZPT(ND).LT.ZZMIN) GO TO 100                                    DOC06640
      XDISP(N) = 0.0                                                    DOC06650
      YDISP(N) = 0.0                                                    DOC06660
      ZDISP(N) = 0.0                                                    DOC06670
      IF(KDISP.EQ.1.AND.NUDISP.NE.0) XDISP(N) = UPT(ND)                 DOC06680
      IF(KDISP.EQ.1.AND.NVDISP.NE.0) YDISP(N) = VPT(ND)                 DOC06690
      IF(KDISP.EQ.1.AND.NWDISP.NE.0) ZDISP(N) = WPT(ND)                 DOC06700
      X(N) = XSIGN*(XPT(ND)+XDISP(N)*DMAG+XSHIFT)/PSCALE                DOC06710
      Y(N) = YSIGN*(YPT(ND)+YDISP(N)*DMAG+YSHIFT)/PSCALE                DOC06720
```

```
      Z(N) = ZSIGN*(ZPT(ND)+ZDISP(N)*DMAG+ZSHIFT)/PSCALE                  DOC06730
   20 CONTINUE                                                           DOC06740
      IF(KDISP.EQ.2) CALL XPLOD(NEND,X,Y,Z)                              DOC06750
      XCENT = 0.0                                                        DOC06760
      YCENT = 0.0                                                        DOC06770
      DO 25 N=1,NEND                                                     DOC06780
      XROT(N) = A(I,1)*X(N)+A(I,2)*Y(N)+A(I,3)*Z(N)                      DOC06790
      YROT(N) = A(J,1)*X(N)+A(J,2)*Y(N)+A(J,3)*Z(N)                      DOC06800
      XCENT = XCENT+XROT(N)                                              DOC06810
      YCENT = YCENT+YROT(N)                                              DOC06820
      XROT(N) = XROT(N)+DELX                                             DOC06830
      YROT(N) = YROT(N)+DELY                                             DOC06840
      IF(XROT(N).GT.XPMAX) XPMAX = XROT(N)                               DOC06850
   25 CONTINUE                                                           DOC06860
      XCENT = XCENT/FLOAT(NEND)-(6.0/7.0)*XLHT                           DOC06870
      YCENT = YCENT/FLOAT(NEND)-XLHT/2.0                                 DOC06880
      XCENT = XCENT+DELX                                                 DOC06890
      YCENT = YCENT+DELY                                                 DOC06900
      AL = NUMEL                                                         DOC06910
      IF(NOTAT.EQ.2) CALL NUMBER(XCENT,YCENT,XLHT,AL,0.0,-1)             DOC06920
C                                                                        DOC06930
C *** TC PLOT ELEMENTS                                                   DOC06940
C                                                                        DOC06950
      CALL CALPLT(XROT(1),YROT(1),3)                                     DOC06960
      DO 30 N=2,NEND                                                     DOC06970
      CALL CALPLT(XROT(N),YROT(N),2)                                     DOC06980
   30 CONTINUE                                                           DOC06990
      CALL CALPLT(XROT(NEND),YROT(NEND),3)                               DOC07000
      IF(NEND.LE.2) GO TO 36                                             DOC07010
   35 CALL CALPLT(XROT(1),YROT(1),2)                                     DOC07020
      CALL CALPLT(XROT(1),YROT(1),3)                                     DOC07030
   36 CONTINUE                                                           DOC07040
      GO TO 100                                                          DOC07050
 1000 CONTINUE                                                           DOC07060
      IF(KDISP.NE.3) GO TO 650                                           DOC07070
  600 CONTINUE                                                           DOC07080
C                                                                        DOC07090
C *** TC PLOT VECTORS AT GRID POINTS                                     DOC07100
C                                                                        DOC07110
      DO 601 ND=1,NNODE                                                  DOC07120
      IF(NUMPT(ND).LE.0) GO TO 601                                       DOC07130
      IF(NUMPT(ND).LT.NDMIN.OR.NUMPT(ND).GT.NDMAX) GO TO 601             DOC07140
      IF(XPT(ND).GT.XYZMAX(1)) GO TO 601                                 DOC07150
      IF(XPT(ND).LT.XYZMIN(1)) GO TO 601                                 DOC07160
      IF(YPT(ND).GT.XYZMAX(2)) GO TO 601                                 DOC07170
      IF(YPT(ND).LT.XYZMIN(2)) GO TO 601                                 DOC07180
      IF(ZPT(ND).GT.XYZMAX(3)) GO TO 601                                 DOC07190
      IF(ZPT(ND).LT.XYZMIN(3)) GO TO 601                                 DOC07200
```

```
      X(1) = XSIGN*(XPT(ND)+XSHIFT)/PSCALE                                    DOC07210
      Y(1) = YSIGN*(YPT(ND)+YSHIFT)/PSCALE                                    DOC07220
      Z(1) = ZSIGN*(ZPT(ND)+ZSHIFT)/PSCALE                                    DOC07230
      XDISP(1) = 0.0                                                          DOC07240
      YDISP(1) = 0.0                                                          DOC07250
      ZDISP(1) = 0.0                                                          DOC07260
      IF(NUDISP.NE.0) XDISP(1) = UPT(ND)                                      DOC07270
      IF(NVDISP.NE.0) YDISP(1) = VPT(ND)                                      DOC07280
      IF(NWDISP.NE.0) ZDISP(1) = WPT(ND)                                      DOC07290
      X(2) = XSIGN*(XPT(ND)+XDISP(1)*DMAG+XSHIFT)/PSCALE                      DOC07300
      Y(2) = YSIGN*(YPT(ND)+YDISP(1)*DMAG+XSHIFT)/PSCALE                      DOC07310
      Z(2) = ZSIGN*(ZPT(ND)+ZDISP(1)*DMAG+ZSHIFT)/PSCALE                      DOC07320
      I = KHORZ                                                               DOC07330
      J = KVERT                                                               DOC07340
      DO 605 N=1,2                                                            DOC07350
      XROT(N) = A(I,1)*X(N)+A(I,2)*Y(N)+A(I,3)*Z(N)                           DOC07360
      YROT(N) = A(J,1)*X(N)+A(J,2)*Y(N)+A(J,3)*Z(N)                           DOC07370
      XROT(N) = XROT(N)+DELX                                                  DOC07380
      YROT(N) = YROT(N)+DELY                                                  DOC07390
  605 CONTINUE                                                                DOC07400
      XARW = 0.06                                                             DOC07410
      YARW = XARW/3.0                                                         DOC07420
      CALL GARROW(XROT(1),YROT(1),XROT(2),YROT(2),1,XARW,YARW)                DOC07430
  601 CONTINUE                                                                DOC07440
  650 CONTINUE                                                                DOC07450
  520 CONTINUE                                                                DOC07460
  510 CONTINUE                                                                DOC07470
  500 CONTINUE                                                                DOC07480
      RETURN                                                                  DOC07490
      END                                                                     DOC07500
      SUBROUTINE DSCALE(NUMPT,XPT,YPT,ZPT,UPT,VPT,WPT)                        DOC07510
C                                                                             DOC07520
C *** THIS SUBROUTINE DETERMINES THE SCALE FACTOR FOR DISPLACEMENTS           DOC07530
C                                                                             DOC07540
      COMMON/CONTRL/ KGEOM,KDATA,KPLOT,KSYMXY,KSYMXZ,KSYMYZ,NOTAT,XLHT,       DOC07550
     1KHORZ,KVERT,PHI,THETA,PSI,NEWFR,ISCALE,PLOTSZ,XORGN,YORGN,              DOC07560
     2PSCALE,KDISP,DMAG,KODE                                                  DOC07570
      COMMON/SAVEV/ DMAGS,IDMAG                                               DOC07580
      COMMON/KOUNT/ NNODE,NNDEST,NUDISP,NVDISP,NWDISP                         DOC07590
      DIMENSION NUMPT(1),XPT(1),YPT(1),ZPT(1),UPT(1),VPT(1),WPT(1)            DOC07600
      IF(KDISP.EQ.0.OR.KDISP.EQ.2) GO TO 10                                   DOC07610
      GO TO (10,20), IDMAG                                                    DOC07620
   10 CONTINUE                                                                DOC07630
      DMAG = DMAGS                                                            DOC07640
      GO TO 30                                                                DOC07650
   20 CONTINUE                                                                DOC07660
      DMAX = 0.0                                                              DOC07670
      DO 100 I=1,NNODE                                                        DOC07680
```

```
      IF(NUDISP.EQ.0) GO TO 500                                          DOC07690
      IF(ABS(UPT(I)).GT.DMAX) DMAX = ABS(UPT(I))                         DOC07700
  500 CONTINUE                                                           DOC07710
      IF(NVDISP.EQ.0) GO TO 501                                          DOC07720
      IF(ABS(VPT(I)).GT.DMAX) DMAX = ABS(VPT(I))                         DOC07730
  501 CONTINUE                                                           DOC07740
      IF(NWDISP.EQ.0) GO TO 502                                          DOC07750
      IF(ABS(WPT(I)).GT.DMAX) DMAX = ABS(WPT(I))                         DOC07760
  502 CONTINUE                                                           DOC07770
  100 CONTINUE                                                           DOC07780
      DMAG = DMAGS/DMAX                                                  DOC07790
   30 CONTINUE                                                           DOC07800
      RETURN                                                             DOC07810
      END                                                                DOC07820
      SUBROUTINE ROTAT                                                   DOC07830
C                                                                        DOC07840
C *** SETS UP COEFFICIENTS OF ROTATION MATRIX                            DOC07850
C                                                                        DOC07860
      COMMON/CONTRL/ KGEOM,KDATA,KPLOT,KSYMXY,KSYMXZ,KSYMYZ,NOTAT,XLHT,  DOC07870
     1KHORZ,KVERT,PHI,THETA,PSI,NEWFR,ISCALE,PLOTSZ,XORGN,YORGN,         DOC07880
     2PSCALE,KDISP,DMAG,KODE                                             DOC07890
      COMMON/ABLK/ A(3,3)                                                DOC07900
      PI = 3.1415926536                                                  DOC07910
      SINPHI = SIN(PHI*PI/180.0)                                         DOC07920
      COSPHI = COS(PHI*PI/180.0)                                         DOC07930
      SINTHE = SIN(THETA*PI/180.0)                                       DOC07940
      COSTHE = COS(THETA*PI/180.0)                                       DOC07950
      SINPSI = SIN(PSI*PI/180.0)                                         DOC07960
      COSPSI = COS(PSI*PI/180.0)                                         DOC07970
      A(1,1) = COSTHE*COSPSI                                             DOC07980
      A(1,2) = COSPSI*SINTHE*SINPHI-SINPSI*COSPHI                        DOC07990
      A(1,3) = SINTHE*COSPHI*COSPSI+SINPHI*SINPSI                        DOC08000
      A(2,1) = SINPSI*COSTHE                                             DOC08010
      A(2,2) = SINTHE*SINPHI*SINPSI+COSPHI*COSPSI                        DOC08020
      A(2,3) = SINTHE*COSPHI*SINPSI-SINPHI*COSPSI                        DOC08030
      A(3,1) = -SINTHE                                                   DOC08040
      A(3,2) = COSTHE*SINPHI                                             DOC08050
      A(3,3) = COSTHE*COSPHI                                             DOC08060
      RETURN                                                             DOC08070
      END                                                                DOC08080
      SUBROUTINE XYSCAL                                                  DOC08090
C                                                                        DOC08100
C *** TO DETERMINE SCALE FACTOR FOR MODEL GEOMETRY.                      DOC08110
C                                                                        DOC08120
      COMMON/CONTRL/ KGEOM,KDATA,KPLOT,KSYMXY,KSYMXZ,KSYMYZ,NOTAT,XLHT,  DOC08130
     1KHORZ,KVERT,PHI,THETA,PSI,NEWFR,ISCALE,PLOTSZ,XORGN,YORGN,         DOC08140
     2PSCALE,KDISP,DMAG,KODE                                             DOC08150
      COMMON/XYZLIM/ XYZMAX(3),XYZMIN(3)                                 DOC08160
```

```
      COMMON/CORGN/ XOABS,YOABS,XPMAX,XSPACE,PSIZE                      DOC08170
      COMMON/ABLK/ A(3,3)                                               DOC08180
      COMMON/PDELS/ DELX,DELY                                           DOC08190
      I = KHORZ                                                         DOC08200
      J = KVERT                                                         DOC08210
      DMAX = 0.0                                                        DOC08220
      DO 5 N=1,3                                                        DOC08230
      VDUM = ABS(XYZMAX(N)-XYZMIN(N))                                   DOC08240
      IF(VDUM.GT.DMAX) DMAX = VDUM                                      DOC08250
    5 CONTINUE                                                          DOC08260
      PSCALE = DMAX/PLOTSZ                                              DOC08270
      DO 10 L=1,2                                                       DOC08280
      DO 10 M=1,2                                                       DOC08290
      DO 10 N=1,2                                                       DOC08300
      X = XYZMIN(1)                                                     DOC08310
      IF(L.EQ.2) X = XYZMAX(1)                                          DOC08320
      Y = XYZMIN(2)                                                     DOC08330
      IF(M.EQ.2) Y = XYZMAX(2)                                          DOC08340
      Z = XYZMIN(3)                                                     DOC08350
      IF(N.EQ.2) Z = XYZMAX(3)                                          DOC08360
      XROT = A(I,1)*X+A(I,2)*Y+A(I,3)*Z                                 DOC08370
      YROT = A(J,1)*X+A(J,2)*Y+A(J,3)*Z                                 DOC08380
      IF(L*M*N.NE.1) GO TO 30                                           DOC08390
   20 CONTINUE                                                          DOC08400
      XRMIN = XROT                                                      DOC08410
      XRMAX = XROT                                                      DOC08420
      YRMIN = YROT                                                      DOC08430
      YRMAX = YROT                                                      DOC08440
   30 CONTINUE                                                          DOC08450
      IF(XROT.GT.XRMAX) XRMAX = XROT                                    DOC08460
      IF(XROT.LT.XRMIN) XRMIN = XROT                                    DOC08470
      IF(YROT.GT.YRMAX) YRMAX = YROT                                    DOC08480
      IF(YROT.LT.YRMIN) YRMIN = YROT                                    DOC08490
   10 CONTINUE                                                          DOC08500
      YR = ABS(YRMAX-YRMIN)                                             DOC08510
      IF(YR/PSCALE.GT.PSIZE) PSCALE = YR/PSIZE                          DOC08520
      XRMAX = XRMAX/PSCALE                                              DOC08530
      YRMAX = YRMAX/PSCALE                                              DOC08540
      XRMIN = XRMIN/PSCALE                                              DOC08550
      YRMIN = YRMIN/PSCALE                                              DOC08560
      DELX = -XRMIN                                                     DOC08570
      DELY = -YRMIN                                                     DOC08580
      XORGN = 0.0                                                       DOC08590
      YORGN = 0.0                                                       DOC08600
      RETURN                                                            DOC08610
      END                                                               DOC08620
      SUBROUTINE XPLOD(NEND,X,Y,Z)                                      DOC08630
C                                                                       DOC08640
```

```
C *** FOR GENERATING EXPLODED PLOTS.                                          DOC08650
C                                                                             DOC08660
      COMMON/CONTRL/ KGEOM,KDATA,KPLOT,KSYMXY,KSYMXZ,KSYMYZ,NOTAT,XLHT,      DOC08670
     1KHORZ,KVERT,PHI,THETA,PSI,NEWFR,ISCALE,PLOTSZ,XORGN,YORGN,             DOC08680
     2PSCALE,KDISP,DMAG,KODE                                                 DOC08690
      DIMENSION X(4),Y(4),Z(4)                                               DOC08700
C                                                                             DOC08710
C *** TO CALCULATE THE INCENTER OF TRIANGLES                                  DOC08720
C                                                                             DOC08730
      IF(NEND.NE.3) GO TO 20                                                  DOC08740
   10 CONTINUE                                                                DOC08750
      A = SQRT((X(2)-X(3))**2+(Y(2)-Y(3))**2+(Z(2)-Z(3))**2)                  DOC08760
      B = SQRT((X(1)-X(3))**2+(Y(1)-Y(3))**2+(Z(1)-Z(3))**2)                  DOC08770
      C = SQRT((X(1)-X(2))**2+(Y(1)-Y(2))**2+(Z(1)-Z(2))**2)                  DOC08780
      AC1 = A/(A+B+C)                                                         DOC08790
      AC2 = B/(A+B+C)                                                         DOC08800
      AC3 = C/(A+B+C)                                                         DOC08810
      XOC = AC1*X(1)+AC2*X(2)+AC3*X(3)                                        DOC08820
      YOC = AC1*Y(1)+AC2*Y(2)+AC3*Y(3)                                        DOC08830
      ZOC = AC1*Z(1)+AC2*Z(2)+AC3*Z(3)                                        DOC08840
      GO TO 190                                                               DOC08850
   20 CONTINUE                                                                DOC08860
C                                                                             DOC08870
C *** TO CALCULATE THE CENTROID OF RODS,BARS,AND QUADS                        DOC08880
C                                                                             DOC08890
      XOC = 0.0                                                               DOC08900
      YOC = 0.0                                                               DOC08910
      ZOC = 0.0                                                               DOC08920
      DO 100 I=1,NEND                                                         DOC08930
      XOC = XOC+X(I)                                                          DOC08940
      YOC = YOC+Y(I)                                                          DOC08950
      ZOC = ZOC+Z(I)                                                          DOC08960
  100 CONTINUE                                                                DOC08970
      XOC = XOC/FLOAT(NEND)                                                   DOC08980
      YOC = YOC/FLOAT(NEND)                                                   DOC08990
      ZOC = ZOC/FLOAT(NEND)                                                   DOC09000
  190 CONTINUE                                                                DOC09010
C                                                                             DOC09020
C *** TO REDUCE THE SIZE OF THE ELEMENT                                       DOC09030
C                                                                             DOC09040
      DO 200 I=1,NEND                                                         DOC09050
      X(I) = X(I)*DMAG                                                        DOC09060
      Y(I) = Y(I)*DMAG                                                        DOC09070
      Z(I) = Z(I)*DMAG                                                        DOC09080
  200 CONTINUE                                                                DOC09090
C                                                                             DOC09100
C *** TO CALCULATE THE CENTROID OF THE REDUCED ELEMENT                        DOC09110
C                                                                             DOC09120
```

```
      XRC = XCC*DMAG                                                    DOC09130
      YRC = YOC*DMAG                                                    DOC09140
      ZRC = ZOC*DMAG                                                    DOC09150
C                                                                       DOC09160
C *** SHIFT CORNERS OF ORIGINAL AND REDUCED TO MAKE CENTROIDS MATCH     DOC09170
C                                                                       DOC09180
      DO 400 I=1,NEND                                                   DOC09190
      X(I) = X(I)+(XOC-XRC)                                             DOC09200
      Y(I) = Y(I)+(YOC-YRC)                                             DOC09210
      Z(I) = Z(I)+(ZOC-ZRC)                                             DOC09220
  400 CONTINUE                                                          DOC09230
      RETURN                                                            DOC09240
      END                                                               DOC09250
      SUBROUTINE GARROW(X1,Y1,X2,Y2,NC,XHEAD,YHEAD)                     DOC09260
C                                                                       DOC09270
C *** TO DRAW ARROWS FROM X1,Y1 TO X2,Y2.                             DOC09280
C                                                                       DOC09290
      DEN = SQRT((X2-X1)**2+(Y2-Y1)**2)                                 DOC09300
      IF(DEN.EQ.0.0) GO TO 5000                                         DOC09310
      C = (X1-X2)/DEN                                                   DOC09320
      S = (Y1-Y2)/DEN                                                   DOC09330
      CALL CALPLT(X1,Y1,3)                                              DOC09340
      CALL CALPLT(X2,Y2,2)                                              DOC09350
      IF(NC.LT.1) GO TO 1000                                            DOC09360
      XA = X2+(C*XHEAD-S*YHEAD)                                         DOC09370
      YA = Y2+(S*XHEAD+C*YHEAD)                                         DOC09380
      CALL CALPLT(XA,YA,2)                                              DOC09390
      IF(NC.LT.2) GO TO 1000                                            DOC09400
      XB = X2+(C*XHEAD-S*(-YHEAD))                                      DOC09410
      YB = Y2+(S*XHEAD+C*(-YHEAD))                                      DOC09420
      CALL CALPLT(XB,YB,2)                                              DOC09430
      IF(NC.LT.3) GO TO 1000                                            DOC09440
      CALL CALPLT(X2,Y2,2)                                              DOC09450
      IF(NC.LT.4) GO TO 1000                                            DOC09460
      XC = X2+(-S*YHEAD)                                                DOC09470
      YC = Y2+(+C*YHEAD)                                                DOC09480
      CALL CALPLT(XC,YC,2)                                              DOC09490
      IF(NC.LT.5) GO TO 1000                                            DOC09500
      XD = X2+(-S*(-YHEAD))                                             DOC09510
      YD = Y2+(+C*(-YHEAD))                                             DOC09520
      CALL CALPLT(XD,YD,2)                                              DOC09530
 1000 CONTINUE                                                          DOC09540
      CALL CALPLT(X2,Y2,3)                                              DOC09550
 5000 CONTINUE                                                          DOC09560
      RETURN                                                            DOC09570
      END                                                               DOC09580
      SUBROUTINE NDLET(NUMPT,XPT,YPT,ZPT,UPT,VPT,WPT)                   DOC09590
C                                                                       DOC09600
```

```
C *** FOR ANNOTATING GRID POINT NUMBERS ON PLOTS.                                DOC09610
C                                                                                DOC09620
      COMMON/CONTRL/ KGEOM,KDATA,KPLOT,KSYMXY,KSYMXZ,KSYMYZ,NOTAT,XLHT,         DOC09630
     1KHORZ,KVERT,PHI,THETA,PSI,NEWFR,ISCALE,PLOTSZ,XORGN,YORGN,                DOC09640
     2PSCALE,KDISP,DMAG,KODE                                                    DOC09650
      COMMON/LIMITS/ XXMAX,YYMAX,ZZMAX,XXMIN,YYMIN,ZZMIN,NDMAX,NDMIN,           DOC09660
     1NELMAX,NELMIN                                                             DOC09670
      COMMON/XYZLIM/ XYZMAX(3),XYZMIN(3)                                        DOC09680
      COMMON/ABLK/ A(3,3)                                                       DOC09690
      COMMON/KOUNT/ NNODE,NNDEST,NUDISP,NVDISP,NWDISP                           DOC09700
      COMMON/PDELS/ DELX,DELY                                                   DOC09710
      DIMENSION NUMPT(1),XPT(1),YPT(1),ZPT(1),UPT(1),VPT(1),WPT(1)              DOC09720
      II = KHORZ                                                                DOC09730
      JJ = KVERT                                                                DOC09740
      XSHIFT = 0.0                                                              DOC09750
      YSHIFT = 0.0                                                              DOC09760
      ZSHIFT = 0.0                                                              DOC09770
      DO 500 I=1,NNODE                                                          DOC09780
      IF(NUMPT(I).LE.0) GO TO 500                                               DOC09790
      IF(NUMPT(I).LT.NDMIN.OR.NUMPT(I).GT.NDMAX) GO TO 500                      DOC09800
      IF(XPT(I).GT.XYZMAX(1)) GO TO 500                                         DOC09810
      IF(XPT(I).LT.XYZMIN(1)) GO TO 500                                         DOC09820
      IF(YPT(I).GT.XYZMAX(2)) GO TO 500                                         DOC09830
      IF(YPT(I).LT.XYZMIN(2)) GO TO 500                                         DOC09840
      IF(ZPT(I).GT.XYZMAX(3)) GO TO 500                                         DOC09850
      IF(ZPT(I).LT.XYZMIN(3)) GO TO 500                                         DOC09860
      X = (XPT(I)+XSHIFT)/PSCALE                                                DOC09870
      Y = (YPT(I)+YSHIFT)/PSCALE                                                DOC09880
      Z = (ZPT(I)+ZSHIFT)/PSCALE                                                DOC09890
      XROT = A(II,1)*X+A(II,2)*Y+A(II,3)*Z                                      DOC09900
      YROT = A(JJ,1)*X+A(JJ,2)*Y+A(JJ,3)*Z                                      DOC09910
      XL = XROT+XLHT/2.0                                                        DOC09920
      YL = YROT+XLHT/2.0                                                        DOC09930
      XL = XL+DELX                                                              DOC09940
      YL = YL+DELY                                                              DOC09950
      AL = NUMPT(I)                                                             DOC09960
      CALL NUMBER(XL,YL,XLHT,AL,0.0,-1)                                         DOC09970
  500 CONTINUE                                                                  DOC09980
      RETURN                                                                    DOC09990
      END                                                                       DOC10000
      SUBROUTINE DATA1(NUMPT,XPT,YPT,ZPT,UPT,VPT,WPT)                           DOC10010
      RETURN                                                                    DOC10020
      END                                                                       DOC10030
      SUBROUTINE DATA5(NUMPT,XPT,YPT,ZPT,UPT,VPT,WPT)                           DOC10040
      RETURN                                                                    DOC10050
      END                                                                       DOC10060
      SUBROUTINE GEOM1(NUMPT,XPT,YPT,ZPT,UPT,VPT,WPT)                           DOC10070
      RETURN                                                                    DOC10080
```

```
      END                                                                    DOC10090
      SUBROUTINE GEOM2(NUMPT,XPT,YPT,ZPT,UPT,VPT,WPT)                        DOC10100
      RETURN                                                                 DOC10110
      END                                                                    DOC10120
      SUBROUTINE NFRAME                                                      DOC10130
      RETURN                                                                 DOC10140
      END                                                                    DOC10150
      SUBROUTINE CCRT2                                                       DOC10160
      RETURN                                                                 DOC10170
      END                                                                    DOC10180
C                                                                            DOC10190
C ***** ADAPT FOR NPS SYSTEM                                                 DOC10200
C                                                                            DOC10210
      SUBROUTINE CALCMP                                                      DOC10220
      COMMON/PLOTC/ IBUFF(1024)                                              DOC10230
      CALL PLOTS                                                             DOC10240
      RETURN                                                                 DOC10250
      END                                                                    DOC10260
C                                                                            DOC10270
C **** ADAPT FOR NPS SYSTEM                                                  DOC10280
C                                                                            DOC10290
      SUBROUTINE CALPLT(X,Y,IPEN)                                            DOC10300
      CALL PLOT(X,Y,IPEN)                                                    DOC10310
      RETURN                                                                 DOC10320
      END                                                                    DOC10330
C                                                                            DOC10340
C**** ADAPT FOR NPS SYSTEM                                                   DOC10350
C                                                                            DOC10360
      SUBROUTINE NOTATE(X,Y,HT,BCD,THETA,N)                                  DOC10370
      DIMENSION BCD(1)                                                       DOC10380
      CALL SYMBOL(X,Y,HT,BCD,THETA,N)                                        DOC10390
      RETURN                                                                 DOC10400
      END                                                                    DOC10410
      SUBROUTINE GEOM9(NUMPT,XPT,YPT,ZPT,UPT,VPT,WPT)                        DOC10420
C                                                                            DOC10430
C *** USER SUPPLIED GEOMETRY INPUT SUBROUTINE.                               DOC10440
C                                                                            DOC10450
      COMMON/CONTRL/ KGEOM,KDATA,KPLOT,KSYMXY,KSYMXZ,KSYMYZ,NOTAT,XLHT,      DOC10460
     1KHORZ,KVERT,PHI,THETA,PSI,NEWFR,ISCALE,PLOTSZ,XORGN,YORGN,             DOC10470
     2PSCALE,KDISP,DMAG,KODE                                                 DOC10480
      COMMON/KOUNT/ NNODE,NNDEST,NUDISP,NVDISP,NWDISP                        DOC10490
      COMMON/GCONT/NUMNP,NPAR(14),NELTYP,NUMEL                               DOC10500
      DIMENSION NUMPT(1),XPT(1),YPT(1),ZPT(1),UPT(1),VPT(1),WPT(1)           DOC10510
C                                                                            DOC10520
C *** INSERT ROUTINE HERE                                                    DOC10530
C                                                                            DOC10540
      READ(5,100) HED                                                        DOC10550
  100 FORMAT(12A6)                                                           DOC10560
```

```
C                                                                       DOC10570
C**********READ MASTER CONTROL DARD                                     DOC10580
C                                                                       DOC10590
      READ(5,200)NUMNP,NELTYP                                           DOC10600
  200 FORMAT(2I5)                                                       DOC10610
      NNODE=NUMNP                                                       DOC10620
C                                                                       DOC10630
C**********READ OR GENERATE NODAL POINT DATA                           DOC10640
C                                                                       DOC10650
      NOLD=0                                                            DOC10660
   10 READ(5,300) N,XPT(N),YPT(N),ZPT(N),KN                             DOC10670
      NUMPT(N)= N                                                       DOC10680
  300 FORMAT(I5,30X,3F10.0,I5)                                          DOC10690
      IF (NOLD.EQ.0) GO TO 50                                           DOC10700
C                                                                       DOC10710
C*********CHECK IF GENERATION IS REQUIRED                               DOC10720
C                                                                       DOC10730
      IF (KN.EQ.0) GO TO 50                                             DOC10740
      NUM=(N-NOLD)/KN                                                   DOC10750
      NUMN=NUM-1                                                        DOC10760
      IF(NUMN.LT.1) GO TO 50                                            DOC10770
      XNUM=NUM                                                          DOC10780
      DX=(XPT(N)-XPT(NOLD))/XNUM                                        DOC10790
      DY=(YPT(N)-YPT(NOLD))/XNUM                                        DOC10800
      DZ=(ZPT(N)-ZPT(NOLD))/XNUM                                        DOC10810
      K=NOLD                                                            DOC10820
      DO 30 J=1,NUMN                                                    DOC10830
      KK=K                                                              DOC10840
      K=K+KN                                                            DOC10850
      XPT(K)=XPT(KK)+DX                                                 DOC10860
      YPT(K)=YPT(KK)+DY                                                 DOC10870
      ZPT(K)=ZPT(KK)+DZ                                                 DOC10880
      NUMPT(K)=K                                                        DOC10890
   30 CONTINUE                                                          DOC10900
   50 NOLD=N                                                            DOC10910
      IF(N.NE.NUMNP) GO TO 10                                           DOC10920
      CONTINUE                                                          DOC10930
      NUMEL=0                                                           DOC10940
C********** READ ELEMENT CONTROL CARDS                                  DOC10950
      DO 900 M=1,NELTYP                                                 DOC10960
      READ (5,1001,END=999) NPAR                                        DOC10970
 1001 FORMAT(14I5)                                                      DOC10980
      MTYPE=NPAR(1)                                                     DOC10990
      CALL ELTYPE(MTYPE)                                                DOC11000
  900 CONTINUE                                                          DOC11010
      ENDFILE 10                                                        DOC11020
  999 RETURN                                                            DOC11030
      END                                                               DOC11040
```

```
      SUBROUTINE ELTYPE(MTYPE)                                          DOC11050
      GO TO (1,2,3,4,5,6,7,8,9,10,11,12),MTYPE                          DOC11060
    1 CALL TRUSS                                                        DOC11070
      GO TO 900                                                         DOC11080
    2 CALL BEAM                                                         DOC11090
      GO TO 900                                                         DOC11100
    3 CALL PLANE                                                        DOC11110
      GO TO 900                                                         DOC11120
    4 CALL PLANE                                                        DOC11130
      GO TO 900                                                         DOC11140
    5 CALL ERROR                                                        DOC11150
      GO TO 900                                                         DOC11160
    6 CALL SHELL                                                        DOC11170
      GO TO 900                                                         DOC11180
    7 CALL ERROR                                                        DOC11190
      GO TO 900                                                         DOC11200
    8 CALL ERROR                                                        DOC11210
      GO TO 900                                                         DOC11220
    9 CALL ERROR                                                        DOC11230
      GO TO 900                                                         DOC11240
   10 CALL ERROR                                                        DOC11250
      GO TO 900                                                         DOC11260
   11 CALL ERROR                                                        DOC11270
      GO TO 900                                                         DOC11280
   12 CALL ERROR                                                        DOC11290
      GO TO 900                                                         DOC11300
  900 RETURN                                                            DOC11310
      END                                                               DOC11320
      SUBROUTINE ERROR(MTYPE)                                           DOC11330
C                                                                       DOC11340
C *****   THIS SUBROUTINE TERMINATES THE PROGRAM DUE  ERROR IN INPUT     DOC11350
C                                                                       DOC11360
      WRITE(6,100) MTYPE                                                DOC11370
  100 FORMAT ('0ELEMENT TYPE',I4,'CANNOT BE PLOTTED')                   DOC11380
      CALL PSTOP                                                        DOC11390
      RETURN                                                            DOC11400
      END                                                               DOC11410
      SUBROUTINE TRUSS                                                  DOC11420
C *** THIS SUBROUTINE READS TRUSS(ELTYPE 1) CONNECTIVITY                DOC11430
      COMMON/GCONT/NUMNP,NPAR(14),NELTYP,NUMEL                          DOC11440
      NUME=NPAR(2)                                                      DOC11450
      NUMMAT=NPAR(3)                                                    DOC11460
C ****  READ MATERIAL PROPERTY CARDS (DUMMY)                            DOC11470
      DO 10 I=1,NUMMAT                                                  DOC11480
      READ(5,1001) DUMMY                                                DOC11490
 1001 FORMAT(10A8)                                                      DOC11500
   10 CONTINUE                                                          DOC11510
C ***** READ ELEMENT LOAD MUL. (DUMMY1)                                 DOC11520
```

```
      DO 20 I=1,4                                                       DOC11530
      READ(5,1001) DUMMY1                                               DOC11540
   20 CONTINUE                                                          DOC11550
      IF(NPAR(14).EQ.0) NPAR(14) = 1                                    DOC11560
      N= NPAR(14)                                                       DOC11570
C *** READ ELEMENT CONNECTION INFORMATION OR GENERATE                   DOC11580
  100 READ(5,1004) M,II,JJ,MTYP,TEM,KK                                 DOC11590
 1004 FORMAT(4I5,F10.0,I5)                                              DOC11600
      IF(KK.EQ.0) KK=1                                                  DOC11610
  120 IF (M.NE.N) GO TO 200                                             DOC11620
      I=II                                                              DOC11630
      J=JJ                                                              DOC11640
      KKK=KK                                                            DOC11650
  200 CONTINUE                                                          DOC11660
      NUMEL=NUMEL+1                                                     DOC11670
      K=0                                                               DOC11680
      L=0                                                               DOC11690
      WRITE (10)      N,I,J,K,L                                         DOC11700
      IF(N.EQ.NUME) RETURN                                              DOC11710
      N=N+1                                                             DOC11720
      I=I+KKK                                                           DOC11730
      J=J+KKK                                                           DOC11740
      IF(N.GT.M) GO TO 100                                              DOC11750
      GO TO 120                                                         DOC11760
      END                                                               DOC11770
      SUBROUTINE PLANE                                                  DOC11780
C                                                                       DOC11790
C ****  THIS SUBROUTINE READS MEMBRANE CARDS                            DOC11800
C                                                                       DOC11810
      DIMENSION  EMUL(4,5),IE(5),IX(4)                                  DOC11820
      COMMON/GCONT/NUMNP,NPAR(14),NELTYP,NUMEL                          DOC11830
      NUME= NPAR(2)                                                     DOC11840
      NUMMAT= NPAR(3)                                                   DOC11850
C ****  READ MATERIAL PROPERTIES                                        DOC11860
      DO 60 M=1,NUMMAT                                                  DOC11870
      READ(5,1010) MAT,NT                                               DOC11880
1010  FORMAT(2I5)                                                       DOC11890
      IF(NT.EQ.0) NT=1                                                  DOC11900
      NTC=2* NT                                                         DOC11910
      DO 50 K=1,NTC                                                     DOC11920
      READ(5,1005) DUMMY                                                DOC11930
1005  FORMAT (10A8)                                                     DOC11940
   50 CONTINUE                                                          DOC11950
   60 CONTINUE                                                          DOC11960
C                                                                       DOC11970
C****  READ ELEMENT LOAD FACTORS                                        DOC11980
C                                                                       DOC11990
      READ(5,1002) ((EMUL(I,J),J=1,5),I=1,4)                            DOC12000
```

```
1002  FORMAT(5F10.0)                                                    DOC12010
C                                                                       DOC12020
C****  READ ELEMENT PROPERTIES                                          DOC12030
C                                                                       DOC12040
      IF(NPAR(14).EQ.0) NPAR(14) = 1                                    DOC12050
      N=NPAR(14)-1                                                      DOC12060
  130 READ(5,1003) M,(IE(I),I=1,4),KG                                   DOC12070
1003  FORMAT(5I5,30X,I5)                                                DOC12080
      IF(KG.EQ.0) KG=1                                                  DOC12090
      IF( IE(3).EQ.IE(4) )  IE(4)=0                                     DOC12100
  140 N=N+1                                                             DOC12110
      IF(M.EQ.N) GO TO 145                                              DOC12120
      DO 142 I=1,4                                                      DOC12130
  142 IX(I)=IX(I)+KG                                                    DOC12140
      GO TO 150                                                         DOC12150
  145 DO 148 I=1,4                                                      DOC12160
  148 IX(I)=IE(I)                                                       DOC12170
  150 CONTINUE                                                          DOC12180
      I = IX(1)                                                         DOC12190
      J = IX(2)                                                         DOC12200
      K = IX(3)                                                         DOC12210
      L = IX(4)                                                         DOC12220
      NUMEL=NUMEL+1                                                     DOC12230
      WRITE (10) N,I,J,K,L                                              DOC12240
  310 IF(N.EQ.NUME) RETURN                                              DOC12250
      IF(N.EQ.M) GO TO 130                                              DOC12260
      GO TO 140                                                         DOC12270
      END                                                               DOC12280
      SUBROUTINE BEAM                                                   DOC12290
C                                                                       DOC12300
C ***  THIS SUBROUTINE  READS BEAM(ELTYP 2) CONNECTIVITY                DOC12310
C                                                                       DOC12320
      COMMON/GCONT/NUMNP,NPAR(14),NELTYP,NUMEL                          DOC12330
      NUME=NPAR(2)                                                      DOC12340
      NUMEPC=NPAR(3)                                                    DOC12350
      NUMEEF=NPAR(4) * 2                                                DOC12360
      NUMMAT=NPAR(5)                                                    DOC12370
C ***  READ MATERIAL PROPERTY CARDS (DUMMY)                             DOC12380
      DO 10  I=1,NUMMAT                                                 DOC12390
      READ(5,1001) DUMMY                                                DOC12400
 1001 FORMAT(10A8)                                                      DOC12410
   10 CONTINUE                                                          DOC12420
C ***  READ ELEMENT PROPERTY CARDS (DUMMY1)                             DOC12430
      DO 20  J=1,NUMEPC                                                 DOC12440
      READ (5,1001) DUMMY1                                              DOC12450
   20 CONTINUE                                                          DOC12460
C ***  READ ELEMENT LOAD MULTIPLIERS(DUMMY2)                            DOC12470
      DO 30 K=1,3                                                       DOC12480
```

```
      READ (5,1001) DUMMY2                                              DOC12490
   30 CONTINUE                                                          DOC12500
C ***  READ  FIXED-END FORCE CARDS(DUMMY3)                             DOC12510
      DO 40 L=1,NUMFEF                                                  DOC12520
      READ(5,1001) DUMMY3                                               DOC12530
   40 CONTINUE                                                          DOC12540
      IF(NPAR(14).EQ.0) NPAR(14) = 1                                    DOC12550
      N=NPAR(14)                                                        DOC12560
C ***  READ ELEMENT CONNECTION  INFO                                    DOC12570
  100 READ(5,1002) M,II,JJ,KK                                           DOC12580
 1002 FORMAT(3I5,47X,I8)                                                DOC12590
      IF (KK.EQ.0) KK=1                                                 DOC12600
  120 IF (M.NE.N) GO TO 200                                             DOC12610
      I = II                                                            DOC12620
      J = JJ                                                            DOC12630
      KKK = KK                                                          DOC12640
  200 CONTINUE                                                          DOC12650
      NUMEL = NUMEL+1                                                   DOC12660
      K = 0                                                             DOC12670
      L = 0                                                             DOC12680
      WRITE (10) N,I,J,K,L                                              DOC12690
      IF (N.EQ.NUME) RETURN                                             DOC12700
      N = N + 1                                                         DOC12710
      I = I + KKK                                                       DOC12720
      J = J + KKK                                                       DOC12730
      IF (N.GT.M) GO TO 100                                             DOC12740
      GO TO 120                                                         DOC12750
      END                                                               DOC12760
      SUBROUTINE SHELL                                                  DOC12770
C                                                                       DOC12780
C **** THIS SUBROUTINE READS ELTYPE 6 CARDS                             DOC12790
C                                                                       DOC12800
      DIMENSION IY(7),IX(4)                                             DOC12810
      COMMON/GCONT/NUMNP,NPAR(14),NELTYP,NUMEL                          DOC12820
      ISTOP=0                                                           DOC12830
      NUME = NPAR(2)                                                    DOC12840
      NUMMAT = NPAR(3)                                                  DOC12850
      NMAT= 2*NUMMAT                                                    DOC12860
C **** READ MATERIAL PORPERTIES (DUMMY)                                 DOC12870
      DO 10 N=1,NMAT                                                    DOC12880
      READ(5,1000) DUMMY                                                DOC12890
 1000 FORMAT(10A8)                                                      DOC12900
   10 CONTINUE                                                          DOC12910
C **** READ ELEMENT LOAD FACTORS (DUMMY1)                               DOC12920
      DO 20 K=1,5                                                       DOC12930
      READ(5,1000) DUMMY1                                               DOC12940
   20 CONTINUE                                                          DOC12950
      IF(NPAR(14).EQ.0) NPAR(14) = 1                                    DOC12960
```

```
      NN = NPAR(14)-1                                                    DOC12970
  100 READ(5,1001) MM,IY                                                 DOC12980
 1001 FORMAT(8I5)                                                        DOC12990
  110 NN = NN + 1                                                        DOC13000
      IF (MM -NN) 440,50,60                                              DOC13010
   50 DO 45  I=1,7                                                       DOC13020
   45 IX(I) = IY(I)                                                      DOC13030
      INCL = IY(7)                                                       DOC13040
      IF (INCL.EQ.0)  INCL=1                                             DOC13050
      GO TO 70                                                           DOC13060
   60 DO 65  I=1,4                                                       DOC13070
   65 IX(I)= IX(I) + INCL                                                DOC13080
   70 CONTINUE                                                           DOC13090
      I=IX(1)                                                            DOC13100
      J= IX(2)                                                           DOC13110
      K=IX(3)                                                            DOC13120
      L=IX(4)                                                            DOC13130
      NUMEL = NUMEL +1                                                   DOC13140
      WRITE(10) NN,I,J,K,L                                               DOC13150
      GO TO 500                                                          DOC13160
  440 WRITE (6,2005) MM                                                  DOC13170
 2005 FORMAT(19HOCARD FOR ELEMT(,I5,14H) IS IN ERROR.,1X)                DOC13180
      ISTOP = 1                                                          DOC13190
  500 IF(NN.LT.MM) GO TO 110                                             DOC13200
      IF(NN.EQ.NUME) RETURN                                              DOC13210
      IF(ISTOP.EQ.1) STOP                                                DOC13220
      GO TO 100                                                          DOC13230
      END                                                                DOC13240
      SUBROUTINE DATA9(NUMPT,XPT,YPT,ZPT,UPT,VPT,WPT,DISPD,NON)          DOC13250
C                                                                        DOC13260
C *** USER SUPPLIED DISPLACEMENT INPUT SUBROUTINE.                       DOC13270
C                                                                        DOC13280
      COMMON/CDATA/NTIME,NTLC                                            DOC13290
      COMMON/CONTRL/ KGEOM,KDATA,KPLOT,KSYMXY,KSYMXZ,KSYMYZ,NOTAT,XLHT,  DOC13300
     1KHORZ,KVERT,PHI,THETA,PSI,NEWFR,ISCALE,PLOTSZ,XORGN,YORGN,         DOC13310
     2PSCALE,KDISP,DMAG,KODE                                             DOC13320
      COMMON/KOUNT/ NNODE,NNDEST,NUDISP,NVDISP,NWDISP                    DOC13330
      DIMENSION NUMPT(1),XPT(1),YPT(1),ZPT(1),UPT(1),VPT(1),WPT(1)       DOC13340
      DIMENSION DISPD(5,3,NON)                                           DOC13350
C                                                                        DOC13360
      IF(NUDISP.EQ.0) GO TO 25
      IF(NTIME.NE.0) GO TO 100                                           DOC13370
      READ(5,1000) NTLC,SCALEF                                           DOC13380
 1000 FORMAT(I5,F10.0)                                                   DOC13390
      IF(SCALEF.EQ.0) SCALEF=1.0                                         DOC13400
   10 READ(5,2000) N,NLCAS,U,V,W                                         DOC13410
 2000 FORMAT(2I4,3E12.5)                                                 DOC13420
      DISPD(NLCAS,1,N) = U*SCALEF                                        DOC13430
```

```
      DISPD(NLCAS,2,N) = V*SCALEF                                          DOC13440
      DISPD(NLCAS,3,N) = W*SCALEF                                          DOC13450
      IF( (NLCAS.EQ.NTLC).AND.(N.EQ. 1    ) ) GO TO 100                    DOC13460
      GO TO 10                                                             DOC13470
  100 NTIME = NTIME + 1                                                    DOC13480
  200 DO 20 I=1,NNODE                                                      DOC13490
      UPT(I) = DISPD(NTIME,1,I)                                            DOC13500
      VPT(I) = DISPD(NTIME,2,I)                                            DOC13510
      WPT(I) = DISPD(NTIME,3,I)                                            DOC13520
   20 CONTINUE                                                             DOC13530
   25 CONTINUE
      RETURN                                                               DOC13540
      END                                                                  DOC13550
```

LIST OF FIGURES

1. SAP IV Deck Set-up..... 14

2. PSAP Input Card Sequence..... 24

3. NPS Calcomp Plotter Orientation..... 29

4. Sample SUBROUTINE PSAP Execution Deck With IDCASE = 1..... 32

5. Coordinate System and Rotations for an Oblique Orthographic Proj. Shown in X-Z Viewing Plane..... 35

6. Undeformed Truss Model..... 49

7. Deformed Truss Model(Node4 Displaced)..... 50

8. Displacements(Node4) for Truss Model Plotted as a Vector..... 51

9. Sample Computer Printout from PSAP of Truss Model... 52

10. Wing Model Axis Orientation..... 54

11. Orthographic Projection of Wing Model -1..... 55

12. Orthographic Projection of Wing Model -2..... 56

13. Wing Model Section - Orientation - 1..... 57

14. Wing Model Section - Orientation - 2..... 58

LIST OF REFERENCES

1. Earthquake Engineering Research Center Report No. 73-11, SAP IV A Structural Analysis Program for Static and Dynamic Response of Linear Systems, by K. Bathe, E. L. Wilson, and F. E. Peterson, June 1973.

2. National Aeronautics and Space Adiministration TN D-7797, Digital Computer Programs for Generating Oblique Orthographic Projection and Contour Plots, by Gary L. Giles, January 1975.

3. Naval Postgraduate School Technical Note No. 0211-03, Plotting Package for NPS IBM 360/67, by Patricia C. Johnson, January 1974.

4. Naval Postgraduate School Technical Note No. 0211-05, User Libraries and Source Code Editing Under OS, by Sharon D. Raney, January 1976.

INITIAL DISTRIBUTION LIST

		No. Copies
1.	Defense Documentation Center Cameron Station Alexandria, Virginia 22314	2
2.	Library, Code 0212 Naval Postgraduate School Monterey, California 93940	2
3.	Department Chairman, code 67 Department of Aeronautics Naval Postgraduate School Monterey, California 93940	2
4.	Assoc Professor R. E. Ball, Code 67 Bp Department of Aeronautics Naval Postgraduate School Monterey, California 93940	4
5.	Professor Gilles Cantin, Code 59 Ci Department of Mechanical Engineering Naval Postgraduate School Monterey, California 93940	2
6.	Professor D. A. Collins, Code 67 Co Department of Aeronautics Naval Postgraduate School Monterey, California 93940	1

7. Mr. Richard Citerley 2
Anamet Laboratories
P.O. Box 831
San Carlos, California 94070

8. LT Dennis M. Losh, USN 1
2583 E. 38th ST.
Lorain, Ohio 44055