

CATALOGED BY ASTIA
AS AD NO. 403035

403 035

Quasi-Static Aero-Thermo-Elastic Analysis: Analytical Development and Computational Procedure

1 MARCH 1963

Prepared by WILLIAM P. RODDEN and EDITH F. FARKAS

Aeromechanics Department

Aerodynamics and Propulsion Research Laboratory

Laboratories Division

and


HEATHER A. MALCOM

Computation and Data Processing Center

Prepared for COMMANDER SPACE SYSTEMS DIVISION

UNITED STATES AIR FORCE

Inglewood, California

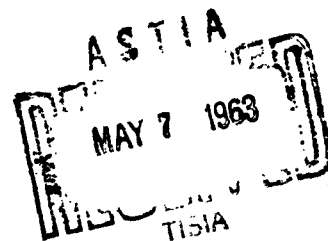

LABORATORIES DIVISION • AEROSPACE CORPORATION
CONTRACT NO. AF 04(695)-169

SSD-TDR-63-14

Report No.
TDR-169(3230-11)TN-8

QUASI-STATIC AERO-THERMO-ELASTIC
ANALYSIS: ANALYTICAL DEVELOPMENT
AND COMPUTATIONAL PROCEDURE

Prepared by

William P. Rodden and Edith F. Farkas
Aeromechanics Department
Aerodynamics and Propulsion Research Laboratory
Laboratories Division

and

Heather A. Malcom
Computation and Data Processing Center

AEROSPACE CORPORATION
El Segundo, California

Contract No. AF 04(695)-169

1 March 1963

Prepared for

COMMANDER SPACE SYSTEMS DIVISION
UNITED STATES AIR FORCE
Inglewood, California

ABSTRACT

A collocation formulation is used as the basis for a unified approach to the various quasi-static aero-thermo-elastic problems. These problems include rigid and flexible load distributions, divergence, estimation of rigid and flexible static and dynamic stability derivatives, and the correction of wind tunnel data measured on flexible models. The formulation utilizes structural, thermal, and aerodynamic influence coefficients.

The Aerospace IBM 7090 Computer Program No. LD003A provides the solution to the above problems. The program capacity is fifty collocation control points and ten values of dynamic pressure.

CONTENTS

ABSTRACT	ii
SYMBOLS	iv
I. FORMULATION OF PROBLEM	1
A. Introduction	1
B. Sign Convention	1
C. Derivation of Equations	2
D. References	15
II. GENERAL DESCRIPTION OF INPUT	17
A. Units	17
B. Example Problem	17
C. Program Restriction and Options	20
III. DATA DECK SETUP	22
A. Loading Order	22
B. Input Data Description	23
C. Table of Option Requirements	33
D. Example Key punch Forms	34
IV. PROGRAM OUTPUT	43
A. Output for Each Option	43
B. Example Printout	44
V. PROCESSING INFORMATION	66
A. Operation	66
B. Estimated Machine Time	66
C. Machine Components Used	66
VI. PROGRAM NOTES	67
A. Subroutines Used	67
B. Generalized Tapes	68
VII. FLOW DIAGRAMS	69
VIII. SYMBOLIC LISTING	75

SYMBOLS

a	Element of flexibility matrix
a_T	Element of thermal influence coefficient matrix
b_r	Reference semichord
C_h	Element of oscillatory aerodynamic influence coefficient matrix
C_{hs}	Element of steady aerodynamic influence coefficient matrix
C_l	Aerodynamic rolling moment coefficient
C_m	Aerodynamic pitching moment coefficient
C_z	Aerodynamic normal force coefficient
C_z	Element of aerodynamic normal force coefficient distribution matrix
$C_z^{(e)}$	Element of experimentally determined aerodynamic normal force coefficient distribution matrix
c	Local chord
$\bar{c}$	Mean aerodynamic chord
$\tilde{c}$	Average chord
c_l	Local spanwise lift coefficient
F	Element of force matrix
H	Generalized reference deflection
H_o	Reference deflection for initial deflection mode
h	Element of deflection matrix
I	Element of unit matrix
K	Flexibility matrix normalizing constant
k_r	Reference reduced frequency

$\mathcal{L}$	Rolling moment
M	Element of mass matrix; bending moment
$\mathcal{M}$	Pitching moment
N	Reference load factor
n	Element of load factor matrix
q	Dynamic pressure
q_{div}	Divergence dynamic pressure
S	Surface reference area
s	Surface span measured from root to tip
T	Reference temperature; torque
t	Element of temperature distribution matrix
V	Shear
W	Element of aerodynamic weighting matrix
x, y	Cartesian coordinates
$\bar{x}, \bar{y}$	Coordinates of aerodynamic center
x_o	Coordinate of pitching moment reference axis
Z	Normal force
$\Delta()$	Denotes incremental value
θ	Angle of pitch
λ	Eigenvalue
ξ	Control point location as fraction of local chord
ρ	Atmospheric density
ω	Frequency

Subscripts

a	Aerodynamic
f	Flexible
H, T, N	As subscript to C_Z , C_m , and C_l , denotes partial differentiation with respect to H, T, or N, respectively, e. g., $C_{ZH} = \partial C_Z / \partial H$; as subscript to C_Z , merely denotes reference to H, T, or N
i	Inertial; also used as dummy index, e. g., Δy_i denotes width of <u>ith</u> strip
m	Model; moment
o	Initial value
r	Rigid

Matrices

[]	Square
{ }	Column
[]	Row
[] ⁻¹	Inverse
[]	Diagonal

SECTION I

FORMULATION OF PROBLEM

A. Introduction

The most general numerical formulation that can be made of the various aeroelastic problems is a collocation formulation expressed in terms of matrices of structural, inertial, and aerodynamic influence coefficients. Such a formulation of the flutter problem has been discussed in Ref. 1, and of the static aeroelastic problems in Ref. 2. The present report reconsiders the static aeroelastic problems by reviewing the derivations and extending the computational procedures of Ref. 2 in treating the problems of rigid and flexible load distributions, divergence, estimation of rigid and flexible static and dynamic stability derivatives, and correction of wind tunnel data measured on flexible models.

The basis for the present generalized aero-thermo-elastic analysis is found in recent advances in both aerodynamic and structural theories. The aerodynamic developments have proffered aerodynamic influence coefficients based on a number of theories, covering the entire Mach number range of current interest. The structural developments have provided structural and thermal influence coefficients for external and temperature loadings, respectively, for surfaces of arbitrary aspect ratio. The current state of the art of aerodynamic and structural influence coefficient analyses is surveyed in Refs. 3 and 4, respectively.

B. Sign Convention

We choose the NASA body stability axis system as our coordinate system: x forward, y starboard, and z down. Positive loads and deflections are in the same directions, and positive moments are given by applying the right-hand rule to the coordinate directions.

C. Derivation of Equations

The force distribution $\{F\}$ acting on a flexible lifting surface or body arises from two sources: the aerodynamic forces resulting from the attitude (as specified by the deflection mode $\{h\}$), and the inertial forces resulting from a distribution of load factor $\{n\}$. The aerodynamic forces are found from the weighted (the weighting matrix must be derived from experimental data on the force changes resulting from changes in attitude; see Refs. 5 and 6) steady aerodynamic influence coefficients (AICs), and/or a set of experimentally determined control point force coefficients

$$\{F_a\} = (qS/\bar{c})[W][C_{h_s}]\{h\} + qS\{C_{z_r}^{(e)}\} \quad (1)$$

The use of the experimental force coefficients is generally necessary to account for the aeroelastic behavior arising from camber and/or wing-body interference. The inertial forces are found from the mass matrix

$$\{F_i\} = [M]\{n\} \quad (2)$$

The total force distribution therefore becomes

$$\{F\} = \{F_a\} + \{F_i\} \quad (3a)$$

$$= (qS/\bar{c})[W][C_{h_s}]\{h\} + qS\{C_{z_r}^{(e)}\} + [M]\{n\} \quad (3b)$$

The deflection mode $\{h\}$ is composed of the initial deflection mode of the rigid surface $\{h_r\}$ * the thermal distortion mode (which may be considered to be initially built in) which is found from the incremental temperature distribution and the matrix of thermal influence coefficients (TICs), and the deformation mode of the flexible surface $\{h_f\}$

$$\{h\} = \{h_r\} + [a_T]\{t\} + \{h_f\} \quad . \quad (4)$$

The deformation mode of the flexible surface is found from the total force distribution and the matrix of structural influence coefficients (SICs)

$$\{h_f\} = K[a]\{F\} \quad , \quad (5)$$

where K is a normalizing factor to the SICs (introduced for convenience in studying variations in stiffness levels). Combining Eqs. (3b), (4), and (5) permits the solution for the deformation mode

$$\{h_f\} = K[A][a]\{F_r\} \quad , \quad (6)$$

where $\{F_r\}$ is the force distribution on the rigid system (again considering the thermal distortion to be initially built in).

$$\{F_r\} = (qS/\bar{c})[W][C_{h_s}](\{h_r\} + [a_T]\{t\}) + qS\{C_{z_r}^{(e)}\} + [M]\{n\} \quad , \quad (7)$$

*A distinction is made later in the derivation [see discussion preceding Eq. (31)] between two sources of the initial deflection mode: that arising from any built-in twist or camber and that arising from the attitude (sometimes called the additional deflection mode). The program computes the initial deflection mode as the sum of these, $\{h_r\} = H_0\{h_r/H_0\} + H\{h/H\}$, and both sets of data are required. The distinction is not made at this point because it is not essential to the derivation.

where

$$[A] = ([I] - (K_q S / \bar{c})[a][W][C_{hs}])^{-1} \quad (8)$$

The total force distribution is found by returning to Eq. (3b) with Eqs. (4) and (6)

$$\{F\} = [B]\{F_r\} \quad (9)$$

where

$$[B] = [I] + (K_q S / \bar{c})[W][C_{hs}][A][a] \quad (10)$$

For the purpose of structural analysis, it is often convenient to convert the control point forces into the structural loads of shear, moment and torque at particular stations. A set of transformation matrices may be defined to compute

the shear

$$\{V\} = [V/F]\{F\} \quad (11)$$

the moment

$$\{M\} = [M/F]\{F\} \quad (12)$$

and the torque

$$\{T\} = [T/F]\{F\} \quad (13)$$

Each element in the load coefficient matrices is the load at a particular station due to a unit control point force.

In certain longitudinal problems, it is desirable to adjust the attitude so that the flexible system sustains a specified total aerodynamic force. If we denote the specified total by Z , then

$$[I] \left(\{F\} - [M] \{n\} \right) = Z \quad (14)$$

and if we extend the definition of $\{h_r\}$ in Eq. (4) to include the change in pitch attitude, we have

$$\{h_r\} = \{h_{r0}\} - \Delta\theta \{x\} \quad (15)$$

The substitution of Eqs. (7), (9), and (15) into Eq. (14) leads to the solution for the incremental pitch angle

$$\Delta\theta = (1/D)(C - Z) \quad (16)$$

where

$$C = [I] \left([B] \{F_{r0}\} - [M] \{n\} \right) \quad (17)$$

$$D = (qS/\bar{c}) [I] [B] [W] [C_{hs}] \{x\} \quad (18)$$

and

$$\{F_{r0}\} = (qS/\bar{c}) [W] [C_{hs}] \left(\{h_{r0}\} + [a_T] \{t\} \right) + qS \{C_{z_r}^{(e)}\} + [M] \{n\} \quad (19)$$

The final force distribution in this case follows from Eqs. (7), (9), (15), and (19)

$$\{F\} = [B]\{F_{r_0}\} - \Delta\theta(qS/\bar{c})[B][W][C_{h_s}]\{x\} \quad (20)$$

The final deflection mode follows from Eqs. (4), (5), (15), and (20)

$$\{h\} = \{h_{r_0}\} - \Delta\theta\{x\} + K[a]\{F\} + [a_T]\{t\} \quad (21)$$

A variation of the foregoing is found in maintaining a constant total force equal to that given by the rigid condition (without the thermal distortion). In this case

$$Z = qS[I]\left((1/\bar{c})[W][C_{h_s}]\{h_{r_0}\} + \{C_{z_r}^{(e)}\}\right) \quad , \quad (22)$$

and Eqs. (16), (17), (18), (20), and (21) provide the solution for the final force distribution and deflection mode.

The possibility of divergence is seen in Eq. (6) as the inverse of the matrix $[A]$ approaches singularity. The critical values of $(Kqs/\bar{c})$ that yield a singularity are related to the eigenvalues of the matrix, and the divergence condition is specified by the eigenvalues of the equation

$$\lambda\{h_f\} = [a][W][C_{h_s}]\{h_f\} \quad , \quad (23)$$

where

$$\lambda = \bar{c}/KSq_{div} \quad , \quad (24)$$

from which the divergence dynamic pressure is found

$$q_{div} = \bar{c}/\lambda KS \quad (25)$$

Any positive value of q_{div} shows a divergence possibility although usually only the first or second values have any practical significance. The corresponding eigenvectors of Eq. (23) are the divergence modes.

The foregoing development of the force distribution on the flexible system provides the basis for estimating aerodynamic stability derivatives. The aerodynamic coefficients are defined by the following:

$$C_Z = Z/qS \quad (26a)$$

$$= (1/qS)[I] \left(\{F\} - [M]\{n\} \right) \quad (26b)$$

$$C_m = \mathcal{M}/qS\bar{c} \quad (27a)$$

$$= -(1/qS\bar{c})[x - x_o] \left(\{F\} - [M]\{n\} \right) \quad (27b)$$

$$C_l = \mathcal{L}/qSs \quad (28a)$$

$$= (1/qSs)[y] \left(\{F\} - [M]\{n\} \right) \quad (28b)$$

The center of pressure is found from

$$(\bar{x} - x_o)/\bar{c} = -\mathcal{M}/Z \quad (29a)$$

$$= -C_m/C_Z \quad (29b)$$

$$\bar{y}/s = \mathcal{L}/Z \quad (30a)$$

$$= C_l/C_Z \quad (30b)$$

The force distribution for use in the above equations is found from Eqs. (7) and (9). To derive the stability derivatives, it is convenient to define a reference generalized deflection H , a reference temperature change T , and a reference load factor N . It is further convenient to consider an initial deflection mode $\{h_r\} = H_0\{h_r/H_0\}$ where H_0 is a reference initial deflection as distinct from that caused by the attitude change (additional deflection) specified by H .^{*} These modifications permit Eq. (7) to be rewritten in a more general form

$$\{F_r\} = qS \left(\{C_{z_r}^{(e)}\} + (1/\bar{c})[W][C_{h_s}]\{H_0\{h_r/H_0\} + H\{h/H\} + T[a_T]\{t/T\}\} \right) + N[M]\{n/N\} \quad (31)$$

The initial coefficients and the stability derivatives are defined by

$$C_Z = C_{Z_0} + C_{Z_H} H + C_{Z_T} T + C_{Z_N} N \quad (32)$$

$$C_m = C_{m_0} + C_{m_H} H + C_{m_T} T + C_{m_N} N \quad (33)$$

$$C_l = C_{l_0} + C_{l_H} H + C_{l_T} T + C_{l_N} N \quad (34)$$

where C_{Z_H} , C_{Z_T} , and C_{Z_N} are examples of aerodynamic, thermal and inertial derivatives, respectively. The substitutions of Eqs. (9) and (31) into Eqs. (26b), (27b), and (28b) and a comparison with the coefficients of H , T , and N in Eqs. (32) through (34) yields the following. The initial

^{*} See footnote, p. 3.

coefficients are

$$C_{Z_o} = [I][B]\{C_{z_r}\} \quad (35)$$

$$C_{m_o} = -(1/\bar{c})[x - x_o][B]\{C_{z_r}\} \quad (36)$$

$$C_{\zeta_o} = (1/s)[y][B]\{C_{z_r}\} \quad (37)$$

where

$$\{C_{z_r}\} = \{C_{z_r}^{(e)}\} + (H_o/\bar{c})[W][C_{h_s}]\{h_r/H_o\} \quad (38)$$

The aerodynamic stability derivatives are

$$C_{Z_H} = [I][B]\{C_{z_{Hr}}\} \quad (39)$$

$$C_{m_H} = -(1/\bar{c})[x - x_o][B]\{C_{z_{Hr}}\} \quad (40)$$

$$C_{\zeta_H} = (1/s)[y][B]\{C_{z_{Hr}}\} \quad (41)$$

where

$$\{C_{z_{Hr}}\} = (1/\bar{c})[W][C_{h_s}]\{h/H\} \quad (42)$$

The thermal derivatives are

$$C_{Z_T} = [I][B]\{C_{z_T}\} \quad (43)$$

$$C_{m_T} = -(1/\bar{c})[x - x_o][B]\{C_{z_T}\} \quad (44)$$

$$C_{l_T} = (1/s)[y][B]\{C_{z_T}\} \quad (45)$$

where

$$\{C_{z_T}\} = (1/\bar{c})[W][C_{h_s}][a_T]\{t/T\} \quad (46)$$

Finally, the inertial derivatives are

$$C_{Z_N} = [I]\{C_{z_N}\} \quad (47)$$

$$C_{m_N} = -(1/\bar{c})[x - x_o]\{C_{z_N}\} \quad (48)$$

$$C_{l_N} = (1/s)[y]\{C_{z_N}\} \quad (49)$$

where

$$\{C_{z_N}\} = (K/\bar{c})[W][C_{h_s}][A][a][M]\{n/N\} \quad (50)$$

The center of pressure for each of these loadings is found from Eqs. (29b) and (30b) using the appropriate coefficients or derivatives.

The rigid aerodynamic stability derivatives may be estimated from Eqs. (39) through (42) by taking $[B] = [I]$ (i. e., $q = 0$). Equations (39) through (42) may also be used to estimate dynamic stability derivatives by using the (complex) oscillatory AICs which are defined by

$$\{F\} = \rho \omega^2 b_r^2 s [W][C_h]\{h\} \quad (51)$$

By comparing this definition to the steady definition of Eq. (1), we see it is only necessary to replace $[C_{h_g}]$ by $2k_r^2 (\bar{c}s/S)[C_h]$ and to permit $\{h/H\}$ to become complex in order to make all of the preceding development applicable to the oscillatory case. Since this is a significant feature of the present analysis, we digress to illustrate the calculation in some detail. We choose as an example the estimation of the symmetrical longitudinal stability derivatives. We begin with the general expressions for the lift and moment coefficients for transient longitudinal motion.

$$C_Z = C_{Z_a} + C_{Z_{D_a}} (\dot{a}\bar{c}/2V) + C_{Z_q} (\dot{\theta}\bar{c}/2V) + C_{Z_{D_a}^2} (\ddot{a}\bar{c}^2/4V^2) + C_{Z_{D_q}} (\ddot{\theta}\bar{c}^2/4V^2) + \dots \quad (52)$$

$$C_m = C_{m_a} + C_{m_{D_a}} (\dot{a}\bar{c}/2V) + C_{m_q} (\dot{\theta}\bar{c}/2V) + C_{m_{D_a}^2} (\ddot{a}\bar{c}^2/4V^2) + C_{m_{D_q}} (\ddot{\theta}\bar{c}^2/4V^2) + \dots \quad (53)$$

If we truncate the series at the points shown in Eqs. (52) and (53), and consider the case of harmonic pitching ($\theta = a$) with amplitude a_o , then

$$C_Z = a_o \left[C_{Z_a} + ik \left(C_{Z_{D_a}} + C_{Z_q} \right) - k^2 \left(C_{Z_{D_a}^2} + C_{Z_{D_q}} \right) \right] \quad (54)$$

$$C_m = a_o \left[C_{m_a} + ik \left(C_{m_{D_a}} + C_{m_q} \right) - k^2 \left(C_{m_{D_a}^2} + C_{m_{D_q}} \right) \right] \quad (55)$$

where the reduced frequency $k = \omega \bar{c} / 2V$. In the case of harmonic plunging ($\theta = 0$, $\alpha = \dot{h}/V$) with amplitude h_0 , then

$$C_Z = h_0 (2/\bar{c}) \left[ik C_{Z_\alpha} - k^2 C_{Z_{D\alpha}} - ik^3 C_{Z_{D^2\alpha}} \right] \quad (56)$$

$$C_m = h_0 (2/\bar{c}) \left[ik C_{m_\alpha} - k^2 C_{m_{D\alpha}} - ik^3 C_{m_{D^2\alpha}} \right] \quad (57)$$

The lift and moment coefficients can also be found from Eqs. (39), (40), and (42) by making the substitutions noted above (i. e., $[B] = [I]$, and replacing $[C_{h_s}]$ by $2k_r^2 (\bar{c}s/S) [C_h]$).

$$C_Z = H [I] \{C_{Z_{Hr}}\} \quad (58)$$

$$C_m = -H (1/\bar{c}) [x - x_0] \{C_{Z_{Hr}}\} \quad (59)$$

where

$$\{C_{Z_{Hr}}\} = 2k_r^2 (s/S) [W] [C_h] \{h/H\} \quad (60)$$

To appraise the various longitudinal derivatives it is necessary to evaluate Eqs. (58) through (60) for both motions, pitching and plunging. For pitching about station x_1 , the reference deflection is taken as $H = \alpha_0$, and the additional deflection mode is $\{h/H\} = \{x_1 - x\}$; for plunging, the reference deflection is $H = h_0$, and the additional deflection mode is $\{h/H\} = \{I\}$. The computational sequence is now evident. The evaluation of Eqs. (58) and (59) for the plunging motion yields two complex numbers which, when identified with the real and imaginary parts of Eqs. (56) and (57), lead to the four derivatives $C_{Z_{D\alpha}}$, $C_{m_{D\alpha}}$, $C_{Z_{D^2\alpha}}$, and $C_{m_{D^2\alpha}}$ (assuming, of course, that the static stability derivatives C_{Z_α} and C_{m_α} have already been determined).

A similar evaluation of Eqs. (58) and (59) for the pitching motion yields another set of two complex numbers which, when identified with the real and imaginary parts of Eqs. (54) and (55), and with appropriate utilization of the angle of attack derivatives determined previously, lead to the remaining derivatives C_{Z_q} , C_{m_q} , $C_{Z_{Dq}}$, and $C_{m_{Dq}}$. In a similar manner, many of the lateral-directional dynamic stability derivatives can be found from oscillatory AICs.

Our treatment of the stability derivatives provides a means of estimating a dimensionless spanwise load distribution and the spanwise variation of the chordwise center of pressure on a lifting surface. This calculation requires the data on which the AICs are based, i. e., the location and number of the chordwise control points, and the widths of the strips into which the surface has been divided. The load distribution coefficients are needed to make these calculations. The flexible load distribution coefficients are given by

$$\{C_{zf}\} = [B]\{C_z\} \quad , \quad (61)$$

where $\{C_z\}$ denotes any of the various distributions for the different loads except for the inertial loads; i. e., $\{C_z\}$ can be taken to represent any of $\{C_{z_r}\}$, $\{C_{z_{Hr}}\}$, or $\{C_{z_T}\}$; in the inertial case, $\{C_{z_N}\}$ is used directly, i. e., $\{C_{zf}\} = \{C_{z_N}\}$. The elements of $\{C_{zf}\}$ are listed in order for each surface strip as derived in the AICs and can be used to find the local dimensionless loading and center of pressure. Let us denote the sum of the load coefficients on the ith strip by

$$\Delta C_{Z_i} = \sum_{\text{strip } i} C_{zf} \quad (62)$$

and the moment about the leading edge by

$$\Delta C_{m_i} = \sum_{\text{strip } i} \xi C_{zf} \quad , \quad (63)$$

where ξ is the dimensionless chordwise location of each control point aft of the leading edge. Then the spanwise loading on the i th strip is given by

$$(c_l c / \bar{c})_i = -\Delta C_{Z_i} (s / \Delta y_i) \quad (64)$$

where Δy_i is the load strip width. The local center of pressure is given by

$$\xi_i = \Delta C_{m_i} / \Delta C_{Z_i} \quad (65)$$

The problem of reducing wind tunnel data is our last consideration. The purpose of a wind tunnel test is the measurement of the so-called rigid loads on the configuration (unless the model is specifically designed for aeroelastic measurements). But since no model is completely rigid, some aeroelastic correction can be made to any wind tunnel measurement. We now consider this correction. The situation is described by Eq. (61), which may be written as

$$\{C_{Z_f}^{(e)}\} = [B_m] \{C_{Z_r}^{(e)}\} \quad (66)$$

where $\{C_{Z_f}^{(e)}\}$ is the set of force coefficients measured on the flexible model, $[B_m]$ is the aeroelastic amplification matrix based on the model properties from Eq. (10), and $\{C_{Z_r}^{(e)}\}$ is the set of desired force coefficients on the rigid configuration. Obviously the rigid force coefficients follow from the inverse of Eq. (66)

$$\{C_{Z_r}^{(e)}\} = [B_m]^{-1} \{C_{Z_f}^{(e)}\} \quad (67)$$

The rigid force coefficients so determined then provide the starting point for the aeroelastic analysis of the prototype.

D. References

1. W. P. Rodden. "A Matrix Approach to Flutter Analysis." Institute of the Aeronautical Sciences Fairchild Fund Paper No. FF-23, May 1958.
2. W. P. Rodden, E. F. Farkas, and F. C. Slack. "Quasi-Steady Aero-Thermo-Elastic Analysis: Analytical Development and Procedure for the IBM 7090 Computer." Norair Division, Northrop Corporation, Report NOR-61-58, 14 April 1961.
3. W. P. Rodden and J. D. Revell. "The Status of Unsteady Aerodynamic Influence Coefficients." Institute of the Aerospace Sciences Fairchild Fund Paper No. FF-33, January 1962.
4. R. H. Gallagher, I. Rattinger, and J. S. Archer. "A Correlation Study of Methods of Matrix Structural Analysis." Structures and Materials Panel, Advisory Group for Aeronautical Research and Development, NATO, Report to the 14th Meeting, 6 July 1962.
5. J. D. Revell and W. P. Rodden. "A Rational Method for Utilizing Experimental Aerodynamic Data in Flutter Analyses Through the Use of Aerodynamic Influence Coefficient Matrices." North American Aviation, Inc., Report NA-59-867, 30 January 1959.
6. W. P. Rodden. "An Empirical Weighting Matrix for Use with Aerodynamic Influence Coefficients in Aeroelastic Analyses." Norair Division, Northrop Corporation, Report NOR-59-320, 1 April 1959.
7. R. L. Bisplinghoff, H. Ashley, and R. L. Halfman. Aeroelasticity. Reading: Addison-Wesley Publishing Company, Inc., 1955.
8. W. P. Rodden, C. H. Hodson, and J. D. Revell. "Subsonic and Sonic Aerodynamic Influence Coefficients from Unsteady Lifting Surface Theory." North American Aviation, Inc., Report NA-57-1104, 25 October 1957.

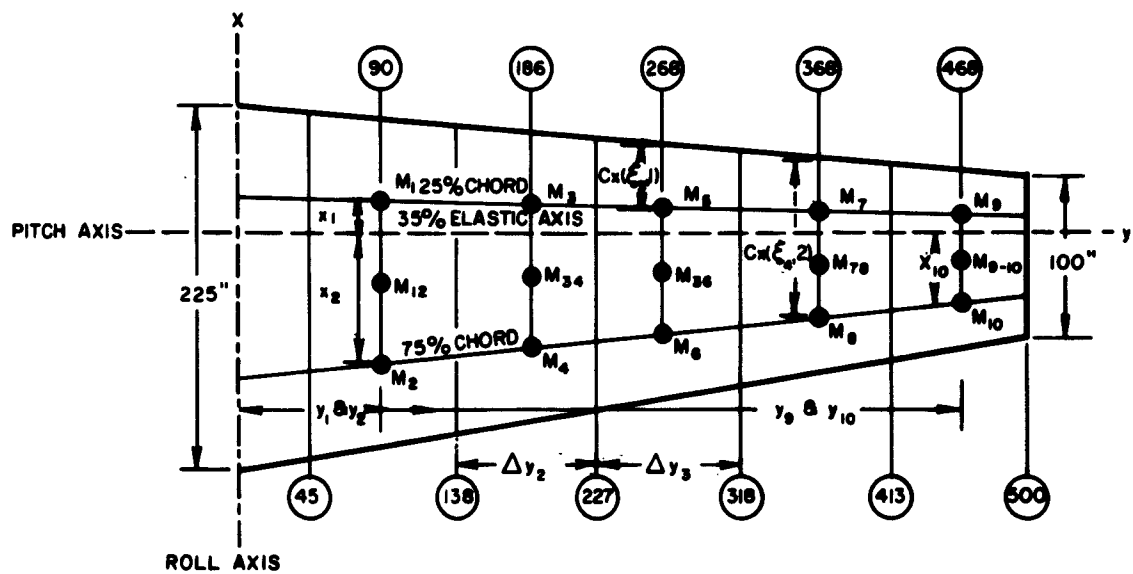


Fig. 1. Jet transport wing geometry.

SECTION II

GENERAL DESCRIPTION OF INPUT

A. Units

All units are taken in the pound-inch system with two exceptions: the surface area is in square feet, and the dynamic pressure is in pounds per square foot.

B. Example Problem

We consider the static aeroelastic analysis of the five strip wing whose geometry is shown in Fig. 1. This is the jet transport wing analyzed by Bisplinghoff, Ashley, and Halfman throughout Ref. 7. We will use the following program options: trimmed loads with the structural loads suboption, divergence, aerodynamic stability derivatives (due to angle of attack), and inertial derivatives (due to symmetrical load factor). We proceed to assemble the data required as input to the program when it is to perform these options. The flexibility, mass, and aerodynamic influence coefficient matrices (all size 10×10) are printed in the program output example (pp. 45 through 48) and need not be shown here. The flexibility and mass matrices are taken from Ref. 1; the aerodynamic influence coefficients are developed from the subsonic lifting surface method of Ref. 8 at a Mach number of zero. We shall list only the additional data needed for the representative options. A basic list of constants can be used for all of the options and is given below:

$$\bar{c} = 225 \text{ inches}$$

$$K = 1.0 \times 10^{-7}$$

$$S = 564.236 \text{ square feet}$$

$$Z = -41,919 \text{ pounds (this is the lift on one wing required in level flight neglecting any tail load or fuselage lift, and taking one-half the fuselage weight as 17,400 pounds)}$$

$$H = 1.0$$

$$\begin{aligned}
T &= 0 \\
N &= 1.0 \\
s &= 500 \text{ inches} \\
x_o &= 0 \\
H_o &= 0
\end{aligned}$$

For the loads option we make the following assumptions: the aircraft is to be trimmed at three values of dynamic pressure: $q = 400, 800, \text{ and } 1200$ psf; the aerodynamic matrix needs no experimental correction (the weighting matrix is taken as unity); no lift has been derived experimentally ($\{C_{z_r}^{(e)}\} = \{0\}$, size 10×1); there is no initial deflection mode ($\{h_r/H_o\} = \{0\}$, size 10×1); the additional deflection mode corresponds to zero angle of attack ($\{h/H\} = \{0\}$, size 10×1); and the symmetrical load factor distribution matrix is a unit column ($\{n/N\} = \{I\}$, size 10×1). The control point chordwise coordinate matrix for use in the trim analysis is

$$\{x\} = \begin{Bmatrix} 20.25 \\ -81.00 \\ 17.85 \\ -71.40 \\ 15.80 \\ -63.20 \\ 13.30 \\ -53.20 \\ 11.05 \\ -44.20 \end{Bmatrix} (\text{inches})$$

measured from the (unswept) 35 percent chord line as shown in Fig. 1. The final data necessary to compute the structural loads are the shear, moment, and torque coefficient matrices. Considering only the loads at the side of the fuselage, we have

$$[V/F] = [I], \text{ size } 1 \times 10,$$

$$[M/F] = [45 \ 45 \ 141 \ 141 \ 223 \ 223 \ 323 \ 323 \ 413 \ 413],$$

$$\begin{aligned}
[T/F] = [-20.25 \ +81.00 \ -17.85 \ +71.40 \ -15.80 \ +63.20 \ -13.30 \ +53.20 \ -11.05 \\
\quad +44.20].
\end{aligned}$$

The divergence option may be run simultaneously with the loads option since it requires only a portion of the above information. We request two divergence modes and dynamic pressures to be found.

The aerodynamic derivatives options will be carried out for the rigid case ($q = 0$) in addition to the previous list of dynamic pressures. The additional deflection mode $\{h/H\}$ used in the aerodynamic stability derivatives will be based on a one-radian angle of attack mode and is found from

$$\{h/H\} = -\{x/57.296\} = \begin{Bmatrix} -0.35343 \\ 1.41371 \\ -0.31154 \\ 1.24616 \\ -0.27576 \\ 1.10304 \\ -0.23213 \\ 0.92851 \\ -0.19286 \\ 0.77143 \end{Bmatrix} \text{ (per degree)}$$

The calculation of the load distribution and the rolling moment coefficient requires the following additional data shown in Fig. 1: the spanwise coordinate matrix

$[y] = [90 \ 90 \ 186 \ 186 \ 268 \ 268 \ 368 \ 368 \ 458 \ 458]$ (inches),

and the width of each strip and the dimensionless chordwise location of each control point on the strip.

<u>Strip No.</u>	<u>Δy</u>	<u>ξ_f</u>	<u>ξ_a</u>
1	93	0.25	0.75
2	89	0.25	0.75
3	91	0.25	0.75
4	95	0.25	0.75
5	87	0.25	0.75

It is possible to perform all or any selected number of program options with one input deck if all data are real, although, in the example problem taking $\{h/H\} = \{0\}$ in the loads option does not permit calculation of the aerodynamic stability derivatives and taking $q = 0$ in the stability derivative option (to find derivatives for a rigid system) is not compatible with the trimmed loads option which requires $q > 0$. To avoid computing irrelevant results, we use two data decks, reproducing the cards (data) in the first deck that can be used as a part of the second deck.

C. Program Restrictions and Options

1. Maximum matrix size is 50×50 .
2. Maximum number of dynamic pressures per deck is 10.
3. Provision has been made to reserve a partition in the upper left-hand corner of the total AIC matrix for control points (and the flexibility and mass matrices must be compatible with this order of control points) whose aerodynamic forces may be neglected or found from an alternate theory to that used for the primary control points. This partition is termed the "external store" region since external stores are an example of a source of additional control points requiring such special consideration. The maximum number of control points that can be reserved for external stores is 49.
4. Maximum number of modes to be evaluated for the divergence option is 25.
5. For real and complex derivative calculations, the maximum number of strips is 20; the maximum number of control points per strip is 10.
6. Multiple options may be performed with one deck except for the following restrictions:
 - a. The structural loads option must be used as a suboption to the other loads options.

b. In any one input deck, all data must be for steady case (real) options or all data must be for oscillatory case (complex) options.

c. The divergence option cannot be used in the complex case.

7. Only one matrix of associated aerodynamic influence coefficients may be included in any one deck. When external stores are present, the matrix includes the AICs for the stores; however, this area may be set to zero.

8. In the oscillatory case, the following data must be input in complex form: AIC matrix, temperature mode, experimental forces, initial deflection mode, additional deflection modes, and load factor mode.

9. Program options and significant equation numbers as assigned in Part C, Section I are listed below.

- a. Loads for constant root angle of attack; Eqs. (31) and (9).
- b. Loads for trimmed condition; Eqs. (31) and (20).
- c. Loads for constant lift coefficient; Eqs. (22), (31), and (20).
- d. Divergence, Eq. (23).
- e. Initial coefficients; Eqs. (35) through (37).
- f. Aerodynamic stability derivatives; Eqs. (39) through (41).
- g. Thermal derivatives; Eqs. (43) through (45).
- h. Inertial derivatives; Eqs. (47) through (49).
- i. Experimental data reduction; Eq. (67).
- j. Structural loads; Eqs. (11) through (13).

SECTION III

DATA DECK SETUP

A. Loading Order

Data decks are loaded behind column binary deck LD003A. There are nineteen items that can be used in the data deck. The deck is set up with the items entered in the following order:

1. Heading card
2. Data deck control card
3. Constants cards
4. Dynamic pressure card(s)
5. Flexibility matrix
6. Aerodynamic matrix
7. Weighting matrix
8. Thermal matrix
9. Temperature mode
10. Experimental force column
11. Initial deflection mode
12. Additional deflection mode
13. Mass matrix
14. Load factor column
15. Chordwise coordinates
16. Spanwise coordinates
17. Strip widths and control point locations (percent chord)

18. Load coefficient matrices (shear, moment, torque)

19. Second and successive "additional deflection mode" columns

Items 1, 2, 3, and 6 must be present in all data decks; the presence (or absence) of the other items is determined by the option and data indicators used in the data deck control card (Item 2).

B. Input Data Description

1. The heading card may contain any alphanumeric characters desired in Columns 2 through 80. It is normally used for job title, engineer's name, and data.

2. Data deck control card (FORMAT 1814): This card specifies which options are to be performed and also indicates the presence of certain data. The eighteen fields of this card are used as follows:

Field 1. Column 4 contains a 1 if load option 1 (LOADS FOR CONSTANT ROOT ANGLE OF ATTACK) is to be performed; it contains a zero or blank if not to be performed.

Field 2. Column 8 contains a 1 if load option 2 (LOADS FOR TRIMMED CONDITION) is to be performed, a zero or blank if not.

Field 3. Column 12 contains a 1 if load option 3 (LOADS FOR CONSTANT LIFT COEFFICIENT) is to be performed, a zero or blank if not.

Field 4. Column 16 contains the number of modes (25 maximum) of the DIVERGENCE option to be performed, a zero or blank if not.

Field 5. Column 20 contains a 1 if the INITIAL COEFFICIENTS option is to be performed, a zero or blank if not.

- Field 6. Columns 23 and 24 contain the number of solutions for AERODYNAMIC STABILITY DERIVATIVES desired. This option permits varying the "additional deflection mode" $\{h/H\}$ when the other data are unchanged. The first mode is included as Data Item 12, and the second and successive modes are included as Data Item(s) 19.
- Field 7. Column 28 contains a 1 if the problem is complex, a zero or blank if all data are real.
- Field 8. Column 32 contains a 1 if the THERMAL STABILITY DERIVATIVES option is to be performed, a zero or blank if not.
- Field 9. Column 36 contains a 1 if the INERTIAL DERIVATIVES option is to be performed, a zero or blank if not.
- Field 10. Column 40 contains a 1 if a weighting matrix is included in the data deck, a zero or blank if excluded.
- Field 11. Column 44 contains a 1 if a thermal matrix and associated temperature mode are included in the data deck, a zero or blank if excluded.
- Field 12. Column 48 contains a 1 if an experimental force column matrix is included in the data deck, a zero or blank if excluded.
- Field 13. Columns 51 and 52 contain the number of elements (control points) reserved for external stores, a zero or blank if none is reserved.
- Field 14. Columns 55 and 56 contain the number of dynamic pressures (10 maximum) for which cycling options (repeated for each "q") are to be performed.

Field 15. Column 60 contains a 1 if the EXPERIMENTAL DATA REDUCTION option is to be performed, a zero or blank if not.

Field 16. Column 64 contains a 1 if the STRUCTURAL LOADS option is to be performed, a zero or blank if not.

Field 17. Columns 67 and 68 indicate the order of the system contained in the data deck (50 maximum).

Field 18. Column 72 contains a 1 if the flexibility matrix is present in the data deck, a zero or blank if absent.

In the subsequent description of input data we find it convenient to refer to above fields 1, 2, 3, 4, 5, 6, 8, 9, 15, and 16 as Options identified by the respective field numbers. The other fields contain control numbers and will be referred to as Item 2, Field (respective number).

3. Constants cards (FORMAT 6E12.8): The two constants cards contain the items listed in the following order:

- a. CBAR: mean aerodynamic chord
- b. FLEXX: flexibility matrix normalizing constant (or scaling factor); when the matrix has not been normalized FLEXX = 1.0
- c. CAPS: surface reference area
- d. CAPZ: vertical force
- e. CAPH: generalized reference deflection
- f. CAPT: reference temperature change
- g. CAPN: reference load factor
- h. SMALS: surface span measured from root to tip
- i. CAPXO: coordinate pitching moment reference axis
- j. CAPHO: reference deflection for initial deflection mode

4. Dynamic pressures (FORMAT 6E12.8): If six or fewer dynamic pressures are listed, one card is used; seven through 10 pressures require two cards. The q card(s) are not required when performing Option 4 (divergence) above, but unless Item 2, Field 14 is zero or blank, the q's must be input and must agree with the number in this field.

5. The flexibility matrix $[a]$ is input if its presence has been indicated in the data deck control card (Item 2, Field 18). If not included as input, a rigid case is assumed ($[a] = [0]$). The following card order and formats must be used when the matrix is input.

a. Control card (FORMAT 18I4)

Field 1. Columns 3 and 4 contain m, the number of rows in the matrix (≤ 50).

Field 2. This field is not used; it may be left blank.

Field 3. Column 12 contains IFORM; if IFORM = 1, the matrix elements are to be input using FORTRAN FORMAT 6E12.8; if IFORM = 0, the elements will be input using column binary format.

Field 4. Column 16 contains IROW; if IROW = 1, the matrix elements are input by row; if IROW = 0, the elements are input by column.

b. Matrix elements (use format specified above)

If IFORM = 1, and IROW = 1: use FORMAT 6E12.8 and input the matrix element by row; each new row starts on a new card (line).

If IFORM = 1, and IROW = 0: use FORMAT 6E12.8 and input the elements by column with each new column beginning on a new card.

If IFORM = 0, IROW must = 0: the matrix elements are input using column binary format. This format should be used only if the data are available as punched-card output from appropriate computer programs. The elements must be punched by columns; Column 1 starts in Origin 1 and Column 2 starts in Location $(1 + m)$. A TRA card must end the deck. (This transfer card has a 7 and a 9 punch in Column 1, Columns 2 through 72 are blank, and Columns 73 through 80 will contain the characters used for identifying and sequencing the deck.)

6. The aerodynamic matrix $[C_h]$ is always present in the data deck. It consists of two parts if external stores have been reserved in Item 2, Field 13, and it is real (steady case) unless indicated as complex (oscillatory case) in Item 2, Field 7. The $[C_h]$ matrix must be entered as follows with this exception: Items a and b (below) will be omitted when no external stores are reserved:

a. Control card for store $[C_h]$ (FORMAT 1814)

Field 1. Columns 3 and 4 contain m , number of control points reserved for external stores (≤ 49); $m = 0$ will direct the program to set the store $[C_h]$ to zero.

Field 2. This field is not used, it may be left blank.

Field 3. Column 12 contain IFORM as defined in Item 5a.

Field 4. Column 16 contains IROW as defined in Item 5a.

b. Store matrix elements (format specified in Fields 3 and 4, above control card): Omit this input if $m = 0$ is used in the control card. When the external stores $[C_h]$ matrix is input, use the format in the manner described in Item 5b. If the matrix elements are complex numbers (oscillatory case) consider the matrix size as $m \times 2m$ (imaginary parts of the elements form the even-numbered columns) and input as though all elements were real numbers.

c. $1/k_r$ card (FORMAT 6E12.8): The reference reduced velocity card is always present. For the steady case, it may be blank or contain any number, but for the oscillatory case it must be the $1/k_r$ associated with the aerodynamic matrix.

d. Control card for surface $[C_h]$ matrix (FORMAT 1814)

Field 1. Columns 3 and 4 contain m , the number of control points on the surface. ($m = \text{size of system minus number of store control point.}$)

Field 2. Columns 7 and 8 contain L , the number of strips (partitions) in the surface. $L = 1$ for a full (unpartitioned) matrix.

Field 3. Column 12 contains IFORM as previously defined.

Field 4. Column 16 contains IROW as previously defined.

e. The input listed below must be repeated for each partition ($i = 1, L$).

(1) Partition size (FORMAT 18I4)

Field 1. Columns 3 and 4 contain n , the number of control points on strip i (size of partition i). If $L = 1$, n = total number of control points on the surface.

(2) Matrix elements in partition i (format specified in control card, Item 6d).

When the matrix is for the steady case the elements in each partition are input in the same manner as the elements in the $[a]$ matrix (Item 5b). In the oscillatory case, the elements are entered in the same manner as described for the stores oscillatory $[C_h]$ matrix (Item 6b).

Note: Punched cards output from IBM programs based on the sources listed below may be used (with no alterations) for Items 6c, 6d, and 6e when the theory is appropriate to the problem. Punched cards output from the program based on slender-body theory may be used for Items 6a and 6b if the first card ($1/k_r$) is removed from the deck. The list shown is complete only at this writing; additional compatible sources are currently under development.

W. P. Rodden, E. F. Farkas, H. Malcom, and A. M. Kliszewski.
"Aerodynamic Influence Coefficients from Incompressible Strip Theory: Analytical Development and Computational Procedure." Aerospace Corp. Report No. TDR-169(3230-11)TN-5, 3 September 1962.

W. P. Rodden, E. F. Farkas, H. Malcom, and A. M. Kliszewski. "Aerodynamic Influence Coefficients from Supersonic Strip Theory: Analytical Development and Computational Procedure." Aerospace Corp. Report No. TDR-169(3230-11)TN-1, 1 August 1962.

W. P. Rodden, E. F. Farkas, H. Malcom, and A. M. Kliszewski. "Aerodynamic Influence Coefficients from Piston Theory: Analytical Development and Computational Procedure." Aerospace Corp. Report No. TDR-169(3230-11)TN-2, 15 August 1962.

W. P. Rodden, E. F. Farkas, and G. Y. Takata. "Aerodynamic Influence Coefficients from Slender-Body Theory: Analytical Development and Computational Procedure." Aerospace Corp. Report No. TDR-169(3230-11)TN-6, 31 October 1962.

7. Weighting matrix: The weighting matrix $[W]$ is input if its presence has been indicated in Item 2, Field 10. The matrix is entered with formats identical to those given for the $[C_h]$ matrix (Item 6a, b, c, d, e) with three exceptions: (1) the $1/k_r$ card (Item 6c) is omitted; (2) in repeating Item 6a if $m = 0$ the program will use a unit matrix for the store $[W]$; and (3) the matrix is always real. It is not required that $[C_h]$ and $[W]$ be input with the same format in the same data deck; i. e., one may be in column binary while the other uses FORTRAN format, and one may be partitioned while the other is a full matrix.

8. Thermal influence coefficients matrix: The thermal matrix $[a_T]$ is input when Item 2, Field 11 notes its presence. The matrix is required input for Option 8. The formats for entering $[a_T]$ are the same as those used for the flexibility matrix: Items 5a and 5b.

9. Temperature distribution column (FORMAT 6E12.8): The temperature mode $\{t/T\}$ always accompanies the above thermal matrix. For steady cases (real AICs), the $\{t/T\}$ matrix is entered as one column, six elements per card. For oscillatory cases (complex AICs), the mode is complex with the imaginary part considered as a second column; tabulate by column with the second column starting a new card.

10. Experimental force column (FORMAT 6E12.8): The experimental force column $\{C_{zr}^{(e)}\}$ is input only if its presence has been indicated by Item 2, Field 12. The column (real or complex) is entered in the same manner as the column in Item 9.

11. Initial deflection mode (FORMAT 6E12.8): The initial deflection mode $\{h_r/H_0\}$, must be present to perform Option(s) 1, 2, 3, and/or 5. Again refer to Item 9 for entering the column (real or complex). If all elements in the column are zero, a sufficient number of blank cards may be used.

12. Additional deflection mode (FORMAT 6E12.8): The additional deflection $\{h/H\}$ must be included for Option(s) 1, 2, 3, and/or 6. See Items 9 and 11 for inputting this column (real or complex).

13. Mass matrix: The mass matrix $[M]$ must be in the data deck when performing Option(s) 1, 2, 3, and/or 9. The matrix is input as follows:

a. Control card 1 (FORMAT 18I4): Field 1 must contain NRC, order of the matrix (same as Item 2, Field 17).

b. Control card(s) 2 through 7 (FORMAT 18I4): Field 1 and consecutive fields in control card 2 and successive control cards contain in order $LL_1, LH_1, LL_2, LH_2, \dots, LL_{NRC}, LH_{NRC}$. LL_i is the row number where the first nonzero element appears in column i ; LH_i is the row number where the last nonzero element appears in column i . If only one nonzero element is in column i , its row number must be used for both LL_i and LH_i .

c. Elements in $[M]$ matrix (FORMAT 6E12.8): The elements are entered by column as shown below. Each column starts on a new line (card).

Column 1: elements LL_1 through LH_1

Column 2: elements LL_2 through LH_2

Column NRC: elements LL_{NRC} through LH_{NRC}

Any zero elements between LL_i and LH_i must be entered or their respective fields left blank. If all elements in a column are zero, then at least one element must be entered as zero (a blank card may be used); LL_i and LH_i for this zero element must appear in the above control cards.

14. Load factor column (FORMAT 6E12.8): The load factor column $\{n/N\}$ is included if $[M]$ is used (Option(s) 1, 2, 3, and/or 9). If no correction is desired, input a unit column. The column is real for steady cases and complex for oscillatory cases. (See Item 9 for column input.)

15. Chordwise coordinates (FORMAT 6E12.8): The control point coordinate matrix $\{x\}$ or $[x]$ is input for Option(s) 2, 3, 5, 6, 8, 9, and/or 15. The matrix is entered only once (six elements per card) for any combination of the above options.

16. Spanwise coordinates (FORMAT 6E12.8): A spanwise control point coordinate matrix $[y]$ must be used with Option(s) 5, 6, 8, 9, and/or 15. The elements in $[y]$ are the control point distances from the roll axis.

17. Strip widths and control point locations (percent chord): The strip widths Δy_i and the control point locations $\xi_{i,j}$ (given as a fraction of the local chords) are required for Option(s) 5, 6, 8, 9, and/or 15. These data have the following input format.

a. Control card(s) (FORMAT 18I4)

Field 1. This field must contain $NSTRP$ = number of surface strips (maximum of 20 for above options). Do not include external stores as strips.

Field 2. Field 2 and successive fields contain $NCPT_i$ = number of control points (≤ 10) on strip i . ($i = 1, NSTRP$)

b. Δy_i and $\xi_{i,j}$ ($j = 1, NCPT_i$) (FORMAT 6E12.8): These data are entered by strips; each strip requires one line (card) when $NCPT \leq 5$ and two cards when $NCPT > 5$. Start with the first card for strip 1 and input the data as follows:

Field 1. Δy_1 : width of strip 1.

Field 2. $\xi_1 1$: location of first control point for strip 1.

Field 3. $\xi_1 2$: location of second control point for strip 1.

.

.

.

Field ($\text{NCPT}_1 + 1$). $\xi_1 \text{NCPT}_1$: location of last control point for strip 1. (If $\text{NCPT} > 5$, then $\xi_1 6$ would be in Field 1, second card).

Repeat the above for each strip

18. Transformation matrices for structural loads: The shear, moment, and torque matrices, $[V/F]$, $[M/F]$, and $[T/F]$, are input only if Option 16 is selected in conjunction with Option(s) 1, 2, or 3. The elements in any specific row of each matrix are the loads at a particular station due to a unit control point force.

The matrices are input in the order in which they are listed (above pp.) with each using the same format (similar to the mass matrix but input by rows instead of columns). The format for $[V/F]$ is given below; the same format is used for $[M/F]$ and $[T/F]$.

a. Control card 1 (FORMAT 18I4): Field 1 contains NVMT, the number of rows in $[V/F]$. Note the matrix size is $(\text{NVMT} \times \text{NRC})$, where NRC agrees with Item 2, Field 17 and $\text{NVMT} \leq 20$.

b. Control card(s) 2 through 7 (FORMAT 18I4): Field 1 and consecutive fields of these cards contain LOW_1 , LHIGH_1 , LOW_2 , LHIGH_2 , ..., LOW_{NVMT} , $\text{LHIGH}_{\text{NVMT}}$. LOW_i is the column number of the first nonzero element in row i , and LHIGH_i is the column number of the last nonzero element in row i . ($i = 1, \text{NVMT}$)

c. Elements of $[V/F]$ (FORMAT 6E12.8): The elements are entered by row in the same manner as the columns in $[M]$. (Item 13c).

19. Second and successive "additional deflection mode" columns (FORMAT 6E12.8): It is possible to vary the additional deflection modal column {h/H} to obtain two or more solutions for real or complex aerodynamic stability derivatives. Use the input format given for Item 9 (or 12) repeating the format for each new column.

C. Table of Option Requirements

To aid the program user in data deck setup, the following table shows which of the above described 19 data items are required to make up a data deck for any option.

		DATA ITEM																		
OPTION		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19
	1	P	P	P	P	P	P	O	O	O	O	P	P	P	P	A	A	A	-	A
	2	P	P	P	P	P	P	O	O	O	O	P	P	P	P	P	A	A	-	A
	3	P	P	P	P	P	P	O	O	O	O	P	P	P	P	P	A	A	-	A
	4	P	P	P	A	P	P	O	A	A	A	A	A	A	A	A	A	A	A	A
	5	P	P	P	P	O	P	O	A	A	O	P	A	A	A	P	P	P	A	A
	6	P	P	P	P	O	P	O	A	A	A	A	P	A	A	P	P	P	A	O
	8	P	P	P	P	O	P	O	P	P	A	A	A	A	A	P	P	P	A	A
	9	P	P	P	P	O	P	O	A	A	A	A	A	P	P	P	P	P	A	A
	15	P	P	P	P	P	P	O	A	A	P	A	A	A	A	P	P	P	A	A
	16	← Set up for option (1, 2, or 3) being performed →																A	P	A

P = must be present; A = must be absent; O = optional inclusion;
 -= present when Option 16 is used with Option 1, 2, or 3.

Note: The above table applies to options performed singly with the exception of Option 16 which must be used concurrently with Option 1, 2, or 3. Where multiple options are to be performed with one data deck and an item must be present for one of the options and absent for another, that item must be included in the data deck. Also any data item indicated as present in the control card (Item 2) must be included in the deck, even though it may not be used in the particular option(s) chosen.

D. Example Keypunch Forms

Example keypunch forms are given on the following pages. Columns 73 through 80 are reserved for data deck identification and sequencing. Only the cards with sequencing are used in the two data decks set up for the example problem; the lines with Columns 73 through 80 left blank are for description of input.

1		2		3		4		5		6		7		8		9		10		11		12		13		14		15		16		17		18		19		20		21		22		23		24		25		26		27		28		29		30		31		32		33		34		35		36		37		38		39		40		41		42		43		44		45		46		47		48		49		50		51		52		53		54		55		56		57		58		59		60		61		62		63		64		65		66		67		68		69		70		71		72		73		74		75		76		77		78		79		80	
Heading Card																																																																																																																																																															
EXAMPLE PROBLEM - TRIMMED LOADS AND DIVERGENCE OPTIONS																																																																																																																																																															
Data Deck Control Card																																																																																																																																																															
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80																																																																																																																																																															
Constants Cards																																																																																																																																																															
+225.0 +1 -06+564236 +03-41919 +05 1.0 +00 03																																																																																																																																																															
+1.0 +500.0 0.0 0.0 04																																																																																																																																																															
Dynamic Pressures																																																																																																																																																															
+400 +03+800 +03+1200 +04 05																																																																																																																																																															
Control Card for Flexibility Matrix [a]																																																																																																																																																															
10 1 1 06																																																																																																																																																															
[a] Matrix Elements																																																																																																																																																															
The matrix elements can be seen in the printed output. The control card gives the size and specifies the format (FORTRAN 6E12.8, by rows) used to input [a] in this problem. (See Section III, Part B, Item 5 for other input formats.)																																																																																																																																																															
1/b Card																																																																																																																																																															
+0 +0.0 7																																																																																																																																																															
MM030027																																																																																																																																																															

[illegible]

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100
Number of Rows in Moment Matrix [M/F]																																																																																																			
1																																																																																																			
LOW ₁ and LHIGH ₁ for Each Row in [M/F]																																																																																																			
1	10																																																																																																		
[M/F] Matrix Elements																																																																																																			
45.0	45.0	141.0	141.0	223.0	223.0																																																																																														
323.0	323.0	413.0	413.0																																																																																																
Number of Rows in Torque Matrix [T/F]																																																																																																			
1																																																																																																			
LOW ₁ and LHIGH ₁ for Each Row in [T/F]																																																																																																			
1	10																																																																																																		
[T/F] Matrix Elements																																																																																																			
-2025	+02+91	+02-1785	+02+7140	+02-1580	+02+6320	+02																																																																																													
-1330	+02+5320	+02-1105	+02+4420	+02																																																																																															
HMO30098																																																																																																			
The above sequenced cards make up the data deck for the example trimmed loads and divergence problems.																																																																																																			

EXAMPLE PROBLEM - AERO DYNAMIC STABILITY AND INERTIAL DERIVATIVES										MM031001									
Data Deck Control Card																			
1										1									
Dynamic Pressures										4									
0.0										05									
400.0										1200.0									
Additional Deflection Mode [h/H]																			
-35343										+00+1.41371 +00-31154 +00+124616 +01-27576 +00+110304 +01									
-23213										+00+92851 +00-19286 +00+77143 +00									
Spanwise Coordinates [y]																			
90.0										186.0									
368.0										458.0									
Number of Strips and Number of Control Points per Strip																			
5										2									
Strip Widths (Δy_i) and Percent Chord Locations (ξ_i) of Control Points																			
93.0										25									
89.0										25									
91.0										25									
95.0										25									
MM031093																			

8	7	.	0
+25			
+00+75			
+00			

The data deck for the example derivative options is set up using the above sequenced cards plus the following cards from the previous deck.

HMO3003-04	-	Constants Cards
06-26	-	Flexibility Matrix
27-49	-	Aerodynamic Matrix
50-65	-	Weighting Matrix
70-84	-	Mass Matrix and Load Factor Column
HMO30085-86	-	Globalwise Coordinates

SECTION IV
PROGRAM OUTPUT

A. Output for Each Option

In addition to all input data, the following is printed for each option.

1. Option 1 (for each dynamic pressure)
 - a. Deformation mode
 - b. Total deflection mode
 - c. Final aerodynamic force distribution
 - d. Total force distribution
2. Option 2 (for each dynamic pressure)
 - a. Incremental pitch angle
 - b. Deformation mode
 - c. Total deflection mode
 - d. Final aerodynamic force distribution
 - e. Total force distribution
3. Option 3 (for each dynamic pressure)
 - a. Aerodynamic lift
 - b. Incremental pitch angle
 - c. Deformation mode
 - d. Total deflection mode
 - e. Final aerodynamic force distribution
 - f. Total force distribution

4. Option 4 (divergence)
 - a. For each mode: mode number, eigenvalue, divergence pressure, and number of iterations
 - b. Divergence modes (eigenvectors)
 - c. Check eigenvalues
 - d. Check eigenvectors
5. Options 5, 6, 7, 8, and 9 (for each dynamic pressure)
 - a. Distributed force coefficients
 - b. Aerodynamic normal force, pitching moment, and rolling moment coefficients
 - c. Total chordwise center of pressure
 - d. Total spanwise center of pressure
 - e. For each strip: spanwise loading and local center of pressure.
6. Option 15 (for each dynamic pressure)
 - a. Corrected experimental force coefficients
 - b. Aerodynamic normal force, pitching moment, and rolling moment coefficients
 - c. Total chordwise center of pressure
 - d. Total spanwise center of pressure
 - e. For each strip: spanwise loading and local center of pressure.
7. Option 16 (for each dynamic pressure)
 - a. All data listed under the associated option (1, 2, or 3).
 - b. Shear, moment, and torque at load stations.

B. Example Printout

The printout for the example problem is shown on the following pages. Some of the results shown may be compared with similar calculations presented in Ref. 7.

EXAMPLE PROBLEM - TRIMMED LOADS AND DIVERGENCE OPTIONS

01

CONTROL ITEMS

(1)=-0 (2)= 1 (3)=-0 (4)= 2 (5)=-0 (6)=-0 (7)=-0 (8)=-0 (9)=-0
 (10)= 1 (11)=-0 (12)=-0 (13)=-0 (14)= 3 (15)=-0 (16)= 1 (17)=10 (18)= 1

CBAR 0.22455999E 03 NORM CONST 0.59559999E-07 CAPS 0.56423599E 03 Z -0.41919000E 05
 REF T 0.09999999E 01 REF N 0.50000000E 03 SMS 0.09999999E 01
 0. REF T 0.09999999E 01 REF N 0.50000000E 03 SMS 0.09999999E 01
 0. REF T 0.09999999E 01 REF N 0.50000000E 03 SMS 0.09999999E 01

REF H
 REF HO
 0.

0.40000000E 03 0.80000000E 03 0.12000000E 04
 3 DYNAMIC PRESSURES

FLEXIBILITY MATRIX

	COLUMN 1	COLUMN 2	COLUMN 3	COLUMN 4	COLUMN 5	COLUMN 6
1	0.87171999E 02	0.13361000E 02	0.12778000E 03	0.62719999E 02	0.16250999E 03	0.10492200E 03
2	0.13361000E 02	0.30860999E 03	0.62719999E 02	0.32297000E 03	0.10492200E 03	0.33528999E 03
3	0.12778000E 03	0.62719999E 02	0.27732000E 03	0.15725999E 03	0.48255000E 03	0.37627999E 03
4	0.62719999E 02	0.32297000E 03	0.15725999E 03	0.63749000E 03	0.37627999E 03	0.80135999E 03
5	0.16250999E 03	0.10492200E 03	0.48255000E 03	0.37627999E 03	0.12757999E 04	0.11344299E 04
6	0.10492200E 03	0.33528999E 03	0.37627999E 03	0.80135999E 03	0.11344299E 04	0.16999000E 04
7	0.20478000E 03	0.15629999E 03	0.73283599E 03	0.64337999E 03	0.19350000E 04	0.18160000E 04
8	0.15629999E 03	0.35021000E 03	0.64337999E 03	0.10012100E 04	0.18160000E 04	0.22920000E 04
9	0.24285000E 03	0.20257000E 03	0.95810001E 03	0.88378000E 03	0.25283000E 04	0.24293999E 04
10	0.20402999E 03	0.35784999E 03	0.88378000E 03	0.11810599E 04	0.24293999E 04	0.28248999E 04

COLUMN

	COLUMN 7	COLUMN 8	COLUMN 9	COLUMN 10
1	0.20478000E 03	0.15629999E 03	0.24285000E 03	0.20402999E 03
2	0.15629999E 03	0.35021000E 03	0.20257000E 03	0.35784999E 03
3	0.73283599E 03	0.64337999E 03	0.95809998E 03	0.88378000E 03
4	0.64337999E 03	0.10012100E 04	0.88378000E 03	0.11810599E 04
5	0.19350000E 04	0.18160000E 04	0.25283000E 04	0.24293999E 04
6	0.18160000E 04	0.22920000E 04	0.24293999E 04	0.28248999E 04
7	0.36861999E 04	0.35051999E 04	0.52675000E 04	0.51171000E 04
8	0.35051999E 04	0.42291999E 04	0.51171000E 04	0.57186999E 04
9	0.52675000E 04	0.51171000E 04	0.84840000E 04	0.82340000E 04
10	0.51171000E 04	0.57186999E 04	0.82340000E 04	0.92340000E 04

AERODYNAMIC INFLUENCE COEFFICIENTS														REAL	1/KR =	0.
	COLUMN	1	COLUMN	2	COLUMN	3	COLUMN	4	COLUMN	5	COLUMN	6				
1	0.11040550E 01	-0.11040550E 01	0.44035111E-00	-0.44035111E-00	0.23558389E-00	-0.23558388E-00										
2	-0.65710617E-01	0.65710617E-01	0.29845583E-01	-0.29845580E-01	0.31780227E-01	-0.31780227E-01										
3	0.39277381E-00	-0.39277381E-00	0.98089795E 00	-0.98089795E 00	0.38376644E-00	-0.38376643E-00										
4	0.26774842E-01	-0.26774842E-01	-0.80031395E-01	0.80031425E-01	0.27342296E-01	-0.27342293E-01										
5	0.27598643E-00	-0.27598643E-00	0.27460741E-00	-0.27460741E-00	0.10764901E 01	-0.10764901E 01										
6	0.26934370E-02	-0.26934370E-02	0.29652580E-01	-0.29652578E-01	-0.86809320E-01	0.86809350E-01										
7	-0.32916859E-00	0.32916859E-00	0.48047283E-00	-0.48047283E-00	0.15607686E-00	-0.15607686E-00										
8	0.99114150E-01	-0.99114150E-01	0.50967707E 01	-0.50967722E-01	0.53080060E-01	-0.53080063E-01										
9	0.14902235E 01	-0.14902235E 01	-0.10267259E 01	0.10267299E 01	0.63286462E 00	-0.63286462E 00										
10	-0.29457279E-00	0.29457279E-00	0.21437690E-00	-0.21437693E-00	-0.98096674E-01	0.98096689E-01										

COLUMN

COLUMN	7	8	9	10	COLUMN	1	2	3	4	5	6
1	0.15978687E-00	-0.15978687E-00	0.86297289E-01	-0.86297289E-01	COLUMN	1	2	3	4	5	6
2	0.19449846E-01	-0.19449846E-01	0.94341008E-02	-0.94341008E-02	COLUMN	1	2	3	4	5	6
3	0.19948611E-00	-0.19948611E-00	0.10024159E-00	-0.10024159E-00	COLUMN	1	2	3	4	5	6
4	0.26146957E-01	-0.26146957E-01	0.11618502E-01	-0.11618502E-01	COLUMN	1	2	3	4	5	6
5	0.38184877E-00	-0.38184877E-00	0.14753119E-00	-0.14753119E-00	COLUMN	1	2	3	4	5	6
6	0.32687288E-01	-0.32687288E-01	0.19040608E-01	-0.19040608E-01	COLUMN	1	2	3	4	5	6
7	0.12575267E 01	-0.12575267E 01	0.32880831E-00	-0.32880831E-00	COLUMN	1	2	3	4	5	6
8	-0.88885278E-01	0.88885278E-01	0.30007008E-01	-0.30007008E-01	COLUMN	1	2	3	4	5	6
9	0.92738150E-01	-0.92738150E-01	0.10493460E 01	-0.10493460E 01	COLUMN	1	2	3	4	5	6
10	0.48441701E-01	-0.48441701E-01	-0.819C1712E-01	0.81901712E-01	COLUMN	1	2	3	4	5	6

WEIGHTING MATRIX

COLUMN	1	2	3	4	5	6
1	0.09959999E 01	0.	0.	0.	0.	0.
2	0.	0.09959999E 01	0.	0.	0.	0.
3	0.	0.	0.09559599E 01	0.	0.	0.
4	0.	0.	0.	0.09999999E 01	0.	0.
5	0.	0.	0.	0.	0.09999999E 01	0.
6	0.	0.	0.	0.	0.	0.09999999E 01
7	0.	0.	0.	0.	0.	0.
8	0.	0.	0.	0.	0.	0.
9	0.	0.	0.	0.	0.	0.
10	0.	0.	0.	0.	0.	0.

	COLUMN 7	COLUMN 8	COLUMN 9	COLUMN 10	COLUMN
1	0.	0.	0.	0.	
2	0.	0.	0.	0.	
3	0.	0.	0.	0.	
4	0.	0.	0.	0.	
5	0.	0.	0.	0.	
6	0.	0.	0.	0.	
7	0.0999999E 01	0.	0.	0.	
8	0.	0.0999999E 01	0.	0.	
9	0.	0.	0.0999999E 01	0.	
10	0.	0.	0.	0.0999999E 01	

INITIAL DEFLECTION MODE (H/REF HO)
REAL

1	-0.
2	-0.
3	-0.
4	-0.
5	-0.
6	-0.
7	-0.
8	-0.
9	-0.
10	-0.

ADDITIONAL DEFLECTION MODE (H/REF H)
REAL

1	0.
2	-0.
3	-0.
4	-0.
5	-0.
6	-0.
7	0.
8	-0.
9	-0.
10	-0.

MASS MATRIX

	COLUMN 1	COLUMN 2	COLUMN 3	COLUMN 4	COLUMN 5	COLUMN 6
1	0.53835999E 04	-0.13490000E 03	0.	0.	0.	0.
2	-0.13490000E 03	0.92519999E 03	0.	0.	0.	0.
3	0.	0.	0.20732000E 05	-0.11004999E 05	0.	0.
4	0.	0.	-0.11004999E 05	0.11477999E 05	0.	0.
5	0.	0.	0.	0.	0.31139000E 04	0.13970000E 03
6	0.	0.	0.	0.	0.13970000E 03	0.80660000E 03
7	0.	0.	0.	0.	0.	0.
8	0.	0.	0.	0.	0.	0.
9	0.	0.	0.	0.	0.	0.
10	0.	0.	0.	0.	0.	0.

	COLUMN 7	COLUMN 8	COLUMN 9	COLUMN 10
1	0.	0.	0.	0.
2	0.	0.	0.	0.
3	0.	0.	0.	0.
4	0.	0.	0.	0.
5	0.	0.	0.	0.
6	0.	0.	0.	0.
7	0.26387599E 04	-0.20999999E 02	0.	0.
8	-0.20555999E 02	0.80329999E 03	0.	0.
9	0.	0.	0.48750000E 03	0.72999999E 01
10	0.	0.	0.72559999E 01	0.17785999E 03

LOAD FACTOR MODE
REAL

1	0.09999999E 01
2	0.09999999E 01
3	0.09999999E 01
4	0.09999999E 01
5	0.09999999E 01
6	0.09999999E 01
7	0.09999999E 01
8	0.09999999E 01
9	0.09999999E 01
10	0.09999999E 01

CHORDWISE COORDINATES
REAL

1	0.2024999E 02
2	-0.8059599E 02
3	0.1785000E 02
4	-0.7139999E 02
5	0.1579999E 02
6	-0.6319999E 02
7	0.1329999E 02
8	-0.5320000E 02
9	0.1104999E 02
10	-0.4419999E 02

SHEAR COEFFICIENT MATRIX

1	COLUMN 1 0.05555599E 01	COLUMN 2 0.09999999E 01	COLUMN 3 0.09999999E 01	COLUMN 4 0.09999999E 01	COLUMN 5 0.09999999E 01	COLUMN 6 0.09999999E 01
1	COLUMN 7 0.05555599E 01	COLUMN 8 0.09999999E 01	COLUMN 9 0.09999999E 01	COLUMN 10 0.09999999E 01	COLUMN	

MOMENT COEFFICIENT MATRIX

1	COLUMN 1 0.45000000E 02	COLUMN 2 0.45000000E 02	COLUMN 3 0.14100000E 03	COLUMN 4 0.14100000E 03	COLUMN 5 0.22300000E 03	COLUMN 6 0.22300000E 03
1	COLUMN 7 0.32300000E 03	COLUMN 8 0.32300000E 03	COLUMN 9 0.41300000E 03	COLUMN 10 0.41300000E 03	COLUMN	

TORQUE COEFFICIENT MATRIX

1	COLUMN 1 -0.20245999E 02	COLUMN 2 0.80999999E 02	COLUMN 3 -0.17850000E 02	COLUMN 4 0.71399999E 02	COLUMN 5 -0.15799999E 02	COLUMN 6 0.63199999E 02
1	COLUMN 7 -0.13255999E 02	COLUMN 8 0.53200000E 02	COLUMN 9 -0.11049999E 02	COLUMN 10 0.44199999E 02	COLUMN	

LOADS FOR TRIMMED CONDITION

DYNAMIC PRESSURE = 0.4000000E 03

AERODYNAMIC LIFT (Z)= -0.41919000E 05

INCREMENTAL PITCH ANGLE = 0.46606336E-01

DEFORMATION MODE	TOTAL DEFLECTION MODE
1 -0.35778464E-00	1 -0.13015629E 01
2 -0.16302317E-00	2 0.36120900E 01
3 -0.12215040E 01	3 -0.20534271E 01
4 -0.91019940E 00	4 0.24174929E 01
5 -0.31506635E 01	5 -0.38870436E 01
6 -0.27622538E 01	6 0.18326655E-00
7 -0.60628324E 01	7 -0.66826966E 01
8 -0.55978061E 01	8 -0.31183490E 01
9 -0.92359689E 01	9 -0.97509689E 01
10 -0.86867576E 01	10 -0.66267575E 01

FINAL AERODYNAMIC FORCE DISTRIBUTION

TOTAL FORCE DISTRIBUTION
1 -0.39714313E 04
2 0.75146689E 03
3 0.79779468E 03
4 0.45841973E 03
5 -0.55609780E 04
6 0.97793347E 03
7 -0.40783482E 04
8 0.52939943E 03
9 -0.84639199E 04
10 0.11596636E 04

SHEAR AT LOAD STATIONS

-0.17399999E 05

MOMENT AT LOAD STATIONS

-0.51527593E 07

TORQUE AT LOAD STATIONS

0.53663919E 06

LOADS FOR TRIMMED CONDITION

DYNAMIC PRESSURE = 0.8000000E 03

AERODYNAMIC LIFT (Z)= -0.41919000E 05

INCREMENTAL PITCH ANGLE = 0.20981035E-01

DEFORMATION MODE	TOTAL DEFLECTION MODE
1 -0.36199015E-00	1 -0.78685611E 00
2 -0.16960739E-00	2 0.15298564E 01
3 -0.12451448E 01	3 -0.16196562E 01
4 -0.93552055E 00	4 0.56252537E 00
5 -0.32219631E 01	5 -0.35534634E 01
6 -0.28336892E 01	6 -0.15076878E 01
7 -0.62063475E 01	7 -0.64853952E 01
8 -0.57386997E 01	8 -0.46225086E 01
9 -0.94494957E 01	9 -0.96813361E 01
10 -0.88997614E 01	10 -0.79723996E 01

FINAL AERODYNAMIC FORCE DISTRIBUTION

1 -0.89190357E 04	1 -0.36703358E 04
2 -0.60719352E 02	2 0.72958063E 03
3 -0.87839620E 04	3 0.94303796E 03
4 -0.23847163E 02	4 0.44915283E 03
5 -0.88358740E 04	5 -0.55822740E 04
6 0.26507911E 02	6 0.97280791E 03
7 -0.70411254E 04	7 -0.44233255E 04
8 -0.22606549E 03	8 0.55623450E 03
9 -0.89878254E 04	9 -0.84930255E 04
10 0.93294715E 03	10 0.11181471E 04

SHEAR AT LOAD STATIONS

-0.17356999E 05

MOMENT AT LOAD STATIONS

-0.52588411E 07

TORQUE AT LOAD STATIONS

0.53902992E 06

LOADS FOR TRIMMED CONDITION

DYNAMIC PRESSURE = 0.1200000E 04

AERODYNAMIC LIFT (Z)= -0.41919000E 05

INCREMENTAL PITCH ANGLE = 0.12441241E-01

DEFORMATION MODE		TOTAL DEFLECTION MODE	
1	-0.36626212E-00	1	-0.61819725E 00
2	-0.17629514E-00	2	0.83144537E 00
3	-0.12691572E 01	3	-0.14912333E 01
4	-0.96123845E 00	4	-0.72933845E-01
5	-0.32944059E 01	5	-0.34909774E 01
6	-0.29062601E 01	6	-0.21199737E 01
7	-0.63520887E 01	7	-0.65175571E 01
8	-0.58817549E 01	8	-0.52198808E 01
9	-0.96661822E 01	9	-0.98036578E 01
10	-0.91159250E 01	10	-0.85660221E 01
FINAL AERODYNAMIC FORCE DISTRIBUTION		TOTAL FORCE DISTRIBUTION	
1	-0.86130322E 04	1	-0.33643322E 04
2	-0.82933617E 02	2	0.70736637E 03
3	-0.86355639E 04	3	0.10914361E 04
4	-0.33407719E 02	4	0.43959228E 03
5	-0.88578584E 04	5	-0.56042585E 04
6	0.21282013E 02	6	0.96758201E 03
7	-0.73939513E 04	7	-0.47761513E 04
8	-0.19848777E 03	8	0.58381222E 03
9	-0.90156926E 04	9	-0.85208927E 04
10	0.89064544E 03	10	0.10758454E 04

SHEAR AT LOAD STATIONS

-0.17399999E 05

MOMENT AT LOAD STATIONS

-0.53665973E 07

TORQUE AT LOAD STATIONS

0.52331747E 06

DIVERGENCE OPTION

MCDE	LAMBDA	DIVERGENT Q	NO. ITERATIONS
1	0.10533979E 04	0.37855525E 04	7
2	0.14795922E 03	0.26951299E 05	17

MODAL COLUMNS NORMALIZED ON THE LARGEST ELEMENT

COLUMN 2

1	0.46074241E-01
2	0.30984621E-01
3	0.14665693E-00
4	0.12125430E-00
5	0.36689373E-00
6	0.33670042E-00
7	0.67907555E 00
8	0.64371622E 00
9	0.09999999E 01
10	0.96211223E 00

CHECK EIGENVALUES AND EIGENVECTORS

COLUMN

1	0.10533956E 04
2	0.14795691E 03

COLUMN 2

1	0.46074230E-01
2	0.30984621E-01
3	0.14665692E-00
4	0.12125429E-00
5	0.36689373E-00
6	0.33670041E-00
7	0.67907548E 00
8	0.64371625E 00
9	0.09999999E 01
10	0.96211215E 00

EXAMPLE PROBLEM - AERODYNAMIC STABILITY AND INERTIAL DERIVATIVES

01

CONTROL ITEMS

(1)=-0 (2)=-0 (3)=-0 (4)=-0 (5)=-0 (6)= 1 (7)=-0 (8)=-0 (9)= 1
(10)= 1 (11)=-0 (12)=-0 (13)=-0 (14)= 4 (15)=-0 (16)=-0 (17)=10 (18)= 1

REF H
0.0999999E 01

Z

REF H0
0.

CAPS

-0.41919000E 05

NORM CONST

0.9999999E-07

CBAR

0.2249999E 03

X0

0.

SMS

0.500C0000E 03

REF N

0.05955599E 01

REF T

0.

4 DYNAMIC PRESSURES

0. 0.40000000E 03 0.80000000E 03 0.12000000E 04

FLEXIBILITY MATRIX

	COLUMN 1	COLUMN 2	COLUMN 3	COLUMN 4	COLUMN 5	COLUMN 6
1	0.87171999E 02	0.13361000E 02	0.12778CC0E 03	0.62719999E 02	0.16250999E 03	0.10492200E 03
2	0.13361C00E 02	0.30860999E 03	0.62719999E 02	0.32297C00E 03	0.10492200E 03	0.33528999E 03
3	0.12778CC0E 03	0.62719999E 02	0.27732000E 03	0.15725999E 03	0.48255000E 03	0.37627999E 03
4	0.62719999E 02	0.32297000E 03	0.15725999E 03	0.63749C00E 03	0.37627999E 03	0.80135999E 03
5	0.16250999E 03	0.10492200E 03	0.48255000E 03	0.37627999E 03	0.12757999E 04	0.11344299E 04
6	0.10492200E 03	0.33528999E 03	0.37627999E 03	0.80135999E 03	0.11344299E 04	0.16999000E 04
7	0.20478C00E 03	0.15629999E 03	0.73283999E 03	0.64337999E 03	0.19350000E 04	0.18160000E 04
8	0.15625999E 03	0.35021000E 03	0.64337999E 03	0.10012100E 04	0.18160000E 04	0.22920000E 04
9	0.24285C00E 03	0.20257000E 03	0.95810001E 03	0.88378000E 03	0.25283000E 04	0.24293999E 04
10	0.20402999E 03	0.35784999E 03	0.88378CC0E 03	0.11810599E 04	0.24293999E 04	0.28248999E 04

COLUMN

10

COLUMN 9

COLUMN 8

COLUMN 7

1	0.20478C00E 03	0.15629999E 03	0.24285C00E 03	0.20402599E 03	0.20402599E 03	0.20402599E 03
2	0.15625999E 03	0.35021000E 03	0.20257000E 03	0.35784999E 03	0.35784999E 03	0.35784999E 03
3	0.73283999E 03	0.64337999E 03	0.95809998E 03	0.88378000E 03	0.88378000E 03	0.88378000E 03
4	0.64337999E 03	0.10012100E 04	0.88378CC0E 03	0.11810599E 04	0.11810599E 04	0.11810599E 04
5	0.19350000E 04	0.18160000E 04	0.25283000E 04	0.24293999E 04	0.24293999E 04	0.24293999E 04
6	0.18160000E 04	0.22920000E 04	0.24293999E 04	0.28248999E 04	0.28248999E 04	0.28248999E 04
7	0.36861999E 04	0.35051999E 04	0.52675000E 04	0.51171000E 04	0.51171000E 04	0.51171000E 04
8	0.35051999E 04	0.42291999E 04	0.51171000E 04	0.51171000E 04	0.51171000E 04	0.51171000E 04
9	0.52675C00E 04	0.51171000E 04	0.84840000E 04	0.82340000E 04	0.82340000E 04	0.82340000E 04
10	0.51171000E 04	0.57186999E 04	0.82340000E 04	0.92340000E 04	0.92340000E 04	0.92340000E 04

AERODYNAMIC INFLUENCE COEFFICIENTS							REAL	1/KR =	0.
COLUMN	1	2	3	4	5	6			
1	0.11040550E-01	-0.11040550E-01	0.44035111E-00	-0.44035111E-00	0.23558389E-00	-0.23558388E-00			
2	-0.65710617E-01	0.65710617E-01	0.29845583E-01	-0.29845580E-01	0.31780227E-01	-0.31780227E-01			
3	0.39277381E-00	-0.39277381E-00	0.98089795E-00	-0.98089795E-00	0.38376644E-00	-0.38376643E-00			
4	0.26774842E-01	-0.26774842E-01	-0.80031395E-01	0.80031425E-01	0.27342296E-01	-0.27342293E-01			
5	0.27598643E-00	-0.27598643E-00	0.27460741E-00	-0.27460741E-00	0.10764901E-01	-0.10764901E-01			
6	0.26934370E-02	-0.26934370E-02	0.29652580E-01	-0.29652578E-01	-0.86809320E-01	0.86809350E-01			
7	-0.32916859E-00	0.32916859E-00	0.48047283E-00	-0.48047283E-00	0.15607686E-00	-0.15607686E-00			
8	0.89114150E-01	-0.99114150E-01	-0.50967707E-01	0.50967722E-01	0.53080060E-01	-0.53080063E-01			
9	0.14902235E-01	-0.14902235E-01	-0.10267299E-01	0.10267299E-01	3.63286462E-00	-0.63286462E-00			
10	-0.29457279E-00	0.29457279E-00	0.21437690E-00	-0.21437693E-00	-0.98096674E-01	0.98096689E-01			

COLUMN

COLUMN	7	8	9	10
1	0.15978687E-00	-0.15978687E-00	0.86297289E-01	-0.86297289E-01
2	0.19449846E-01	-0.19449846E-01	0.94341008E-02	-0.94341008E-02
3	0.19948611E-00	-0.19948611E-00	0.10024159E-00	-0.10024159E-00
4	0.28146957E-01	-0.26146957E-01	0.11618502E-01	-0.11618502E-01
5	0.38184877E-00	-0.38184877E-00	0.14753119E-00	-0.14753119E-00
6	0.32687288E-01	-0.32687288E-01	0.19040608E-01	-0.19040608E-01
7	0.12575267E-01	-0.12575267E-01	0.32880831E-00	-0.32880831E-00
8	-0.88885278E-01	0.88885278E-01	0.30007008E-01	-0.30007008E-01
9	0.86738150E-01	-0.86738150E-01	0.10493460E-01	-0.10493460E-01
10	0.48441701E-01	-0.48441701E-01	0.81901712E-01	-0.81901712E-01

WEIGHTING MATRIX

COLUMN	1	2	3	4	5	6
1	0.09959999E-01	0.	0.	0.	0.	0.
2	0.	0.09959999E-01	0.	0.	0.	0.
3	0.	0.	0.09959999E-01	0.	0.	0.
4	0.	0.	0.	0.09959999E-01	0.	0.
5	0.	0.	0.	0.	0.09959999E-01	0.
6	0.	0.	0.	0.	0.	0.09959999E-01
7	0.	0.	0.	0.	0.	0.
8	0.	0.	0.	0.	0.	0.
9	0.	0.	0.	0.	0.	0.
10	0.	0.	0.	0.	0.	0.

	COLUMN 7	COLUMN 8	COLUMN 9	COLUMN 10	COLUMN
1	0.	0.	0.	0.	
2	0.	0.	0.	0.	
3	0.	0.	0.	0.	
4	0.	0.	0.	0.	
5	0.	0.	0.	0.	
6	0.	0.	0.	0.	
7	0.05599999E 01	0.	0.	0.	
8	0.	0.09999999E 01	0.	0.	
9	0.	0.	0.09999999E 01	0.	
10	0.	0.	0.	0.09999999E 01	

ADDITIONAL DEFLECTION MODE (H/REF H)
REAL

- 1 -0.35343000E-00
- 2 0.14137100E 01
- 3 -0.3115999E-00
- 4 0.12461600E 01
- 5 -0.2757599E-00
- 6 0.11030400E 01
- 7 -0.23213000E-00
- 8 0.92851000E 00
- 9 -0.19286000E-00
- 10 0.7714299E 00

MASS MATRIX

	COLUMN 1	COLUMN 2	COLUMN 3	COLUMN 4	COLUMN 5	COLUMN 6
1	0.53835999E 04	-0.13490000E 03	0.	0.	0.	0.
2	-0.13490000E 03	0.92519999E 03	0.	0.	0.	0.
3	0.	0.	0.20732000E 05	-0.11004999E 05	0.	0.
4	0.	0.	-0.11004999E 05	0.11477999E 05	0.	0.
5	0.	0.	0.	0.	0.31139000E 04	0.13970000E 03
6	0.	0.	0.	0.	0.13970000E 03	0.80660000E 03
7	0.	0.	0.	0.	0.	0.
8	0.	0.	0.	0.	0.	0.
9	0.	0.	0.	0.	0.	0.
10	0.	0.	0.	0.	0.	0.

1	0.	0.	0.	0.	0.
2	0.	0.	0.	0.	0.
3	0.	0.	0.	0.	0.
4	0.	0.	0.	0.	0.
5	0.	0.	0.	0.	0.
6	0.	0.	0.	0.	0.
7	0.26387599E 04	-0.20999999E 02	0.	0.	0.
8	-0.20999999E 02	0.80329999E 03	0.	0.48750000E 03	0.72999999E 01
9	0.	0.	0.	0.72999999E 01	0.17785999E 03
10	0.	0.	0.	0.	0.

LOAD FACTOR MODE
REAL

1	0.09999999E 01
2	0.09999999E 01
3	0.09999999E 01
4	0.09999999E 01
5	0.09999999E 01
6	0.09999999E 01
7	0.09999999E 01
8	0.09999999E 01
9	0.09999999E 01
10	0.09999999E 01

CHORDWISE COORDINATES
REAL

1	0.20249999E 02
2	-0.80999999E 02
3	0.17850000E 02
4	-0.71399999E 02
5	0.15799999E 02
6	-0.63199999E 02
7	0.13299999E 02
8	-0.53200000E 02
9	0.11049999E 02
10	-0.44199999E 02

SPANWISE COORDINATES
REAL

1	0.9000000E 02
2	0.9000000E 02
3	0.1860000E 03
4	0.1860000E 03
5	0.2680000E 03
6	0.2680000E 03
7	0.3680000E 03
8	0.3680000E 03
9	0.4580000E 03
10	0.4580000E 03

INPUT DATA FOR LOAD DISTRIBUTION CALCULATIONS

5 STRIPS

STRIP	CONTROL POINTS
1	2
2	2
3	2
4	2
5	2

STRIP	DELTA Y(I)	CHORDWISE CONTROL POINT LOCATIONS (PERCENT CHORD)
1	0.9300000E 02	0.2500000E-00 0.7500000E 00
2	0.8900000E 02	0.2500000E-00 0.7500000E 00
3	0.9100000E 02	0.2500000E-00 0.7500000E 00
4	0.9500000E 02	0.2500000E-00 0.7500000E 00
5	0.8700000E 02	0.2500000E-00 0.7500000E 00

AERODYNAMIC STABILITY DERIVATIVES

*****DISTRIBUTED FORCE COEFFICIENTS (DYNAMIC PRESSURE = 0. REAL

1	-0.14357547E-01
2	-0.26047353E-04
3	-0.13686051E-01
4	-0.84458637E-05
5	-0.13267461E-01
6	0.55308361E-04
7	-0.95935404E-02
8	-0.42095377E-03
9	-0.13470409E-01
10	0.15316699E-02

AERODYNAMIC COEFFICIENTS

CZ = -0.63243476E-01 CM = 0.47430755E-02 CL = -0.33071665E-01

TOTAL CHORDWISE CENTER OF PRESSURE (XBAR-XO)/CBAR = 0.74997071E-01

TOTAL SPANWISE CENTER OF PRESSURE YBAR/S = 0.52292612E 00

STRIP	CLC/CAVE	LOCAL CHORDWISE CP
1	0.77331154E-01	0.25090545E-00
2	0.76935378E-01	0.25030836E-00
3	0.72594246E-01	0.24790691E-00
4	0.52707863E-01	0.27101722E-00
5	0.68613441E-01	0.18585294E-00

*****DISTRIBUTED FORCE COEFFICIENTS (DYNAMIC PRESSURE = 0.40000000E 03) REAL

1	-0.15553647E-01
2	-0.70288702E-04
3	-0.15114766E-01
4	-0.21486091E-04
5	-0.14917786E-01
6	0.54172933E-04
7	-0.11358085E-01

8 -0.42172892E-03
 9 -0.15051256E-01
 10 0.16281382E-02

AERODYNAMIC COEFFICIENTS

CZ = -0.70826732E-01 CM = 0.52602834E-02 CL = -0.37375409E-01
 TOTAL CHORDWISE CENTER OF PRESSURE (XBAR-XO)/CBAR = 0.74269747E-01
 TOTAL SPANWISE CENTER OF PRESSURE YBAR/S = 0.52770201E 00

STRIP	CLC/CAVE	LOCAL CHORDWISE CP
1	0.8399655E-01	0.25224939E-00
2	0.85035121E-01	0.25070975E-00
3	0.81668207E-01	0.24817766E-00
4	0.61999021E-01	0.26790049E-00
5	0.7714355E-01	0.18935320E-00

*****DISTRIBUTED FORCE COEFFICIENTS (DYNAMIC PRESSURE = 0.80000000E 03)
 REAL

1	-0.17061824E-01
2	-0.12706977E-03
3	-0.16922084E-01
4	-0.38488138E-04
5	-0.17013357E-01
6	0.52667091E-04
7	-0.13610871E-01
8	-0.42118333E-03
9	-0.17049915E-01
10	0.17485712E-02

AERODYNAMIC COEFFICIENTS

CZ = -0.80443554E-01 CM = 0.59154046E-02 CL = -0.42837886E-01
 TOTAL CHORDWISE CENTER OF PRESSURE (XBAR-XO)/CBAR = 0.73534849E-01
 TOTAL SPANWISE CENTER OF PRESSURE YBAR/S = 0.53252105E 00

STRIP	CLC/CAVE	LOCAL CHORDWISE CP
1	-0.41379851E-02	0.26184864E-00
2	-0.49220639E-02	0.24625484E-00
3	-0.47957923E-02	0.24737089E-00
4	-0.40459378E-02	0.25357463E-00
5	-0.31583379E-02	0.21799854E-00

*****DISTRIBUTED FORCE COEFFICIENTS (DYNAMIC PRESSURE = 0.12000000E 04)
REAL

1	0.84211492E-03
2	0.21670499E-04
3	0.99198898E-03
4	-0.56417739E-05
5	0.10039362E-02
6	-0.46560635E-05
7	0.89774501E-03
8	0.52784889E-05
9	0.69878040E-03
10	-0.41836873E-04

AERODYNAMIC COEFFICIENTS

CZ = 0.44093797E-02 CM = -0.31463867E-03 CL = 0.23244022E-02

TOTAL CHORDWISE CENTER OF PRESSURE (XBAR-X0)/CBAR = 0.713566674E-01

TOTAL SPANWISE CENTER OF PRESSURE YBAR/S = 0.52714948E 00

STRIP	CLC/CAVE	LOCAL CHORDWISE CP
1	-0.46440070E-02	0.26254391E-00
2	-0.55412764E-02	0.24714006E-00
3	-0.54905503E-02	0.24767029E-00
4	-0.47527552E-02	0.25292267E-00
5	-0.37755375E-02	0.21815793E-00

INERTIAL DERIVATIVES

*****DISTRIBUTED FORCE COEFFICIENTS (DYNAMIC PRESSURE = 0.
REAL

1	0.62580293E-03
2	0.13604192E-04
3	0.73171273E-03
4	-0.77137574E-05
5	0.70380675E-03
6	-0.44100925E-05
7	0.58094388E-03
8	0.56954086E-05
9	0.43050759E-03
10	-0.26081324E-04

AERODYNAMIC COEFFICIENTS

CZ = 0.30538682E-02 CM = -0.22184324E-03 CL = 0.15615184E-02

TOTAL CHORDWISE CENTER OF PRESSURE (XBAR-XO)/CBAR = 0.72643355E-01

TOTAL SPANWISE CENTER OF PRESSURE YBAR/S = 0.51132476E 00

STRIP	CLC/CAVE	LOCAL CHORDWISE CP
1	-0.34376726E-02	0.26063813E-00
2	-0.40674099E-02	0.24467281E-00
3	-0.38428387E-02	0.24684721E-00
4	-0.30875752E-02	0.25485426E-00
5	-0.23242888E-02	0.21775515E-00

*****DISTRIBUTED FORCE COEFFICIENTS (DYNAMIC PRESSURE = 0.40000000E 03)
REAL

1	0.68150777E-03
2	0.15638322E-04
3	0.79858477E-03
4	-0.72253242E-05
5	0.78050370E-03
6	-0.45051783E-05
7	0.66105811E-03

8 0.56248754E-05
9 0.49821869E-03
10 -0.30087743E-04

AERODYNAMIC COEFFICIENTS

CZ = 0.33993179E-02 CM = -0.24555183E-03 CL = 0.17552938E-02

TOTAL CHORDWISE CENTER OF PRESSURE (XBAR-X0)/CBAR = 0.72235616E-01

TOTAL SPANWISE CENTER OF PRESSURE YBAR/S = 0.51636646E 00

STRIP	CLC/CAVE	LOCAL CHORDWISE CP
1	-0.37480972E-02	0.26121596E-00
2	-0.44458395E-02	0.24543487E-00
3	-0.42637280E-02	0.24709717E-00
4	-0.35088578E-02	0.25421855E-00
5	-0.26904077E-02	0.21786396E-00

*****DISTRIBUTED FORCE COEFFICIENTS (DYNAMIC PRESSURE = 0.80000000E 03)
REAL

1 0.75142628E-03
2 0.18238975E-04
3 0.88268986E-03
4 -0.65624736E-05
5 0.87742376E-03
6 -0.45895430E-05
7 0.76323235E-03
8 0.54958509E-05
9 0.58472366E-03
10 -0.35172852E-04

AERODYNAMIC COEFFICIENTS

CZ = 0.38369058E-02 CM = -0.27551733E-03 CL = 0.20014707E-02

TOTAL CHORDWISE CENTER OF PRESSURE (XBAR-X0)/CBAR = 0.71807165E-01

TOTAL SPANWISE CENTER OF PRESSURE YBAR/S = 0.52163664E 00

STRIP	CLC/CAVE	LOCAL CHORDWISE CP
1	0.92413411E-01	0.25369627E-00
2	0.95286114E-01	0.25113463E-00
3	0.93190604E-01	0.24844737E-00
4	0.73852917E-01	0.26500790E-00
5	0.87938758E-01	0.19286216E-00

*****DISTRIBUTED FORCE COEFFICIENTS (DYNAMIC PRESSURE = 0.12000000E 04)
REAL

1	-0.19026747E-01
2	-0.20222989E-03
3	-0.19283674E-01
4	-0.61302655E-04
5	-0.19760993E-01
6	0.50624304E-04
7	-0.16578963E-01
8	-0.41865196E-03
9	-0.19659936E-01
10	0.19040231E-02

AERODYNAMIC COEFFICIENTS

CZ = -0.93037850E-01 CM = 0.67724387E-02 CL = -0.49996965E-01

TOTAL CHORDWISE CENTER OF PRESSURE (XBAR-X0)/CBAR = 0.72792295E-01

TOTAL SPANWISE CENTER OF PRESSURE YBAR/S = 0.53738306E 00

STRIP	CLC/CAVE	LOCAL CHORDWISE CP
1	0.10338160E-00	0.25525846E-00
2	0.10867964E-00	0.25158446E-00
3	0.10829873E-00	0.24871579E-00
4	0.89461129E-01	0.26231502E-00
5	0.10204548E-00	0.19638340E-00

SECTION V

PROCESSING INFORMATION

A. Operation

FORTRAN II MONITOR system

B. Estimated Machine Time

Because of the number of variables involved such as options, order of system, number of dynamic pressures, etc., it is not possible to give a practical method of estimating machine time. When the data are appropriate, considerable time may be saved by performing as many options as possible in one machine pass. Also, complete but independent data decks may be stacked to save program read-in time.

C. Machine Components Used

About 26,000 core storages

Standard FORTRAN input tape (NTAPE2)

Standard FORTRAN output print tape (NTAPE3)

Four utility tapes (NTAPE4, NTAPE5, NTAPE6, NTAPE8)

SECTION VI

PROGRAM NOTES

A. Subroutines Used

In addition to the main program (page 77) the following subprograms were used.


1. MPRINT, prints matrix in matrix format (page 91).
2. MMULTD, computes the product $[C]$ of the two matrices $[A]$ and $[B]$ (page 95).
3. MREAD, reads a matrix in either column binary or FORTRAN format (page 98).
4. BINRD, reads column binary cards (page 103).
5. RDLN, reads and prints title card (page 113).
6. MNVRSX, computes the inverse of a complex matrix (page 115).
7. INVERS, computes the inverse of a real matrix (page 118).
8. SWEEPX, computes true mode and sweeps it from the related matrix (page 123).
9. CENTER, computes the aerodynamic coefficients, centers of pressure, and spanwise loadings (page 128).
10. LOADS, computes the three loads options and the structural loads suboption (page 133).
11. DERIV, computes the flexible load coefficients used in the derivative options (page 143).
12. MITER, matrix iteration (page 149).
13. NPNRMX, vector normalization (page 160).
14. DIVERG, divergent pressure calculations (page 165).

B. Generalized Tapes

Input, print, and utility tapes in this coding are defined as logical units 2, 3, 5, 6, 7, and 8; however, these may be altered by placing the desired units on symbolic cards HMO3O827 through HMO3O832 in the main program.


SECTION VII
FLOW DIAGRAMS

FLOW DIAGRAM - MAIN PROGRAM

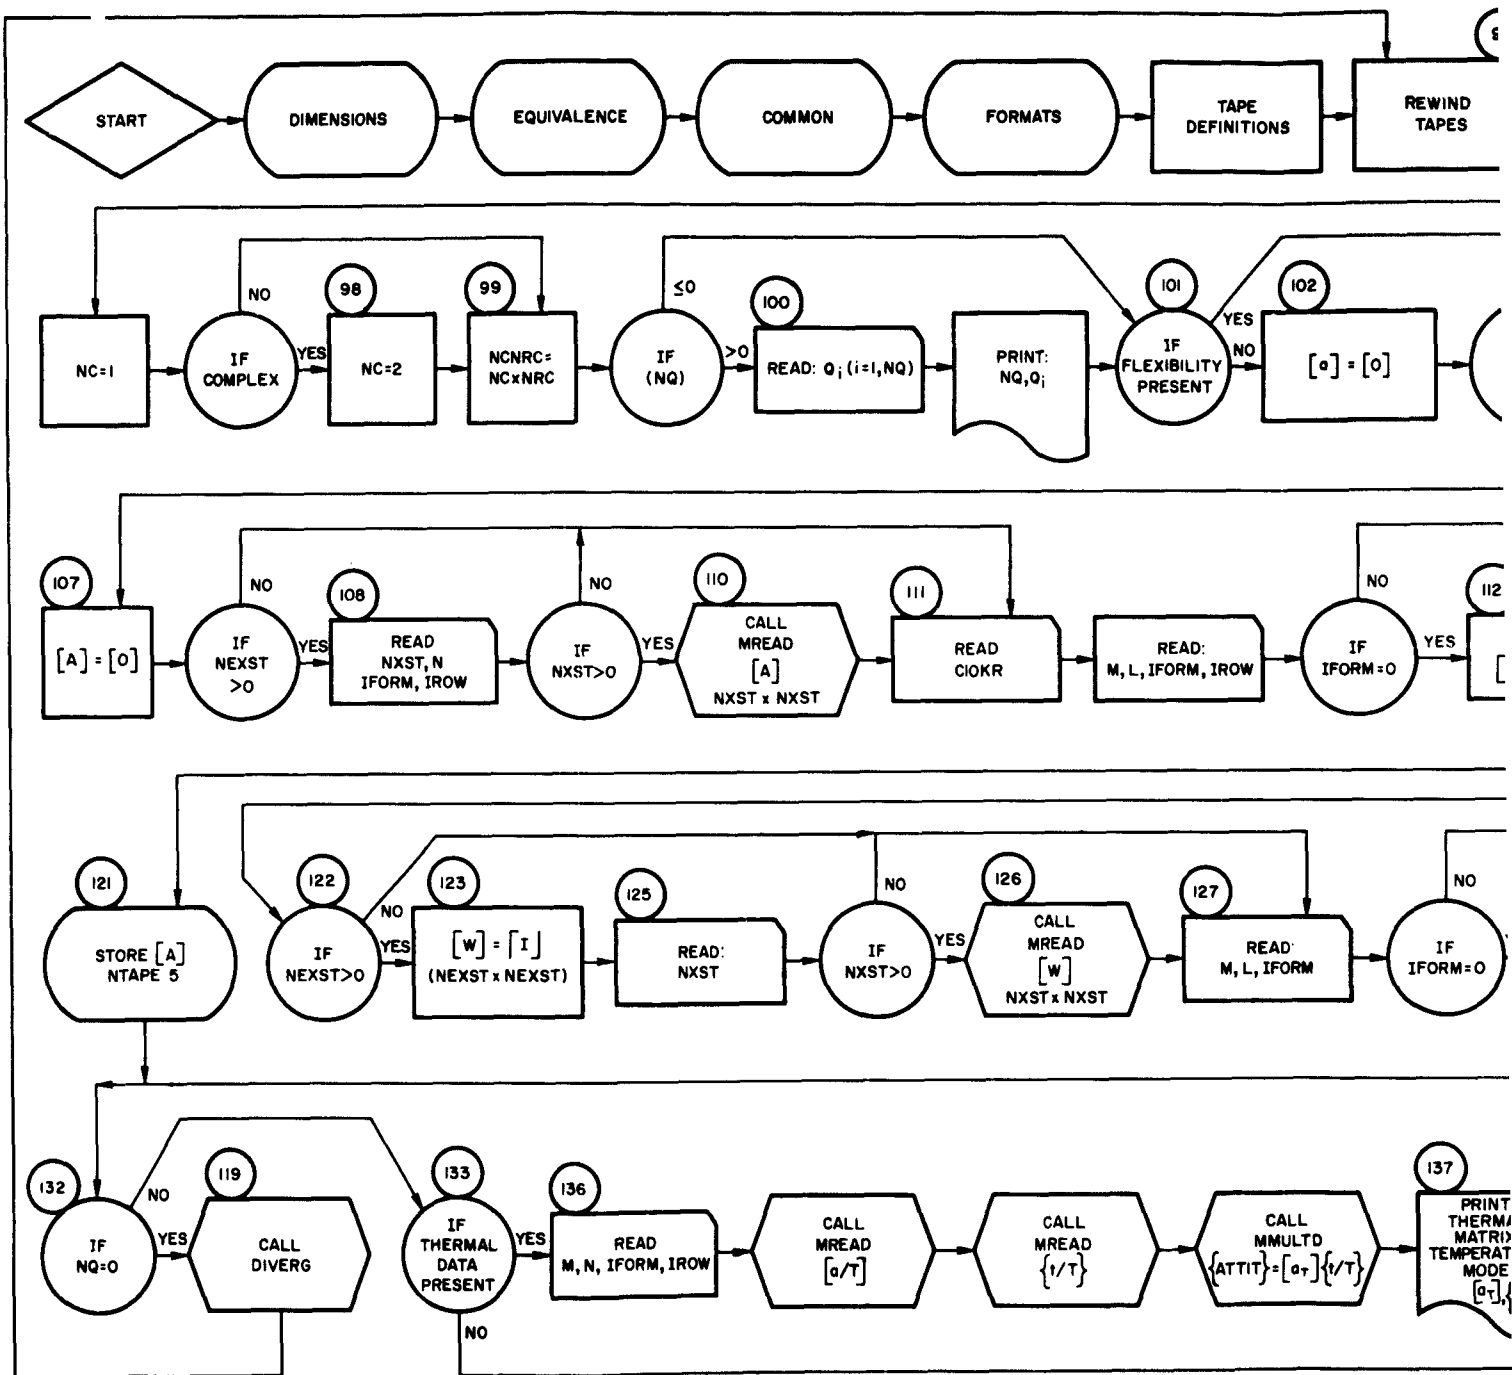


1


GRAM - MAIN PROGRAM

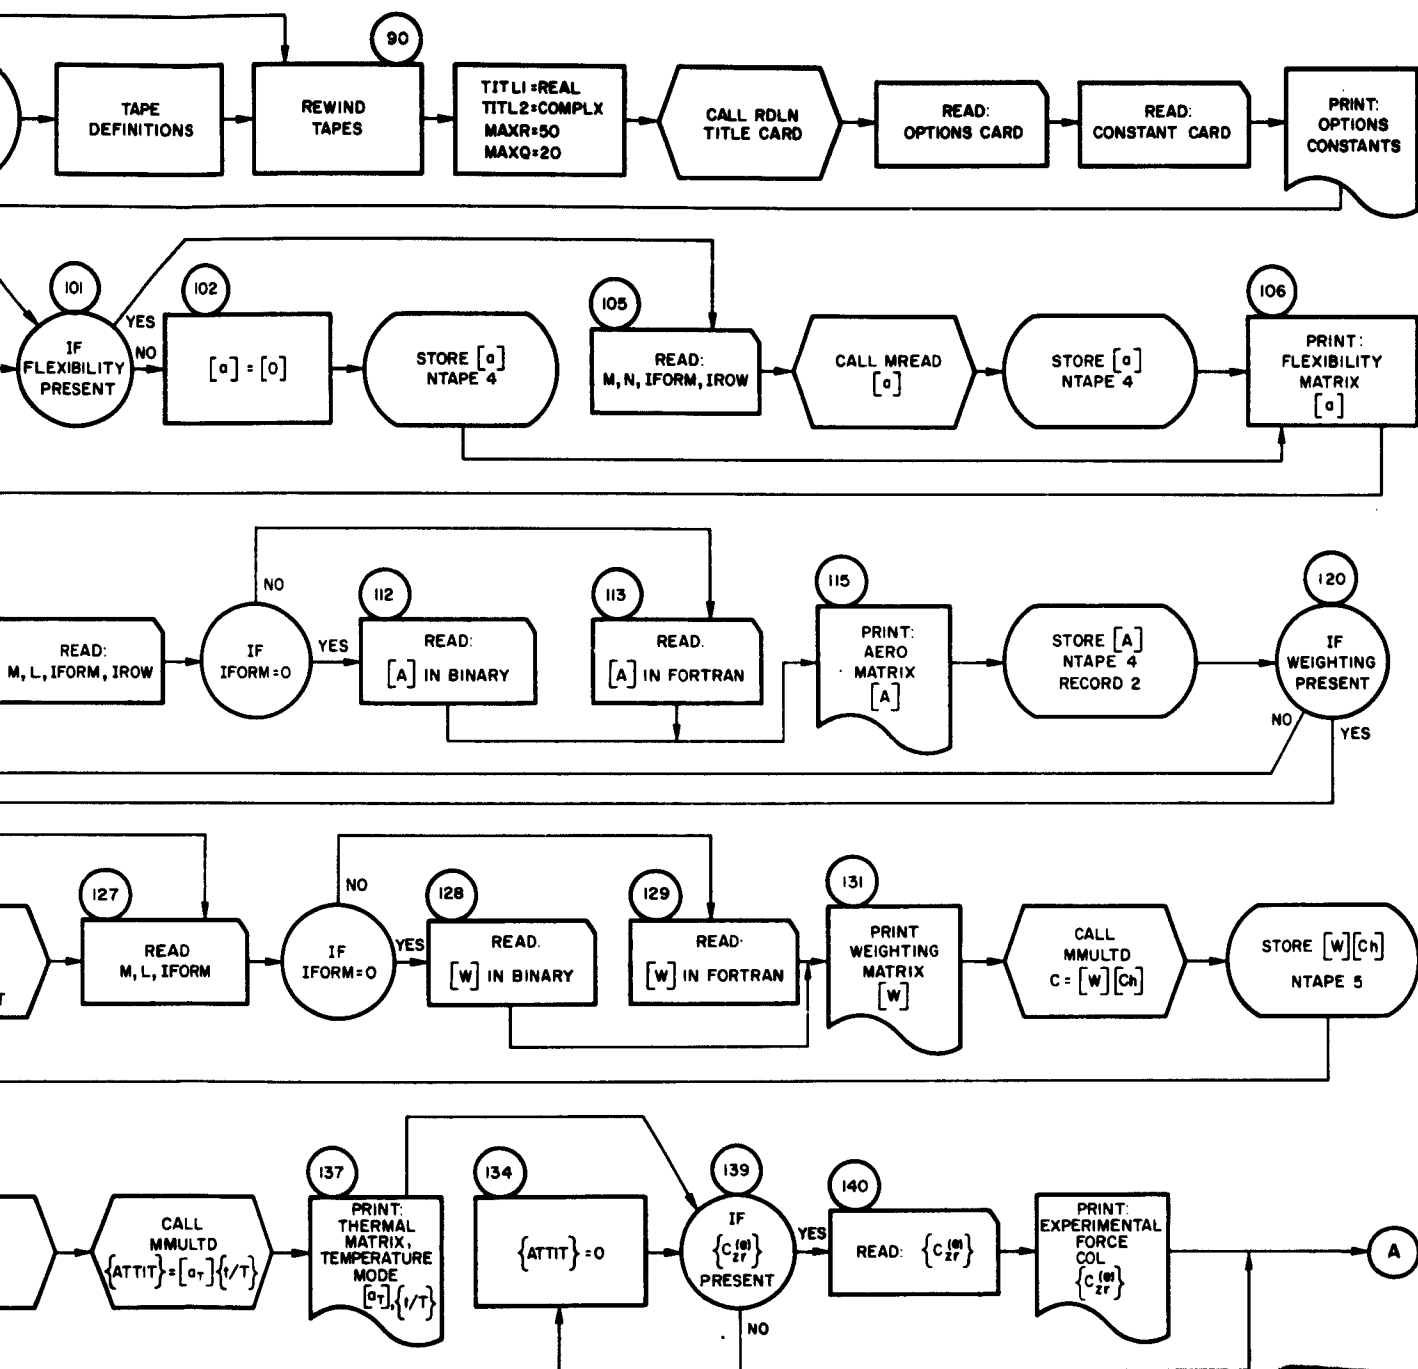


FLOW DIAGRAM — MAIN PROGRAM

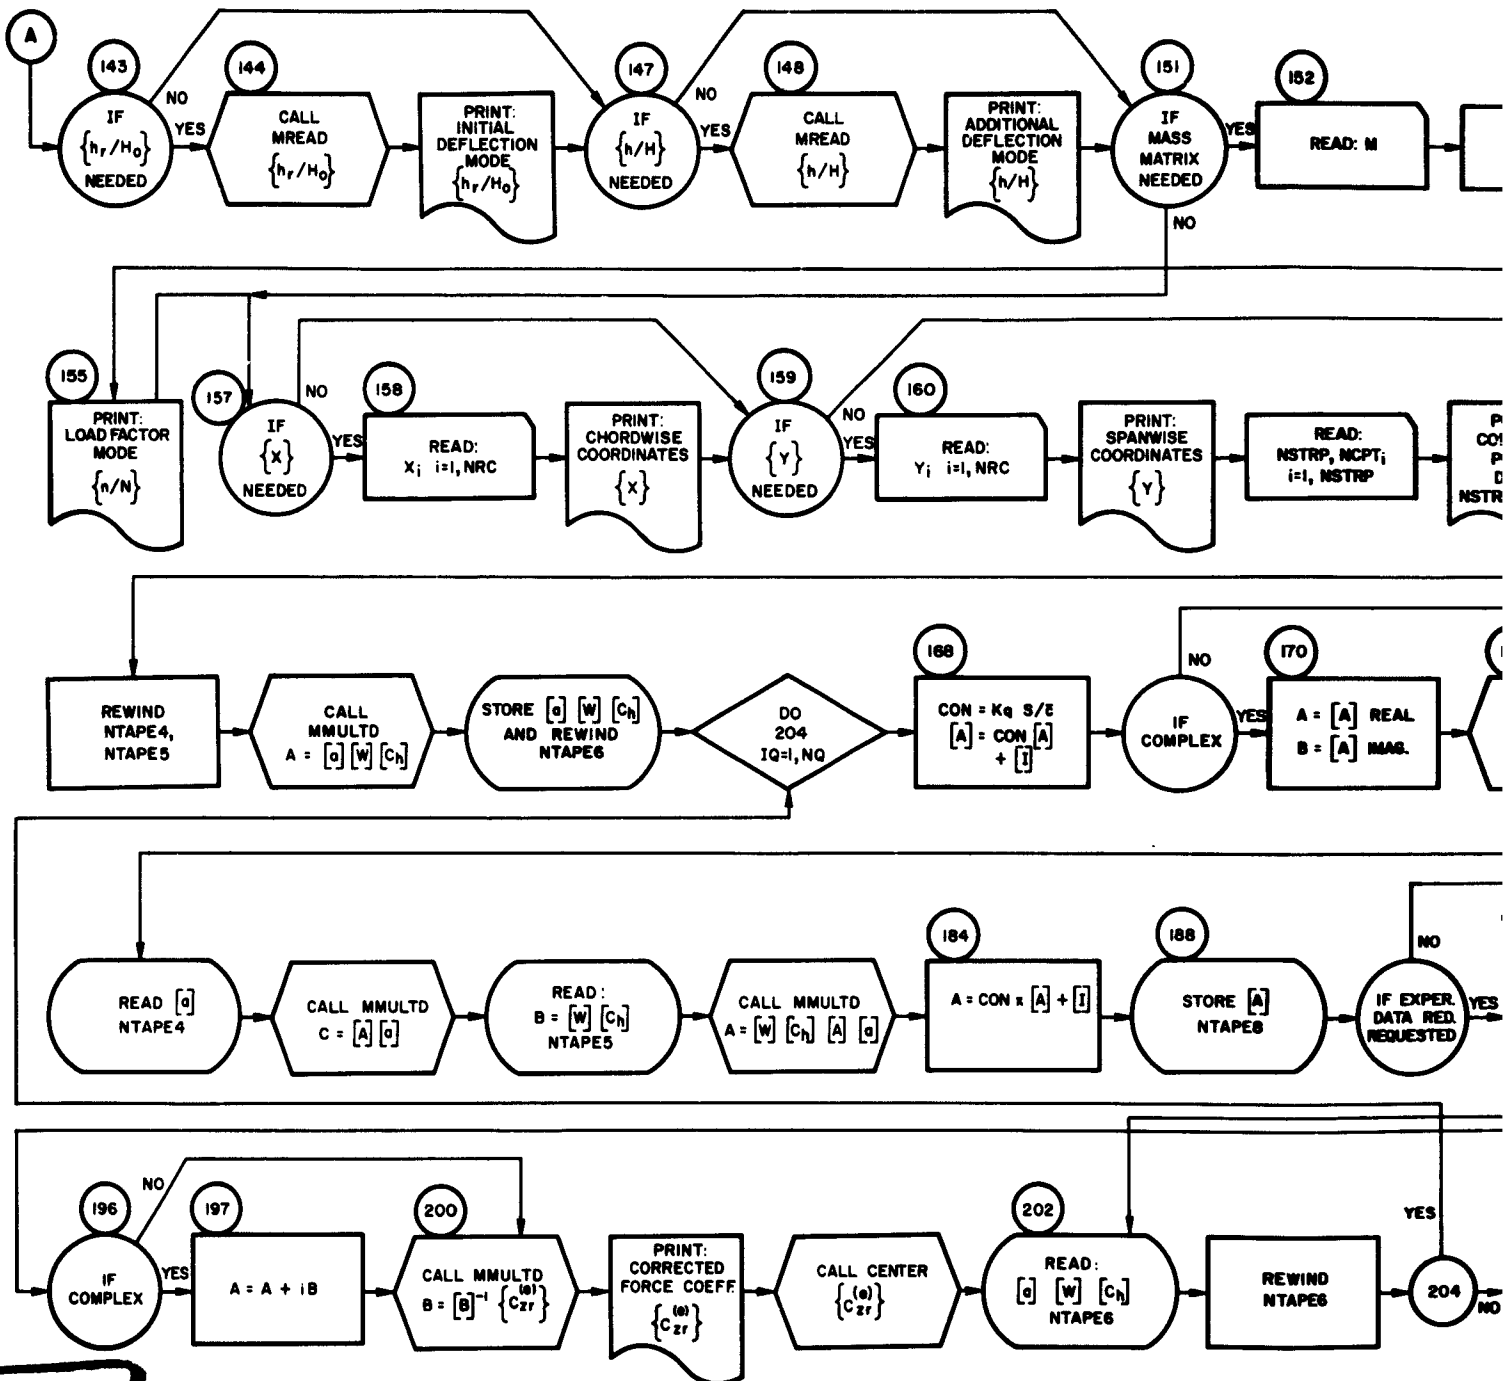

RAM — MAIN PROGRAM (CONTINUED)

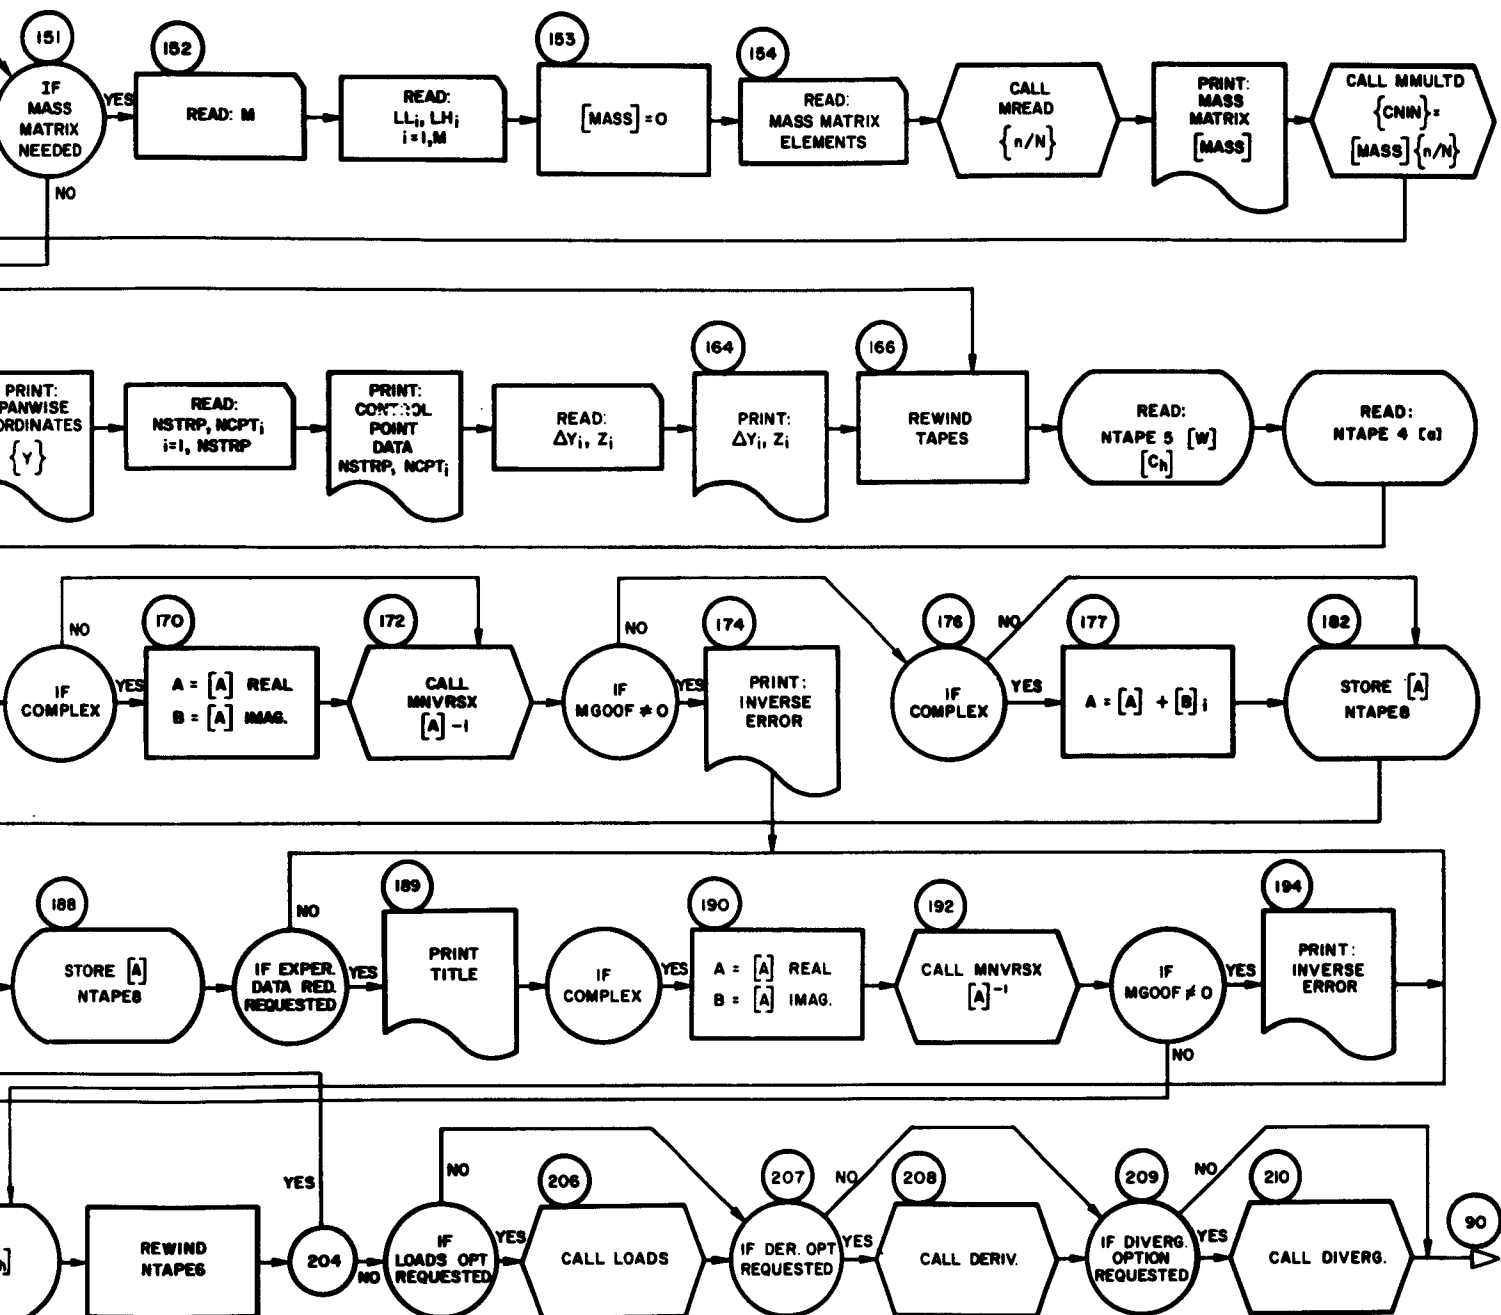


FLOW DIAGRAM - LOADS SUBROUTINE

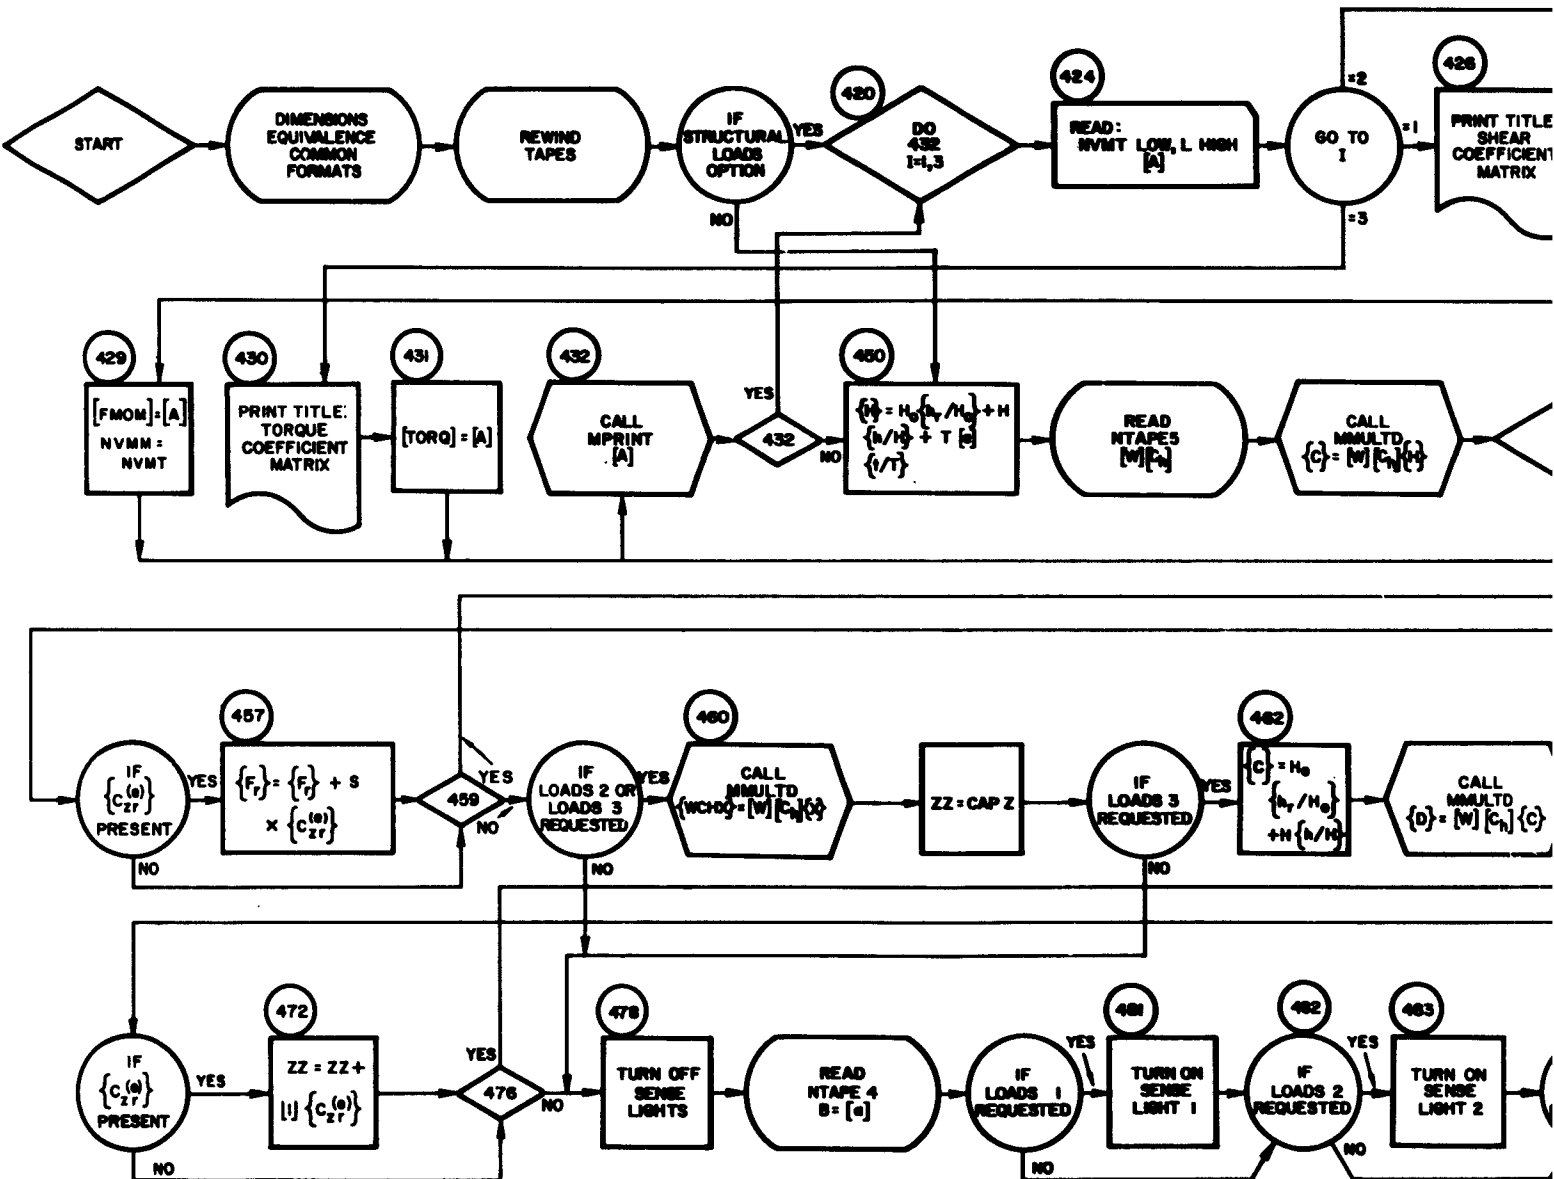



GRAM - LOADS SUBROUTINE

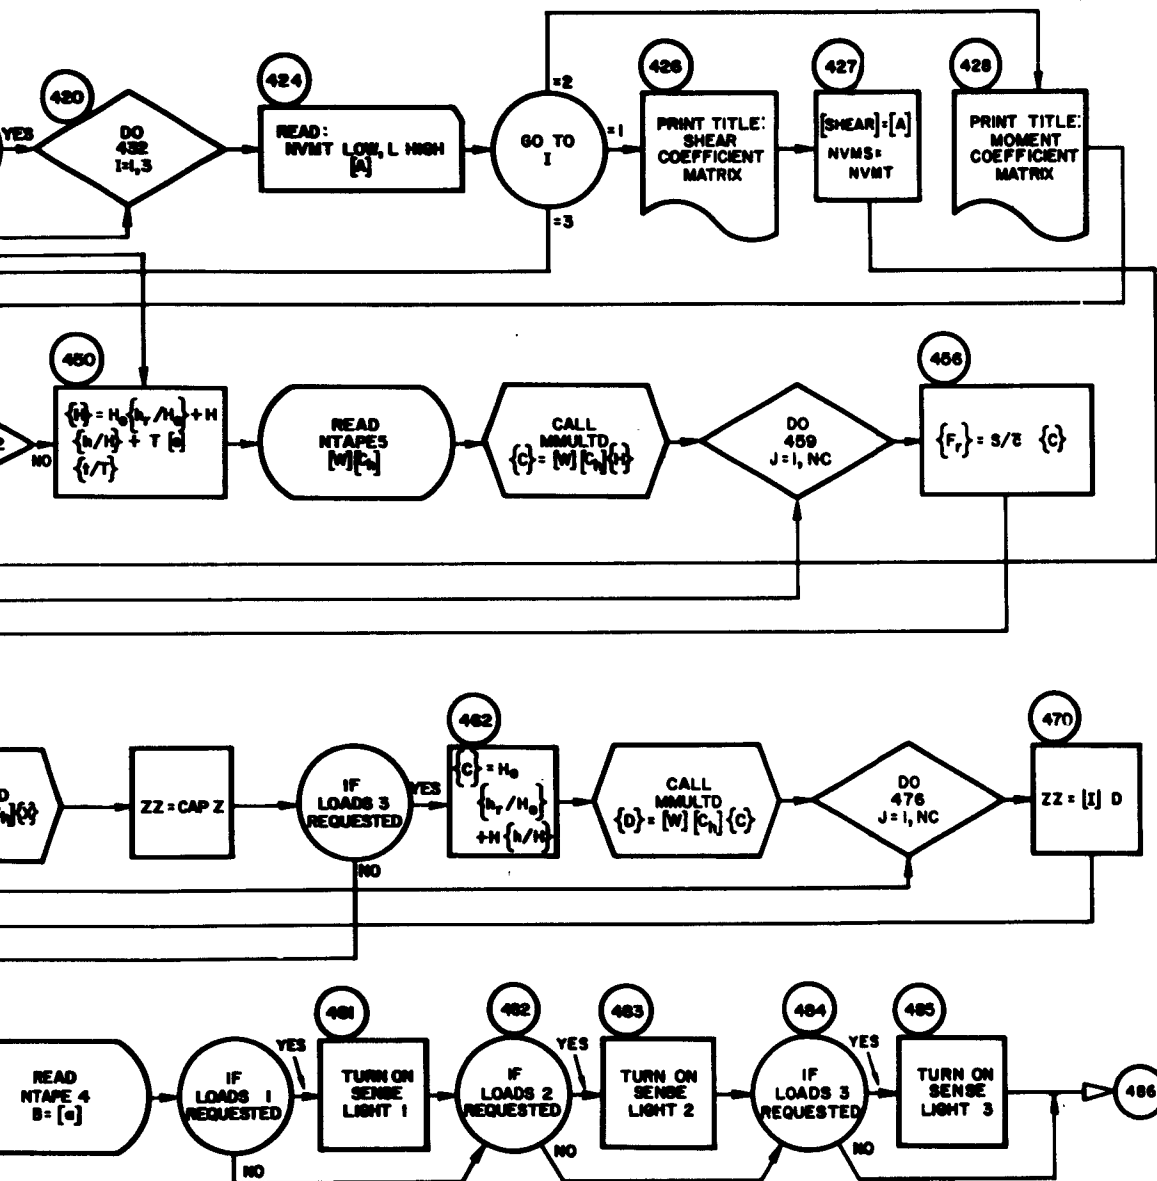

FLOW DIAGRAM - LOADS SUBROUTINE




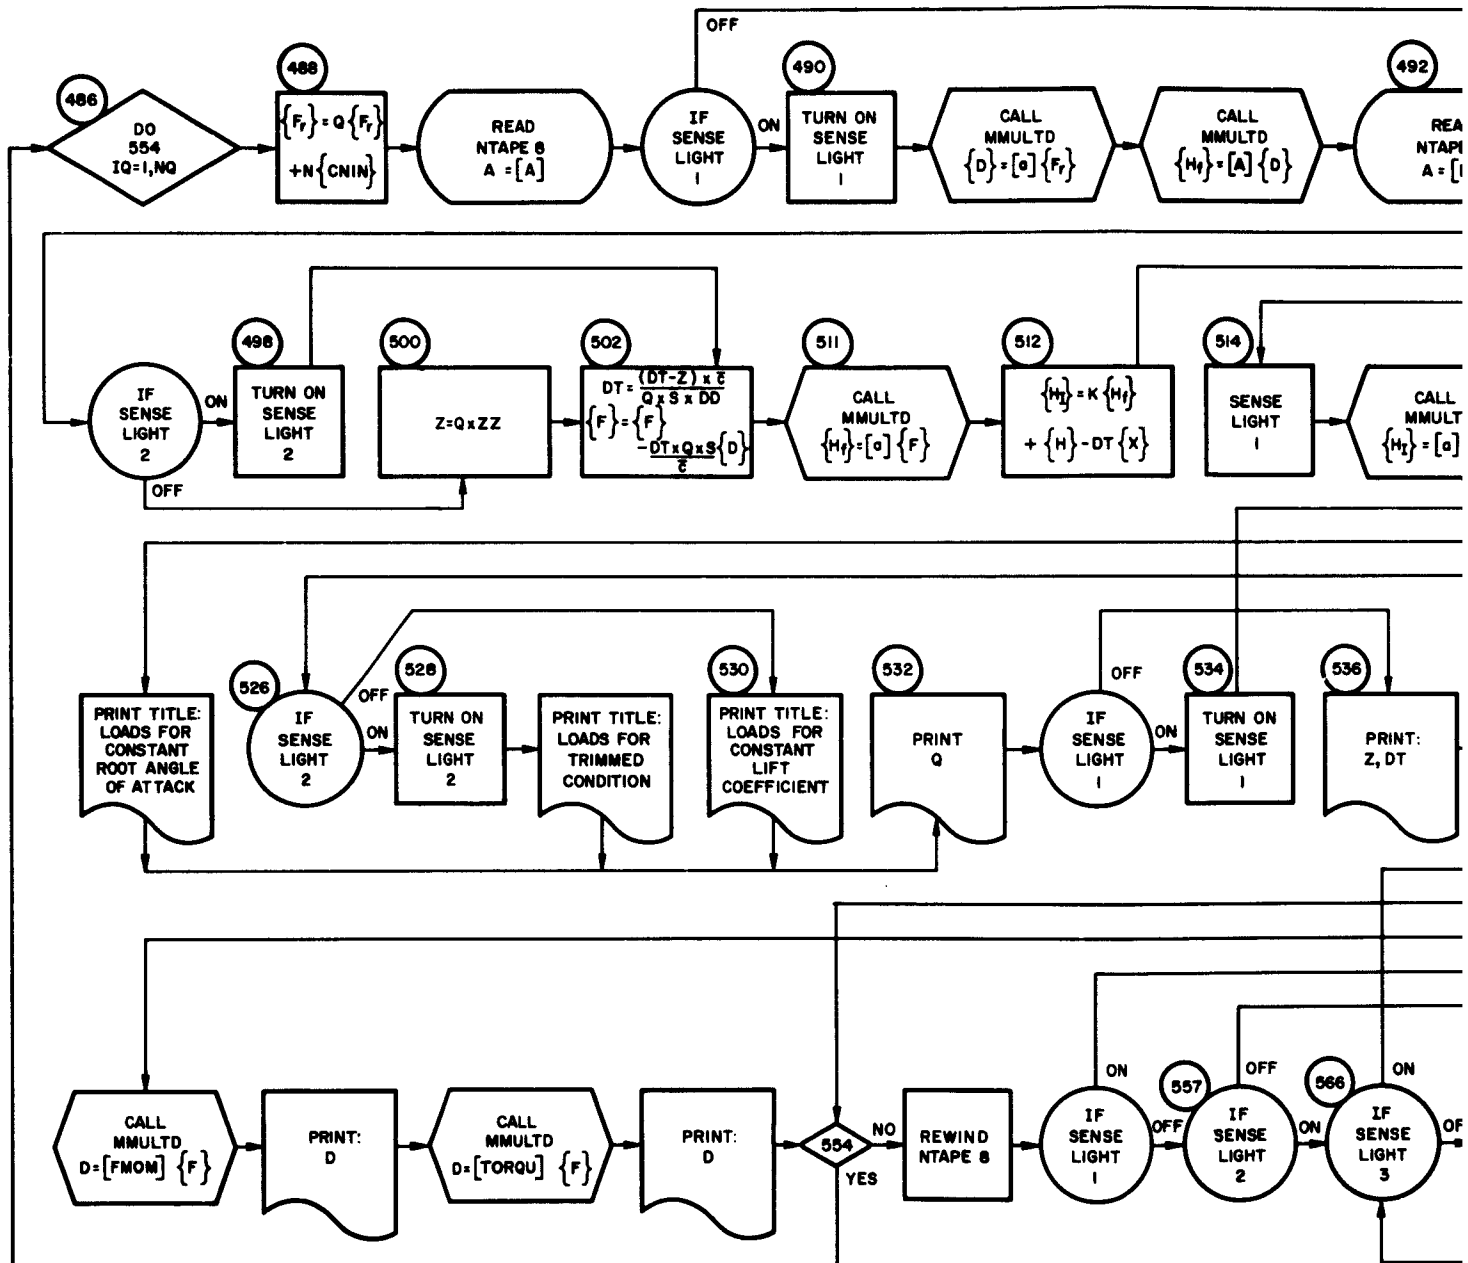


DIAGRAM - LOADS SUBROUTINE

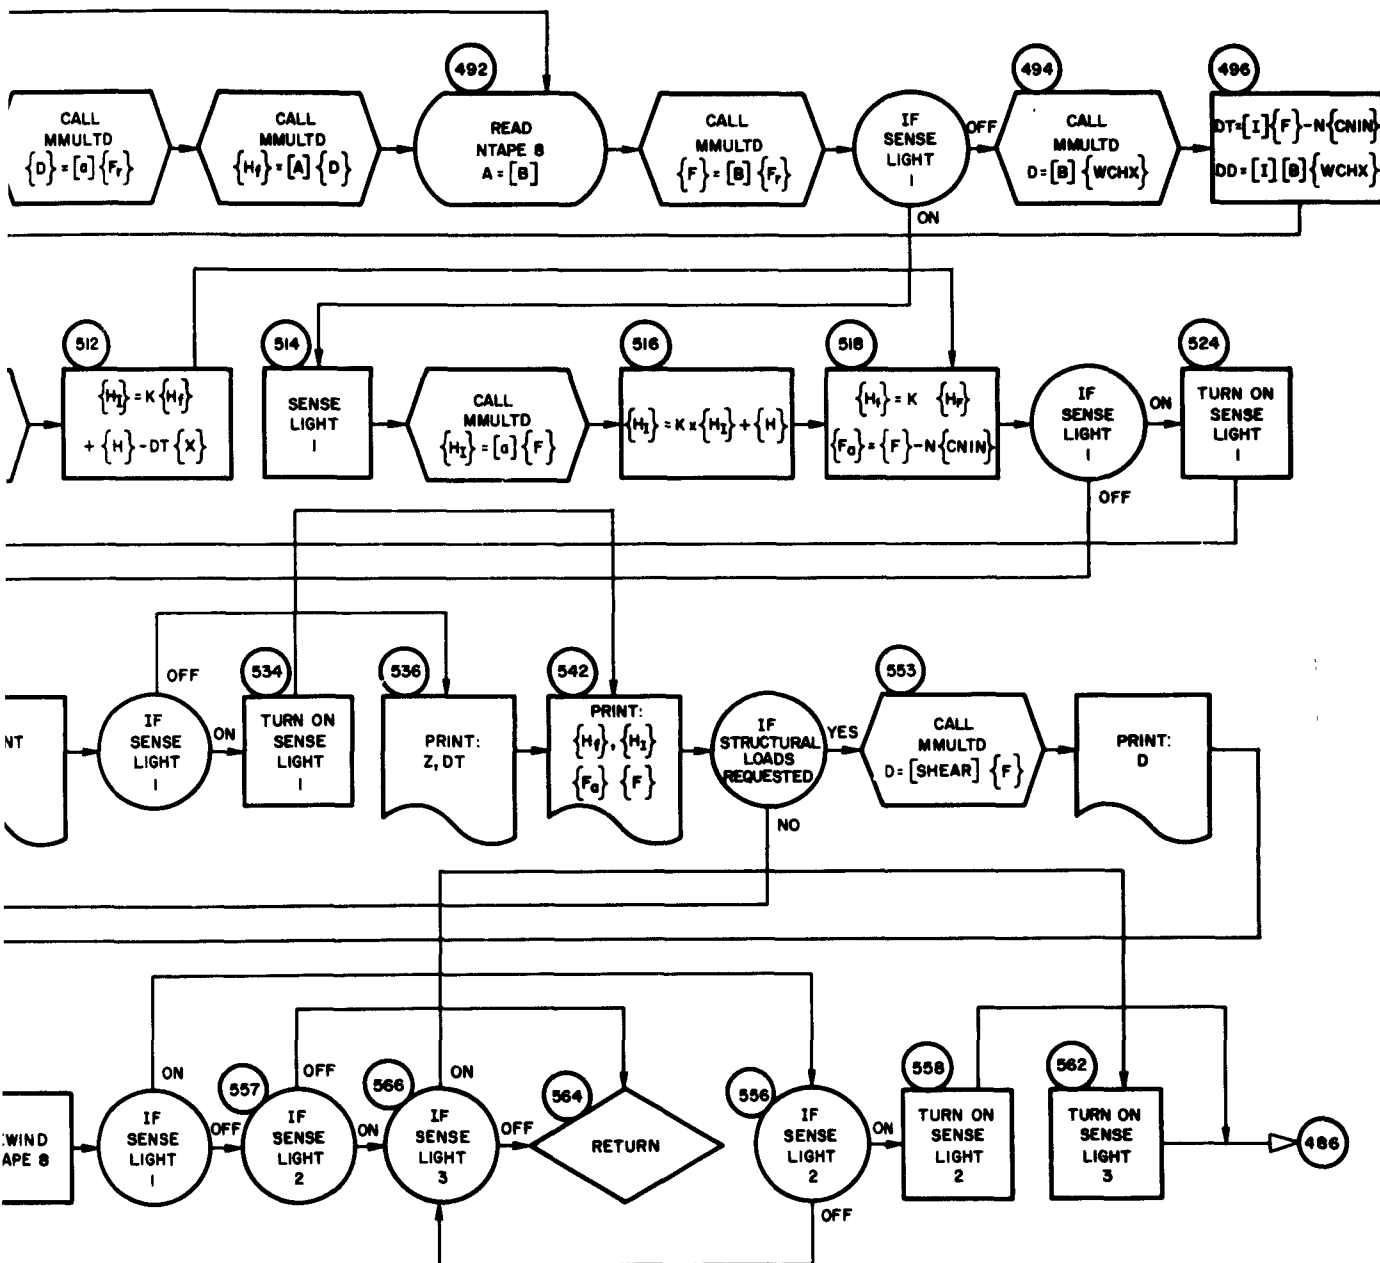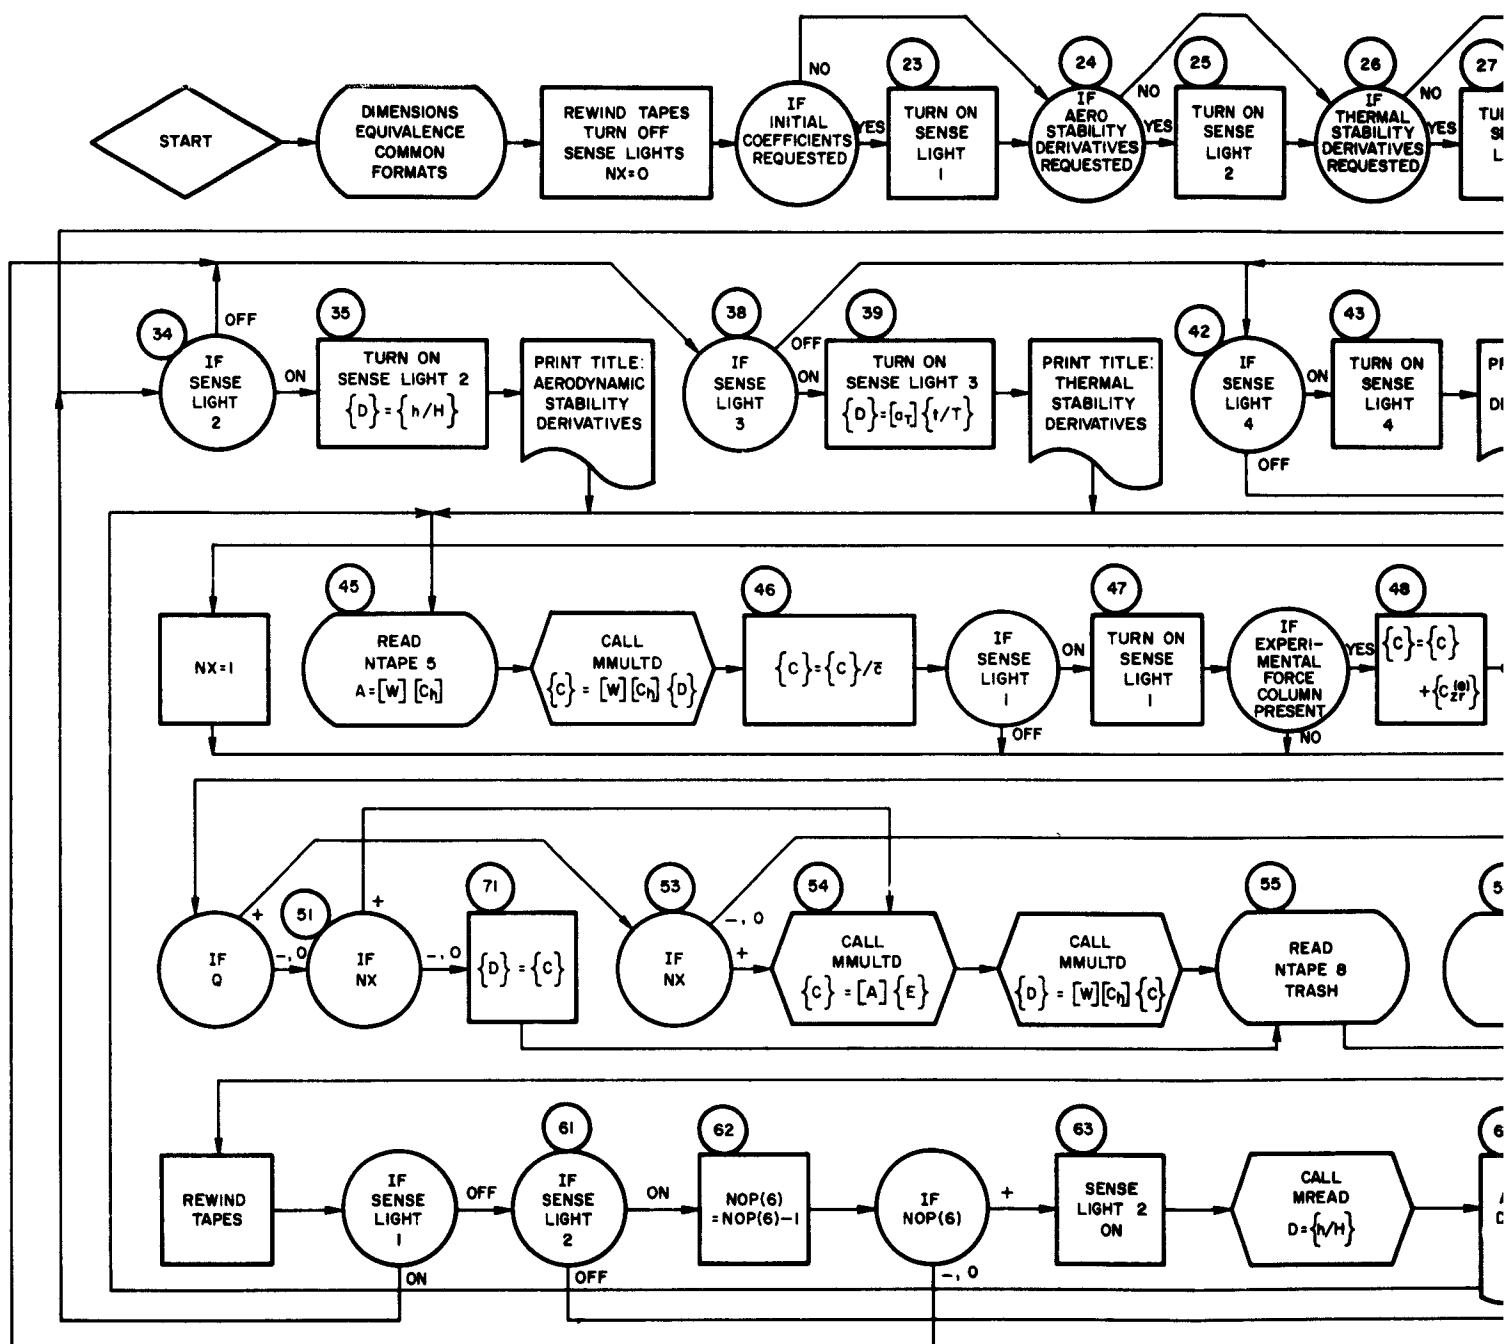

$$1 - (1 - 0.0001)^{10000} = 0.6323$$


GRAM - DERIVATIVES SUBROUTINE

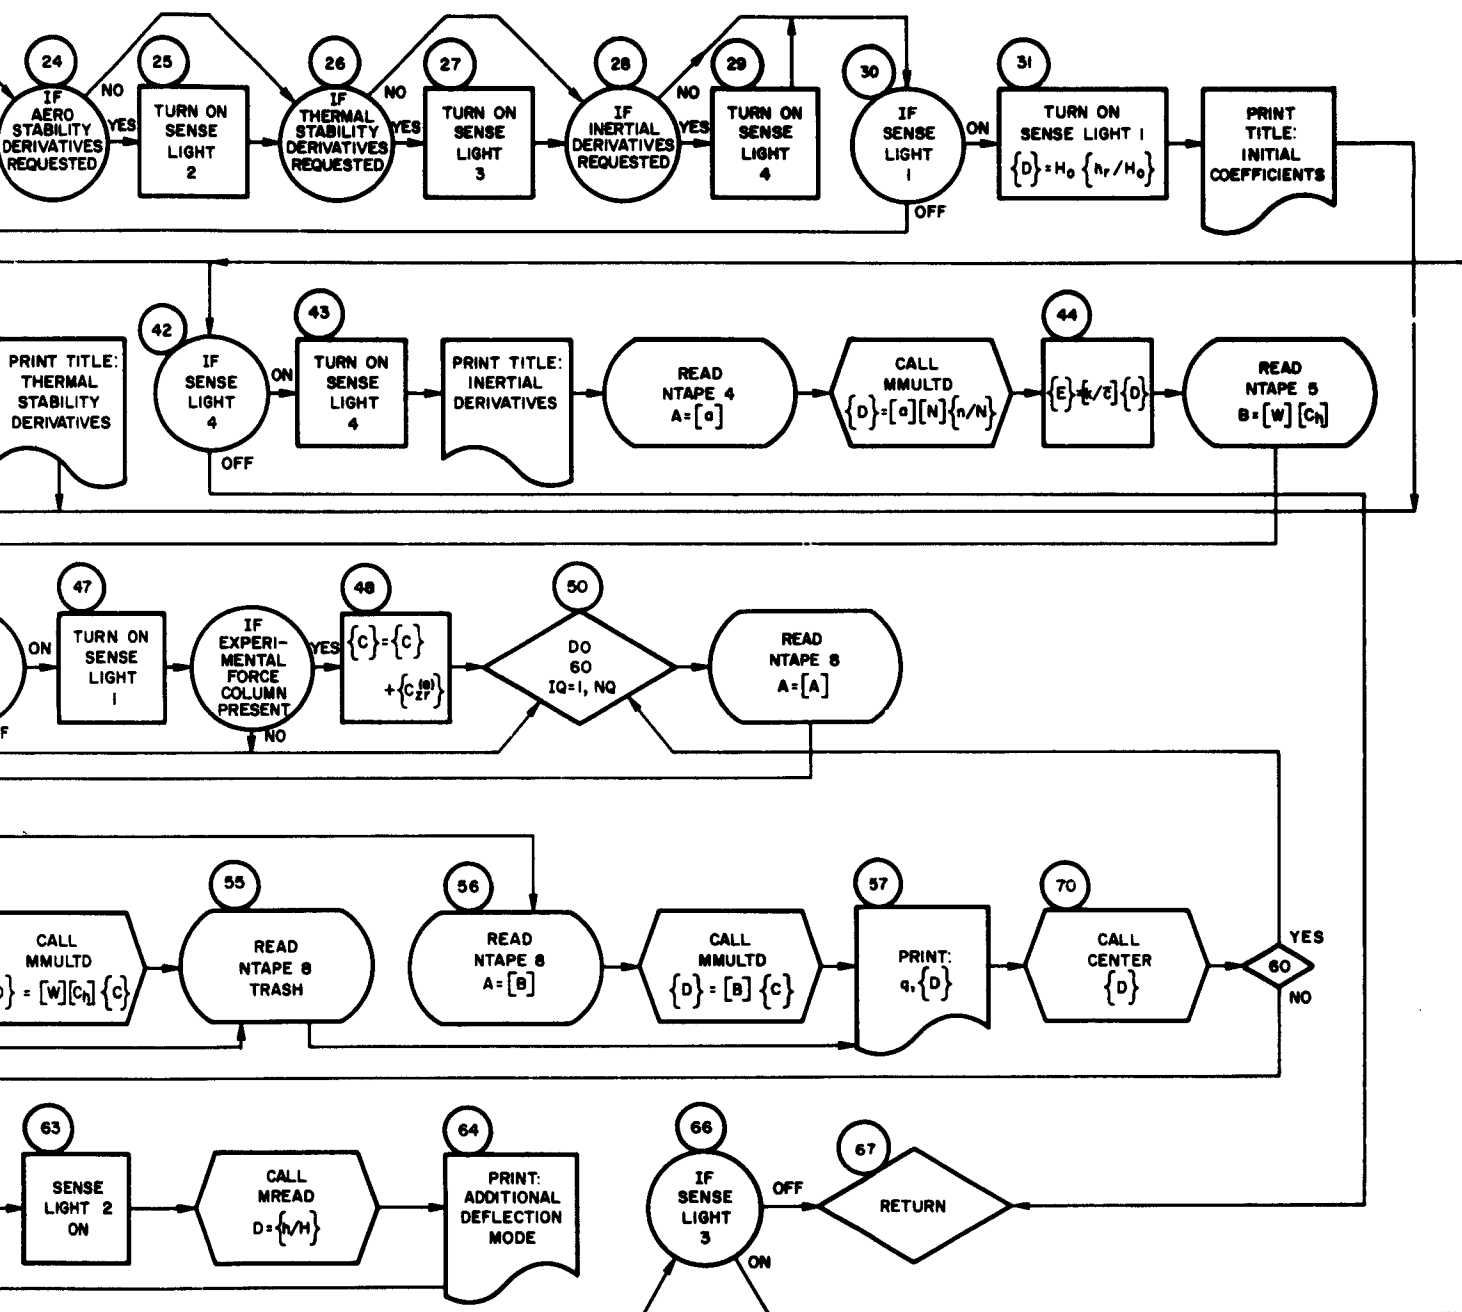

SECTION VIII

SYMBOLIC LISTING

Some of the program FORTRAN symbols are defined below.

<u>FORTRAN Symbols</u>	<u>Definitions</u>
A(I,J), B(I,J), C(I,J)	Elements of matrix "working" arrays; also elements of $[a]$, $[C_h]$, and $[W]$
ATTIT(I,J)	Element of column matrix representing the product $[a_T]\{t/T\}$
CIOKR	$1/k_r$
CAPH	H
CAPHO	H_o
CAPN	N
CAPS	S (reference area)
CAPT	T
CAPXO	x_o
CAPZ	Z
CBAR	$\bar{c}$
CNIN(I,J)	Element of column matrix representing the product $[M]\{r/N\}$
CZRE(I,J)	Element of experimental force column matrix
DELY(J)	Δy_j (width of strip j)
F(I,J)	Element of total force distribution column
FA(I,J)	Element of final aerodynamic force distribution column
FLEXX	K
FMOM(J,K)	Element in load coefficient matrix $[M/F]$
FR(I,J)	Element of rigid force distribution column
HADD(I,J)	Element of additional deflection mode column
HR(I,J)	Element of initial deflection mode column

<u>FORTRAN Symbols</u>	<u>Definitions</u>
IFORM	IFORM = 1 if matrix is in FORTRAN format; = 0 if matrix is in column binary format
IROW	IROW = 1 if matrix is input by rows; = 0 if matrix is input by columns
L	Number of strips (partitions) in the surface aerodynamic matrix
LH(K)	Row number of last nonzero element in column k of mass matrix
LHIGH(J)	Column number of last nonzero element in row j of [V/F], [M/F], or [T/F]
LL(k)	Row number of first nonzero element in column k of mass matrix
LOW(J)	Column number of first nonzero element in row j of [V/F], [M/F], or [T/F]
NCPT(J)	Number of control points for strip j
NEXST	Number of external stores reserved
NOP(I)	Option i, Field i of control card (data Item 2)
NQ	Number of dynamic pressures read in
NRC	Order of current case
NSTRP	Number of surface strips used for derivatives options
NVMT	Number of rows in [V/F], [M/F], or [T/F]
Q(I)	(i th) dynamic pressure
SHEAR(J, K)	Element in load coefficient matrix [V/F]
SMALS	s
TCCP	Chordwise center of pressure
TORQU(J, K)	Element in load coefficient matrix [T/F]
TSCP	Spanwise center of pressure
X(I)	Element in chordwise coordinate matrix
Y(I)	Element in spanwise coordinate matrix
ZI(I, J)	Location of j th control point for strip i

The symbolic listing of the program is shown on the following pages.

```

DIMENSION NOP(24), Q(10), X(50), Y(50), ATTIT(50,2), CZRE(50,2),
1 HADD(50,2), LL(50), LH(50), CNIN(50,2), HR(50,2),
2 NCPT(50), DELY(50), ZI(50,10)
DIMENSION A(50,100), B(50,100), C(50,100)

EQUIVALENCE (NOP(14),NQ), (NOP(13),NEXT), (LH,X), (LL,Y),
1 (NOP(17),NRC), (NOP(23),TITL1), (NOP(24),TITL2)

COMMON NOP, X, Y, NTAPE2, NTAPE3, NTAPE4, NTAPE5, NTAPE6, NTAPE8,
1 CBAR, FLEX, CAPS, CAPH, CAPT, CAPN, SMALS, CAPXO, CLOKRR(30781),
2 ,CAPZ, CAPHO, Q, MAXR, ATTIT, CZRE, CNIN, HR, HADD,
3 NSTRP, NCPT, DELY, ZI, MAXQ, NC, MCNRC, A, B, C, I, K1,
4 K, L, MGOOF, M, N, NXST, T, CON, IFORM, IROW
1 FORMAT ( 1814 )
2 FORMAT ( 6E12.8 )
3 FORMAT ( 1E10.4X, 13HCONTROL ITEMS / 1H 12X, 5H (1)= 112,
1 6H (2)= 112, 6H (3)= 112, 6H (4)= 112, 6H (5)= 112,
2 6H (6)= 112, 6H (7)= 112, 6H (8)= 112, 6H (9)= 112,
3 / 1H 12X, 5H(10)= 112, 6H (11)= 112, 6H (12)= 112,
4 6H (13)= 112, 6H (14)= 112, 6H (15)= 112, 6H (16)= 112,
5 6H (17)= 112, 6H (18)= 112, / 1H 101X, 4HCBAR 15X,
6 10HORM CONST 13X, 4HCAPS 20X, 1HZ 18X, 5HREF H / 1H
7 SE21.8 / 1H 11X, 5HREF T 16X, 5HREF N 17X, 3HSMS 18X,
8 2HXD 16X, 6HREF HO / 1H SE21.8 )
4 FORMAT ( 1H0 34X, 114, 18H DYNAMIC PRESSURES ( 1H 6E16.8 ) )
5 FORMAT ( 1H0 46X, 19H FLEXIBILITY MATRIX )
6 FORMAT ( 1H 36X, 1A6, // (1H 24X, 116, 3X, 1E18.8 ) )
7 FORMAT ( 1H 36X, 1A6, // (1H 15X, 116, 3X, 2E18.8, 1H1 ) )
8 FORMAT ( 1H0 41X, 36H AERODYNAMIC INFLUENCE COEFFICIENTS 5X,
1 1A6,3X, 6H1/KR = 1E18.8 // )
9 FORMAT ( 1H0 46X, 17H WEIGHTING MATRIX )
10 FORMAT ( 1H0 48X, 32H THERMAL INFLUENCE COEFFICIENTS )
11 FORMAT ( 1H0 39X, 18H TEMPERATURE MODE / )
12 FORMAT ( 1H0 32X, 32H EXPERIMENTAL FORCE COEFFICIENTS / )
13 FORMAT ( 1H0 25X, 39H ADDITIONAL DEFLECTION MODE (H/REF H) / )
14 FORMAT ( 1H0 29X, 36H INITIAL DEFLECTION MODE (HR/REF HO) / )
15 FORMAT ( 1H0 48X, 12H MASS MATRIX )
16 FORMAT ( 1H0 39X, 18H LOAD FACTOR MODE / )

```

11/15/62

```

17 FORMAT ( 1H3 36X, 22H CHORDWISE COORDINATES / )
18 FORMAT ( 1H3 36X, 21H SPANWISE COORDINATES / )
19 FORMAT ( 1H3 25X, 33H INPUT DATA FOR LOAD DISTRIBUTION
1 13H CALCULATIONS / 1H3 34X, 113, 7H STRIPS / 1H3 36X,
2 22HSTRIP CONTROL POINTS / (1H 26X, 2113 ) )
20 FORMAT ( 1H3 4X, 19HSTRIP DELTA Y(I) 6X, 17HCHORDWISE CONTROL
1 32H POINT LOCATIONS (PERCENT CHORD) )
21 FORMAT ( 1H 117, 1E19.8, 2X, 5E16.8 / (1H 27X, 5E16.8) )
22 FORMAT ( 1H3 10X, 38HERROR RETURN FROM INVERSE SUBROUTINE. )
23 FORMAT (49H3*****CORRECTED EXPERIMENTAL FORCE COEFFICIENTS
1 21H (DYNAMIC PRESSURE = 1E16.8, 1H) / (1H 6E16.8) )
24 FORMAT ( 1H1 )
C NTAPE2 = INPUT TAPE
C NTAPE3 = OUTPUT PRINT TAPE
C NTAPE4 = /
C NTAPE5 = / ARE UTILITY TAPES.
C NTAPE6 = /
C NTAPE8 = /
NTAPE2 = 2
NTAPE3 = 3
NTAPE4 = 5
NTAPE5 = 6
NTAPE6 = 7
NTAPE8 = 8
90 REWIND NTAPE4
REWIND NTAPE5
REWIND NTAPE6
REWIND NTAPE8
B TITL1=606051252143
B TITL2=234644474367
MAXR=50
MAXQ=20
C READ IN TITLE CARD, OPTIONS CARD AND CONSTANTS CARDS AND PRINT.
CALL RDLN (NTAPE2,NTAPE3,1)
READ INPUT TAPE NTAPE2, 1, (NOP(1), I=1,18)

```

```

      READ INPUT TAPE NTAPE2, 2, CBAR, FLEXX, CAPS, CAPZ, CAPH, CAPT,
      1 CAPN, SMALS, CAPXD, CAPHO
      WRITE OUTPUT TAPE NTAPE3, 3, (NOP(I),I=1,18), CBAR, FLEXX, CAPS,
      1 CAPZ, CAPH, CAPT, CAPN, SMALS, CAPXD, CAPHO
      2 CAPHO
C FIRST DETERMINE IF REAL OR COMPLEX.
      NC=1
      IF (NOP(7)) 98,99,98
      98 NC=2
      99 NCNRC=NC*NRC

C IF ENTERING DYNAMIC PRESSURES, READ AND PRINT.
      IF ( NQ ) 101,101,100
      100 READ INPUT TAPE NTAPE2, 2, (Q(I),I=1,NQ)
      WRITE OUTPUT TAPE NTAPE3, 4, NQ, (Q(I),I=1,NQ)

C READ FLEXIBILITY MATRIX, IF PRESENT, PRINT AND STORE ON TAPE 4.
      101 IF (NOP(18)) 102,102,105
      102 DO 104 I=1,NRC
         DO 103 J=1,NRC
            A(J,I)=0.
      103 A(J,I+1)=0.
      104 A(I,I)=0.
      WRITE TAPE NTAPE4, ((A(I,J),J=1, NRC),I=1,NRC)
      GOTO 106
      105 READ INPUT TAPE NTAPE2, 1, M, N, IFORM, IROW
      CALL MREAD (A, M, N, IFORM, IROW, 0, 1, B, MAXR, NTAPE2, NTAPE3)
      WRITE TAPE NTAPE4, ((A(I,J),J=1,N),I=1,M)
      106 WRITE OUTPUT TAPE NTAPE3, 5
      CALL MPRINT (A, NRC, NRC, MAXR, NTAPE3)

C READ AERODYNAMIC EXTERNAL STORES, IF PRESENT, THEN AERO MATRIX.
C
      DO 107 I=1,NRC
         DO 107 J=1,NCNRC
      107 A(I,J)=0.
      IF (NEXST) 111,111,108

```

11/15/62

HM030885
HM030886
HM030887
HM030888
HM030889
HM030890
HM030891
HM030892
HM030893
HM030894
HM030895
HM030896
HM030897
HM030898
HM030899
HM030900
HM030901
HM030902
HM030903
HM030904
HM030905
HM030906
HM030907
HM030908
HM030909
HM030910
HM030911
HM030912
HM030913
HM030914
HM030915
HM030916
HM030917
HM030918
HM030919
HM030920
HM030921
HM030922

```

108 CONTINUE
      READ INPUT TAPE NTAPE2, 1, NXST, N, IFORM, IROW
      IF (NXST) 111,111,110
110 N=NXST*NC
      CALL MREAD (A,NXST,N, IFORM,IROW, 0,0, 8, MAXR, NTAPE2,NTAPE3)

111 READ INPUT TAPE NTAPE2, 2, CLOKR
      READ INPUT TAPE NTAPE2, 1, M, L, IFORM, IROW
      K=NXST+1
      IF (IFORM) 113,112,113
112 K1=NC*K-NC+1
      N=NC*M
      CALL MREAD (A(K,K1), M, N, 0, 0, 1, 8, MAXR, NTAPE2, NTAPE3)
      GOTO 115

113 DO 114 I=1,L
      READ INPUT TAPE NTAPE2, 1, M
      N=NC*M
      K1=NC*K-NC+1
      CALL MREAD (A(K,K1),M,N, 1,IROW,0,0,8, MAXR, NTAPE2, NTAPE3)
114 K=K+M

115 GOTO (116,117),NC
116 T=ITL1
      GOTO 118
117 T=ITL2
118 WRITE OUTPUT TAPE NTAPE3, 8, T, CLOKR
      CALL MPRINT(A, NRC, NCNRC, MAXR, NTAPE3)
      WRITE TAPE NTAPE4, ((A(I,J),J=1,NCNRC),I=1,NRC)

C IF WEIGHTING MATRIX, READ, PRINT AND STORE (W) (CH) ON TAPE 5.
C      OTHERWISE, STORE (CH) ON TAPE 5.
120 IF (NOP(10)) 122,121,122
121 WRITE TAPE NTAPE5, ((A(I,J),J=1,NCNRC),I=1,NRC)
      GOTO 132

```

11/15/62

```

122 IF (NEXST) 127,127,123
123 DO 125 I=1,NEXST
    DO 124 J=1,NEXST
124     B(I,J)=0.
125     B(I,I)=1.

    READ INPUT TAPE NTAPE2, 1, NXST, K, IFORM, IROW
    IF (NXST) 127,127,126
126 CALL MREAD (B,NXST,NXST, IFORM,IROW, 0,0,C, MAXR,NTAPE2,NTAPE3)

127 K=NEXST+1
    READ INPUT TAPE NTAPE2, 1, M, L, IFORM, IROW
    IF (IFORM) 129,128,129
128 CALL MREAD (B(K,K), M, M, 0, 0, 0, 1, C, MAXR, NTAPE2, NTAPE3)
    GOTO 131

129 DO 130 I=1,L
    READ INPUT TAPE NTAPE2, 1, M
    CALL MREAD (B(K,K), M,M,1,IROW,0,0,C,MAXR,NTAPE2,NTAPE3)
130 K=K+M
131 WRITE OUTPUT TAPE NTAPE3, 9
    CALL MPRINT(B,NRC,NRC,MAXR,NTAPE3)

    CALL MMULTD(B,0,A,NOP(7),C,NRC,NRC,MAXR,MAXR,MAXR)
    WRITE TAPE NTAPES, ((C(I,J),J=1,NCNRC),I=1,NRC)

C IF DIVERGENCE OPTION ONLY, GO AND DO.
132 IF (NQ) 133,119,133
119 CALL DIVERG
    GOTO 90

C IF THERMAL DATA PRESENT, READ,PRINT AAD MULTIPLY MATRIX BY MODE AND
C
133 IF (NOP(11)) 136,134,136
134 DO 135 I=1,NC
    DO 135 J=1,NRC
135     ATIT(J,I)=0.
    GOTO 139

```

HMO30923
 HMO30925
 HMO30926
 HMO30927
 HMO30928
 HMO30929
 HMO30930
 HMO30931
 HMO30932
 HMO30933
 HMO30934
 HMO30935
 HMO30936
 HMO30937
 HMO30938
 HMO30939
 HMO30940
 HMO30941
 HMO30942
 HMO30943
 HMO30944
 HMO30945
 HMO30946
 HMO30947
 HMO30948
 HMO30949
 HMO30950
 HMO30951
 HMO30952
 HMO30953
 HMO30954
 HMO30955
 HMO30956
 HMO30957
 HMO30958
 HMO30959
 HMO30960
 HMO30961

11/15/62

```

136 READ INPUT TAPE NTAPE2, 1, M, N, IFORM, IROM
    CALL MREAD (A, M, N, IFORM, IROM, 0, 1, B, MAXR, NTAPE2, NTAPE3)
    CALL MREAD (B, N, NC, 1, 0, 0, 1, C, MAXR, NTAPE2, NTAPE3)
    CALL MMULTDFA, 0, B, NOP(7), ATTL1, NRC, NRC, 1, MAXR, MAXR, MAXR)
    WRITE OUTPUT TAPE NTAPE3, 10
    CALL MPRINT(A, NRC, NRC, MAXR, NTAPE3)
    WRITE OUTPUT TAPE NTAPE3, 11
    IF (NOP(7)) 138, 137, 138
137 WRITE OUTPUT TAPE NTAPE3, 6, TITL1, (1, B(I, 1), I=1, NRC)
    GOTO 139
138 WRITE OUTPUT TAPE NTAPE3, 7, TITL2, (1, (B(I, J), J=1, NC), I=1, NRC)
C IF EXPERIMENTAL FORCE COLUMN PRESENT, READ, PRINT, STORE AT CZRE.
139 IF (NOP(12)) 140, 143, 140
140 CALL MREAD (CZRE, NRC, NC, 1, 0, 0, 0, B, MAXR, NTAPE2, NTAPE3)
    WRITE OUTPUT TAPE NTAPE3, 12
    IF (NOP(7)) 142, 141, 142
141 WRITE OUTPUT TAPE NTAPE3, 6, TITL1, (1, CZRE(I, 1), I=1, NRC)
    GOTO 143
142 WRITE OUTPUT TAPE NTAPE3, 7, TITL2, (1, (CZRE(I, J), J=1, NC), I=1,
    NRC)
2
CREAD INITIAL DEFLECTION MODE FOR OPTIONS REQUIRING IT, IF ANY.
143 IF (NOP(11)+NOP(12)+NOP(13)+NOP(5)) 147, 147, 144
144 WRITE OUTPUT TAPE NTAPE3, 14
    CALL MREAD (HR, NRC, NC, 1, 0, 0, 0, B, MAXR, NTAPE2, NTAPE3)
    IF (NOP(7)) 146, 145, 146
145 WRITE OUTPUT TAPE NTAPE3, 6, TITL1, (1, HR(I, 1), I=1, NRC)
    GOTO 147
146 WRITE OUTPUT TAPE NTAPE3, 7, TITL2, (1, (HR(I, J), J=1, NC), I=1, NRC)
C READ ADDITIONAL DEFLECTION MODE FOR OPTIONS REQUIRING IT, IF ANY.
147 IF (NOP(11)+NOP(12)+NOP(13)+NOP(6)) 151, 151, 148
148 WRITE OUTPUT TAPE NTAPE3, 13
    CALL MREAD (HADD, NRC, NC, 1, 0, 0, 0, B, MAXR, NTAPE2, NTAPE3)
    IF (NOP(7)) 150, 149, 150
149 WRITE OUTPUT TAPE NTAPE3, 6, TITL1, (1, (ADD(I, 1), I=1, NRC)
    GOTO 151

```

11/15/62

```

150 WRITE OUTPUT TAPE NTAPE3, 7, TITL2, (I, (HADD(I,J), J=1, NC), I=1,
    1
    NRC)
C READ MASS MATRIX, IF NEEDED.
151 IF (NOP(1)+NOP(2)+NOP(3)+NOP(9)) 157, 157, 152
152 READ INPUT TAPE NTAPE2, 1, M
    READ INPUT TAPE NTAPE2, 1, ((LL(K), LH(K)), K=1, M)
    DO 153 I=1, NRC
        DO 153 J=1, NRC
            A(I,J)=0.
153 DO 154 I=1, M
        K=LL(I)
        L=LH(I)
154 READ INPUT TAPE NTAPE2, 2, (A(J,I), J=K, L)
    WRITE OUTPUT TAPE NTAPE3, 15
    CALL MPRINT (A, NRC, NRC, MAXR, MAXR, NTAPE3)
C READ LOAD FACTOR MODE (N/N) AND COMPUTE (M)*(N/N) STORED AT CNIN
    CALL MREAD (B, NRC, NC, 1, 0, 0, C, MAXR, NTAPE2, NTAPE3)
    CALL MMULTD(A, 0.8, NOP(7), CNIN, NRC, NRC, 1, MAXR, MAXR, MAXR)
    WRITE OUTPUT TAPE NTAPE3, 16
    IF (NOP(7)) 156, 155, 156
155 WRITE OUTPUT TAPE NTAPE3, 6, TITL1, (I, 8(I,1), I=1, NRC)
    GOTO 157
156 WRITE OUTPUT TAPE NTAPE3, 7, TITL2, (I, (8(I,J), J=1, NC), I=1, NRC)
C READ IN (X) COORDINATES
157 IF (NOP(2)+NOP(3)+NOP(5)+NOP(6)+NOP(8)+NOP(9)+NOP(15)) 159, 159, 158
158 READ INPUT TAPE NTAPE2, 2, (X(I), I=1, NRC)
    WRITE OUTPUT TAPE NTAPE3, 17
    WRITE OUTPUT TAPE NTAPE3, 6, TITL1, (I, X(I), I=1, NRC)
C READ IN (Y) COORDINATES
159 IF (NOP(5)+NOP(6)+NOP(8)+NOP(9)+NOP(15)) 166, 166, 160
160 READ INPUT TAPE NTAPE2, 2, (Y(I), I=1, NRC)
    WRITE OUTPUT TAPE NTAPE3, 18
    WRITE OUTPUT TAPE NTAPE3, 6, TITL1, (I, Y(I), I=1, NRC)

```

11/15/62

```

C READ IN NUMBER OF STRIPS, AND CONTROL POINTS PER STRIP.
  READ INPUT TAPE NTAPE2, 1, NSTRP, (NCPT(I), I=1, NSTRP)
  WRITE OUTPUT TAPE NTAPE3, 19, NSTRP, (I, NCPT(I), I=1, NSTRP)
  DO 164 I=1, NSTRP
    M=NCPT(I)
    READ INPUT TAPE NTAPE2, 2, (DELY(I), (ZI(I, J), J=1, M))
    164 WRITE OUTPUT TAPE NTAPE3, 21, (I, DELY(I), (ZI(I, J), J=1, M))

C COMPUTE.....
C (A) = ( (I)-KQS/CBAR * (FLEXIBILITY)*(WEIGHTING)*(AERODYNAMIC) )
C      INVERSE
C (B) = (I)+KQS/CBAR * (WEIGHTING)*(AERODYNAMIC)*(A)*(FLEXIBILITY)
C
C STORE (A) AS RECORD NUMBER 1 AND (B) AS RECORD NUMBER 2 ON NTAPE8
C      BY ROWS, REAL OR COMPLEX.
C
166 REWIND NTAPE4
REWIND NTAPE5
REWIND NTAPE6
REWIND NTAPE8

C READ AERO DATA, (W)(CH) FROM NTAPES, AND FLEX., (A) FROM NTAPE4
  READ TAPE NTAPES, ((C(I, J), J=1, NCNRC), I=1, NRC)
  READ TAPE NTAPE4, ((B(I, J), J=1, NRC), I=1, NRC)
  REWIND NTAPES
  REWIND NTAPE4
  CALL MMULTD (B, O, C, NOP(7), A, NRC, NRC, NRC, MAXR, MAXR, MAXR)
  WRITE TAPE NTAPE6, ((A(I, J), J=1, NCNRC), I=1, NRC)
  REWIND NTAPE6

  DO 204 IQ=1, NQ
    C EXPECT ( (A)*(W)*(CH) ) IN A ARRAY.
    CON=FLEXK*Q(IQ)*CAPS/CBAR
    DO 168 I=1, NCNRC
      DO 168 J=1, NRC

```

HM031038
 HM031039
 HM031040
 HM031041
 HM031042
 HM031043
 HM031044
 HM031045
 HM031046
 HM031047
 HM031048
 HM031049
 HM031050
 HM031051
 HM031052
 HM031053
 HM031054
 HM031055
 HM031056
 HM031057
 HM031058
 HM031059
 HM031060
 HM031061
 HM031062
 HM031063
 HM031064
 HM031065
 HM031066
 HM031067
 HM031068
 HM031069
 HM031070
 HM031071
 HM031072
 HM031073
 HM031074
 HM031075

11/15/62

```

168  A(J,I)=-CON*A(J,I)
      K=0
      DO 169 I=1,NCNRC,NC
        K=K+1
169  A(K,I)=1.+A(K,I)
170  DO 171 I=1,NCNRC,NC
      K=I/2+1
      DO 171 J=1,NRC
        A(J,K)=A(J,I)
171  B(J,K)=A(J,I+1)

172  CALL MNVRSX (A,B,A(1,MAXR+1),C,NRC,MGOOF,NOP(7))
      IF (MGOOF) 174,176,174

174  WRITE OUTPUT TAPE NTAPE3, 22
      Q(IQ)=-1.
      GOTO 202

176  IF (NOP(7)) 177,182,177
177  DO 178 I=1,NCNRC,NC
      K=I/2+1
      DO 178 J=1,NRC
        C(J,I)=A(J,K)
178  C(J,I+1)=B(J,K)
      DO 180 I=1,NCNRC
        DO 180 J=1,NRC
180  A(J,I)=C(J,I)

182  WRITE TAPE NTAPE8, ((A(I,J),J=1,NCNRC), I=1,NRC)

C READ FLEXIBILITY MATRIX INTO B ARRAY.
  READ TAPE NTAPE4, ((B(I,J),J=1,NRC), I=1,NRC)
  REWIND NTAPE4

      CALL MMULTD (A,NOP(7),B,O,C,NRC,NRC,MAXR,MAXR,MAXR)

C READ AERO MATRIX INTO B ARRAY.

```

HMO31076
 HMO31077
 HMO31078
 HMO31079
 HMO31080
 HMO31081
 HMO31082
 HMO31083
 HMO31084
 HMO31085
 HMO31086
 HMO31087
 HMO31088
 HMO31089
 HMO31090
 HMO31091
 HMO31092
 HMO31093
 HMO31094
 HMO31095
 HMO31096
 HMO31097
 HMO31098
 HMO31099
 HMO31100
 HMO31101
 HMO31102
 HMO31103
 HMO31104
 HMO31105
 HMO31106
 HMO31107
 HMO31108
 HMO31109
 HMO31110
 HMO31111
 HMO31112
 HMO31113

11/15/62

```

READ TAPE NTAPES, ((B(I,J),J=1,NCNRC),I=1,NRC)
REWIND NTAPES
CALL MMULTD (B, NOP(7),C,NOP(7),A,NRC,NRC,NRC,MAXR,MAXR,MAXR)

DO 184 I=1,NCNRC
  DO 184 J=1,NRC
    184 A(J,I)=CON=A(J,I)

185 K=0
DO 186 I=1,NCNRC,NC
  K=K+1
  186 A(K,I)=1.+A(K,I)

188 WRITE TAPE NTAPES, ((A(I,J),J=1,NCNRC),I=1,NRC)

IF (NOP(15)) 202,202,189
189 WRITE OUTPUT TAPE NTAPES, 24
IF (NOP(7)) 190,192,190
190 DO 191 I=1,NCNRC,NC
  K=I/2+1
  DO 191 J=1,NRC
    A(J,K)=A(J,I)
  191 B(J,K)=A(J,I+1)
192 CALL MNVRSX (A,B,A(1,MAXR+1),C,NRC,MGOOF,NOP(7))
IF (MGOOF) 194,196,194
194 WRITE OUTPUT TAPE NTAPES, 22
  GOTO 202

196 IF (NOP(7)) 197,200,197
197 DO 198 I=1,NCNRC,NC
  K=I/2+1
  DO 198 J=1,NRC
    C(J,I)=A(J,K)
  198 C(J,I+1)=B(J,K)
  DO 199 I=1,NCNRC
    DO 199 J=1,NRC
      199 A(J,I)=C(J,I)
200 CALL MMULTD (A,NOP(7),CZRE,NOP(7),B,NRC,NRC,1,MAXR,MAXR,MAXR)

```

MM031114
 MM031115
 MM031116
 MM031117
 MM031118
 MM031119
 MM031120
 MM031121
 MM031122
 MM031123
 MM031124
 MM031125
 MM031126
 MM031127
 MM031128
 MM031129
 MM031130
 MM031131
 MM031132
 MM031133
 MM031134
 MM031135
 MM031136
 MM031137
 MM031138
 MM031139
 MM031140
 MM031141
 MM031142
 MM031143
 MM031144
 MM031145
 MM031146
 MM031147
 MM031148
 MM031149
 MM031150
 MM031151

```
WRITE OUTPUT TAPE NTAPE3, 23, Q(IQ), ((B(I,J),J=1,NC),I=1,NRC)

CALL CENTER (8)

202 READ TAPE NTAPE6, ((A(I,J),J=1,NCNRC),I=1,NRC)
204 REWIND NTAPE6

IF (NOP(1)+NOP(2)+NOP(3)+NOP(16)) 207,207,206
206 CALL LOADS

207 IF (NOP(5)+NOP(6)+NOP(8)+NOP(9)) 209,209,208
208 CALL DERIV

209 IF (NOP(4)) 211,211,210
210 CALL DIVERG
211 GOTO 90

END(1,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0)
```

HM031152
HM031153
HM031154
HM031155
HM031156
HM031157
HM031158
HM031159
HM031160
HM031161
HM031162
HM031163
HM031164
HM031165
HM031166
HM031167
HM031168

STORAGE NOT USED BY PROGRAM

DEC OCT
16293 37645

DEC UCT
2717 05235

STORAGE LOCATIONS FOR VARIABLES APPEARING IN COMMON STATEMENTS

A	31305	75111	ATT1T	32409	77231	B	26305	63301	C10KR	32429	77247
CAPHO	32421	77245	CAPH	32428	77254	CAPN	32426	77252	CAPS	32429	77255
CAPT	32427	77253	CAPX0	32424	77250	CAPZ	32422	77246	CBAR	32431	77257
CNIN	32209	76721	CON	16296	37650	C	21305	51471	CZRE	32309	77065
DELY	31858	76162	FLEXK	32430	77256	HADD	32009	76411	HR	32109	76555
IFORM	16295	37647	IR0W	16294	37646	I	16305	37661	K1	16304	37660
K	16303	37657	LH	32537	77431	LL	32487	77347	L	16302	37656
MAXQ	31308	75114	MAXR	32410	77232	MGOOF	16301	37655	M	16300	37654
NCNRC	31306	75112	NCPT	31908	76244	NC	31307	75113	NEXT	32549	77445
NDP	32561	77461	NQ	32548	77444	NRC	32545	77441	N	16299	37653
NSTRP	31909	76245	NTAPE2	32437	77265	NTAPE3	32436	77264	NTAPE4	32435	77263
NTAPES	32434	77262	NTAPE6	32433	77261	NTAPE8	32432	77260	NXST	16298	37652
Q	32420	77244	SMALS	32453	77251	TITL1	32539	77432	TITL2	32538	77432
T	16297	37651	X	32537	77431	Y	32487	77347	Z1	31808	76100

SYMBOLS AND LOCATIONS FOR SOURCE PROGRAM FORMAT STATEMENTS

EFN	LOC	EFN	LOC	EFN	LOC	EFN	LOC	EFN	LOC
811	1 05214	812	2 05212	813	3 05210	814	4 05051		
815	5 05037	816	6 05030	817	7 05017	818	8 05005		
819	9 04764	81A	10 04755	81B	11 04744	81C	12 04735		
81D	13 04724	81E	14 04712	81F	15 04700	81G	16 04672		
81H	17 04663	81I	18 04653	81J	19 04643	81K	20 04604		
81L	21 04562	81M	22 04551	81N	23 04537	81O	24 04512		

LOCATIONS FOR OTHER SYMBOLS NOT APPEARING IN SOURCE PROGRAM

11/15/62

DEC	OCT	DEC	OCT	DEC	OCT
1) 2701 05215	2) 2357 04465	3) 2367 04477	4) 32767 77777		
6) 2371 04503	A)103 2309 04405	A)104 2322 04422	A)106 2335 04437		
A)108 2348 04454	C)60 2705 05221	C)62 2706 05222	C)164 2707 05223		
C)100 2708 05224	C)103 2709 05225	C)104 2710 05226	C)106 2711 05227		
C)108 2712 05230	C)200 2713 05231	C)206 2714 05232	C)20F 2715 05233		
C)206 2716 05234	D)116 412 00634	D)118 460 00714	D)13T 1211 02273		
D)119 1348 02504	D)14P 1474 02702	D)14V 1512 02750	D)25H 1660 03174		
D)250 1744 03320	D)264 1854 03476	D)271 2110 04076	D)350 1743 03317		
D)364 1853 03475	D)41V 648 01210	D)421 692 01264	D)426 748 01354		
D)45S 1792 03400	D)471 2254 04316	D)521 691 01263	D)526 747 01353		
D)65S 1791 03377	D)671 2253 04315	E)7 140 00214			

LOCATIONS OF NAMES IN TRANSFER VECTOR

DEC	OCT	DEC	OCT	DEC	OCT
CENTER 16 00020	DERIV 18 00022	DIVERG 12 00014	LOADS 17 00021		
MMULTD 11 00013	MNVRX 15 00017	MPRINT 10 00012	MREAD 9 00011		
RDLN 2 00002	(FIL) 6 00006	(FPT) 0 00000	(RLR) 14 00016		
(RTM) 4 00004	(RWT) 1 00001	(STB) 7 00007	(STH) 5 00005		
(TSB) 13 00015	(TSH) 3 00003	(WLR) 8 00010			

ENTRY POINTS TO SUBROUTINES NOT OUTPUT FROM LIBRARY

CENTER	DERIV	LOADS	MNVRX	MPRINT	MREAD
(FIL)	(FPT)	(RLR)	(RWT)	(STB)	(STH)
(TSH)	(WLR)				

EXTERNAL FORMULA NUMBERS WITH CORRESPONDING INTERNAL FORMULA NUMBERS AND OCTAL LOCATIONS

EFN	IFN	LOC	EFN	IFN	LOC
90 36 00056	98 60 00207	61 00215	100 63 00225		
101 74 00255	102 75 00260	78 00301	104 79 00306		
105 88 00343	106 99 00422	107 104 00451	108 106 00464		
110 110 00504	111 113 00526	112 119 00566	113 124 00630		
114 131 00700	115 132 00715	116 133 00717	117 135 00722		
118 136 00724	120 147 00771	121 148 00775	122 156 01023		

11/15/62

123	157 01027	124	159 01043	125	160 01050	126	164 01103
127	166 01123	128	170 01160	129	173 01204	130	178 01246
131	179 01265	132	191 01355	119	192 01361	133	1 4 01365
134	195 01371	135	197 01407	136	199 01421	137	212 01547
138	219 01572	139	227 01631	140	228 01633	141	232 01665
142	239 01710	143	247 01747	144	248 01756	145	252 02006
146	259 02031	147	267 02070	148	268 02077	149	272 02127
150	279 02152	151	287 02211	152	288 02220	153	299 02256
154	303 02306	155	317 02422	156	324 02445	157	332 02505
158	333 02517	159	345 02560	160	346 02570	164	380 02724
166	387 02751	168	421 03133	169	425 03211	170	427 03223
171	431 03303	172	432 03321	174	435 03336	176	438 03346
177	439 03350	178	443 03432	180	446 03464	182	447 03477
184	476 03654	185	477 03666	186	480 03726	188	481 03736
189	489 03773	190	491 04003	191	495 04062	192	496 04077
194	499 04114	196	501 04121	197	502 04123	198	506 04201
199	509 04233	200	510 04244	202	522 04317	204	529 04350
206	531 04366	207	532 04367	208	533 04376	209	534 04377
210	535 04403	211	536 04404				

6/22/62

MPRINT

```

C      SUBROUTINE MPRINT (A,M,N,MA,NTAPE )
C
C      A = MATRIX TO BE PRINTED
C      M = NUMBER OF ROWS
C      N = NUMBER OF COLUMNS
C      MA = DIMENSIONED NUMBER OF ROWS
C      NTAPE = TAPE NUMBER FOR PRINTING
C
      SUBROUTINE MPRINT (A,M,N,MD,NTAPE )
      DIMENSION A(1), IT(6), C(6)
      EQUIVALENCE (IT,C)
      2 FORMAT ( 1H0 4X, 6( 6X, 7HCOLUMN 114) / )
      3 FORMAT ( 1H 114, X, (6E 17.8) )
      N1=N
      N2=6
      N3=6
      N4=1
      4 IF (N3-N1) 6,6,5
      5 N2=N1-N3+6
      N3=N1
      6 K=0
      DO 7 I= N4,N3
        K=K+1
        IT(K)=1
      7 WRITE(OUTPUT,TAPE, 2, ( IT(1),I=1,N2)
      DO 9 I=1,M
        K=0
        4-MD=(N4-1)+1
        DO 8 J=N4,N3
          K=K+1
          C(K)=A(I,J)
          1=1+MD
      8 WRITE(OUTPUT,TAPE, 3, I, (C(K),K=1,N2)
      9 IF (N3-N1) 10,11,11
      10 N3=N3+6
      N4=N4+6

```


MPRENT

6/22/62

STORAGE NOT USED BY PROGRAM

DEC OCT
189 00275 32561 77461

STORAGE LOCATIONS FOR VARIABLES APPEARING IN DIMENSION AND EQUIVALENCE STATEMENTS

DEC OCT
C 188 00274 IT 188 00274 DEC OCT

STORAGE LOCATIONS FOR VARIABLES NOT APPEARING IN COMMON, DIMENSION, OR EQUIVALENCE STATEMENTS

DEC OCT
1 182 00266 K 181 00265 L 180 00264 N1 179 00263
M2 178 00262 M3 177 00261 N4 176 00260

SYMBOLS AND LOCATIONS FOR SOURCE PROGRAM FORMAT STATEMENTS

EFN LOC
812 2 00251 813 3 00241 EFN LOC

LOCATIONS FOR OTHER SYMBOLS NOT APPEARING IN SOURCE PROGRAM

DEC OCT
1) 171 00253 2) 149 00225 6) 152 00230 9) 170 00252
C160 173 00255 C162 174 00256 C1202 175 00257 E1E 137 00211

LOCATIONS OF NAMES IN TRANSFER VECTOR

DEC OCT
(FIL) 1 00001 (STH) 0 00000 DEC OCT

ENTRY POINTS TO SUBROUTINES NOT OUTPUT FROM LIBRARY

(FIL) (STH)

NPRT

6/22/62

EXTERNAL FORMULA NUMBERS WITH CORRESPONDING INTERNAL FORMULA NUMBERS AND OCTAL LOCATIONS

EFN	IFN	LOC	EFN	IFN	LOC	EFN	IFN	LOC
4	21	00036	5	12	00043	6	14	00051
8	29	00151	9	30	00157	10	37	00212
						11	40	00221

9/04/62

SUBROUTINE MMULTD (A,N1,B,N2,C,M,N,K,MA,MB,MC)

DIMENSION A(1), B(1), C(1)

IC=1

IA=MC*K

IB=MA*N

ID=MA

IH=MC

IJ=MC

IF (N1) 4,3,4

3 IF (N2) 7,8,7

4 IB=2*IB

ID=2*ID

IF (N2) 5,6,5

5 IC=2

GOTO 7

6 IH=2*IH

IC=3

7 IA=2*IA

IJ=2*IJ

8 DO 18 I=1,M

INC=0

DO 11 J=1,IA,IH

C(J)=0.

IN=INC

DO 10 L=1,IB,ID

IN=IN+1

C(J)=C(J)+A(L)*B(IN)

11 INC=INC+MB

INC=0

GOTO (18,12,15),IC

12 DO 14 J=1,IA,IJ

IE=I+MA

IF=J+MC

IN=INC

DO 13 L=IE,IB,ID

HM030043
HM030044
HM030045
HM030046
HM030047
HM030048
HM030049
HM030050
HM030051
HM030052
HM030053
HM030054
HM030055
HM030056
HM030057
HM030058
HM030059
HM030060
HM030061
HM030062
HM030063
HM030064
HM030065
HM030066
HM030067
HM030068
HM030069
HM030070
HM030071
HM030072
HM030073
HM030074
HM030075
HM030076
HM030077
HM030078
HM030079
HM030080

9/04/62

HM030081
HM030082
HM030083
HM030084
HM030085
HM030086
HM030087
HM030088
HM030089
HM030090
HM030091
HM030092
HM030093
HM030094
HM030095
HM030096
HM030097
HM030098

```

IN=IN+1
IG=IN+MB
C(IF)=C(IF)+A(L)*8(IN)
C(J)=C(J)-A(L)*8(IG)
13 INC=INC+MB *2
14 GOTO 18
15 IE=I+MC
IF=I+MA
DO 17 J=IE,IA,IJ
IN=INC
C(J)=0.
DO 16 L=IF,IB,ID
IN=IN+1
C(J)=C(J)+A(L)*8(IN)
16 INC=INC+MB
17 CONTINUE
18 RETURN
END(1,0,0,0,0,0,0,0,0,1,0,0,0,0,0)

```

9/04/62

STORAGE NOT USED BY PROGRAM

DEC	OCT
309	00465
32561	77461

STORAGE LOCATIONS FOR VARIABLES NOT APPEARING IN COMMON, DIMENSION, OR EQUIVALENCE STATEMENTS

DEC	OCT	DEC	OCT	DEC	OCT
IA	308 00464	IB	307 00463	IC	306 00462
IE	304 00460	IF	303 00457	IG	302 00456
IJ	300 00454	INC	299 00453	IW	298 00452
J	296 00450				

LOCATIONS FOR OTHER SYMBOLS NOT APPEARING IN SOURCE PROGRAM

DEC	OCT	DEC	OCT	DEC	OCT
21	278 00426	31	282 00432	61	283 00433
C1G0	290 00442	C1G2	291 00443	C1G3	292 00444
C1G5	294 00446	C1200	295 00447	01200	174 00256
D140M	268 00414	E11	81 00121		

EXTERNAL FORMULA NUMBERS WITH CORRESPONDING INTERNAL FORMULA NUMBERS AND OCTAL LOCATIONS

EFN	IFN	LOC	EFN	IFN	LOC	EFN	IFN	LOC
3	11	00122	4	12	00126	5	15	00140
7	19	00155	8	21	00165	10	28	00223
12	32	00246	13	40	00317	14	41	00327
16	50	00377	17	51	00405	18	52	00415

7/26/62

```

C      MREAD
C      MATRIX READ SUBROUTINE
C      CALL MREAD (A,M,N,IFORM,IROW,ITRA,IORG,T,MD,NTAPE2,NTAPE3)
C
C      A = MATRIX TO READ IN      ITRA = 0, TRA CARD AFTER MATRIX
C      N = NUMBER OF ROWS          =+1, TRA CARD AFTER EACH ROW
C      N = NUMBER OF COLUMNS      (OR COLUMN )
C      IFORM = -1, FORMAT(12A6)    IORG = ORIGIN OF FIRST C.B. CARD
C      IFORM = 0, COLUMN BINARY    T =MDXN TEMPORARY CELLS
C      IFORM = +1, FORMAT(6E12.8) MD= DIMENSIONED NUMBER OF ROWS
C      IROW = -0, MATRIX BY COLUMNS IN A
C      IROW = +1, MATRIX BY ROWS   NTAPE2 = INPUT TAPE
C      NTAPE3 = OUTPUT TAPE
C
C      SUBROUTINE MREAD (A,M,N,IFORM,IROW,ITRA,IORG,T,MD,NTAPE2,NTAPE3)
C      DIMENSION A(1), T(1)
C
C      1 FORMAT (6E12.8)
C      2 FORMAT (12A6)
C      3 FORMAT ( // 26H THATS ALL YOUR DATA.
C      NN=MD*N
C      DO 5 I=1,NN
C      Y(I)=0.
C      5 A(I)=0.
C
C      IF ( IFORM ) 39,15,6
C      6 IF ( IROW ) 8,7,8
C      7 K3=1
C      K4=N
C      K5=MD
C      K6=N-1
C      K2=1
C      GO TO 9
C      8 K2=NN
C      K3=MD
C      K4=N
C      K5=1
C      K6=0

```

7/26/62

```

MREAD
9 DO 11 I=1,K4
  K1=I-K5-K5+1
  IF (K6) 10,11,10
10 K2=K1+K6
11 READ INPUT TAPE NTAPE2, 1, (A(L),L=K1,K2,K3)
  GOTO 36
15 K1=N
  K2=M
  K3=1
  IF ( IORG-1 ) 16,17,17
16 K3=2
17 IF ( IROW ) 18,19,18
18 K2=N
  K1=M
19 IF ( ITRA ) 22,21,22
21 K1=1
22 K=0
  DO 23 I=1,K1
    K4=K+K3
    K5=1
  CALL BINRD ((K4), K5, L, NTAPE2, NTAPE3 )
  GOTO (23,38,23,23),L
23 K=K+K2

  IF ( IROW ) 28,24,28
24 L=0
  IF ( IORG-1 ) 26,26,25
26 L=IORG-1
26 DO 27 I=1,N
  J=I-MD-MD
  DO 27 K=1,M
    J=J+1
  L=L+1
27 A(J)=TIL
  GOTO 36
28 L=0
  IF (IORG-1) 30,30,29

```

HM030138
 HM030139
 HM030140
 HM030141
 HM030142
 HM030143
 HM030144
 HM030145
 HM030146
 HM030147
 HM030148
 HM030149
 HM030150
 HM030151
 HM030152
 HM030153
 HM030154
 HM030155
 HM030156
 HM030157
 HM030158
 HM030159
 HM030160
 HM030161
 HM030162
 HM030163
 HM030164
 HM030165
 HM030166
 HM030167
 HM030168
 HM030169
 HM030170
 HM030171
 HM030172
 HM030173
 HM030174
 HM030175

NREAD

[illegible]

WREAD

7/26/62

STORAGE NOT USED BY PROGRAM

DEC OCT
403 00623
32561 77461

STORAGE LOCATIONS FOR VARIABLES NOT APPEARING IN COMMON, DIMENSION, OR EQUIVALENCE STATEMENTS

DEC	OCT	DEC	OCT	DEC	OCT	DEC	OCT
I	402 00622	J	401 00621	K1	400 00620	K2	399 00617
K3	398 00616	K4	397 00615	K5	396 00614	K6	395 00613
K	394 00612	L	393 00611	MN	392 00610		

SYMBOLS AND LOCATIONS FOR SOURCE PROGRAM FORMAT STATEMENTS

EFN	LOC	EFN	LOC	EFN	LOC
811	1 00576	812	2 00574	813	3 00572

LOCATIONS FOR OTHER SYMBOLS NOT APPEARING IN SOURCE PROGRAM

DEC	OCT	DEC	OCT	DEC	OCT
2)	361 00551	3)	364 00554	6)	365 00555
C1G1	385 00601	C1G2	386 00602	C1G3	387 00603
C1200	389 00605	C1203	390 00606	C1205	391 00607
D1212	299 00453	D1216	335 00517	E1E	168 00250
E1J	189 00275	E1N	224 00340	E1H	179 00263

LOCATIONS OF NAMES IN TRANSFER VECTOR

DEC	OCT	DEC	OCT	DEC	OCT
81NRD	2 00002	EXIT	5 00005	(FIL)	4 00004
(STH)	3 00003	(TSH)	0 00000	(RTN)	1 00001

ENTRY POINTS TO SUBROUTINES NOT OUTPUT FROM LIBRARY

81NRD	EXIT	(FIL)	(RTN)	(STH)	(TSH)
-------	------	-------	-------	-------	-------

BINRD ROUTINE TO READ COL BIN CARDS FROM INPUT TAPE. FIB11 6/22/62

```

* FIB 11 FEBRUARY 10,1961 ROGER ANDERSON
* FIB 11 APRIL 20,1961 REVISED AND CORRECTED BY R. L. GAUTHIER
*-----
* CALLING SEQUENCE
* TSX BINRD,4
* TSX L(ARRAY)
* TSX L(K1), WHERE K1 IS READ CONTROL.
* TSX L(K2), WHERE K2 IS ERROR CONTROL.
* TSX L(INPUT TAPE NUMBER)
* TSX L(OUTPUT TAPE NUMBER)
*
* K1 = ZERO, READ ONE CARD.
* K1 = NONZERO, READ TO TRANSFER CARD.
*
* IF
* K2 = 1, RECORD(S) READ CORRECTLY.
* K2 = 2, END OF FILE ENCOUNTERED. READ END.
* K2 = 3, CHECKSUM ERROR OR TAPE CHECK.
* K2 = 4, (WHEN K1=0) NEXT RECORD IS BCD.
*-----
* ENTRY BINRD

```

HM030195
HM030196
HM030197
HM030198
HM030199
HM030200
HM030201
HM030202
HM030203
HM030204
HM030205
HM030206
HM030207
HM030208
HM030209
HM030210
HM030211
HM030212
HM030213
HM030214
HM030215
HM030216

00011

TRANSFER VECTOR

0000 743146523460 (IOS)
0001 745124623460 (RDS)
0002 745123303460 (RCH)
0003 746323463460 (TCO)
0004 746351233460 (TRC)
0005 746325263460 (TEF)
0006 742262513460 (BSR)
0007 256731636060 EXIT
0010 746651623460 (MRS)

0011 0634 00 4 00156
0012 0634 00 2 00157
0013 0634 00 1 00160
0014 0500 60 4 00004

SXA
SXA
SXA
CLA*

SAVE INDEX REGISTERS.

HM030217
HM030218
HM030219
HM030220

BIMRD ROUTINE TO READ COL BIN CARDS FROM INPUT TAPE. FIBII 6/22/62

```

00015 0422 00 0 00252          STD      BRD850          HH030221
00016 0580 60 4 00005          CLA*      5,4          HH030222
00017 0422 00 0 00251          STD      BRD60          HH030223
00020 -0560 00 0 00245          CAL      BRD1D          HH030224
00021 0402 60 4 00003          SLW*      3,4          HH030225
00022 -0560 00 0 00245          CAL      BRD1D          HH030226
00023 0402 00 0 00243          SLW      ONE          HH030227
00024 -0560 00 4 00001          CAL      1,4          HH030228
00026 0400 00 0 00244          ADD      BRD1A          HH030229
00026 0421 00 0 00100          STA      BRDARY          HH030230
*****
**** READ INPUT TAPE IN BINARY MODE.          HH030231
* IF REDUNDANCY OCCURS, (1) THE RECORD IS IN BCD MODE AND ROUTINE          HH030232
* WILL INDICATE K2 = 4. IF SINGLE READ OR K2 = 2 IF MULTI          HH030233
* READ. (2) A LEGITIMATE REDUNDANCY HAS OCCURRED ON A          HH030234
* BINARY RECORD, A SECOND READ IS ATTEMPTED. IF REDUNDANCY          HH030235
* PERSISTS A MESSAGE IS WRITTEN ON THE OUTPUT TAPE          HH030236
* AND K2 IS SET TO 3. ....          HH030237
*****          HH030238
*****          HH030239
*****          HH030240
00027 -0560 00 0 00252          BRD850          HH030241
00030 0074 00 4 00000          CALL      (IOS)          HH030242
00031 0522 60 0 00001          BRD1D XEC*  $(RDS)          HH030243
00032 -0774 00 4 00257          XEC*      BRDCMD,4          HH030244
00033 0522 60 0 00002          XEC*      $(RCH)          HH030245
00034 -0774 00 4 00035          XEC*      *+1,4          HH030246
00035 0522 60 0 00003          XEC*      $(TCO)          HH030247
00036 -0774 00 4 00110          XEC*      BRDTPC,4          HH030248
00037 0522 60 0 00004          XEC*      $(TRC)          HH030249
00040 -0560 00 0 00245          CAL      BRD1D          HH030250
00041 0402 00 0 00243          SLW      ONE          HH030251
00042 -0774 00 4 00162          BRDTEF XEC*  BRDEND,4          HH030252
00043 0522 60 0 00005          XEC*      $(TEF)          HH030253
*****          HH030254
*****          HH030255
**** TEST FOR TRANSFER CARD.          HH030256
* IF TRANSFER CARD IS ENCOUNTERED, TERMINATE READ.          HH030257
*****          HH030258

```

BINRC ROUTINE TO READ COL BIN CARDS FROM INPUT TAPE. F1011 6/22/62

00044 -0500 00 0 77740	BRDTCY CAL	BUFFER	IF DECREMENT (WORD COUNT)	HM030259
00045 -0320 00 0 00250	ANA	BRDD37	IS ZERO, THIS IS	HM030260
00046 0160 00 0 00152	TZE	BRDTCY	A TRANSFER CARD.....	HM030261
	****	TEST TO IGNORE CHECKSUM.		HM030262
00047 -0500 00 0 77740	CAL	BUFFER	IF COL 1, ROW 0	HM030263
00050 -0320 00 0 00254	ANA	BRDIGN	IS PUNCHED, IGNORE	HM030264
00051 -0100 00 0 00071	TNZ	BRDMV	THE CHECKSUM.	HM030265
	*			HM030266
00052 -0560 00 0 77740	CAL	BUFFER	*****	HM030267
00053 -0320 00 0 00250	ANA	BRDD37	***** ACCUMULATE AND CHECK THE CHECKSUM. *****	HM030268
00054 -0734 00 4 00080	PDX	0,4	***** IF CHECKSUM ERROR, WRITE MESSAGE, INDICATE	HM030269
00055 0634 00 4 00063	SXA	BINWDS,4	***** ERROR WITH 3 AT K2, AND CONTINUE.	HM030270
00056 1 C0002 4 00057	TXI	**1,4,2	***** (THE CARD WILL BE MOVED INTO THE ARRAY.)	HM030271
00057 -0634 00 4 00061	SXD	**2,4	*****	HM030272
00060 0774 00 4 77740	AXT	BUFFER,4	*****	HM030273
00061 1 80000 4 00062	TXI	**1,4,8	*****	HM030274
00062 0634 00 4 00065	SXA	BINCK,4	***** SET UP NO. OF	HM030275
00063 0774 00 4 00000	AXT	**4	***** WORDS FOR	HM030276
00064 -0500 00 0 77740	CAL	BUFFER	***** COMPUTING CHECKSUM	HM030277
00065 0361 00 4 00000	BINWDS	AXT	*****	HM030278
00066 2 60001 4 00065	CL	**4	*****	HM030279
00067 0322 00 0 77741	BINCK	TXI	***** ACCUMULATE ALL WORDS	HM030280
00070 -0100 00 0 00144	ERA	BUFFER+1	***** EXCEPT CHECKSUM WORD.	HM030281
	TNZ	BRDCSE	*****	HM030282
	*		***** CHECKSUM ERROR	HM030283
00052 -0560 00 0 77740	CAL	BUFFER	*****	HM030284
00053 -0320 00 0 00250	ANA	BRDD37	*****	HM030285
00054 -0734 00 4 00080	PDX	0,4	*****	HM030286
00055 0634 00 4 00063	SXA	BINWDS,4	*****	HM030287
00056 1 C0002 4 00057	TXI	**1,4,2	*****	HM030288
00057 -0634 00 4 00061	SXD	**2,4	*****	HM030289
00060 0774 00 4 77740	AXT	BUFFER,4	*****	HM030290
00061 1 80000 4 00062	TXI	**1,4,8	*****	HM030291
00062 0634 00 4 00065	SXA	BINCK,4	*****	HM030292
00063 0774 00 4 00000	AXT	**4	*****	HM030293
00064 -0500 00 0 77740	CAL	BUFFER	*****	HM030294
00065 0361 00 4 00000	BINWDS	AXT	*****	HM030295
00066 2 60001 4 00065	CL	**4	*****	HM030296
00067 0322 00 0 77741	BINCK	TXI	*****	
00070 -0100 00 0 00144	ERA	BUFFER+1	*****	
	TNZ	BRDCSE	*****	
	*		*****	
00052 -0560 00 0 77740	CAL	BUFFER	*****	
00053 -0320 00 0 00250	ANA	BRDD37	*****	
00054 -0734 00 4 00080	PDX	0,4	*****	
00055 0634 00 4 00063	SXA	BINWDS,4	*****	
00056 1 C0002 4 00057	TXI	**1,4,2	*****	
00057 -0634 00 4 00061	SXD	**2,4	*****	
00060 0774 00 4 77740	AXT	BUFFER,4	*****	
00061 1 80000 4 00062	TXI	**1,4,8	*****	
00062 0634 00 4 00065	SXA	BINCK,4	*****	
00063 0774 00 4 00000	AXT	**4	*****	
00064 -0500 00 0 77740	CAL	BUFFER	*****	
00065 0361 00 4 00000	BINWDS	AXT	*****	
00066 2 60001 4 00065	CL	**4	*****	
00067 0322 00 0 77741	BINCK	TXI	*****	
00070 -0100 00 0 00144	ERA	BUFFER+1	*****	
	TNZ	BRDCSE	*****	
	*		*****	
00052 -0560 00 0 77740	CAL	BUFFER	*****	
00053 -0320 00 0 00250	ANA	BRDD37	*****	
00054 -0734 00 4 00080	PDX	0,4	*****	
00055 0634 00 4 00063	SXA	BINWDS,4	*****	
00056 1 C0002 4 00057	TXI	**1,4,2	*****	
00057 -0634 00 4 00061	SXD	**2,4	*****	
00060 0774 00 4 77740	AXT	BUFFER,4	*****	
00061 1 80000 4 00062	TXI	**1,4,8	*****	
00062 0634 00 4 00065	SXA	BINCK,4	*****	
00063 0774 00 4 00000	AXT	**4	*****	
00064 -0500 00 0 77740	CAL	BUFFER	*****	
00065 0361 00 4 00000	BINWDS	AXT	*****	
00066 2 60001 4 00065	CL	**4	*****	
00067 0322 00 0 77741	BINCK	TXI	*****	
00070 -0100 00 0 00144	ERA	BUFFER+1	*****	
	TNZ	BRDCSE	*****	
	*		*****	
00052 -0560 00 0 77740	CAL	BUFFER	*****	
00053 -0320 00 0 00250	ANA	BRDD37	*****	
00054 -0734 00 4 00080	PDX	0,4	*****	
00055 0634 00 4 00063	SXA	BINWDS,4	*****	
00056 1 C0002 4 00057	TXI	**1,4,2	*****	
00057 -0634 00 4 00061	SXD	**2,4	*****	
00060 0774 00 4 77740	AXT	BUFFER,4	*****	
00061 1 80000 4 00062	TXI	**1,4,8	*****	
00062 0634 00 4 00065	SXA	BINCK,4	*****	
00063 0774 00 4 00000	AXT	**4	*****	
00064 -0500 00 0 77740	CAL	BUFFER	*****	
00065 0361 00 4 00000	BINWDS	AXT	*****	
00066 2 60001 4 00065	CL	**4	*****	
00067 0322 00 0 77741	BINCK	TXI	*****	
00070 -0100 00 0 00144	ERA	BUFFER+1	*****	
	TNZ	BRDCSE	*****	
	*		*****	
00052 -0560 00 0 77740	CAL	BUFFER	*****	
00053 -0320 00 0 00250	ANA	BRDD37	*****	
00054 -0734 00 4 00080	PDX	0,4	*****	
00055 0634 00 4 00063	SXA	BINWDS,4	*****	
00056 1 C0002 4 00057	TXI	**1,4,2	*****	
00057 -0634 00 4 00061	SXD	**2,4	*****	
00060 0774 00 4 77740	AXT	BUFFER,4	*****	
00061 1 80000 4 00062	TXI	**1,4,8	*****	
00062 0634 00 4 00065	SXA	BINCK,4	*****	
00063 0774 00 4 00000	AXT	**4	*****	
00064 -0500 00 0 77740	CAL	BUFFER	*****	
00065 0361 00 4 00000	BINWDS	AXT	*****	
00066 2 60001 4 00065	CL	**4	*****	
00067 0322 00 0 77741	BINCK	TXI	*****	
00070 -0100 00 0 00144	ERA	BUFFER+1	*****	
	TNZ	BRDCSE	*****	
	*		*****	
00052 -0560 00 0 77740	CAL	BUFFER	*****	
00053 -0320 00 0 00250	ANA	BRDD37	*****	
00054 -0734 00 4 00080	PDX	0,4	*****	
00055 0634 00 4 00063	SXA	BINWDS,4	*****	
00056 1 C0002 4 00057	TXI	**1,4,2	*****	
00057 -0634 00 4 00061	SXD	**2,4	*****	
00060 0774 00 4 77740	AXT	BUFFER,4	*****	
00061 1 80000 4 00062	TXI	**1,4,8	*****	
00062 0634 00 4 00065	SXA	BINCK,4	*****	
00063 0774 00 4 00000	AXT	**4	*****	
00064 -0500 00 0 77740	CAL	BUFFER	*****	
00065 0361 00 4 00000	BINWDS	AXT	*****	
00066 2 60001 4 00065	CL	**4	*****	
00067 0322 00 0 77741	BINCK	TXI	*****	
00070 -0100 00 0 00144	ERA	BUFFER+1	*****	
	TNZ	BRDCSE	*****	
	*		*****	
00052 -0560 00 0 77740	CAL	BUFFER	*****	
00053 -0320 00 0 00250	ANA	BRDD37	*****	
00054 -0734 00 4 00080	PDX	0,4	*****	
00055 0634 00 4 00063	SXA	BINWDS,4	*****	
00056 1 C0002 4 00057	TXI	**1,4,2	*****	
00057 -0634 00 4 00061	SXD	**2,4	*****	
00060 0774 00 4 77740	AXT	BUFFER,4	*****	
00061 1 80000 4 00062	TXI	**1,4,8	*****	
00062 0634 00 4 00065	SXA	BINCK,4	*****	
00063 0774 00 4 00000	AXT	**4	*****	
00064 -0500 00 0 77740	CAL	BUFFER	*****	
00065 0361 00 4 00000	BINWDS	AXT	*****	
00066 2 60001 4 00065	CL	**4	*****	
00067 0322 00 0 77741	BINCK	TXI	*****	
00070 -0100 00 0 00144	ERA	BUFFER+1	*****	
	TNZ	BRDCSE	*****	
	*		*****	
00052 -0560 00 0 77740	CAL	BUFFER	*****	
00053 -0320 00 0 00250	ANA	BRDD37	*****	
00054 -0734 00 4 00080	PDX	0,4	*****	
00055 0634 00 4 00063	SXA	BINWDS,4	*****	
00056 1 C0002 4 00057	TXI	**1,4,2	*****	
00057 -0634 00 4 00061	SXD	**2,4	*****	
00060 0774 00 4 77740	AXT	BUFFER,4	*****	
00061 1 80000 4 00062	TXI	**1,4,8	*****	
00062 0634 00 4 00065	SXA	BINCK,4	*****	
00063 0774 00 4 00000	AXT	**4	*****	
00064 -0500 00 0 77740	CAL	BUFFER	*****	
00065 0361 00 4 00000	BINWDS	AXT	*****	
00066 2 60001 4 00065	CL	**4	*****	
00067 0322 00 0 77741	BINCK	TXI	*****	
00070 -0100 00 0 00144	ERA	BUFFER+1	*****	
	TNZ	BRDCSE	*****	
	*		*****	
00052 -0560 00 0 77740	CAL	BUFFER	*****	
00053 -0320 00 0 00250	ANA	BRDD37	*****	
00054 -0734 00 4 00080	PDX	0,4	*****	
00055 0634 00 4 00063	SXA	BINWDS,4	*****	
00056 1 C0002 4 00057	TXI	**1,4,2	*****	
00057 -0634 00 4 00061	SXD	**2,4	*****	
00060 0774 00 4 77740	AXT	BUFFER,4	*****	
00061 1 80000 4 00062	TXI	**1,4,8	*****	
00062 0634 00 4 00065	SXA	BINCK,4	*****	
00063 0774 00 4 00000	AXT	**4	*****	
00064 -0500 00 0 77740	CAL	BUFFER	*****	
00065 0361 00 4 00000	BINWDS	AXT	*****	
00066 2 60001 4 00065	CL	**4	*****	
00067 0322 00 0 77741	BINCK	TXI	*****	
00070 -0100 00 0 00144	ERA	BUFFER+1	*****	
	TNZ	BRDCSE	*****	
	*		*****	
00052 -0560 00 0 77740	CAL	BUFFER	*****	
00053 -0320 00 0 00250	ANA	BRDD37	*****	
00054 -0734 00 4 00080	PDX	0,4	*****	
00055 0634 00 4 00063	SXA	BINWDS,4	*****	
00056 1 C0002 4 00057	TXI	**1,4,2	*****	
00057 -0634 00 4 00061	SXD	**2,4	*****	
00060 0774 00 4 77740	AXT	BUFFER,4	*****	
00061 1 80000 4 00062	TXI	**1,4,8	*****	
00062 0634 00 4 00065	SXA	BINCK,4	*****	
00063 0774 00 4 00000	AXT	**4	*****	
00064 -0500 00 0 77740	CAL	BUFFER	*****	
00065 0361 00 4 00000	BINWDS	AXT	*****	
00066 2 60001 4 00065	CL	**4	*****	
00067 0322 00 0 77741	BINCK	TXI	*****	
00070 -0100 00 0 00144	ERA	BUFFER+1	*****	
	TNZ	BRDCSE	*****	
	*		*****	
00052 -0560 00 0 77740	CAL	BUFFER	*****	
00053 -0320 00 0 00250	ANA	BRDD37	*****	
00054 -0734 00 4 00080	PDX	0,4	*****	
00055 0634 00 4 00063	SXA	BINWDS,4	*****	
00056 1 C0002 4 00057	TXI	**1,4,2	*****	
00057 -0634 00 4 00061	SXD			

ADDRESS	HEX	ASCII	COMMENT
00071	-0500 00 0	77740	
00072	0734 00 4	0C000	
00073	-0320 00 0	00250	
00074	-0737 00 2	00000	
00075	-0634 00 2	00103	
00076	0774 00 1	00000	
00077	-0500 00 1	77742	
00100	0602 00 4	00000	
00101	1 7777 1	00102	
00102	1 0001 4	00103	
00103	3 0000 1	00077	
00104	0534 00 4	00156	
00105	0520 60 4	00002	
00106	0020 00 0	00031	
00107	0020 00 0	00156	
00110	0522 60 0	00006	
00111	-0734 00 4	00256	
00112	0774 00 2	64000	
00113	-0500 60 0	00002	
00114	0602 00 0	00116	
00115	-0634 00 2	00116	
00116	0 0000 0	00000	
00117	0502 00 0	00256	
00120	-0320 00 0	00253	
00121	0402 00 0	00255	
00122	0734 00 4	00000	
00123	3 0002 1	00131	
00124	0000 00 0	00000	
00125	0000 00 0	00000	
00126	0000 00 0	00000	
00127	0000 00 0	00000	
00128	0000 00 0	00000	
00129	0000 00 0	00000	
00130	0000 00 0	00000	
00131	0000 00 0	00000	
00132	0000 00 0	00000	
00133	0000 00 0	00000	
00134	0000 00 0	00000	
00135	0000 00 0	00000	
00136	0000 00 0	00000	
00137	0000 00 0	00000	
00138	0000 00 0	00000	
00139	0000 00 0	00000	
00140	0000 00 0	00000	
00141	0000 00 0	00000	
00142	0000 00 0	00000	
00143	0000 00 0	00000	
00144	0000 00 0	00000	
00145	0000 00 0	00000	
00146	0000 00 0	00000	
00147	0000 00 0	00000	
00148	0000 00 0	00000	
00149	0000 00 0	00000	
00150	0000 00 0	00000	
00151	0000 00 0	00000	
00152	0000 00 0	00000	
00153	0000 00 0	00000	
00154	0000 00 0	00000	
00155	0000 00 0	00000	
00156	0000 00 0	00000	
00157	0000 00 0	00000	
00158	0000 00 0	00000	
00159	0000 00 0	00000	
00160	0000 00 0	00000	
00161	0000 00 0	00000	
00162	0000 00 0	00000	
00163	0000 00 0	00000	
00164	0000 00 0	00000	
00165	0000 00 0	00000	
00166	0000 00 0	00000	
00167	0000 00 0	00000	
00168	0000 00 0	00000	
00169	0000 00 0	00000	
00170	0000 00 0	00000	
00171	0000 00 0	00000	
00172	0000 00 0	00000	
00173	0000 00 0	00000	
00174	0000 00 0	00000	
00175	0000 00 0	00000	
00176	0000 00 0	00000	
00177	0000 00 0	00000	
00178	0000 00 0	00000	
00179	0000 00 0	00000	
00180	0000 00 0	00000	
00181	0000 00 0	00000	
00182	0000 00 0	00000	
00183	0000 00 0	00000	
00184	0000 00 0	00000	
00185	0000 00 0	00000	
00186	0000 00 0	00000	
00187	0000 00 0	00000	
00188	0000 00 0	00000	
00189	0000 00 0	00000	
00190	0000 00 0	00000	
00191			

8INRC ROUTINE TO READ COL BIN CARDS FROM INPUT TAPE. FIBII 6/22/62

00124 -0500 00 0 00247	CAL	BRD3D	RECORD IS BCD MODE.	HM030335
00125 0534 00 4 00156	LXA	BRDXR4,4		HM030336
00126 0460 00 0 00245	ADD	BRD1D	SET K2=4 IF MULTI.	HM030337
00127 0692 60 4 00003	SLW*	3,4		HM030338
00130 0020 00 0 00157	TRA	BRDXR2	EXIT FROM 8INRD.	HM030339
00131 -0500 00 0 00243	BRD8YC CAL	ONE	IF REDUNDANCY IS	HM030340
00132 0771 00 0 00001	ARS	1	CONSISTENT, REPORT	HM030341
00133 0602 00 0 00243	SLW	ONE	AND EXIT.	HM030342
00134 0520 00 0 00243	ZET	ONE		HM030343
00135 0220 00 0 00031	TRA	BR, RD1		HM030344
00136 0534 00 4 00156	LXA	BRDXR4,4	SET K2=3.	HM030345
00137 -0500 00 0 00247	CAL	BRD3D		HM030346
00140 0602 60 4 00003	SLW*	3,4		HM030347
00141 0774 00 1 00001	AXT	1,1	INDICATE BAD TAPE	HM030348
00142 0074 00 4 00173	TSX	BRDRPT,4	TO REPORTER.	HM030349
00143 0020 00 0 00042	TRA	BRDTEF	TRANSFER CARD TEST.	HM030350
00144 0774 00 1 00000	BRDCE AXT	0,1	INDICATE CHECKSUM BUM	HM030351
00145 0534 00 4 00156	LXA	BRDXR4,4		HM030352
00146 -0500 00 0 00247	CAL	BRD3D		HM030353
00147 0602 60 4 00003	SLW*	3,4		HM030354
00150 0674 00 4 00173	TSX	BRDRPT,4	TO REPORTER.	HM030355
00151 0020 00 0 00071	TRA	BRDMV	MOVE.	HM030356
00152 0534 00 4 00156	BRDTCO LXA	BRDXR4,4		HM030357
00153 -0560 00 0 77740	CAL	BUFFER	SET K1= TRANSFER ADDRESS	HM030358
00154 0767 00 0 00022	ALS	18	OF TRANSFER CARD.....	HM030359
00155 0622 60 4 00002	STD*	2,4		HM030360
00156 0774 00 4 00000	BRDXR4 AXT	**4		HM030361
00157 0774 00 2 00000	BRDXR2 AXT	**2		HM030362
00160 0774 00 1 00000	BRDXR1 AXT	**1		HM030363
00161 0020 00 4 00006	TRA	6,4		HM030364
00162 0502 00 0 00246	BRDEND CLS	BRD2D	THIS WILL RETURN	HM030365
00163 0522 60 0 00006	XEC*	\$(8SR)	CONTROL TO USER	HM030366
00164 0020 00 0 00165	TRA	**1	AT FIRST EOF, BUT	HM030367
00165 0760 00 0 00002	CHS		WILL TAKE SYSTEM	HM030368

1

HMO 30373
 HMO 30374
 HMO 30375
 HMO 30376
 HMO 30377
 HMO 30378
 HMO 30379
 HMO 30380
 HMO 30381
 HMO 30382
 HMO 30383
 HMO 30384
 HMO 30385
 HMO 30386
 HMO 30387
 HMO 30388
 HMO 30389
 HMO 30390
 HMO 30391
 HMO 30392
 HMO 30393
 HMO 30394
 HMO 30395
 HMO 30396
 HMO 30397
 HMO 30398
 HMO 30399
 HMO 30400
 HMO 30401
 HMO 30402
 HMO 30403
 HMO 30404
 HMO 30405
 HMO 30406
 HMO 30407
 HMO 30408
 HMO 30409
 HMO 30410

BINRC RCUTINE TO READ COL BIN CARDS FROM INPUT TAPE. FRII 6/22/62

00221	C634	CO	4	00240	RPTERR	SXA	BRDCOM,4	REMEMBER LAST COMMAND.	HM030411
00222	-0774	00	4	00223	AXC	AXC	**1,4	DELAY AND TEST	HM030412
00223	0522	60	0	00003	XEC*	XEC*	\$(TCO)	REUNDANCY ON OUTPUT.	HM030413
00224	-0774	CO	4	00231	AXC	AXC	IPTPCH,4		HM030414
00225	0522	60	0	00004	XEC*	XEC*	\$(TRC)		HM030415
00226	-0500	CO	0	00252	CAL	CAL	BRDBSD		HM030416
00227	0074	CO	4	00000	CALL	CALL	(IOS)		HM030417
00230	0020	00	2	00001	TRA	TRA	1,2	REESTABLISH IO FOR	HM030418
00231	0522	60	0	00006	IPTPCH	XEC*	\$(BSR)	INPUT TAPE....	HM030419
00232	0522	60	0	00010	XEC*	XEC*	\$(WRS)		HM030420
00233	-0774	CO	4	00234	AXC	AXC	**1,4	BACKSPACE OUTPUT	HM030421
00234	0522	60	0	00003	XEC*	XEC*	\$(TCO)	TAPE AND ERASE.	HM030422
00235	-0774	CO	4	00237	XEC*	XEC*	**2,4		HM030423
00236	0522	60	0	00004	XEC*	XEC*	\$(TRC)		HM030424
00237	0522	60	0	00010	XEC*	XEC*	\$(WRS)	TURN OFF POSSIBLE	HM030425
00240	0774	CO	4	00000	BRDCOM	AXT	**4	REDUNDANCY.	HM030426
00241	0522	60	0	00002	XEC*	XEC*	\$(RCH)	RETRY WRITE.	HM030427
00242	0020	00	0	00221	TRA	TRA	RPTERR		HM030428
00243	0	00001	0	00000	ONE	PZE	0,0,1		HM030429
00244	0	00000	0	00001	BRD1A	PZE	1		HM030430
00245	0	00001	0	00000	BRD1D	PZE	0,0,1		HM030431
00246	0	00002	0	00000	BRD2D	PZE	0,0,2		HM030432
00247	0	00003	0	00000	BRD3D	PZE	0,0,3		HM030433
00250	0	00037	0	00000	BRD37	PZE	0,0,31		HM030434
00251	0	00003	0	00000	BRD6D	PZE	0,0,3		HM030435
00252	0	00002	0	00020	BRD85D	PZE	16,0,2		HM030436
00253	*0000007777				BRD5A7	OCT	77777		HM030437
00254	1	CG000	0	00000	BRDIGN	PON	0,0,0		HM030438
00255	0	00000	0	77740	BUFORC	PZE	BUFFER		HM030439
00256	0	00000	0	00000	BRDCSV	PZE			HM030440
00257	-3	00033	0	77740	BRDCMD	IOST	0,0,27		HM030441
00260	0	00005	0	00262	REDCMD	IOCD	BRDMG1,0,5		HM030442
00261	0	00006	0	00267	CSECD	IOCD	BRDMG2,0,6		HM030443
									HM030444
									HM030445
									HM030446
									HM030447
									HM030448

* MESSAGES

BINRD ROUTINE TO READ COL BIN CARDS FROM INPUT TAPE. FIBII

6/22/62

00262	016321472560	BRDNG1 BCI	5,1TAPE CHECK ON INPUT IGNORED.	HMO30449
00263	233025234260			HMO30450
00264	464560314547			
00265	6A636C312745			
00266	465125243360			
00267	012330252342	BRDNG2 BCI	3,1CHECKSUM ERROR	HMO30451
00270	626444602551			
00271	514651606060			
00272	606060606060	BRDCHK BCI	3,	HMO30452
00273	606060606060			
00274	606060606060			
	77740	BUFFER EQU	-32	HMO30453
		END		HMO30454

6/22/62

BINRD ROUTINE TO READ COL BIN CARDS FROM INPUT TAPE. FIBII
POST PRUCESSOR ASSEMBLY DATA

275 IS THE FIRST LOCATION NOT USED BY THIS PROGRAM

REFERENCES TO DEFINED SYMBOLS

243	CNE	23, 41, 131, 133, 134
7	EXIT	167
65	BINCK	62
11	BINRD	
244	BRC1A	25
245	BRC1D	20, 22, 40, 126
246	BRC2D	162
247	BRC3D	124, 137, 146
251	BRC6D	17, 174
71	BRCMV	51, 151
27	BORD	
6	(BSR)	110, 163, 231
0	(ICS)	30, 175, 227
2	(RCH)	33, 113, 201, 216, 241
1	(RCS)	31
3	(TCO)	35, 223, 234
5	(TEF)	43
4	(TRC)	37, 225, 236
10	(WRS)	176, 232, 237
63	BINWDS	55
253	BRC5A7	120
100	BRCARY	26
252	BRC85D	15, 27, 226
131	BRC8TC	123
272	BRCCHK	213
257	BRCAMD	32
240	BRCOM	221
144	BRCCE	70
256	BRCESV	111, 117
250	BRC37	45, 53, 73
162	BRCEND	42
254	BRCIGN	50
262	BRCMG1	260
267	BRCMG2	261

**BINRC ROUTINE TO READ COL BIN CARDS FROM INPUT TAPE. FIBII
POST PROCESSOR ASSEMBLY DATA**

[illegible]

NO ERROR IN ABOVE ASSEMBLY.

6/22/62

```

SUBROUTINE ROLM (NTAPE2, NTAPE3, I )
1  FORMAT(80H
2  FORMAT(1H1)
3  FORMAT(4 IHO )
    READ INPUT TAPE NTAPE2, 1
    GO TO (4,5),I
4  WRITE OUTPUT TAPE NTAPE3, 2
    GO TO 6
5  WRITE OUTPUT TAPE NTAPE3, 3
6  WRITE OUTPUT TAPE NTAPE3, 1
    RETURN
END(110,010,0,0,0,0,0,0,1,0,0,0,0,0)

```

HM030455
 HM030456
 HM030457
 HM030458
 HM030459
 HM030460
 HM030461
 HM030462
 HM030463
 HM030464
 HM030465
 HM030466
 HM030467
 HM030468
 HM030469
 HM030470
 HM030471

0/22/62

STORAGE NOT USED BY PROGRAM

DEC	OCT	DEC	OCT
76	00114	32561	77461

SYMBOLS AND LOCATIONS FOR SOURCE PROGRAM FORMAT STATEMENTS

EFN	LOC	EFN	LOC	EFN	LOC
811	1 00112	812	2 00073	813	3 00072

LOCATIONS FOR OTHER SYMBOLS NOT APPEARING IN SOURCE PROGRAM

DEC	OCT	DEC	OCT	DEC	OCT
61	52 00064	C1G0	75 00113	E11	28 00034

LOCATIONS OF NAMES IN TRANSFER VECTOR

DEC	OCT	DEC	OCT	DEC	OCT
(FIL)	3 00003	(RTN)	1 00001	(STH)	2 00002

ENTRY POINTS TO SUBROUTINES NOT OUTPUT FROM LIBRARY

(FIL)	(RTN)	(STH)	(TSH)
-------	-------	-------	-------

EXTERNAL FORMULA NUMBERS WITH CORRESPONDING INTERNAL FORMULA NUMBERS AND OCTAL LOCATIONS

EFN	IFN	LOC	EFN	IFN	LOC
4	8	C0035	5	10	00044
			6	11	00052

6/22/62

```

SUBROUTINE MNVREX (AR, AI, B, C, KSZ, IGOOFD, NOP)
  DIMENSION AR(50,50), AI(50,50), B(50,50), C(50,50)
  IGOOFD=0
  IF (NOP) 102, 101, 102
  101 CALL INVERS (AR, KSZ, IGOOFD)
  GO TO 20
  102 CONTINUE
  DO 1 K=1, KSZ
    DO 1 L=1, KSZ
      B(K,L)=AR(K,L)
      NG=0
      CALL INVERS(B, KSZ, NG)
      IF (NG) 2, 3, 2
      C RECAL MATRIX NOT SINGULAR
      E MULT B=AI STOJ C
      DO 4 K=1, KSZ
        DO 4 L=1, KSZ
          C(K,L)=0.0
          DO 4 I=1, KSZ
            C(K,L)=C(K,L)+B(K,I)*AI(I,L)
          C MULT, AI=AC + AR STO. B
          DO 5 K=1, KSZ
            DO 5 L=1, KSZ
              B(K,L)=AR(K,L)
              DO 6 I=1, KSZ
                B(K,L)=B(K,L)+AI(K,I)*C(I,L)
              NG=0
              CALL INVERS(B, KSZ, NG)
              IF (NG) 2, 7, 2
      C SECOND MATRIX NOT SINGULAR
      C MULT, -C=0 STO. AI ALSO SET AR=B
      DO 8 K=1, KSZ
        DO 8 L=1, KSZ
          AI(K,L)=0.0
          AR(K,L)=B(K,L)
          DO 8 I=1, KSZ

```

MN030473
 MN030474
 MN030475
 MN030476
 MN030477
 MN030478
 MN030479
 MN030480
 MN030481
 MN030482
 MN030483
 MN030484
 MN030485
 MN030486
 MN030487
 MN030488
 MN030489
 MN030490
 MN030491
 MN030492
 MN030493
 MN030494
 MN030495
 MN030496
 MN030497
 MN030498
 MN030499
 MN030500
 MN030501
 MN030502
 MN030503
 MN030504
 MN030505
 MN030506
 MN030507
 MN030508
 MN030509
 MN030510

HMO30511
 HMO30512
 HMO30513
 HMO30514
 HMO30515
 HMO30516
 HMO30517
 HMO30518
 HMO30519
 HMO30520
 HMO30521
 HMO30522
 HMO30523
 HMO30524
 HMO30525
 HMO30526
 HMO30527
 HMO30528
 HMO30529
 HMO30530
 HMO30531
 HMO30532
 HMO30533
 HMO30534
 HMO30535
 HMO30536
 HMO30537
 HMO30538
 HMO30539
 HMO30540
 HMO30541
 HMO30542
 HMO30543
 HMO30544
 HMO30545
 HMO30546

-116-

6/22/62

STORAGE NOT USED BY PROGRAM

DEC OCT
513 01001
32561 77461

STORAGE LOCATIONS FOR VARIABLES NOT APPEARING IN COMMON, DIMENSION, OR EQUIVALENCE STATEMENTS

DEC OCT
NC 512 01000

LOCATIONS FOR OTHER SYMBOLS NOT APPEARING IN SOURCE PROGRAM

DEC OCT
2) 499 00763
C110G 510 00776
D1411 362 00552
3) 502 00766
C1101 511 00777
D141E 463 00717
6) 503 00767
D120E 228 00344
9) 508 00774
D140L 284 00434

LOCATIONS OF NAMES IN TRANSFER VECTOR

DEC OCT
INVERS 0 00000

ENTRY POINTS TO SUBROUTINES NOT OUTPUT FROM LIBRARY

INVERS

EXTERNAL FORMULA NUMBERS WITH CORRESPONDING INTERNAL FORMULA NUMBERS AND OCTAL LOCATIONS

EFN	IFN	LOC	EFN	IFN	LOC	EFN	IFN	LOC
101	6	00202	102	9	00207	1	12	00222
4	21	00274	5	26	00352	7	31	00406
2	38	00470	9	40	00503	11	45	00524
13	54	00635	15	59	00671	16	64	00732
20	67	00757						

6/22/62

```

SUBROUTINE INVERS (A,N,I GOOF D)
  CIPENSICN A(50,50),L(50),M(50)
  IF ACCUMULATER OVERFLOW 500,500
  IF QUOTIENT OVERFLOW 501,501
  IF DIVIDE CHECK 502,502
  IGCDFD=0
  SEARCH FOR LARGEST ELEMENT
  DO 80 K=1,N
    L(K)=K
    P(K)=K
    BIGA=A(K,K)
    DO 20 I=K,N
      DO 20 J=K,N
        IF (ABS(BIGA)-ABS(A(I,J))) IC,20,20
        BIGA=A(I,J)
        L(K)=I
        P(K)=J
      20 CONTINUE
    C INTERCHANGE ROWS
    JCB=L(K)
    IF (L(K)-K) 35,35,25
    DO 30 I=1,N
      HOLD=A(K,I)
      A(K,I)=A(JCB,I)
      A(JCB,I)=HOLD
    C INTERCHANGE COLUMNS
    ICCL=M(K)
    IF (M(K)-K) 45,45,37
    DO 40 J=1,N
      HOLD=A(J,K)
      A(J,K)=A(J,ICCL)
      A(J,ICCL)=HOLD
    C DIVIDE COLUMN BY MINUS PIVOT
    DO 55 IC=1,N
      IF (IC-K) 50,55,60
      A(IC,K)=A(IC,K)/(-A(K,K))
    C CONTINUE
    55 REDUCE MATRIX
  80

```

HMO30548
 HMO30549
 HMO30550
 HMO30551
 HMO30552
 HMO30553
 HMO30554
 HMO30555
 HMO30556
 HMO30557
 HMO30558
 HMO30559
 HMO30560
 HMO30561
 HMO30562
 HMO30563
 HMO30564
 HMO30565
 HMO30566
 HMO30567
 HMO30568
 HMO30569
 HMO30570
 HMO30571
 HMO30572
 HMO30573
 HMO30574
 HMO30575
 HMO30576
 HMO30577
 HMO30578
 HMO30579
 HMO30580
 HMO30581
 HMO30582
 HMO30583
 HMO30584
 HMO30585

6/22/62

```

56 DO 65 I=1,N
57 4F(A-I)57,65,67
58 4F(A-I)60,65,60
59 A(I,J)=A(I,K)+A(K,J)+A(I,J)
60 CONTINUE
61 DIVIDE ROW BY PIVOT
62 DO 75 JR=1,N
63 4F(A-JR)70,75,70
76 A(I,JR)=A(I,JR)/A(I,K)
77 CONTINUE
78 CONTINUE PRODUCT OF PIVOTS
79 REPLACE PIVOT BY RECIPROCAL
80 A(I,K)=1.0/A(I,K)
81 CONTINUE COMPLETE OPERATION
82 CONTINUE
83 IF DIVIDE CHECK510,503
84 IF ACCUMULATOR OVERFLOW 510,504
85 IF QUOTIENT OVERFLOW 510,505
86 FINAL ROW AND COLUMN INTERCHANGE
87 X=N
88 K=K-1
89 4F(AK)150,150,103
90 I=I(K)
91 4F((I-K)120,120,105
92 DO 110 J=1,N
93 HOLD=A(I,J,K)
94 A(I,J)=A(I,J,I)
95 A(I,I)=HOLD
96 J=J(K)
97 4F(I-J)100,100,125
98 DO 130 I=1,N
99 HOLD=A(I,K,I)
100 A(I,I)=A(I,J,I)
101 A(I,J)=HOLD
102 GO TO 100
103 RETURN
104 4 680F D=1

```

HM030586
 HM030587
 HM030588
 HM030589
 HM030590
 HM030591
 HM030592
 HM030593
 HM030594
 HM030595
 HM030596
 HM030597
 HM030598
 HM030599
 HM030600
 HM030601
 HM030602
 HM030603
 HM030604
 HM030605
 HM030606
 HM030607
 HM030608
 HM030609
 HM030610
 HM030611
 HM030612
 HM030613
 HM030614
 HM030615
 HM030616
 HM030617
 HM030618
 HM030619
 HM030620
 HM030621
 HM030622
 HM030623

6/22/62

HM030624

GO TO 150
END(1,0,0,0,0,0,0,0,0,0,1,0,0,0,0,0)

6/22/62

STORAGE NOT USED BY PROGRAM

DEC	OCT	DEC	OCT
601	01131	32561	77461

STORAGE LOCATIONS FOR VARIABLES APPEARING IN DIMENSION AND EQUIVALENCE STATEMENTS

DEC	OCT	DEC	OCT	DEC	OCT
1	800 01130	M	550 01046		

STORAGE LOCATIONS FOR VARIABLES NOT APPEARING IN COMMON, DIMENSION, OR EQUIVALENCE STATEMENTS

DEC	OCT	DEC	OCT	DEC	OCT	DEC	OCT
B124	500 00764	HOLD	499 00763	ICOL	498 00762	IC	497 00761
I	496 00760	JROW	495 00757	JR	494 00756	J	493 00755
K	492 00754						

LOCATIONS FOR OTHER SYMBOLS NOT APPEARING IN SOURCE PROGRAM

DEC	OCT	DEC	OCT	DEC	OCT	DEC	OCT
10	472 00730	21	462 00716	31	465 00721	41	32767 77777
68	466 00722	91	471 00727	C100	477 00735	C106	481 00741
C1101	478 00736	C1102	479 00737	C1104	480 00740	C110A	485 00745
C1107	482 00742	C1108	483 00743	C1109	484 00744	C1205	489 00751
C1200	486 00746	C1202	487 00747	C1203	488 00750	D110E	205 00315
C1206	490 00752	C1207	491 00753	D110C	192 00300	D1119	413 00635
D110J	244 00364	D110P	280 00430	D110R	290 00442	D120N	271 00417
D1218	424 00650	D111D	442 00672	D111F	454 00706	D1319	412 00634
D120U	320 08500	D130J	243 00363	D130U	319 00477	D170J	242 00362
D1310	441 00671	D140G	222 00336	D140I	235 00353	E1T	309 00465
D1719	411 00633	D171D	440 00670	E1A	183 00267		
E117	379 00573						

EXTERNAL FORMULA NUMBERS WITH CORRESPONDING INTERNAL FORMULA NUMBERS AND OCTAL LOCATIONS

6/22/62

EFN	IFN	LOC	EFN	IFN	LOC	EFN	IFN	LOC	EFN	IFN	LOC
500	6	00104	501	8	00107	502	9	00111	10	17	00246
20	20	00254	25	23	00277	30	26	00305	35	27	00316
37	29	00325	40	32	00343	45	33	00354	46	34	00365
50	35	00370	55	36	00375	56	39	00425	57	40	00431
60	41	00434	65	42	00443	68	44	00501	70	45	00504
75	46	00507	80	48	00517	503	50	00552	504	52	00555
505	54	00560	100	55	00563	103	57	00574	105	59	00603
110	62	00642	120	63	00651	125	65	00660	130	68	00677
150	70	00707	510	72	00713						

2/20/63

S W E E P X S U B R O U T I N E

```

C COMPUTES TRUE MODE AND SWEEPS IT FROM THE MATRIX. (REAL OR COMPLEX)
C
C HTRUE = TRUE MODAL COLUMNS, AS COMPUTED. U = DYNAMIC MATRIX.
C H = SERIES OF MODIFIED MODAL COLUMNS. FL= COLUMN OF EIGENVALUES.
C US = SERIES OF MODIFIED MODAL ROWS OF U.
C MODE = MODE NOW BEING COMPUTED. N = SIZE
C MD = DIMENSIONED NUMBER OF ROWS OF U,US,H,HTRUE
C NX = 1 IF PROBLEM IS REAL.
C = 2 IF PROBLEM IS COMPLEX.
C
SUBROUTINE SWEEPX (HTRUE, U,H, US,FL, MODE, N, MD, NC, INDEX, EP)
DIMENSION H(1), US(1), U(1), HTRUE(1), FL(1), G(4)
M=MODE-1
K1=M*NC*MD
DO 6 J=1,NC
  K=K1+(J-1)*MD
  DO 6 L=1,N
    K=K+1
    HTRUE(K)=H(K)
  6 IF ( M ) 31,31,8
  8 DO 25 I=1,M
    L1=NC*MD*(MODE-1) -NC*MD
    GOTO ( 9,11),NC
  9 G=0.
  DO 10 J=1,N
    L=L1+J
    K=K1+J
  10 G=G+US(L)*HTRUE(K)
  11 G(1)=0.
    G(2)=0.
  DO 12 J1=1,N
    L=L1+J1
    K=K1+J1
    L2=L+MD
    K2=K+MD

```

2/20/63

S W E E P X S U B R O U T I N E

```

12 G(1)=G(1)+US(L)*HTRUE(K)-US(L2)*HTRUE(K2)
13 G(2)=G(2)+US(L)*HTRUE(K2)+US(L2)*HTRUE(K)
14 K=MODE-1
15 GOTO (14,19),NC
16 IF (ABS(F(L(K)/FL(MODE)-1.) - EP) 15,15,16
17 G=1.
18 GOTO 17
19 G=(FL(K)-FL(MODE)) / G
20 DO 18 J=1,N
21 K=K1+J
22 L=L1+J
23 HTRUE(K)=H(L)-G(1)*HTRUE(K)
24 GOTO 25
25 J=2*MODE
26 K=2*K
27 IF (ABS(F(FL(K-1)*FL(J-1)+FL(K)*FL(J))/(FL(J-1)*2+FL(J)*2)-1.)
28 1 IF (ABS(F(FL(K)*FL(J-1)-FL(K-1)*FL(J)) / (FL(J-1)*2+FL(J)*2))
29 1 -EP) 20,20,22
30 1 -EP) 21,21,22
31 G(1)=1.
32 G(2)=0.
33 GOTO 23
34 G(3)=G(1)*2+G(2)*2
35 G(4)=(FL(K)-FL(J))*G(1)-(FL(K-1)-FL(J-1))*G(2)
36 G(1)=(FL(K-1)-FL(J-1))*G(1)+(FL(K)-FL(J))*G(2) / G(3)
37 G(2)=G(4) / G(3)
38 DO 24 J1=1,N
39 K=K1+J1
40 K2=K+ MD
41 L=L1+J1
42 L2=L+MD
43 G(3)=HTRUE(K)
44 HTRUE(K)=H(L)+ G(2)*HTRUE(K2)-G(1)*HTRUE(K)
45 HTRUE(K2)=H(L2)- G(1)*HTRUE(K2)-G(2)*G(3)
46 CC CONTINUE
47 I=0
48 CALL NPNRMX (HTRUE(K1+1),HTRUE(K1+1),N,C,I,MD,NC,1)

```

HM030665
HM030666
HM030667
HM030668
HM030669
HM030670
HM030671
HM030672
HM030673
HM030674
HM030675
HM030676
HM030677
HM030678
HM030679
HM030680
HM030681
HM030682
HM030683
HM030684
HM030685
HM030686
HM030687
HM030688
HM030689
HM030690
HM030691
HM030692
HM030693
HM030694
HM030695
HM030696
HM030697
HM030698
HM030699
HM030700
HM030701
HM030702

S W E E P X S U B R O U T I N E

2/20/63

STORAGE NOT USED BY PROGRAM

DEC OCT
744 01350
32561 77461

STORAGE LOCATIONS FOR VARIABLES APPEARING IN DIMENSION AND EQUIVALENCE STATEMENTS

DEC OCT DEC OCT DEC OCT
G 743 01347

STORAGE LOCATIONS FOR VARIABLES NOT APPEARING IN COMMON, DIMENSION, OR EQUIVALENCE STATEMENTS

DEC OCT DEC OCT DEC OCT
I 739 01343 J1 738 01342 J 737 01341 K1 736 01340
K2 735 01337 K3 734 01336 K 733 01335 L1 732 01334
L2 731 01333 L 730 01332 M 729 01331

LOCATIONS FOR OTHER SYMBOLS NOT APPEARING IN SOURCE PROGRAM

DEC OCT DEC OCT DEC OCT DEC OCT
1) 706 01302 2) 692 01264 3) 695 01267 6) 697 01271
9) 703 01277 C)G0 710 01306 C)G1 711 01307 C)G2 712 01310
C)G4 713 01311 C)G5 714 01312 C)G6 715 01313 C)G7 716 01314
C)G8 717 01315 C)G9 718 01316 C)201 719 01317 C)202 720 01320
C)203 721 01321 C)204 722 01322 C)205 723 01323 C)206 724 01324
C)207 725 01325 C)208 726 01326 C)209 727 01327 C)20A 728 01330
D)110 551 01047 D)112 565 01065 D)206 207 00317 D)200 305 00461
D)20T 525 01015 D)21C 680 01250 D)40R 496 00760 D)413 577 01101
D)416 589 01115

LOCATIONS OF NAMES IN TRANSFER VECTOR

DEC OCT DEC OCT DEC OCT
NPNRHX 0 00000

2/20/63

NPNRMX

EXTERNAL FORMULA NUMBERS WITH CORRESPONDING INTERNAL FORMULA NUMBERS AND OCTAL LOCATIONS

[illegible]

CENTER OF PRESSURE SUBROUTINE

12/04/62

```

SUBROUTINE CENTER ( A )
  DIMENSION NOP(24), Q(10), X(50), Y(50), ATTIT(50,2), CZRE(50,2),
1    HADD(50,2), LL(50), LH(50), CNIN(50,2), HR(50,2),
2    NCPT(50), DELY(50), ZI(50,10)
  DIMENSION A(50,2), CL(2), CM(2), CZ(2), TCCP(2), TSCP(2)
  EQUIVALENCE (NOP(14),NQ), (NOP(13),NEXST), (LH,X), (LL,Y),
1    (NOP(17),NRC), (NOP(23),TITL), (NOP(24),TITL2)
  COMMON NOP,X,Y,NTAPE2,NTAPE3,NTAPE4,NTAPE5,NTAPE6,NTAPE8,CBAR,
1    FLEXK,CAPS,CAPH,CAPT,CAPN,SMALS,CAPXO,CLOKR,CAPZ,CAPHO,Q,
2    MAXR,ATTIT,CZRE,CNIN,HR,HADD,NSTRP,NCPT,DELY,ZI,MAXQ,NC,
3    NCNRC
200 FORMAT (1H0 35X, 24HAERODYNAMIC COEFFICIENTS / 1H0 11X, 5HCZ =
1    1E16.8, 11X, 5HCM = 1E16.8, 11X, 5HCL = 1E16.8 / 1H0
2    5X, 47HTOTAL CHORDWISE CENTER OF PRESSURE (XBAR-X0)/
3    7HCBAR = 1E16.8 / 1H0 5X, 26H TOTAL SPANNWISE CENTER
4    28H PRESSURE YBAR/S = 1E16.8 / 1H0 19X,
5    6H STRIP 13X, 8HCCLC/CAVE 13X, 15HLOCAL CHORDWISE
6    3H CP )
201 FORMAT (1H 16X, 117, 2E26.8 )
202 FORMAT (1H0 30X, 24HAERODYNAMIC COEFFICIENTS / 4HOCZ=
1    2E15.8, 6H1 CM= 2E15.8, 6H1 CL= 2E15.8,
2    1H1 / 1H0 5X, 36HTOTAL CHORDWISE CENTER OF PRESSURE
3    18H (XBAR-X0)/CBAR = 2E16.8, 1H1 / 1H0 5X, 6H TOTAL
4    48H SPANNWISE CENTER OF PRESSURE YBAR/S =
5    2E16.8, 1H1 / 1H0 9H STRIP 16X, 8HCCLC/CAVE 35X,
6    18HLOCAL CHORDWISE CP )
204 FORMAT (1H 117, 2E20.8, 1H1 5X, 2E20.8, 1H1)

DO 206 N=1,NC
  CZ(N)=0.
  CL(N)=0.
  CM(N)=0.
DO 205 I=1,NRC

```

HM031171
 HM031172
 HM031173
 HM031174
 HM031175
 HM031176
 HM031177
 HM031178
 HM031179
 HM031180
 HM031181
 HM031182
 HM031183
 HM031184
 HM031185
 HM031186
 HM031187
 HM031188
 HM031189
 HM031190
 HM031191
 HM031192
 HM031193
 HM031194
 HM031195
 HM031196
 HM031197
 HM031198
 HM031199
 HM031200
 HM031201
 HM031202
 HM031203
 HM031204
 HM031205
 HM031206
 HM031207

CENTER OF PRESSURE SUBROUTINE

12/04/62

```

      CZ(N)=CZ(N)+A(I,N)
      CL(N)=CL(N)+Y(I)*A(I,N)
205      CM(N)=CM(N)+(X(I)-CAPXO)*A(I,N)
      CL(N)=CL(N)/SMALS
206      CM(N)=CM(N)/CBAR
      IF (NC-1)      207,207,208
207      TCCP(1)=-CM(1)/CZ(1)
      TSCP(1)= CL(1)/CZ(1)
      WRITE OUTPUT TAPE NTAPE3, 200, CZ(1),CM(1),CL(1), TCCP(1), TSCP(1),
      GOTO 210
208      CD=CZ(1)*2+CZ(2)*2
      TCCP(1)=-((CM(1)*CZ(1)+CM(2)*CZ(2)) / CD
      TCCP(2)=-((CM(2)*CZ(1)-CM(1)*CZ(2)) / CD
      TSCP(1)= (CL(1)*CZ(1)+CL(2)*CZ(2)) / CD
      TSCP(2)= (CL(2)*CZ(1)-CL(1)*CZ(2)) / CD
      WRITE OUTPUT TAPE NTAPE3, 202, CZ(1),CZ(2),CM(1),CM(2),CL(1),
      1      CL(2),TCCP(1),TCCP(2),TSCP(1),
      2      TSCP(2)
210      L=0
211      IF (NEXST)      212,212,211
211      L=NEXST
212      DO 217 I=1,NSTRP
      L1=L+1
      L=L1+NCPT(I)-1
      DO 214 N=1,NC
      CM(N)=0.
      CZ(N)=0.
      L2=0
      DO 213 J=L1,L
      L2=L2+1
      CM(N)=CM(N)+Z(I,L2)*A(J,N)
      CZ(N)=CZ(N)+A(J,N)
213      CL(N)=-CZ(N)*SMALS / DELY(I)
214

```

CENTER OF PRESSURE SUBROUTINE

12/04/62

```

      IF (NC-1)      216,216,215
215  CD=CZ(1)*2+CZ(2)*2
      CE=CM(2)*CZ(1)-CM(1)*CZ(2)
      CM(1)=(CM(1)*CZ(1)+CM(2)*CZ(2)) / CD
      CM(2)= CE/CD
      WRITE OUTPUT TAPE NTAPE3, 204, I, CL(1), CL(2), CM(1), CM(2)
      GOTO 217

216  CM(1)=CM(1) / CZ(1)
      WRITE OUTPUT TAPE NTAPE3, 201, I, CL(1), CM(1)
217  CONTINUE

      RETURN

      END(1,0,0,0,0,0,0,0,1,0,0,0,0,0)

```

HM031246
HM031247
HM031248
HM031249
HM031250
HM031251
HM031252
HM031253
HM031254
HM031255
HM031256
HM031257
HM031258
HM031259

12/04/62

DEC	OCT	DEC	OCT
518	01006	31305	75111

STORAGE LOCATIONS FOR VARIABLES APPEARING IN COMMON STATEMENTS

ATT1T	32409	77231	C10KR	32423	77247	CAPHO	32421	77245	CAPH	32426	77254
CAPN	32426	77252	CAPS	32429	77255	CAPT	32427	77253	CAPXO	32424	77250
CAPZ	32422	77246	CBAR	32431	77257	CWIN	32209	76721	CZRE	32309	77065
DELY	31858	76162	FLEXK	32430	77256	HADD	32009	76411	HR	32109	76555
LH	32537	77431	LL	32487	77347	MAXQ	31308	75114	MAXR	32410	77232
NCNRC	31306	75112	NCPT	31908	76244	NC	31307	75113	NEXST	32549	77445
NOP	32561	77461	NQ	32548	77444	NRC	32545	77441	NSTRP	31909	77445
NTAPE2	32437	77265	NTAPE3	32436	77264	NTAPE4	32435	77263	NTAPE5	32434	77262
NTAPE6	32433	77261	NTAPE8	32432	77260	Q	32420	77244	SMALS	32425	77251
TITL1	32539	77433	TITL2	32538	77432	X	32537	77431	Y	32487	77347
Z1	31808	76100									

STORAGE LOCATIONS FOR VARIABLES APPEARING IN DIMENSION AND EQUIVALENCE STATEMENTS

CL	DEC	OCT	DEC	OCT	DEC	OCT					
TSCP	517	01005	CM	515	01003	CZ	513	01001	TCCP	511	00777

STORAGE LOCATIONS FOR VARIABLES NOT APPEARING IN COMMON, DIMENSION, OR EQUIVALENCE STATEMENTS

	DEC	OCT	DEC	OCT	DEC	OCT
CD	507	00773	CE	506	00772	
L2	503	00767	L	502	00766	
					I	505 00771
						LI 594 00770
						DEC OCT

SYMBOLS AND LOCATIONS FOR SOURCE PROGRAM FORMAT STATEMENTS

8168	EFN	LOC	200	00753	8169	EFN	LOC	201	00666	816A	EFN	LOC	202	00641	816C	EFN	LOC	204	00532
------	-----	-----	-----	-------	------	-----	-----	-----	-------	------	-----	-----	-----	-------	------	-----	-----	-----	-------

CENTER OF PRESSURE SUBROUTINE

12/04/62

LOCATIONS FOR OTHER SYMBOLS NOT APPEARING IN SOURCE PROGRAM

DEC	OCT	DEC	OCT	DEC	OCT
1) 493 00755	2) 329 00511	3) 333 00515	6) 334 00516		
9) 492 00754	A)101 316 00474	C)160 497 00761	C)161 498 00762		
C)100 499 00763	C)101 500 00764	C)102 501 00765	D)408 207 00317		
D)508 206 00316					

LOCATIONS OF NAMES IN TRANSFER VECTOR

DEC	OCT	DEC	OCT
(FIL) 1 00001	(STH) 0 00000		

ENTRY POINTS TO SUBROUTINES NOT OUTPUT FROM LIBRARY

(FIL) (STH)

EXTERNAL FORMULA NUMBERS WITH CORRESPONDING INTERNAL FORMULA NUMBERS AND OCTAL LOCATIONS

EFN	IFN	LOC	EFN	IFN	LOC
205	18 00052	206	207	22 00104	208
210	34 00236	211	36 00244	37 00246	213
214	48 00353	215	50 00374	57 00444	217
					60 00461

11/30/62

```

SUBROUTINE LOADS
  DIMENSION NOP(24), Q(10), X(50), Y(50), ATTIT(50,2), CZRE(50,2),
1    HADD(50,2), LL(50), LH(50), CNIN(50,2), HR(50,2),
2    NCPT(50), DELY(50), ZI(50,10)
  DIMENSION A(50,100), B(50,100), C(50,2), D(50,2), H(50,2),
1    F(50,2), FR(50,2), HF(50,2), HI(50,2), FA(50,2),
2    FFR(50,2), WCHK(50,2), ZZ(2), DT(2), DD(2),
3    SHEAR(20,50), FOM(20,50), TORQU(20,50), LOM(50),
4    LHGM(50), Z(2)
  EQUIVALENCE (NBP(14),NQ), (NOP(13),NEXST), (LH,X), (LL,Y),
1    (NBP(17),NRC), (NOP(23),TITL1), (NOP(24),TITL2)

  COMMON NOP, X, Y, NTAPE2, NTAPE3, NTAPE4, NTAPE5, NTAPE6, NTAPE8, HNO31273
1    CBAR, FLEKK, CAPS, CAPH, CAPT, CAPN, SMALS, CAPXO, CIOKRHHNO31274
2    CAPZ, CAPHO, Q, MAXR, ATTIT, CZRE, CNIN, HR, HADD,
3    NSTRP, NCPT, DELY, ZI, MAXO, NC, CNRC, A, B, C, D, H,
4    F, FR, HF, HI, FA, FFR, WCHK, ZZ, Z, DT, DD, SHEAR, FOM, HNO31277
5    TORQU, LOM, HIGH, DDEN, DIMAG, DREAL, IQ, I, J, L, NVNT HNO31278
6    ,LHIGH

400 FORMAT (1H1 35X, 25H SHEAR COEFFICIENT MATRIX )
401 FORMAT (1H0 35X, 26H MOMENT COEFFICIENT MATRIX )
402 FORMAT (1H0 35X, 26H TORQUE COEFFICIENT MATRIX )
403 FORMAT (1H1 27X, 40H LOADS FOR CONSTANT ROOT ANGLE OF ATTACK )
404 FORMAT (1H1 34X, 28H LOADS FOR TRIMMED CONDITION )
405 FORMAT (1H1 30X, 36H LOADS FOR CONSTANT LIFT COEFFICIENT )
406 FORMAT (1H0 10X, 22H AERODYNAMIC LIFT (Z)= 1E18.8 / 1H0 6X,
1    26H INCREMENTAL PITCH ANGLE = 1E18.8 )
407 FORMAT (1H 11X, 113, 1E20.8, 27X, 113, 1E20.8 )
408 FORMAT (1H 113, 2X, 2E18.8, 2H I 7X, 113, 2X, 2E18.8, 2H I )
409 FORMAT (1H0 6X, 37H FINAL AERODYNAMIC FORCE DISTRIBUTION 1 7X,
1    25H TOTAL FORCE DISTRIBUTION )
410 FORMAT (1H0 31X, 20H DYNAMIC PRESSURE = 1E16.8 )
411 FORMAT (1H0 10X, 22H AERODYNAMIC LIFT (Z)= 2E18.8, 1H1 / 1H0 6X,
1    26H INCREMENTAL PITCH ANGLE = 2E18.8, 1H1 )
412 FORMAT (1H0 17X, 17H DEFORMATION MODE 30X, 17H TOTAL DEFLECTION
1    5 H MODE )
413 FORMAT (1H0 37X, 22HSHEAR AT LOAD STATIONS / (1H 6E18.8) )
414 FORMAT (1H0 36X, 24H MOMENT AT LOAD STATIONS / (1H 6E18.8) )

```

11/30/62

```

415 FORMAT (1H0 36X, 23HTORQUE AT LOAD STATIONS / (1H 6E18.8) )
416 FORMAT (1814)
417 FORMAT (6E12.8)

      REMIND NTAPE4
      REMIND NTAPES
      REMIND NTAPES

      IF (NOP(16)) 450,450,420
C  READ IN (V/F), (M/F), (T/F) MATRICES.
420 DO 432 I=1,3
      READ INPUT TAPE NTAPES2, 416, NVMT
      READ INPUT TAPE NTAPES2, 416, ((LOW(J),LHIGH(J)),J=1,NVMT)
      DO 424 J=1,NVMT
        DO 422 K=1,NRC
          A(J,K)=0.
          M=LOW(J)
          L=LHIGH(J)
424      READ INPUT TAPE NTAPES2, 417, ((A(J,K)),K= M,L )
          GOTO (426,428,430),I
426      WRITE OUTPUT TAPE NTAPES3, 400
          DO 427 J=1,NVMT
            DO 427 K=1,NRC
              SHEAR(J,K)=A(J,K)
427      NVMS=NVMT
          GOTO 432
428      WRITE OUTPUT TAPE NTAPES3, 401
          DO 429 J=1,NVMT
            DO 429 K=1,NRC
              FPM(J,K)=A(J,K)
429      NVFM=NVMT
          GOTO 432
430      WRITE OUTPUT TAPE NTAPES3, 402
          DO 431 J=1,NVMT
            DO 431 K=1,NRC
              TORQUE(J,K)=A(J,K)
431      CALL MPRINT (A,NVMT,NRC,MAXR,NTAPES3)
432

```

HMO31299
 HMO31300
 HMO31301
 HMO31302
 HMO31303
 HMO31304
 HMO31305
 HMO31306
 HMO31307
 HMO31308
 HMO31309
 HMO31310
 HMO31311
 HMO31312
 HMO31313
 HMO31314
 HMO31315
 HMO31316
 HMO31317
 HMO31318
 HMO31319
 HMO31320
 HMO31321
 HMO31322
 HMO31323
 HMO31324
 HMO31325
 HMO31326
 HMO31327
 HMO31328
 HMO31329
 HMO31330
 HMO31331
 HMO31332
 HMO31333
 HMO31334
 HMO31335
 HMO31336

11/30/62

```

C COMPUTE (H) COLUMN MATRIX
450 DO 454 J=1,NC
    DO 454 I=1,NRC
        H(I,J)=CAPH*HR(I,J)+CAPH*HADD(I,J)+CAPT*ATT(I,I,J)
454 READ (H) (CH) FROM TAPE NTAPES INTO A AND COMPUTE (FR)
    READ TAPE NTAPES, I(ATT,I,J),J=1,NC,NRC, I=1,NRC)
    CALL PMULTD (A,NOP(7), H,NOP(7),C,NRC,NRC, 1,MAXR,MAXR,MAXR )
    DO 459 J=1,NC
        DO 456 I=1,NRC
            DO 456 JFR(I,J)=CAPS* C(I,J) /CBAR
456 IF ( NOP(12) ) 457,459,457
457 DO 458 I=1,NRC
458 FFR(I,J)=FFR(I,J) + CAPS* CZRE(I,J)
459 CONTINUE
        IF (NOP(2)+NOP(3)) 460,478,460
460 CALL PMULTD (A,NOP(7),X,0,NCHX,NRC,NRC,1,MAXR,MAXR,MAXR )
        Z(1)=CAPZ
        Z(2)=0.
        IF ( NOP(3) ) 462,478,462
462 DO 464 J=1,NC
        DO 464 I=1,NRC
            C(I,J) = CAPH*HR(I,J)+CAPH*HADD(I,J)
464 CALL PMULTD (A,NOP(7),C,NOP(7), D ,NRC,NRC, 1,MAXR,MAXR,MAXR)
        DO 476 J=1,NC
            ZZ(J)=0.
            DO 470 I=1,NRC
                ZZ(J)=ZZ(J)+ D(I,J)
470 IF (NOP(12)) 472,476,472
472 DO 474 I=1,NRC
            ZZ(J) = ZZ(J)+ CZRE(I,J)
474

```

HMO31337
 HMO31338
 HMO31339
 HMO31340
 HMO31341
 HMO31342
 HMO31343
 HMO31344
 HMO31345
 HMO31346
 HMO31347
 HMO31348
 HMO31349
 HMO31350
 HMO31351
 HMO31352
 HMO31353
 HMO31354
 HMO31355
 HMO31356
 HMO31357
 HMO31358
 HMO31359
 HMO31360
 HMO31361
 HMO31362
 HMO31363
 HMO31364
 HMO31365
 HMO31366
 HMO31367
 HMO31368
 HMO31369
 HMO31370
 HMO31371
 HMO31372
 HMO31373
 HMO31374

11/30/62

```

476 ZZ(J)= ZZ(J)+CAPS / CBAR
478 SENSE LIGHT 0
B READ FLEXIBILITY. (A),MATRIX FROM NTAPE4 INTO B.
  READ TAPE NTAPES, ((B(I,J),J=1,NRC),I=1,NRC)
  IF INOP(1) ) 481,482,481
481 SENSE LIGHT 1
482 IF INOP(2) ) 483,484,483
483 SENSE LIGHT 2
484 IF INOP(3) ) 485,486,485
485 SENSE LIGHT 3
486 DO 554 IQ=1,NQ
      DO 488 J=1,NC
      DO 488 I=1,NRC
      FR(I,J) = Q(IQ) * FFR(I,J) +CAPN*CNIN(I,J)
C READ (A) FROM NTAPES INTO A ARRAY
  READ TAPE NTAPES, ((A(I,J),J=1,NCNRC),I=1,NRC)
  IF (SENSE LIGHT 1) 490,492
490 SENSE LIGHT 1
  CALL MMULTD (BIO,FR,NOP(7),D,NRC,NRC,1,MAXR,MAXR,MAXR)
  CALL PMULTD (A,NOP(7),D,NOP(7),HF,NRC,NRC,1,MAXR,MAXR,MAXR)
C READ (B) MATRIX INTO A.
492 READ TAPE NTAPES, ((A(I,J),J=1,NCNRC),I=1,NRC)
  CALL MMULTD (A,NOP(7),FR,NOP(7),F,NRC,NRC,1,MAXR,MAXR,MAXR)
  IF (SENSE LIGHT 1) 514,494
494 CALL MMULTD (A,NOP(7),MCHX,NOP(7),D, NRC,NRC,1,MAXR,MAXR,MAXR)
      DO 496 J=1,NC

```

HMO31375
 HMO31376
 HMO31377
 HMO31378
 HMO31379
 HMO31380
 HMO31381
 HMO31382
 HMO31383
 HMO31384
 HMO31385
 HMO31386
 HMO31387
 HMO31388
 HMO31389
 HMO31390
 HMO31391
 HMO31392
 HMO31393
 HMO31394
 HMO31395
 HMO31396
 HMO31397
 HMO31398
 HMO31399
 HMO31400
 HMO31401
 HMO31402
 HMO31403
 HMO31404
 HMO31405
 HMO31406
 HMO31407
 HMO31408
 HMO31409
 HMO31410
 HMO31411
 HMO31412

11/30/62

```

DT(J)=0.
DB(J)=0.
DB 496 I=1,NRC
DT(J)=DT(J)+F(I,J)-CAPN*CN1M(I,J)
DD(J)=DD(J)+D(I,J)
406 IF (SENSE LIGHT 2 ) 498,500

408 SENSE LIGHT2
GOTO 502

500 Z(1)=ZZ(1)*Q(IQ)
Z(2)=ZZ(2)*Q(IQ)

502 IF (NC-1) 506,504,506
504 DT(1)= (DT(1)-Z(1)) / (Q(IQ)*CAPS*DD(1) / CBAR )
DO 505 I=1,NRC
505 F(I,1)=F(I,1)-DT(1)*D(I,1)=Q(IQ)*CAPS/CBAR
GOTO 511

506 DREAL = (DT(1)-Z(1))*DD(1) + (DT(2)-Z(2))*DD(2)
DIMAG = (DT(2)-Z(2))*DD(1) - (DT(1)-Z(1))*DD(2)
DDEN = (DD(1)**2 + DD(2)**2 )
DT(1)= DREAL*CBAR / (CDEN*Q(IQ)*CAPS)
DT(2)= DIMAG*CBAR / (CDEN*Q(IQ)*CAPS)

DB 510 I=1,NRC
F(I,1)=F(I,1)-(Q(IQ)*CAPS/CBAR)* (DT(1)*D(I,1)-DT(2)*D(I,2))
510 F(I,2)=F(I,2)-(Q(IQ)*CAPS/CBAR)* (DT(1)*D(I,2)+DT(2)*D(I,1))

511 CALL PMULTD (B,0,F,0,HF,NRC,NRC,1,MAXR,MAXR,MAXR)

DO 512 J=1,NC
DB 512 I=1,NRC
HI(I,J) = FLEX*HF(I,J) + H(I,J) -DT(J)*X(I)
GOTO 518

514 SENSE LIGHT 1

```

HMO31413
HMO31414
HMO31415
HMO31416
HMO31417
HMO31418
HMO31419
HMO31420
HMO31421
HMO31422
HMO31423
HMO31424
HMO31425
HMO31426
HMO31427
HMO31428
HMO31429
HMO31430
HMO31431
HMO31432
HMO31433
HMO31434
HMO31435
HMO31436
HMO31437
HMO31438
HMO31439
HMO31440
HMO31441
HMO31442
HMO31443
HMO31444
HMO31445
HMO31446
HMO31447
HMO31448
HMO31449
HMO31450

11/30/62

```

CALL PMULTD (BIO,F,NOPI7),HI,NRC,NRC,1,MAXR,MAXR,MAXR)
DO 516 J=1,NC
DO 516 I=1,NRC
HI(I,J)=FLBK*HI(I,J)+H(I,J)
516

518 DO 520 J=1,NC
DO 520 I=1,NRC
HF(I,J)=FLBK*HF(I,J)
520 FA(I,J)=F(I,J)-CAPN*CN1N(I,J)

IF ISENSE LIGHT 1 1 524,526
524 SENSE LIGHT 1
WRITE OUTPUT TAPE NTAPB3, 403
GOTO 532

528 IF ISENSE LIGHT 2 1 528,530
528 SENSE LIGHT 2
WRITE OUTPUT TAPE NTAPB3, 404
GOTO 532

530 WRITE OUTPUT TAPE NTAPB3, 405

532 WRITE OUTPUT TAPE NTAPB3, 410, Q(IQ)
IF ISENSE LIGHT 1 1 534,536
534 SENSE LIGHT 1
GOTO 542

536 IF INC-1) 540,540,538
538 WRITE OUTPUT TAPE NTAPB3, 411, ( Z(J),J=1,NC), (DT(I),J=1,NC)
GOTO 542

540 WRITE OUTPUT TAPE NTAPB3, 406, Z(1), DT(1)

542 WRITE OUTPUT TAPE NTAPB3, 412
IF INC-1) 546,544,546
544 WRITE OUTPUT TAPE NTAPB3, 407, (I,HF(I,1),I,HI(I,1),I=1,NRC)
GOTO 548

```

HMO31451
 HMO31452
 HMO31453
 HMO31454
 HMO31455
 HMO31456
 HMO31457
 HMO31458
 HMO31459
 HMO31460
 HMO31461
 HMO31462
 HMO31463
 HMO31464
 HMO31465
 HMO31466
 HMO31467
 HMO31468
 HMO31469
 HMO31470
 HMO31471
 HMO31472
 HMO31473
 HMO31474
 HMO31475
 HMO31476
 HMO31477
 HMO31478
 HMO31479
 HMO31480
 HMO31481
 HMO31482
 HMO31483
 HMO31484
 HMO31485
 HMO31486
 HMO31487
 HMO31488

HM031489
HM031490
HM031491
HM031492
HM031493
HM031494
HM031495
HM031496
HM031497
HM031498
HM031499
HM031500
HM031501
HM031502
HM031503
HM031504
HM031505
HM031506
HM031507
HM031508
HM031509
HM031510
HM031511
HM031512
HM031513
HM031514
HM031515
HM031516
HM031517
HM031518
HM031519
HM031520
HM031521

-139-

11/30/62

STORAGE NOT USED BY PROGRAM

DEC OCT
1398 02566

DEC OCT
17188 41444

STORAGE LOCATIONS FOR VARIABLES APPEARING IN COMMON STATEMENTS

A 31305 75111	DEC OCT	DEC OCT	DEC OCT
CAPR 32421 77245		ATP1 32409 77231	B 26305 63301
CAPT 32427 77253		CAPH 32428 77254	CAPN 32426 77252
CM1N 32209 76721		CAPX 32424 77250	CAPZ 32422 77246
DB 20299 47513		C 21305 51471	CZRE 32309 77065
B 21205 51325		DELY 31858 76162	DIMAG 17245 41535
FLEXK 32430 77256		DT 20301 47515	FA 20605 50175
HAD 32809 76411		FROM 19297 45541	FR 20905 50651
HR 32109 76555		H 21105 51161	HIGH 17247 41537
J 17241 41531		LHIGH 17238 41526	I 17242 41532
LOW 17297 41621		L 17240 41530	LL 32487 77347
NCBRC 31906 75112		NCPT 31908 76244	MAXR 32410 77232
MBP 32561 77461		NQ 32548 77444	MBXST 32549 77445
NTARE2 32437 77265		NTAPB3 32436 77264	NSTRP 31909 76245
NTARE6 32433 77261		NTARE8 32432 77260	NTAPE5 32434 77262
SHEAR 20297 47511		SMALS 32425 77251	Q 32420 77244
TORQU 18297 43671		WCHX 20405 47665	TITL2 32538 77432
Z1 31808 76100		Z 20303 47517	Y 32487 77347

STORAGE LOCATIONS FOR VARIABLES NOT APPEARING IN COMMON, DIMENSION, OR EQUIVALENCE STATEMENTS

DEC OCT
N 1397 02565

DEC OCT
NVMM 1396 02564
NVMS 1395 02563

SYMBOLS AND LOCATIONS FOR SOURCE PROGRAM FORMAT STATEMENTS

EFN 400 02544	LOC	EFN 403 02514	LOC
81CG 404 02502		81CJ 407 02435	
81CK 408 02425		81CN 411 02360	
81CH 401 02534	LOC	81CI 402 02524	LOC
81CL 405 02471		81CM 406 02457	
81CP 409 02413		81CQ 410 02371	

11/30/62

8)CS 412 02335 8)CT 413 02317 8)CU 414 02305 8)CV 415 02273 /
8)DO 416 02261 8)DI 417 02257

LOCATIONS FOR OTHER SYMBOLS NOT APPEARING IN SOURCE PROGRAM

DEC	OCT	DEC	OCT	DEC	OCT
1) 1381 02545	2) 1186 02242	3) 1191 02247	6) 1192 02250		
C)G1 1385 02551	C)G2 1386 02552	C)G3 1387 02553	C)I02 1388 02554		
C)201 1389 02555	C)203 1390 02556	C)204 1391 02557	C)205 1392 02560		
C)206 1393 02561	C)207 1394 02562	D)24A 592 01740	D)405 66 00102		
D)505 65 00101	E)1P 432 00660				

LOCATIONS OF NAMES IN TRANSFER VECTOR

DEC	OCT	DEC	OCT	DEC	OCT
MMURTD 8 00010	MPRINT 5 00005	(FIL) 4 00004	(KLR) 7 00007		
(RTN) 2 00002	(RWT) 0 00000	(STH) 3 00003	(TSB) 6 00006		
(TSH) 1 00001					

ENTRY POINTS TO SUBROUTINES NOT OUTPUT FROM LIBRARY

MMURTD	MPRINT	(FIL)	(RLR)	(RTN)	(RWT)	(STH)	(TSB)
(TSH)							

EXTERNAL FORMULA NUMBERS WITH CORRESPONDING INTERNAL FORMULA NUMBERS AND OCTAL LOCATIONS

EFN	IFN	LOC	EFN	IFN	LOC	EFN	IFN	LOC
420 29 00034	422 41 00103	424 44 00114	426 50 00157					
427 53 00203	428 56 00220	429 59 00244	430 62 00261					
431 65 00305	432 66 00317	450 68 00330	454 70 00346					
456 82 00461	457 84 00472	458 85 00472	459 86 00501					
460 88 00513	462 93 00535	464 95 00553	470 101 00641					
472 103 00651	474 104 00651	476 105 00663	478 106 00677					
481 115 00727	482 116 00730	483 117 00732	484 118 00733					
485 119 00735	486 120 00736	488 123 00760	490 132 01025					
492 137 01056	494 147 01122	496 154 01165	498 156 01202					
500 158 01204	502 160 01212	504 161 01217	505 163 01233					

11/30/62

506	165 01247	510	172 01350	511	173 01371	512	177 01416
514	179 01437	516	184 01472	518	185 01505	520	188 01526
524	190 01544	526	193 01552	528	194 01554	530	197 01562
532	198 01566	534	201 01577	536	203 01601	538	204 01606
540	213 01631	542	215 01641	544	217 01652	546	223 01677
548	235 01741	550	237 01752	551	245 01777	552	257 02040
553	258 02044	554	285 02212	557	288 02223	556	289 02226
558	290 02230	566	292 02232	562	293 02234	564	295 02236

11/19/62

SUBROUTINE DERIV

```

DIMENSION NOP(24), Q(10), X(50), Y(50), ATT(50,2), CZRE(50,2),
1 HADD(50,2), LL(50), LH(50), CNIN(50,2), HR(50,2),
2 NCPT(50), DELY(50), ZI(50,10)
DIMENSION A(50,100), B(50,100), C(50,2), D(50,2), E(50,2)

EQUIVALENCE (NOP(14),NO), (NOP(13),NEXST), (LH,X), (LL,Y),
1 (NOP(17),NRC), (NOP(23),TITL1), (NOP(24), TITL2)

COMMON NOP,X,Y,NTAPE2,NTAPE3,NTAPE4,NTAPE5,NTAPE6,NTAPE8,CBAR,
1 FLEXK,CAPS,CAPH,CAPT,CAPN,SMALS,CAPXQ,C10KR,CAPZ,CAPHQ,Q,
2 MAXR,ATTIT,CZRE,CNIN,HR,HADD,NSTRP,NCPT,DELY,ZI,MAXQ,NC,
3 NCMRC,A,B,C,D,H,E,NX,TRASH

6 FORMAT(1H138(1H 120)INITIAL COEFFICIENTS)
7 FORMAT(1H134(1H 133)AERODYNAMIC STABILITY DERIVATIVES)
8 FORMAT(1H133(1H 129)THERMAL STABILITY DERIVATIVES)
9 FORMAT (53H0*****DISTRIBUTED FORCE COEFFICIENTS (DYNAM
1 14HC PRESSURE = 1E15.8, 1H) / )
10 FORMAT(1H137(1H 120)INERTIAL DERIVATIVES)
11 FORMAT (1H 28X, 36H)ADDITIONAL DEFLECTION MODE (H/REF H) / )
12 FORMAT (1H 36X, 5H REAL // (1H 24X, 116, 3X, 1E18.8) )
13 FORMAT (1H 35X, 7H)COMPLEX // (1H 15X, 116, 3X, 2E18.8, 1H))

REWIND NTAPE4
REWIND NTAPES
REWIND NTAPE8
SENSE LIGHT 0
NX=0

C TEST FOR OPTION 5,6,7,8,9 AND SET SLS ACCORDINGLY.
IF (NOP(5)) 24,24,23
23 SENSE LIGHT 1

24 IF (NOP(6)) 26,26,25
25 SENSE LIGHT 2

```

11/19/62

HM031561
HM031562
HM031563
HM031564
HM031565
HM031566
HM031567
HM031568
HM031569
HM031570
HM031571
HM031572
HM031573
HM031574
HM031575
HM031576
HM031577
HM031578
HM031579
HM031580
HM031581
HM031582
HM031583
HM031584
HM031585
HM031586
HM031587
HM031588
HM031589
HM031590
HM031591
HM031592
HM031593
HM031594
HM031595
HM031596
HM031597
HM031598

26 IF (NOP(8)) 28,28,27
27 SENSE LIGHT 3

28 IF (NOP(9)) 30,30,29
29 SENSE LIGHT 4

C THEN PROCEED TO (C) COMPUTATIONS.

30 IF (SENSE LIGHT 1) 31,34
31 SENSE LIGHT 1
WRITE OUTPUT TAPE NTAPE3, 6
DO 32 I=1,NC

DO 32 J=1,NRC
32 D(J,I) = (CAPHO) =HR(J,I)
GOTO 45

34 IF (SENSE LIGHT 2) 35,38
35 SENSE LIGHT 2
WRITE OUTPUT TAPE NTAPE3, 7
DO 36 I=1,NC

DO 36 J=1,NRC
36 D(J,I) = MACD(J,I)
GOTO 45

38 IF (SENSE LIGHT 3) 39,42
39 SENSE LIGHT 3
WRITE OUTPUT TAPE NTAPE3, 8
DO 40 I=1,NC

DO 40 J=1,NRC
40 D(J,I) = ATTIT(J,I)
GOTO 45

42 IF (SENSE LIGHT 4) 43,67
43 SENSE LIGHT 4
WRITE OUTPUT TAPE NTAPE3, 10

C READ FLEXIBILITY MATRIX FROM TAPE (A)
READ TAPE NTAPE4, ((A(I,J),J=1,NRC),I=1,NRC)

11/19/62

HM031599
HM031600
HM031601
HM031602
HM031603
HM031604
HM031605
HM031606
HM031607
HM031608
HM031609
HM031610
HM031611
HM031612
HM031613
HM031614
HM031615
HM031616
HM031617
HM031618
HM031619
HM031620
HM031621
HM031622
HM031623
HM031624
HM031625
HM031626
HM031627
HM031628
HM031629
HM031630
HM031631
HM031632
HM031633
HM031634
HM031635
HM031636

```

CALL PHULTD ( A,O,CNIN,NOP(7),D,NRC,NRC,1, MAXR,MAXR,MAXR)
DO 44 I=1,NC
  DO 44 J=1,NRC
    44 E(J,I) = FLEXX*D(J,I) / CBAR

C READ AERO. MATRIX FROM TAPE (W) (CH)
READ TAPE NTAPES, ((B(I,J),J=1,NCNRC),I=1,NRC)
NX=1
GOTO 50
45 READ TAPE NTAPES, ((A(I,J),J=1,NCNRC),I=1,NRC)
CALL PHULTD ( A,NOP(7),D,NOP(7),C,NRC,NRC,1, MAXR,MAXR,MAXR)
DO 46 I=1,NC
  DO 46 J=1,NRC
    46 C(J,I)=C(J,I)/CBAR
  IF (SENSE LIGHT 1) 47,50
47 SENSE LIGHT 1
  IF (NOP(12)) 50,50,48
48 DO 49 I=1,NC
  DO 49 J=1,NRC
    49 C(J,I)= C(J,I)+CZRE(J,I)

C START COMPUTATIONS FOR EACH DYNAMIC PREASURE, Q.
50 DO 60 IQ=1,NQ

  READ TAPE NTAPES, ((A(I,J),J=1,NCNRC),I=1,NRC)
  IF ( Q(IQ) ) 51,51,53
51 IF ( NX ) 71,71,54
71 DO 52 J=1,NC
  DO 52 I=1,NRC
    52 D(I,J) = C(I,J)
  GOTO 55
53 IF ( NX ) 56,56,54
54 CALL PHULTD ( A,NOP(7),E,NOP(7),C,NRC,NRC,1, MAXR,MAXR,MAXR)
55 CALL PHULTD ( B,NOP(7),C,NOP(7),D,NRC,NRC,1, MAXR,MAXR,MAXR)
55 READ TAPE NTAPES, TRASH
GOTO 57

```

11/19/62

```

56 READ TAPE NTAPE3, ((A(I,J),J=1,NCNRC),I=1,NRC)
57 CALL PHULTD ( A,NOP(7),C,NOP(7),D,NRC,NRC,1, MAXR,MAXR,MAXR)
58 WRITE OUTPUT TAPE NTAPE3, 9, Q(IQ)
59 IF (NC-1) 58,58,59
60 WRITE OUTPUT TAPE NTAPE3, 12, (J,D(J,1),J=1,NRC)
61 GOTO 70
62 WRITE OUTPUT TAPE NTAPE3, 13, (J,(D(J,1),I=1,NC),J=1,NRC)
70 CALL CENTER (D)
60 CONTINUE
REWIND NTAPE4
REWIND NTAPES
REWIND NTAPE8
61 IF (SENSE LIGHT 1 ) 34,61
62 IF (SENSE LIGHT 2 ) 62,66
63 NOP(6)=NOP(6)-1
64 IF (NOP(6)) 38,38,63
65 SENSE LIGHT 2
66 CALL MREAD (D,NRC,NC,1,0,0,0,A,MAXR,NTAPE2,NTAPE3 )
67 WRITE OUTPUT TAPE NTAPE3, 7
68 WRITE OUTPUT TAPE NTAPE3, 11
69 IF (NC-1) 64,64,65
70 WRITE OUTPUT TAPE NTAPE3, 12, (I,D(I,1),I=1,NRC)
71 GOTO 45
72 WRITE OUTPUT TAPE NTAPE3, 13, (I,(D(I,J),J=1,NC),I=1,NRC)
73 GOTO 45
66 IF ( SENSE LIGHT 3 ) 42,67
67 RETURN
END(1,0,0,0,0,C,0,0,0,1,0,0,0,0,0)

```

HMO31637
 HMO31638
 HMO31639
 HMO31640
 HMO31641
 HMO31642
 HMO31643
 HMO31644
 HMO31645
 HMO31646
 HMO31647
 HMO31648
 HMO31649
 HMO31650
 HMO31651
 HMO31652
 HMO31653
 HMO31654
 HMO31655
 HMO31656
 HMO31657
 HMO31658
 HMO31659
 HMO31660
 HMO31661
 HMO31662
 HMO31663
 HMO31664
 HMO31665
 HMO31666
 HMO31667
 HMO31668

STORAGE NOT USED BY PROGRAM

DEC OCT
21002 51012

STORAGE LOCATIONS FOR VARIABLES APPEARING IN COMMON STATEMENTS

	DEC	OCT	DEC	OCT		DEC	OCT
ATTLT	32409	77231	B	26305	63301	C1OKR	32423
CAPH	32428	77254	CAPN	32426	77252	CAPS	32429
CAPXO	32424	77250	CAPZ	32422	77246	CBAR	32431
C	21305	51471	CZRE	32309	77065	DELY	31858
E	21104	51160	FLEKK	32430	77256	HADD	32009
H	21105	51161	LH	32537	77431	LL	32487
MAXR	32410	77232	NCNRC	31306	75112	NCPT	31908
NEXTS	32549	77445	NOP	32561	77461	NQ	32548
NSTRP	31909	76245	NTAPE2	32437	77265	NTAPE3	32436
NTAPES	32434	77262	NTAPE6	32433	77261	NTAPE8	32432
Q	32420	77244	SMALS	32425	77251	TITL1	32539
TRASH	21003	51013	X	32537	77431	Y	32487

STORAGE LOCATIONS FOR VARIABLES NOT APPEARING IN COMMON, DIMENSION, OR EQUIVALENCE STATEMENTS

DEC OCT
J 679 01247

SYMBOLS AND LOCATIONS FOR SOURCE PROGRAM FORMAT STATEMENTS

[illegible]

LOCATIONS FOR OTHER SYMBOLS NOT APPEARING IN SOURCE PROGRAM

	DEC	OCT	DEC	OCT
2)	595	01123	6)	598 01126

LOCATIONS OF NAMES IN TRANSFER VECTOR

DEC		OCT		DEC		OCT		DEC		OCT	
CENTER	6	00006	MMULTD	5	00005	MREAD	7	00007	(FIL)	2	00002
(RIR)	4	00004	(RWT)	0	00000	(STH)	1	00001	(TSB)	3	00003

ENTRY POINTS TO SUBROUTINES NOT OUTPUT FROM LIBRARY

CENTER	MMIII TO	MBREAD	(FIL)	(RLR)	(RWT)	(STH)	(TSB)
--------	----------	--------	-------	-------	-------	-------	-------

EXTERNAL FORMULA NUMBERS WITH CORRESPONDING INTERNAL FORMULA NUMBERS AND OCTAL LOCATIONS

EFN	IFN	LOC	EFN	IFN	LOC	EFN	IFN	LOC	EFN	IFN	LOC	EFN	IFN	LOC
23	21	00036	24	22	00037	25	23	00043	26	24	00044	27	25	00050
27	25	00050	28	26	00051	29	27	00055	30	28	00056	31	29	00060
31	29	00060	32	33	00103	34	35	00116	35	36	00120	36	40	00143
36	40	00143	38	42	00155	39	43	00157	40	47	00202	42	49	00214
42	49	00214	43	50	00216	44	63	00302	45	73	00345	46	84	00424
46	84	00424	47	86	00440	48	88	00445	49	90	00463	50	91	00475
50	91	00475	51	100	00530	71	101	00533	52	103	00551	53	105	00563
53	105	00563	54	106	00567	55	110	00617	56	113	00625	57	122	00666
57	122	00666	58	125	00700	59	131	00721	70	138	00756	60	140	00760
60	140	00760	61	145	00773	62	146	00775	63	148	01004	64	154	01035
64	154	01035	65	160	01056	66	168	01114	67	169	01117			

MATRIX ITERATION SUBROUTINE, REAL OR COMPLEX.

2/20/63

C CALLING SEQUENCE.....

C A = MATRIX, DIMENSIONED (MAXR X N) - REAL
 C (MAXR X 2*N) - COMPLEX
 C NTAPE=UTILITY TAPE, IF + MATRIX IS IN CORE AT A, IF - ITS ON NTAPE
 C N = ORDER OF MATRIX
 C GUESS=1ST. GUESS VECTOR, DIMENSIONED (MAXR X 1) - REAL
 C (MAXR X 2) - COMPLEX
 C NGUESS=0, ROUTINE SUPPLIES GUESS VECTOR
 C =+1, GUESS CONTAINS GUESS VECTOR
 C NMODE=NUMBER OF EIGEN SOLUTIONS REQUESTED.
 C VECTOR=EIGENVECTORS, DIMENSIONED (MAXR X NMODE) - REAL
 C (MAXR X 2*NMODE) - COMPLEX
 C EIGVAL=EIGENVALUES
 C (NMODE X 1) - REAL
 C (NMODE*2 X 1) - COMPLEX
 C NITER=NUMBER OF ITERATIONS PER MODE
 C NITRSP = MAXIMUM NUMBER OF SINGLE PRECISION ITERATIONS
 C EPS = CONVERGENCE CRITERIA
 C IR = ERROR INDICATOR
 C US=CHECK EIGENVECTORS, DIMENSIONED (MAXR X NMODE) - REAL
 C (MAXR X 2*NMODE) - COMPLEX
 C H = WORKING AREA OF CORE, DIMENSIONED (MAXR X (NMODE*2)) - REAL
 C (MAXR X 2*(NMODE*2)) - COMPLEX
 C WILL CONTAIN CHECK EIGENVALUES, IF REQUESTED.
 C NTAPE1=TAPE NUMBER OF OUTPUT PRINT TAPE
 C IF = 0, NO RESULTS WILL BE PRINTED
 C MAXR = DIMENSIONED NUMBER OF ROWS
 C NC = 1, PROBLEM REAL
 C = 2, PROBLEM COMPLEX
 C AITKEN = AITKEN COVERAGE CRITERIA
 C NAKSR = NUMBER OF TIMES AITKEN APPLIED IN EACH MODE

SUBROUTINE MITER (A, NTAPE, N, GUESS, NGUESS, NMODE, VECTOR,
 1 EIGVAL, NITER, NITRSP, EPS, IR, US, H,
 HMO31672
 HMO31673
 HMO31674
 HMO31675
 HMO31676
 HMO31677
 HMO31678
 HMO31679
 HMO31680
 HMO31681
 HMO31682
 HMO31683
 HMO31684
 HMO31685
 HMO31686
 HMO31687
 HMO31688
 HMO31689
 HMO31690
 HMO31691
 HMO31692
 HMO31693
 HMO31694
 HMO31695
 HMO31696
 HMO31697
 HMO31698
 HMO31699
 HMO31700
 HMO31701
 HMO31702
 HMO31703
 HMO31704
 HMO31705
 HMO31706
 HMO31707
 HMO31708

MATRIX ITERATION SUBROUTINE, REAL OR COMPLEX.

2/20/63

```

2      MAXR, NC, AITKEN, NAKSR, NTAPE1 )
      DIMENSION A(1), GUESS(1), VECTOR(1), EIGVAL(1), NITER(1), US(1),
1      H(1), NAKSR(1), BOOLT(4)
      BOOLT(1)=606046652551
      BOOLT(2)=264346666060
      BOOLT(3)=243165312425
      BOOLT(4)=602330252342
      IF ACCUMULATOR OVERFLOW      3,3
3      IF DIVIDE CHECK      4,4
C FIND MATRIX AND STORE ON TAPE IF NECESSARY
4      I=NTAPE
      J2=MAXR*NC*N
      IF ( I ) 5,8,6
5      I=-1
      REWIND 1
      DO 1 J=1,N
1      READ TAPE 1, (A(K),K=J,J2,MAXR)
      NTAPE = I
      GOTO 7
6      REWIND NTAPE
      DO 2 J=1,N
2      WRITE TAPE NTAPE, (A(K),K=J,J2,MAXR)
7      REWIND NTAPE
C DEFINE PROGRAM CONSTANTS AND ZEROS.
8      MODE=0
      IR=0
      AT=AITKEN**2
      IF ( EPS ) 12,9,12
9      EPS = .1E-08
12     IF ( NGUESS ) 15,13,15
13     J1=MAXR*(NC-1)

```

HMO31709
 HMO31710
 HMO31711
 HMO31712
 HMO31713
 HMO31714
 HMO31715
 HMO31716
 HMO31717
 HMO31718
 HMO31719
 HMO31720
 HMO31721
 HMO31722
 HMO31723
 HMO31724
 HMO31725
 HMO31726
 HMO31727
 HMO31728
 HMO31729
 HMO31730
 HMO31731
 HMO31732
 HMO31733
 HMO31734
 HMO31735
 HMO31736
 HMO31737
 HMO31738
 HMO31739
 HMO31740
 HMO31741
 HMO31742
 HMO31743
 HMO31744
 HMO31745
 HMO31746

MATRIX ITERATION SUBROUTINE, REAL OR COMPLEX.

2/20/63

```

      DO 14 I=1,N
        K=J1+1
        GUESS(K)=0.
      14 GUESS(I)=1.

      15 MUDE = MODE+1
      NAKSR(MUDE)=0
      IGO=1
      NITER(MUDE)=0
      K1=NC*MAXR*(MUDE-1)
      K2=K1+1
      K3=NC*(MUDE-1)+1
      K4= NC*MAXR
      K5=K4*NMUDE
      K6=K5+K4

      C MOVE FIRST GUESS INTO POSITION
      DO 16 J=1,NC
        J1=MAXR*(J-1)
      DO 16 I=1,N
        K=K1+J1+1
        L=J1+1
        H(K)=GUESS(L)
      16

      17 NAK=0
      18 NITER(MUDE)=NITER(MUDE)+1
      NAK=NAK+1
      INDEX=0
      CALL MMULTO (A,NC-1,H(K2),NC-1,VECTOR(K2),N,N,1,MAXR,MAXR,MAXR)
      CALL NPNRMX (VECTOR(K2), H(K2), N, EIGVAL(K3), INDEX, MAXR, NC,1)

      C TEST FOR SINGLE ROOT CONVERGENCE
      DO 23 J=1,NC
        J1=(J-1)*MAXR
        K=K1+J1
      GOTO (24,19,21),NAK
      19 L=K5+J1
      DO 20 I=1,N

```

HMO31747
 HMO31748
 HMO31749
 HMO31750
 HMO31751
 HMO31752
 HMO31753
 HMO31754
 HMO31755
 HMO31756
 HMO31757
 HMO31758
 HMO31759
 HMO31760
 HMO31761
 HMO31762
 HMO31763
 HMO31764
 HMO31765
 HMO31766
 HMO31767
 HMO31768
 HMO31769
 HMO31770
 HMO31771
 HMO31772
 HMO31773
 HMO31774
 HMO31775
 HMO31776
 HMO31777
 HMO31778
 HMO31779
 HMO31780
 HMO31781
 HMO31782
 HMO31783
 HMO31784

MATRIX ITERATION SUBROUTINE, REAL OR COMPLEX.

2/20/63

```

L=L+1
K=K+1
IF ( ABSF(H(L)-H(K)) - EPSP) 20,20,24
20 CONTINUE
GOTO 100
21 DO 22 I=1,N
K=K+1
IF ( ABSF(US(K)-H(K)) - EPSP) 22,22,24
22 CONTINUE
23 CCCONTINUE
100 IF ACCUMULATOR OVERFLOW 108,102
102 IF DIVIDE CHECK 104,56
104 NP=3
GOTO 109

C NO CONVERGENCE, SO TEST MAXIMUM NUMBER OF ITERATIONS.
24 IF ( NITER(MODE)-NITRSP ) 25,100,100
25 GOTO (40,44,31),NAK

C NOT YET EXCEEDED, SO TRY FOR AITKENS TIME.

C TEST FOR AITKENS CONVERGENCE.
31 GOTO (26,36),NC

26 DO 28 I=1,N
J=K5+1
K=K1+1
IF ( US(K)-H(J) ) 27,28,27
27 IF ( ABSF( H(K)-US(K)) / (US(K)-H(J)) ) - AITKEN ) 28,28,32
28 CONTINUE

C ALL VECTOR ELEMENTS OK, SO APPLY AITKENS SPEEDER-UPPER.
DO 30 I=1,N
J=K5+1
K=K1+1
Q=(H(K)-2.*US(K)+H(J))
IF ( Q ) 29,30,29

```

HMO31785
HMO31786
HMO31787
HMO31788
HMO31789
HMO31790
HMO31791
HMO31792
HMO31793
HMO31794
HMO31795
HMO31796
HMO31797
HMO31798
HMO31799
HMO31800
HMO31801
HMO31802
HMO31803
HMO31804
HMO31805
HMO31806
HMO31807
HMO31808
HMO31809
HMO31810
HMO31811
HMO31812
HMO31813
HMO31814
HMO31815
HMO31816
HMO31817
HMO31818
HMO31819
HMO31820
HMO31821
HMO31822

2/20/63

MATRIX ITERATION SUBROUTINE, REAL OR COMPLEX.

29 H(K)=H(J)- ((US(K)-H(J))**2 / Q)
30 CONTINUE
NAKSR(MODE)=NAKSR(MODE) + 1
GOTO 17

C CONVERGENCE TEST NOT MET. RESTORE AND TRY AGAIN.

32 DO 33 J=1,NC
J1=MAXR*(J-1)
DO 33 I=1,N
J=K1+J1+I
K=K5+J1+I
H(K)=US(J)
33 US(J)=H(J)
NAK=2
GOTO 18

C IF PROBLEM COMPLEX, REPEAT ALL ABOVE FOR COMPLEX ARITHMETIC.

36 DO 38 I=1,N
J=K5+I
K=K1+I
JJ=J+MAXR
KK=K+MAXR
Q = (US(K)-H(J))**2 + (US(KK)-H(JJ))**2
IF (Q) 37,38,37
37 IF ((H(K)-US(K))**2 + (H(KK) - US(KK))**2) / Q-AT) 38,38,32
38 CONTINUE
DO 39 I=1,N
J=K5+I
JJ=J+MAXR
K=K1+I
KK=K+MAXR
Q = (H(K)-2.*US(K)+H(J))**2 + (H(KK)-2.*US(KK)+H(JJ))**2
IF (Q) 35,39,35
35 X=H(K)
H(K)= H(J) - (((US(K)-H(J))**2-(US(KK)-H(JJ))**2)*(H(K)-2.*

HM031823
HM031824
HM031825
HM031826
HM031827
HM031828
HM031829
HM031830
HM031831
HM031832
HM031833
HM031834
HM031835
HM031836
HM031837
HM031838
HM031839
HM031840
HM031841
HM031842
HM031843
HM031844
HM031845
HM031846
HM031847
HM031848
HM031849
HM031850
HM031851
HM031852
HM031853
HM031854
HM031855
HM031856
HM031857
HM031858
HM031859
HM031860

2/20/63

MATRIX ITERATION SUBROUTINE, REAL OR COMPLEX.

```

1      US(K)+H(J))+(2.*(US(K)-H(J))*(US(KK)-H(JJ)))*
2      (H(KK)-2.*US(KK)+H(JJ))) / Q )
      H(KK)=H(JJ)-((1.2*(US(K)-H(J))*(US(KK)-H(JJ)))+(X
1      US(K)+H(J))-(US(K)-H(J))*2-(US(KK)-H(JJ))*2)
2      *(H(KK)-2.*US(KK)+H(JJ))) / Q )
39 CONTINUE
      NAKSR(MODE) = NAKSR(MODE) + 1
      GOTO 17

40 DO 41 J=1,NC
      J1=MAXR*(J-1)
      DO 41 I=1,N
          K=K1+J1+I
          L=K5+J1+I
          H(L)=H(K)
41      GOTO (18,56),IGO

44 DO 45 J=1,NC
      J1=MAXR*(J-1)
      DO 45 I=1,N
          K=K1+J1+I
          US(K)=H(K)
45      GOTO 18

56 DO 58 J=1,NC
      J1=MAXR*(J-1)+INDEX
      DO 58 I=1,N
          K=K1+MAXR*(J-1)+I
          US(K)=A(J1,
58      J1=J1+K4
      CALL SWEEPX (VECTOR,A,H,US,EIGVAL,MODE,N,MAXR,NC,INDEX,EPS)
      IF ACCUMULATOR OVERFLOW 108,106
106 IF DIVIDE CHECK 107,59
107 IF (NTAPE1) 119,118,119
118 IR=MODE
      GOTO 120

```

HMO31861
 HMO31862
 HMO31863
 HMO31864
 HMO31865
 HMO31866
 HMO31867
 HMO31868
 HMO31869
 HMO31870
 HMO31871
 HMO31872
 HMO31873
 HMO31874
 HMO31875
 HMO31876
 HMO31877
 HMO31878
 HMO31879
 HMO31880
 HMO31881
 HMO31882
 HMO31883
 HMO31884
 HMO31885
 HMO31886
 HMO31887
 HMO31888
 HMO31889
 HMO31890
 HMO31891
 HMO31892
 HMO31893
 HMO31894
 HMO31895
 HMO31896
 HMO31897
 HMO31898

MATRIX ITERATION SUBROUTINE, REAL OR COMPLEX.

```

119 WRITE OUTPUT TAPE NTAPE1, 131, 800LT(3),800LT(4)
WRITE OUTPUT TAPE NTAPE1, 134, MODE
120 DO 125 I=1,NC
    K=K1+MAXR*(I-1)
    DO 125 J=1,N
        K=K+1
        VECTOR(K)=0.
59 J1=(NC-1)*MAXR+INDEX
    GUESS(J1)=0.
    GUESS(1)=0.

62 IF (NMODE=MODE) 70,70,15

108 NP=1
109 IR=MODE
    IF ( NTAPE1 ) 121, 70,121
121 WRITE OUTPUT TAPE NTAPE1, 131, 800LT(NP) ,800LT(NP+1)
    MODE=MODE-1
    WRITE OUTPUT TAPE NTAPE1, 132, MODE

70 IF ( NTAPE ) 71,75,71
71 DO 73 J=1,N
73 READ TAPE NTAPE, (A(I),I=J,J2,MAXR)
    CALL MMULTD (A,NC-1,VECTOR,NC-1,US,N,MODE ,MAXR,MAXR,MAXR)
    J=1
    K=1
    DO 72 I=1,MODE
        INDEX=0
        CALL NPNRMX (US(J),US(J),N,H(K),INDEX,MAXR,NC,1)
        J=J+K4
72 K=K+NC
75 IF ( NTAPE1 ) 92,92,80

80 WRITE OUTPUT TAPE NTAPE1, 95
DO 86 I=1,MODE
    IF ( NITER(I)-NITRSP ) 85,87,87

```

2/20/63

HMO31899
 HMO31900
 HMO31901
 HMO31902
 HMO31903
 HMO31904
 HMO31905
 HMO31906
 HMO31907
 HMO31908
 HMO31909
 HMO31910
 HMO31911
 HMO31912
 HMO31913
 HMO31914
 HMO31915
 HMO31916
 HMO31917
 HMO31918
 HMO31919
 HMO31920
 HMO31921
 HMO31922
 HMO31923
 HMO31924
 HMO31925
 HMO31926
 HMO31927
 HMO31928
 HMO31929
 HMO31930
 HMO31931
 HMO31932
 HMO31933
 HMO31934
 HMO31935
 HMO31936

MATRIX ITERATION SUBROUTINE, REAL OR COMPLEX.

2/20/63

STORAGE NOT USED BY PROGRAM

DEC OCT
1795 03403
32561 77461

STORAGE LOCATIONS FOR VARIABLES APPEARING IN DIMENSION AND EQUIVALENCE STATEMENTS

DEC OCT DEC OCT DEC OCT
800LT 1794 03402

STORAGE LOCATIONS FOR VARIABLES NOT APPEARING IN COMMON, DIMENSION, OR EQUIVALENCE STATEMENTS

DEC OCT	DEC OCT	DEC OCT	DEC OCT
AT 1790 03376	IGO 1789 03375	INDEX 1788 03374	I 1787 03373
J1 1786 03372	J2 1785 03371	JJ 1784 03370	J 1783 03367
K1 1782 03366	K2 1781 03365	K3 1780 03364	K4 1779 03363
K5 1778 03362	K6 1777 03361	KK 1776 03360	K 1775 03357
L 1774 03356	MODE 1773 03355	NAK 1772 03354	NP 1771 03353
Q 1770 03352	X 1769 03351		

SYMBOLS AND LOCATIONS FOR SOURCE PROGRAM FORMAT STATEMENTS

EFN LOC	EFN LOC	EFN LOC
812T 93 03301	812U 94 03276	812V 95 03264
8131 97 03232	8132 98 03223	8133 99 03213
8144 132 03167	8146 134 03155	

LOCATIONS FOR OTHER SYMBOLS NOT APPEARING IN SOURCE PROGRAM

DEC OCT	DEC OCT	DEC OCT
1) 1732 03304	2) 1612 03114	3) 1616 03120
6) 1625 03131	9) 1730 03302	C1G1 1742 03316
C1G3 1744 03320	C1G4 1745 03321	C1G5 1746 03322
C1G7 1748 03324	C1G8 1749 03325	C1G9 1750 03326
C1G8 1752 03330	C1G9 1753 03331	C1G0 1754 03332
C1G6 1756 03334	C1203 1757 03335	C1204 1758 03336
C1206 1760 03340	C1207 1761 03341	C1208 1762 03342
C1208 1764 03344	C1200 1765 03345	C120F 1766 03346
		4) 32767 77777
		C1G2 1743 03317
		C1G6 1747 03323
		C1G4 1751 03327
		C1G5 1755 03333
		C1205 1759 03337
		C120A 1763 03343
		C120H 1767 03347

MATRIX ITERATION SUBROUTINE, REAL OR COMPLEX.

[illegible]

LOCATIONS OF NAMES IN TRANSFER VECTOR

DEC		UCT		DEC		UCT		DEC		UCT	
MMULTD	5 00005	MPRINT	10 00012	NPNRMX	6 00006	SWEEPX	7 00007				
(FIL)	9 00011	(RLR)	2 00002	(RWT)	0 00000	(STH)	3 00003				
(STH)	8 00010	(TSB)	1 00001	(WLR)	4 00004						

ENTRY POINTS TO SUBROUTINES NOT OUTPUT FROM LIBRARY

MMULTD (STH)	MPRINT (TSB)	NPRMX (WLR)	SWEEPX	(FIL)	(RLR)	(RWT)	(STB)
-----------------	-----------------	----------------	--------	-------	-------	-------	-------

EXTERNAL FORMULA NUMBERS WITH CORRESPONDING INTERNAL FORMULA NUMBERS AND OCTAL LOCATIONS

EFN	IFN	LOC	EFN	IFN	LOC	EFN	IFN	LOC	EFN	IFN	LOC
3	20	00501	4	21	00503	5	24	00517	1	27	00532
6	34	00560	2	36	00571	7	41	00614	8	42	00620
9	46	00635	12	47	00637	13	48	00643	14	52	00670
15	53	00677	16	68	01017	17	69	01033	18	70	01040
19	81	01170	20	86	01231	21	88	01242	22	91	01270
23	92	01273	100	93	01302	102	95	01305	104	96	01310

MATRIX ITERATION SUBROUTINE, REAL OR COMPLEX.

2/20/63

24	98	01317	25	99	01323	31	100	01330	26	101	01332
27	105	01352	28	106	01371	29	112	01425	30	113	01442
32	116	01460	33	122	01524	36	125	01542	37	132	01614
38	133	01640	35	141	01727	39	144	02061	40	147	02073
41	152	02135	44	154	02153	45	158	02207	56	160	02222
58	165	02265	106	170	02331	107	171	02334	118	172	02340
119	174	02343	120	178	02371	125	182	02420	59	183	02431
62	186	02447	108	187	02456	109	188	02462	121	190	02466
70	195	02525	71	196	02527	73	197	02534	72	211	02654
75	212	02670	80	213	02674	87	216	02716	85	218	02733
83	219	02737	84	223	02760	86	227	03010	88	229	03017
90	234	03050	92	242	03110						

11/02/62

SINGLE CR DOUBLE PRECISION, REAL OR COMPLEX VECTOR NORMALIZATION.

```

C      CALL NPNRMX(A, B, N, FL, INDEX, MC, NX, NP )
C      A=VECTOR TO BE NORMALIZED      B=NCNORMALIZED VECTOR(MAY=A)
C      N=SIZE                          FL=NCNORMALIZING NUMBER
C      INDEX=+ CN ENTRY, NORMALIZE ON NUMBER WHOSE INDEX IS INDEX
C      =0 ON ENTRY, NORMALIZE ON LARGEST S.H. AND SET
C      INDEX=TC ITS INDEX.
C      =- CN ENTRY, NORMALIZE CN FL.
C      MC=SINGLE PRECISION DIMEANSED NUMBER OF ROWS CF A AND B
C      NX=1, VECTOR REAL
C      =2, VECTOR COMPLEX
C      NP=1, SINGLE PRECISION
C      =2, DCURLE PRECISION
C
C      SUBROUTINE NPNRMX (A, B, N, FL, INDEX, MC, NX, NP )
D      DIMENSION A(1), B(1), FL(1), D(1), C(1)
C
C      N1=1+NP
C      N2=N+NP
C      N4=MC+NP
C      IF ( INDEX ) 32, 7, 38
C      7 GO TO (11, 8), NX
C      8 FL= (A(1)+2+A(N4+1)+*2)
C      INDEX=1
C      DO 10 K=N1, N2, NP
C      I=K+N4
C      C= (A(K)+*2+A(I)+*2)
C      IF ( FL-C ) 5, 9, 1C
C      9 FL=D
C      INDEX=K
C      10 CCATINUE
C      6 FL=A(INDEX)
C      GO TO (18, 25), NP
C      11 FL=ABSF(A(1))
C      INDEX=1
C      DO 13 K=N1, N2, NP

```

SINGLE OR DOUBLE PRECISION, REAL OR COMPLEX VECTOR NORMALIZATION. 11/02/62

```

C=ABS(A(K))
IF (FL-C) 12,12,13
12 FL=C
INDEX=K
13 CONTINUE
14 FL=A(INDEX)
GOTO (16,21),NP
16 CC 17 I=1,N
17 B(I)=A(I)/FL
GOTO 30
18 I=INDEX+MC
FL(2)=A(I)
19 C=FL(1)**2+FL(2)**2
CC 20 I=1,N
K=I+MC
C=A(I)*FL(2)-A(K)*FL(1)
B(I)=(A(I)*FL(1)+A(K)*FL(2))/D
20 B(K)=-C/D
GOTO 30
21 FL(2)=A(INDEX+1)
23 CC 24 I=1,N2,NP
C 24 B(I)=A(I)/FL
GOTO 28
25 FL(2)=A(INDEX+1)
I=INDEX+N4
FL(3)=A(I)
C 26 C=FL(1)**2+FL(3)**2
CC 27 I=1,N2,NP
K=I+N4
C=A(I)*FL(3)-A(K)*FL(1)
D 3(1)=(A(I)*FL(1)+A(K)*FL(3))/D
C 27 B(K)=-C/D
28 INDEX=INDEX/2+1

```

HMO31585
 HMO31586
 HMO31587
 HMO31588
 HMO31589
 HMO31590
 HMO31591
 HMO31592
 HMO31593
 HMO31594
 HMO31595
 HMO31596
 HMO31597
 HMO31598
 HMO31599
 HMO32000
 HMO32001
 HMO32002
 HMO32003
 HMO32004
 HMO32005
 HMO32006
 HMO32007
 HMO32008
 HMO32009
 HMO32010
 HMO32011
 HMO32012
 HMO32013
 HMO32014
 HMO32015
 HMO32016
 HMO32017
 HMO32018
 HMO32019
 HMO32020
 HMO32021
 HMO32022

11/02/62

SINGLE OR DOUBLE PRECISION, REAL OR COMPLEX VECTOR NORMALIZATION.

HM032023
HM032024
HM032025
HM032026
HM032027
HM032028
HM032029
HM032030
HM032031
HM032032

30 RETURN

32 GOTO (34,36), NX

34 GOTO (16,23), NP

36 GOTO (19,26), NP

38 GOTO (40,39), NP

39 INDEX=2+INDEX-1

40 GOTO (14,6), NX

END(1,C,C,C,C,C,C,C,C,C,C,C,C,C,C,C,C,C,C,C,C,C)

SINGLE OR DOUBLE PRECISION, REAL OR COMPLEX VECTOR NORMALIZATION. 11/02/62

STORAGE NOT USED BY PROGRAM

DEC OCT
590 01116
32561 77461

STORAGE LOCATIONS FOR VARIABLES APPEARING IN DIMENSION AND EQUIVALENCE STATEMENTS

DEC OCT
C 587 01113 D 589 01115
DEC OCT DEC OCT DEC OCT

STORAGE LOCATIONS FOR VARIABLES NOT APPEARING IN COMMON, DIMENSION, OR EQUIVALENCE STATEMENTS

DEC OCT
I 585 01111 K 584 01110 N1 583 01107 N2 582 01106
N4 581 01105
DEC OCT DEC OCT

LOCATIONS FOR OTHER SYMBOLS NOT APPEARING IN SOURCE PROGRAM

DEC OCT
1) 571 01073
9) 568 01070
C1G4 578 01102
C1107 251 00372
C110M 357 00345
D1607 248 00370
E1V 536 01030
DEC CCT
2) 560 01060
C1G6 575 01077
C1G5 579 01103
D1120 287 00437
D1100 531 01023
E12 200 00310
E112 545 01041
DEC CCT
4) 32767 77777
C1G2 576 01100
C1G6 580 01104
D110E 295 00447
C1214 556 01054
E15 243 00363
E110E 292 00444
DEC OCT
6) 562 01062
C1G3 577 01101
D1103 220 00334
C1101 312 00470
D1407 249 00371
E16 247 00367

LOCATIONS OF NAMES IN TRANSFER VECTOR

DEC OCT
DEXP(2 1 00001
(CFSB) 4 00004
DEC CCT
(DFAC) 2 00002
(CFDP) C 00000
(CFMP) 3 00003
DEC OCT

ENTRY POINTS TO SUBROUTINES NOT OUTPUT FROM LIBRARY

11/02/62

SINGLE CR DOUBLE PRECISION, REAL CR COMPLEX VECTOR NORMALIZATION.

DEXP(2	(CFAD)	(CFDP)	(CFMP)	(DFS8)	EXTERNAL FORMULA NUMBERS WITH CORRESPONDING INTERNAL FORMULA NUMBERS AND OCTAL LOCATIONS											
EFN	IFA	LCC	EFN	IFA	LCC	EFN	IFA	LCC	EFN	IFA	LCC	EFN	IFA	LCC		
7	8	00305	8	9	00311	9	15	00354	10	17	00364	11	27	00433		
6	18	00374	11	20	00401	12	25	00425	13	31	00453	18	33	00461		
14	28	00440	16	30	00450	17	31	00453	21	42	00542	23	43	00546		
15	35	00471	20	40	00531	21	42	00542	26	49	00612	27	54	00760		
24	44	00553	25	46	00574	26	58	01031	32	58	01031	34	59	01033		
28	55	01011	30	56	01024	32	61	01042	39	62	01045	40	63	01055		
36	60	01036	38	61	01042	39	62	01045	40	63	01055	41	64	01060		

11/12/62

SUBROUTINE DIVERG

```

DIMENSION NPO(24), C(10), X(50), Y(50), ATIT(50,2), CZRE(50,2),
1 PADD(50,2), LL(50), LH(50), CAIN(50,2), PR(50,2),
2 NCPT(50), DELY(50), ZI(50,10)
DIMENSION A(50,50), B(50,50), C(50,50), G(50), EIGVAL(50),
1 NITER(50)

EQUIVALENCE (NOP(14),AC), (NOP(13),NEXST), (LH,X), (LL,Y),
1 (NOP(17),NRC), (NOP(4),NMCD), (NOP(23),TITL1),
2 (NOP(24),TITL2)
COMMON NOP,X,Y,NTAPE2,NTAPE3,NTAPE4,NTAPE5,NTAPE6,NTAPE8,NTAPE9,CBAR,
1 FLEXK,CAPS,CAP,CAPT,CAPN,SPALS,CAPXC,CICRR,CAPZ,CAPHC,C,
2 MAXR,ATIT,CZRE,CNIN,HR,HADD,NSTRF,ACPT,DELY,ZI,MAXC,AC,
3 NCNRC,A,B,C,G,EIGVAL,NITER,DIVQ,EP,IR,1

600 FORMAT (1H1 3BX, 17-DIVERGENCE CPTICN // 1HC 16X, 4HMCDE 1CX,HP32C50
1 6HLAMDA 11X, 11HDIVERGENT 0 7X, 14HNO. ITERATIONS // ) HP32C51
601 FORMAT (1H 1119, 2E20.8, 1113 ) HP32C52
602 FORMAT (1H 43X, 26HIMAGINARY RESULT FROM MCDE 114 ) HP32C53
603 FORMAT (1H 22X, 4CHINSUFFICIENT CONVERGENCE AFTER 200 ITERA
1 11HTIONS, MCDE 114 ) HP32C54
604 FORMAT (1H0 37X, 4CHMEDAL CELLPNS NORMALIZED ON THE LARGEST
1 RHELEMENT ) HP32C55
605 FORMAT (48H0 AN OVERFLOW OCCURED IN THE EIGENVALUE ROUTINE.
1 111G, 19H- MODES ARE CORRECT. ) HP32C56
606 FORMAT ( 1H0 25X,36H CHECK EIGENVALUES AND EIGENVECTORS ) HP32C57

WRITE CLTPUT TAPE NTAPE3, 60C HP32C58
REWIND NTAPE4 HP32C59
REWIND NTAPES HP32C60

C READ FLEXIBILITY MATRIX INTO CORE AT C, AND AERCDYNAMIC MATRIX AT B
READ TAPE NTAPES, ((C(I,J),J=1,NRC),I=1,NRC) HP32C61
READ TAPE NTAPES, ((B(I,J),J=1,NRC),I=1,NRC) HP32C62
CALL PMULTD (C,C,B,J,A,NRC,NRC,NRC,MAXR,MAXR,MAXR) HP32C63

```

11/12/62

C SET UP GLESS EIGENVECTOR FOR ITERATION.

```

CG 61C I=1,NRC
610 G(I)=1

      EP=.2E-05
      CALL MITER (A,NTAPEE,NRC,G,1,NMCDE,8,EIGVAL,NITER,200,EP,IN,C,
1      C(1,26),MAXR,1,.98C832,LL,C)
      IF ( IR ) 611,612,611
611 IR=IR-1
      WRITE CUPUT TAPE NTAPE3, 605, IR
      NMCDE=IR

612 CO 616 I=1,NMCDE
      CIVQ=CBAR/(EIGVAL(I)*FLEXK*CAPS)
      IF (EIGVAL(I)) 613,613,614

613 WRITE CUPUT TAPE NTAPE3, 602, I
614 IF ( NITER(I)-199) 616,616,615

615 WRITE CUPUT TAPE NTAPE3, 603, I
616 WRITE CUPUT TAPE NTAPE3, 601, I, EIGVAL(I), DIVQ, NITER(I)

      WRITE CUPUT TAPE NTAPE3, 604
      CALL MPRINT (B,NRC,NMCDE,MAXR,NTAPE3)
      WRITE CUPUT TAPE NTAPE3, 606
      CALL MPRINT (C(1,26),NMCDE,1,MAXR,NTAPE3)
      CALL MPRINT (C,NRC,NMCDE,MAXR,NTAPE3)

      RETURN
      END(1,0,0,0,0,0,0,0,1,0,0,0,0,0)

```

* DATA

HM032102

HM032172
HM032173
HM032174
HM032175
HM032176
HM032177
HM032178
HM032179
HM032180
HM032181
HM032182
HM032183
HM032184
HM032185
HM032186
HM032187
HM032188
HM032189
HM032190
HM032191
HM032192
HM032193
HM032194
HM032195
HM032196
HM032197
HM032198
HM032199
HM032100

UNCLASSIFIED	Aerospace Corporation, El Segundo, California. QUASI-STATIC AERO-THERMO-ELASTIC ANALYSIS: ANALYTICAL DEVELOPMENT AND COMPUTATIONAL PROCEDURE, prepared by W. P. Rodden, E. F. Farkas, and H. A. Malcom. 1 March 1963. [172] p. incl. illus. (Report TDR-169(3230-11)TN-8; SSD-TDR-63-14) (Contract AF 04(695)-169). Unclassified report A collocation formulation is used as the basis for a unified approach to the various quasi-static aero-thermo-elastic problems. These problems include rigid and flexible load distributions, divergence, estimation of rigid and flexible static and dynamic stability derivatives, and the correction of wind tunnel data measured on flexible models. The formulation utilizes structural, thermal, and aerodynamic influence coefficients. The Aerospace IBM 7090 Computer Program No. LD003A provides the solution to the above problems. The program (over)
--------------	---

UNCLASSIFIED	Aerospace Corporation, El Segundo, California. QUASI-STATIC AERO-THERMO-ELASTIC ANALYSIS: ANALYTICAL DEVELOPMENT AND COMPUTATIONAL PROCEDURE, prepared by W. P. Rodden, E. F. Farkas, and H. A. Malcom. 1 March 1963. [172] p. incl. illus. (Report TDR-169(3230-11)TN-8; SSD-TDR-63-14) (Contract AF 04(695)-169). Unclassified report A collocation formulation is used as the basis for a unified approach to the various quasi-static aero-thermo-elastic problems. These problems include rigid and flexible load distributions, divergence, estimation of rigid and flexible static and dynamic stability derivatives, and the correction of wind tunnel data measured on flexible models. The formulation utilizes structural, thermal, and aerodynamic influence coefficients. The Aerospace IBM 7090 Computer Program No. LD003A provides the solution to the above problems. The program (over)
--------------	---

UNCLASSIFIED	Aerospace Corporation, El Segundo, California. QUASI-STATIC AERO-THERMO-ELASTIC ANALYSIS: ANALYTICAL DEVELOPMENT AND COMPUTATIONAL PROCEDURE, prepared by W. P. Rodden, E. F. Farkas, and H. A. Malcom. 1 March 1963. [172] p. incl. illus. (Report TDR-169(3230-11)TN-8; SSD-TDR-63-14) (Contract AF 04(695)-169). Unclassified report A collocation formulation is used as the basis for a unified approach to the various quasi-static aero-thermo-elastic problems. These problems include rigid and flexible load distributions, divergence, estimation of rigid and flexible static and dynamic stability derivatives, and the correction of wind tunnel data measured on flexible models. The formulation utilizes structural, thermal, and aerodynamic influence coefficients. The Aerospace IBM 7090 Computer Program No. LD003A provides the solution to the above problems. The program (over)
--------------	---

UNCLASSIFIED	Aerospace Corporation, El Segundo, California. QUASI-STATIC AERO-THERMO-ELASTIC ANALYSIS: ANALYTICAL DEVELOPMENT AND COMPUTATIONAL PROCEDURE, prepared by W. P. Rodden, E. F. Farkas, and H. A. Malcom. 1 March 1963. [172] p. incl. illus. (Report TDR-169(3230-11)TN-8; SSD-TDR-63-14) (Contract AF 04(695)-169). Unclassified report A collocation formulation is used as the basis for a unified approach to the various quasi-static aero-thermo-elastic problems. These problems include rigid and flexible load distributions, divergence, estimation of rigid and flexible static and dynamic stability derivatives, and the correction of wind tunnel data measured on flexible models. The formulation utilizes structural, thermal, and aerodynamic influence coefficients. The Aerospace IBM 7090 Computer Program No. LD003A provides the solution to the above problems. The program (over)
--------------	---

capacity is fifty collocation control points and ten values of dynamic pressure.	UNCLASSIFIED
	UNCLASSIFIED

capacity is fifty collocation control points and ten values of dynamic pressure.	UNCLASSIFIED
	UNCLASSIFIED

capacity is fifty collocation control points and ten values of dynamic pressure.	UNCLASSIFIED
	UNCLASSIFIED

capacity is fifty collocation control points and ten values of dynamic pressure.	UNCLASSIFIED
	UNCLASSIFIED