



NRL/MR/6930--20-10,034

Bioinspired Surface Treatments for Improved Decontamination: Antimicrobial Coatings

BRANDY J. WHITE

*Laboratory for the Study of Molecular Interfacial Interactions
Center for Bio/Molecular Science & Engineering*

ANTHONY P. MALANOSKI

*Laboratory for Biosensors and Biomaterials
Center for Bio/Molecular Science & Engineering*

MARTIN H. MOORE

*Laboratory for the Study of Molecular Interfacial Interactions
Center for Bio/Molecular Science & Engineering*

February 18, 2020

REPORT DOCUMENTATION PAGE

Form Approved
OMB No. 0704-0188

Public reporting burden for this collection of information is estimated to average 1 hour per response, including the time for reviewing instructions, searching existing data sources, gathering and maintaining the data needed, and completing and reviewing this collection of information. Send comments regarding this burden estimate or any other aspect of this collection of information, including suggestions for reducing this burden to Department of Defense, Washington Headquarters Services, Directorate for Information Operations and Reports (0704-0188), 1215 Jefferson Davis Highway, Suite 1204, Arlington, VA 22202-4302. Respondents should be aware that notwithstanding any other provision of law, no person shall be subject to any penalty for failing to comply with a collection of information if it does not display a currently valid OMB control number. **PLEASE DO NOT RETURN YOUR FORM TO THE ABOVE ADDRESS.**

1. REPORT DATE (DD-MM-YYYY) 18-02-2020			2. REPORT TYPE NRL Memorandum Report		3. DATES COVERED (From - To) 01/10/2019 – 08/14/2019	
4. TITLE AND SUBTITLE Bioinspired Surface Treatments for Improved Decontamination: Antimicrobial Coatings					5a. CONTRACT NUMBER	
					5b. GRANT NUMBER	
					5c. PROGRAM ELEMENT NUMBER	
6. AUTHOR(S) Brandy J. White, Anthony P. Malanoski, and Martin H. Moore					5d. PROJECT NUMBER	
					5e. TASK NUMBER	
					5f. WORK UNIT NUMBER 1C75	
7. PERFORMING ORGANIZATION NAME(S) AND ADDRESS(ES) Naval Research Laboratory 4555 Overlook Avenue, SW Washington, DC 20375-5320					8. PERFORMING ORGANIZATION REPORT NUMBER NRL/MR/6930--20-10,034	
9. SPONSORING / MONITORING AGENCY NAME(S) AND ADDRESS(ES) Defense Threat Reduction Agency DTRA-Joint CBRN Center of Excellence Bldg E-2800 APG-EA, MD 21010					10. SPONSOR / MONITOR'S ACRONYM(S) DTRA - CB10125	
					11. SPONSOR / MONITOR'S REPORT NUMBER(S)	
12. DISTRIBUTION / AVAILABILITY STATEMENT DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.						
13. SUPPLEMENTARY NOTES						
14. ABSTRACT This effort evaluates bioinspired coatings for use in a top-coat type application to identify those technologies that may improve decontamination capabilities for painted surfaces. This report details results for evaluation of a commercially available, transparent, barrier coating. Retention of the simulants paraoxon, methyl salicylate, dimethyl methylphosphate, and diisopropyl fluorophosphates following treatment of contaminated surfaces with a soapy water solution is reported. Wetting behaviors and target droplet diffusion on the surfaces are also discussed.						
15. SUBJECT TERMS Coatings, Decontamination, Paint						
16. SECURITY CLASSIFICATION OF:			17. LIMITATION OF ABSTRACT	18. NUMBER OF PAGES	19a. NAME OF RESPONSIBLE PERSON	
a. REPORT	b. ABSTRACT	c. THIS PAGE			Brandy J. White	
Unclassified Unlimited	Unclassified Unlimited	Unclassified Unlimited	Unclassified Unlimited	32	19b. TELEPHONE NUMBER (include area code) (202) 404-6100	

This page intentionally left blank.

CONTENTS

INTRODUCTION	1
METHODS	1
RESULTS	2
CONCLUSIONS.....	6
REFERENCES	7
APPENDIX A – IMAGES OF PAINTED COUPONS.....	8
APPENDIX B – IMAGES OF FOMBLIN Y OILED COUPONS	12
APPENDIX C – IMAGES OF INVESIL TREATED COUPONS	20
APPENDIX D – IMAGES OF AVIRAL BIOCERAMIC TREATED COUPONS (THICK).....	24

FIGURES

Fig. 1	— Coupon images	1
Fig. 2	— Geometric surface energy	3
Fig. 3	— Images of coupons following target exposure	4
Fig. 4	— Droplet diameters	5
Fig. 5	— Target retention	6

TABLES

Table 1	— Contact angles on aluminum	3
Table 2	— Simulant retention on aluminum	6

EXECUTIVE SUMMARY

The Center for Bio/Molecular Science and Engineering at the Naval Research Laboratory (NRL) initiated a program in January 2015 for evaluation of bioinspired treatments suitable for use as a top coat on painted surfaces with the intention of achieving improved aqueous decontamination of these materials. Funding was provided by the Defense Threat Reduction Agency (DTRA, CB10125). This report details results for evaluation of a clear, durable antimicrobial coating. The material is provided as a single component, low viscosity material applicable to a range of substrates, both rough and smooth. The material was deposited on polyurethane paint coated aluminum coupons. Retention of the simulants paraoxon, methyl salicylate, dimethyl methylphosphonate, and diisopropyl fluorophosphate following treatment of contaminated surfaces with a soapy water solution is reported along with droplet diffusion on the surfaces and wetting angles.

This page intentionally left blank.

BIOINSPIRED SURFACE TREATMENTS FOR IMPROVED DECONTAMINATION: BIOCERAMIC COATING

INTRODUCTION

The DoD Chemical and Biological Defense Program (CBDP) seeks to provide protection of forces in a contaminated environment including contamination avoidance, individual protection, collective protection, and decontamination. In January 2015, the Center for Bio/Molecular Science and Engineering at the Naval Research Laboratory (NRL) began an effort funded through the Defense Threat Reduction Agency (DTRA, CB10125) intended to evaluate top-coat type treatments suitable for application to painted surfaces for reduction of chemical threat agent retention following standard decontamination approaches. The effort sought to survey relevant and related areas of research and evaluate identified technologies under appropriate methods to determine efficacy, scalability, and durability. The current document summarizes results for one of the identified technologies, a coating marketed as INVESIL. This product was developed by Flora Coatings LLC and provides antimicrobial activity. The product is provided as a single component, low viscosity solution that yields a transparent coating. INVESIL incorporates zirconium, tantalum, and silver (both ionic and nanoparticle) to achieve the reported antimicrobial activity. It is suitable for deposition on a range of surfaces and has previously been subjected to a number of industry standard evaluations including durability assessments.

For the complete system, aluminum coupons were coated with a polyurethane paint system by NRL and were provided to Flora Coatings LLC (Figure 1). Following deposition of the INVESIL coating, coupons were returned to NRL for evaluation using standard approaches including measurement of sessile, sliding, and shedding contact angles and quantification of retention for the simulants. The coating had little impact on the visible characteristics of the coupons. A prior report detailed results for another Flora Coatings formulation, AVIRAL.[1]

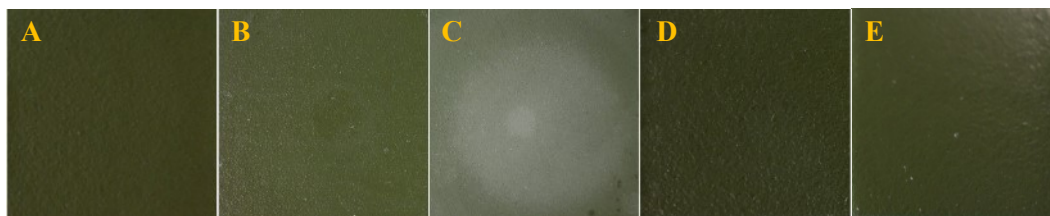


Fig. 1 — Images of a painted coupon (A), a painted coupon with Fomblin Y (B), a painted coupon with smooth fluoropolymer coating (C), a painted coupon with the thick AVIRAL coating (D), and a painted coupon with the INVESIL coating (E).

METHODS

Sessile contact angles for samples evaluated under this effort used three 3 μ L droplets per surface with each droplet measured independently three times for each of three targets, water, ethylene glycol, and n-heptane. Geometric surface energy was calculated based on the water and ethylene glycol interactions using software designed for the DROPimage goniometer package. Sliding angles were determined using 5 μ L droplets. The droplet was applied at 0° after which the supporting platform angle was gradually

increased up to 60°. Sliding angles for each of the liquids were identified as the angle for which movement of the droplet was identified. Shedding angles for each liquid were determined using 12 μL droplets initiated 2.5 cm above the coupon surface. Changes in base angle of 10° were utilized to identify the range of droplet shedding angle based on a complete lack of droplet retention by the surface (not sliding). The angle was then reduced in steps of 1° to identify the minimum required angle. Droplet diameters were determined using tools provided by Adobe Photoshop CS3. Droplets of 5 μL were applied to the surfaces and images were collected at 30 s intervals for 5 min followed by images at 5 min intervals for a total of 30 min. DFP samples were kept covered for the duration of the experiment to minimize evaporation. In some cases, reflections from the glass cover can be seen in the images.

Simulant exposure and evaluation methods were based on the tests developed by Edgewood Chemical Biological Center referred to as Chemical Agent Resistance Method (CARM).[2] Standard target exposures utilized a challenge level of 10 g/m^2 . The painted coupons were 0.00101 m^2 ; the 10 g/m^2 target challenge was applied to the surfaces as two equally sized neat droplets. Following application of the target, coupons were aged 1 h prior to use of a gentle stream of air to expel target from the surface. Samples were then rinsed with soapy water (0.59 g/L Alconox in deionized water). The rinsed coupons were soaked in isopropanol for 30 min to extract remaining target; this isopropanol extract was analyzed by the appropriate chromatography method to determine target retention on the surface.

For paraoxon analysis, a Shimadzu High Performance Liquid Chromatography (HPLC) system with dual-plunger parallel flow solvent delivery modules (LC-20AD) and an auto-sampler (SIL-20AC; 40 μL injection volume) coupled to a photodiode array detector (SPD-M20A; 277 nm) was used. The stationary phase was a C18 stainless steel analytical column (Luna, 150 mm x 4.6 mm, 3 μm diameter; Phenomenex, Torrance, CA) with an isocratic 45:55 acetonitrile: 1% aqueous acetic acid mobile phase (1.2 mL/min).[3] For analysis of methyl salicylate (MES), diisopropyl fluorophosphate (DFP), and dimethyl methylphosphonate (DMMP), gas chromatography-mass spectrometry (GC-MS) was accomplished using a Shimadzu GCMS-QP2010 with AOC-20 auto-injector equipped with a Restex Rtx-5 (30 m x 0.25 mm ID x 0.25 μm df) cross bond 5% diphenyl 95% dimethyl polysiloxane column. A GC injection temperature of 200°C was used with a 1:1 split ratio at a flow rate of 3.6 mL/min at 69.4 kPa. The oven gradient ramped from 50°C (1 min hold time) to 180°C at 15°C/min and then to 300°C at 20°C/min where it was held for 5 min.

RESULTS

Analysis of the support surface in the absence of additional coatings provides a point of comparison for evaluating the benefits of the surface treatment. Each table includes data on the relevant support material, a painted aluminum coupon, as well as that for a Fomblin Y oiled painted aluminum coupon and that for a smooth fluoropolymer coating on the painted aluminum coupon. The fluoropolymer coating is a previously reported poly(vinylidene fluoride-*co*-hexafluoropropylene) (PVDF-HFP) layer.[4] The fluorinated oil and the fluoropolymer coating reduce the surface energy of the coupons (Table 1 and Figure 2). No sliding was noted on any of the evaluated control surfaces below 60°. Shedding angles for the oiled surface were between 35° and 50° for test liquids. The previously evaluated AVIRAL coating provided surface energies slightly higher than that of the fluoropolymer. No sliding behavior was noted for water, ethylene glycol, or heptane. Shedding angles of 40° to 50° were noted for water and ethylene glycol on the coating. Shedding angles for the thin coating were slightly higher. The INVESIL coating yielded surface energies higher than that of the AVIRAL coating. No sliding or shedding behaviors were noted.

Table 1 – Sessile, Sliding, and Shedding Contact Angles on Aluminum Supports

Coupon	Liquid	Sessile Angle	Sliding Angle	Shedding Angle	Geometric Surface Energy (mJ/m ²)
Aluminum Support					
Paint Only	water	47.5 ± 1.1	>60	>60	71.9 ± 5.1
	ethylene glycol	55.7 ± 2.1	>60	>60	
	n-heptane	--	--	--	
Fomblin Y Oiled Paint	water	73.1 ± 2.1	>60	46.7 ± 3.3	32.2 ± 1.6
	ethylene glycol	52.5 ± 0.6	>60	49.8 ± 4.9	
	n-heptane	40.1 ± 2.9	>60	36.6 ± 3.3	
Smooth Fluoropolymer	water	116.8 ± 1.1	>60	>60	10.5 ± 1.1
	ethylene glycol	100.3 ± 1.5	>60	>60	
	n-heptane	19.1 ± 0.8	--	--	
AVIRAL, thick	water	102.0 ± 0.7	>60	46.0 ± 1.3	13.5 ± 0.45
	ethylene glycol	86.8 ± 0.7	>60	40.3 ± 0.76	
	n-heptane	35.1 ± 1.2	--	--	
INVESIL	water	90.1 ± 0.4	>60	>60	18.3 ± 0.34
	ethylene glycol	81.9 ± 0.3	>60	>60	
	n-heptane	--	--	--	

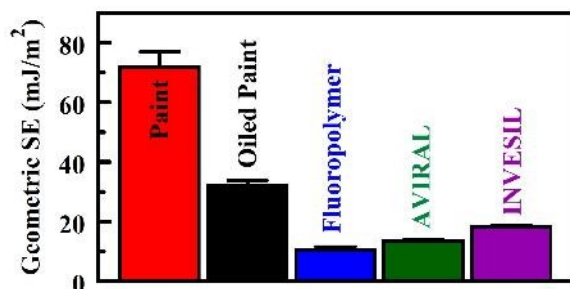


Fig. 2 — Geometric surface energy for the evaluated coatings.

The tendency of droplets to spread across the surfaces was also evaluated (Figure 3; Appendices A through D). For these studies, droplets of the simulants (5 μ L) were utilized. The spread of the droplets was quantified by measuring the diameter of the droplets in the images over time (Figure 4). For the paint only samples, MES and DFP spread quickly reaching the edges of the coupon at 10 and 2 min, respectively. DMMP did not spread during the course of the 30 min incubation. Similar behavior was noted for the Fomblin Y oiled coupons. The fluoropolymer coating significantly reduced spread of the three targets on the coupon. The AVIRAL coating completely prevented spread of all three targets. The INVESIL coating produced similar results to the AVIRAL coating; however, it appears that some spread of DFP begins near the end of the 30 min experiment window (Figure 4).

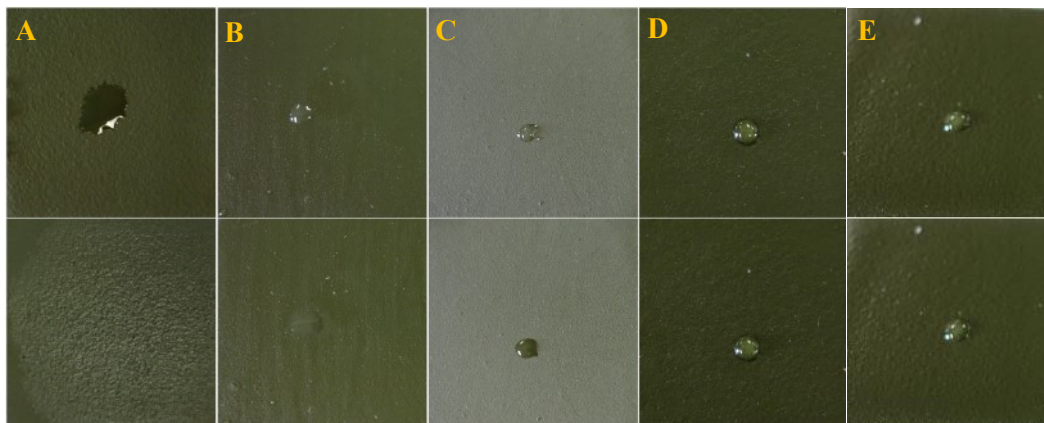


Fig. 3 — Images of coupons immediately following MES deposition (top) and images of the coupons at 30 min following deposition (bottom): for a painted coupon (A), a Fomblin Y oiled coupon (B), a fluoropolymer treated coupon (C), a thick AVIRAL treatment on the painted coupon (D) [1], and the INVESIL coating on a coupon (E).

When the soapy water process (CARM) was employed (Figure 5; Table 2), retention of all targets was less for the Fomblin Y lubricated paint treatments than for the paint only surfaces. Similar reduction in target retention was noted for the fluoropolymer treated coupons. The AVIRAL coatings provided significantly greater reduction in retention for all four targets considered under this study than either the oiled or fluoropolymer treated surfaces. Retention of paraoxon, MES, and DMMP was approximately two orders of magnitude less for the AVIRAL coating than that noted for the painted surface. DFP retention was reduced by an order of magnitude on the AVIRAL treated coupons. The coupons were subjected to several cycles of simulant exposure (10 g/m^2), aging, washing, and drying over a period of a week. No change in appearance or performance was noted for the cycled samples.

For paint only coupons, retention was significant but was less than that of paint only coupons that were extracted with no rinsing or decontamination steps. For comparison purposes, paint only coupons that were not rinsed prior to isopropanol extraction retained the following: paraoxon – 9.84 g/m^2 , MES – 9.54 g/m^2 , DMMP – 9.90 g/m^2 , DFP - 7.39 g/m^2 . Though the nominal target application was 10 g/m^2 , recovery from surfaces was always less than this value. Losses due to evaporation would be expected, especially for DFP. Additional losses likely occur during rinse steps due to agent interaction with the untreated region of the coupon; the back of these coupons is unpainted aluminum.

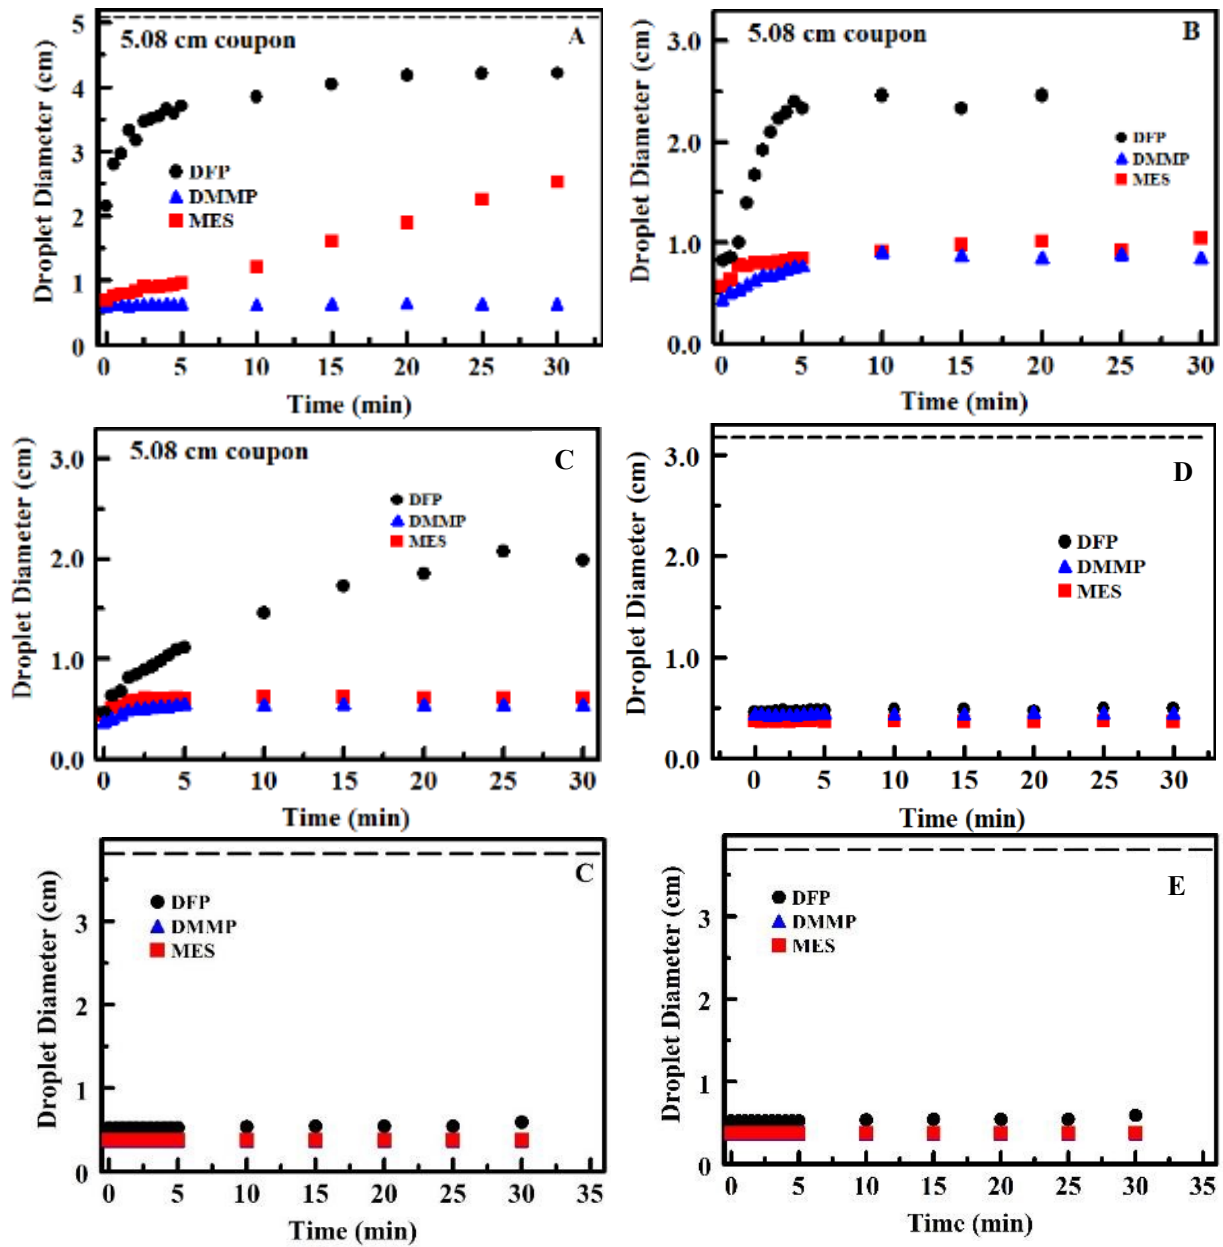


Fig. 4 — Droplet diameters over time following exposure to DFP (black), MES (red), and DMMP (blue) for a painted coupon (A), a painted coupon oiled with Fomblin Y (B), a painted coupon with a smooth fluoropolymer coating (C), and a painted coupon with the thick AVIRAL coating (D) and a painted coupon with the INVESIL coating (E).

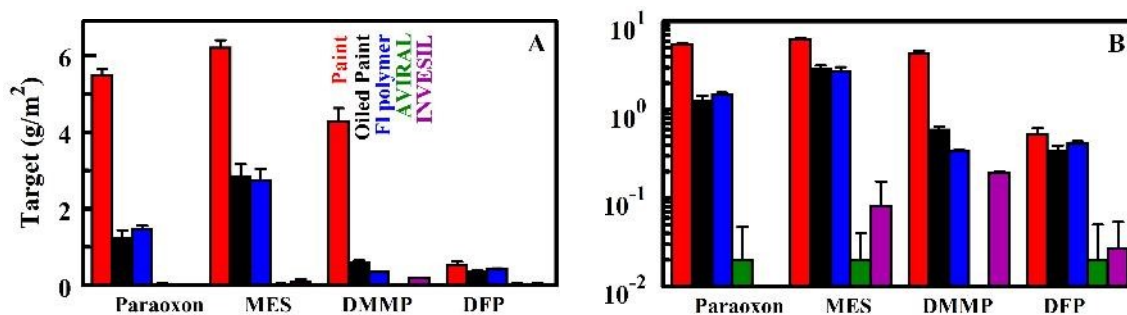


Fig. 5 — Target retention by coupons following treatment with an air stream and rinsing with soapy water: paint (red), oiled paint (black), smooth fluorinated polymer (blue), the AVIRAL coating (green), and the INVESIL coating (purple) plotted on a linear (A) and a log scale (B).

Table 2 – Target Retention (g/m^2) Following 1 h Aging on Aluminum Supports

Coupon	Paraoxon	MES	DMMP	DFP
Aluminum Support				
Paint Only	5.48	6.20	4.28	0.52
Fomblin Y Oiled Paint	1.24	2.85	0.59	0.34
Smooth Fluoropolymer	1.47	2.74	0.34	0.41
AVIRAL, thick	0.02	0.02	ND	0.02
INVESIL	ND	0.08	0.19	0.03

ND = not detected

CONCLUSIONS

The AVIRAL coating from Flora Coatings LLC provides reduction in surface energy and significantly improved performance during processing than that noted for the paint only surfaces. The INVESIL coating produced slightly increased surface energy. This coating also retained more DMMP than the AVIRAL material. Spectrophotometric analysis is necessary to determine the overall impact on color and reflectivity. It should also be noted that Flora Coatings LLC has additional products including a variant of AVIRAL, incorporating nanoparticles, which should produce less change to the appearance of the underlying surface. While this material did not provide the most significant improvements in target retention that this series has observed, it is the only coating evaluated to date that also offers antimicrobial activity, a feature that may be valuable to some applications.

ACKNOWLEDGEMENTS

The authors would like to thank Dr. Atul Tiwari of Flora Coatings LLC for supplying the samples evaluated under this study. This research was sponsored by the Defense Threat Reduction Agency (DTRA, CB10125).

REFERENCES

1. White, B., Malanoski, A., Moore, M., Melde, B., and Bryan, B., "Bioinspired Surface Treatments for Improved Decontamination: Bioceramic Coating," US Naval Research Laboratory, Washington, DC, **2018**; NRL/MR/6930-18,9796.
2. Lalain, T., Mantooth, B., Shue, M., Pusey, S., and Wylie, D., "Chemical Contaminant and Decontaminant Test Methodology Source Document," US Army RDEC, Edgewood Chemical Biological Center, Aberdeen Proving Ground, MD, **2012**; ECBC-TR-980.
3. Gebreegzi, Y.T., Foster, G.D., and Khan, S.U., "Simultaneous Determination of Carbaryl, Malathion, Fenitrothion, and Diazinon Residues in Sesame Seeds (*Seasmum indicum* L)" *J. Agric. Food Chem.*, **2000**, 48, 5165-68.
4. White, B., Melde, B., Moore, M., and Malanoski, A., "Bioinspired Surface Treatments for Improved Decontamination: Polymer-Based Slippery Liquid-Infused Porous Surfaces (SLIPS)," US Naval Research Laboratory, Washington, DC, **2018**; NRL/MR/6930-18,9773.

Appendix A
IMAGES OF PAINTED COUPONS

Fig. A1 — DFP on paint. Images of a coupon before application (A) and at 0 (B), 0.5 (C), 1.0 (D), 1.5 (E), 2.0 (F), 2.5 (G), 3.0 (H), 3.5 (I), 4.0 (J), 4.5 (K), 10 (L), 15 (M), 20 (N), 25 (O), and 30 (P) min following application of the target. These images were collected with a glass cover in place to limit evaporation. Reflections from the cover can be seen in some images.

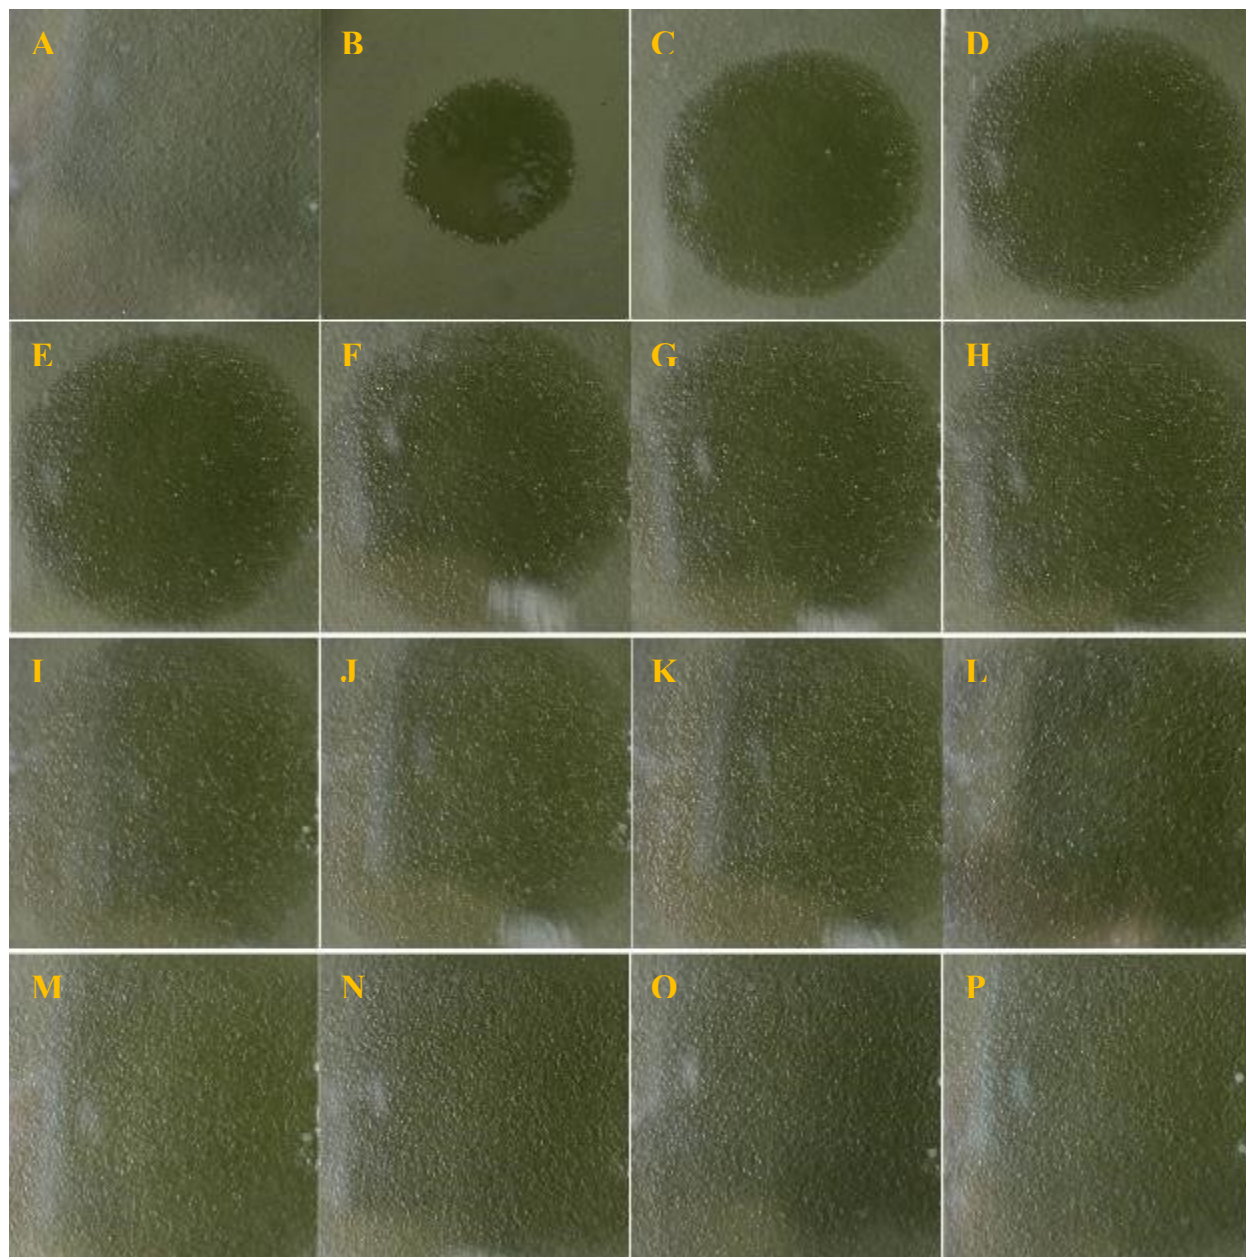


Fig. A2 — MES on paint. Images of a coupon before application (A) and at 0 (B), 0.5 (C), 1 (D), 1.5 (E), 2 (F), 2.5 (G), 3 (H), 3.5 (I), 4 (J), 4.5 (K), 5 (L), 10 (M), 15 (N), 20 (O), 25 (P), and 30 (Q) min following application of the target.


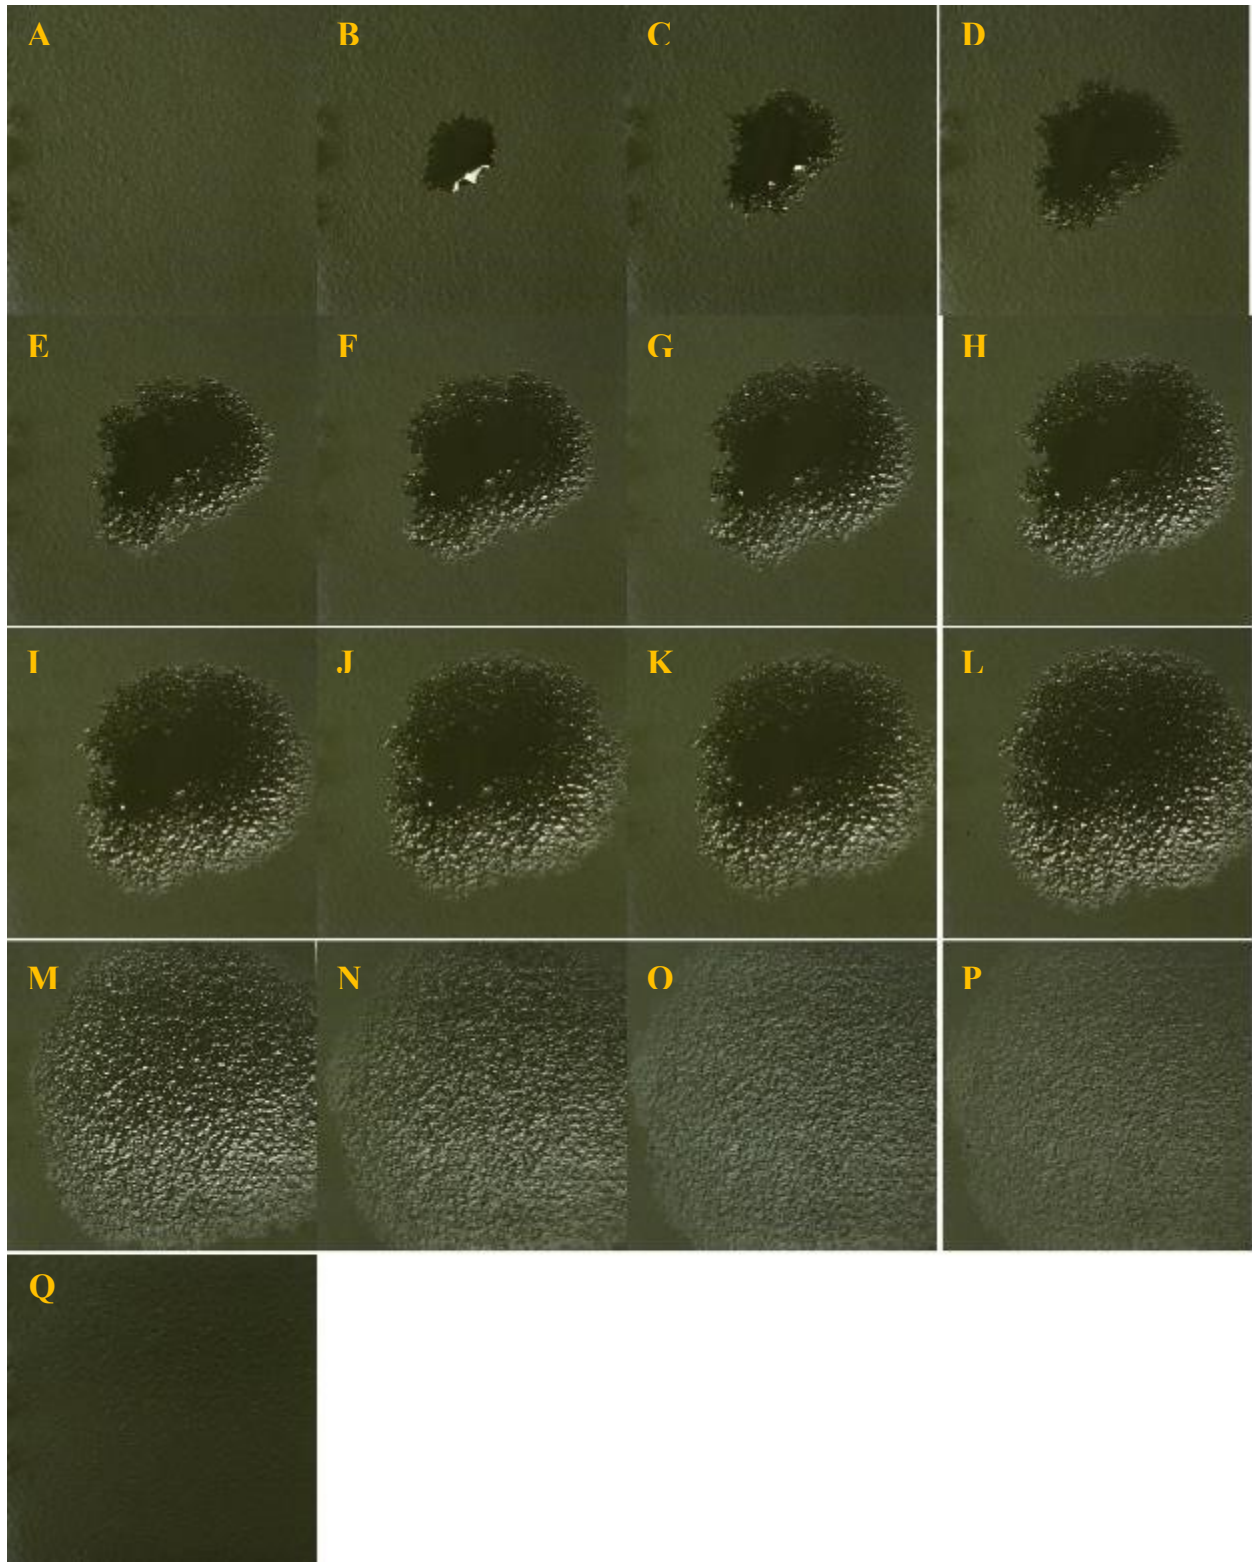


Fig. A3 — DMMP on paint. Images of a coupon before application (A) and at 0 (B), 0.5 (C), 1 (D), 1.5 (E), 2 (F), 2.5 (G), 3 (H), 3.5 (I), 4 (J), 4.5 (K), 5 (L), 10 (M), 15 (N), 20 (O), 25 (P), and 30 (Q) min following application of the target.

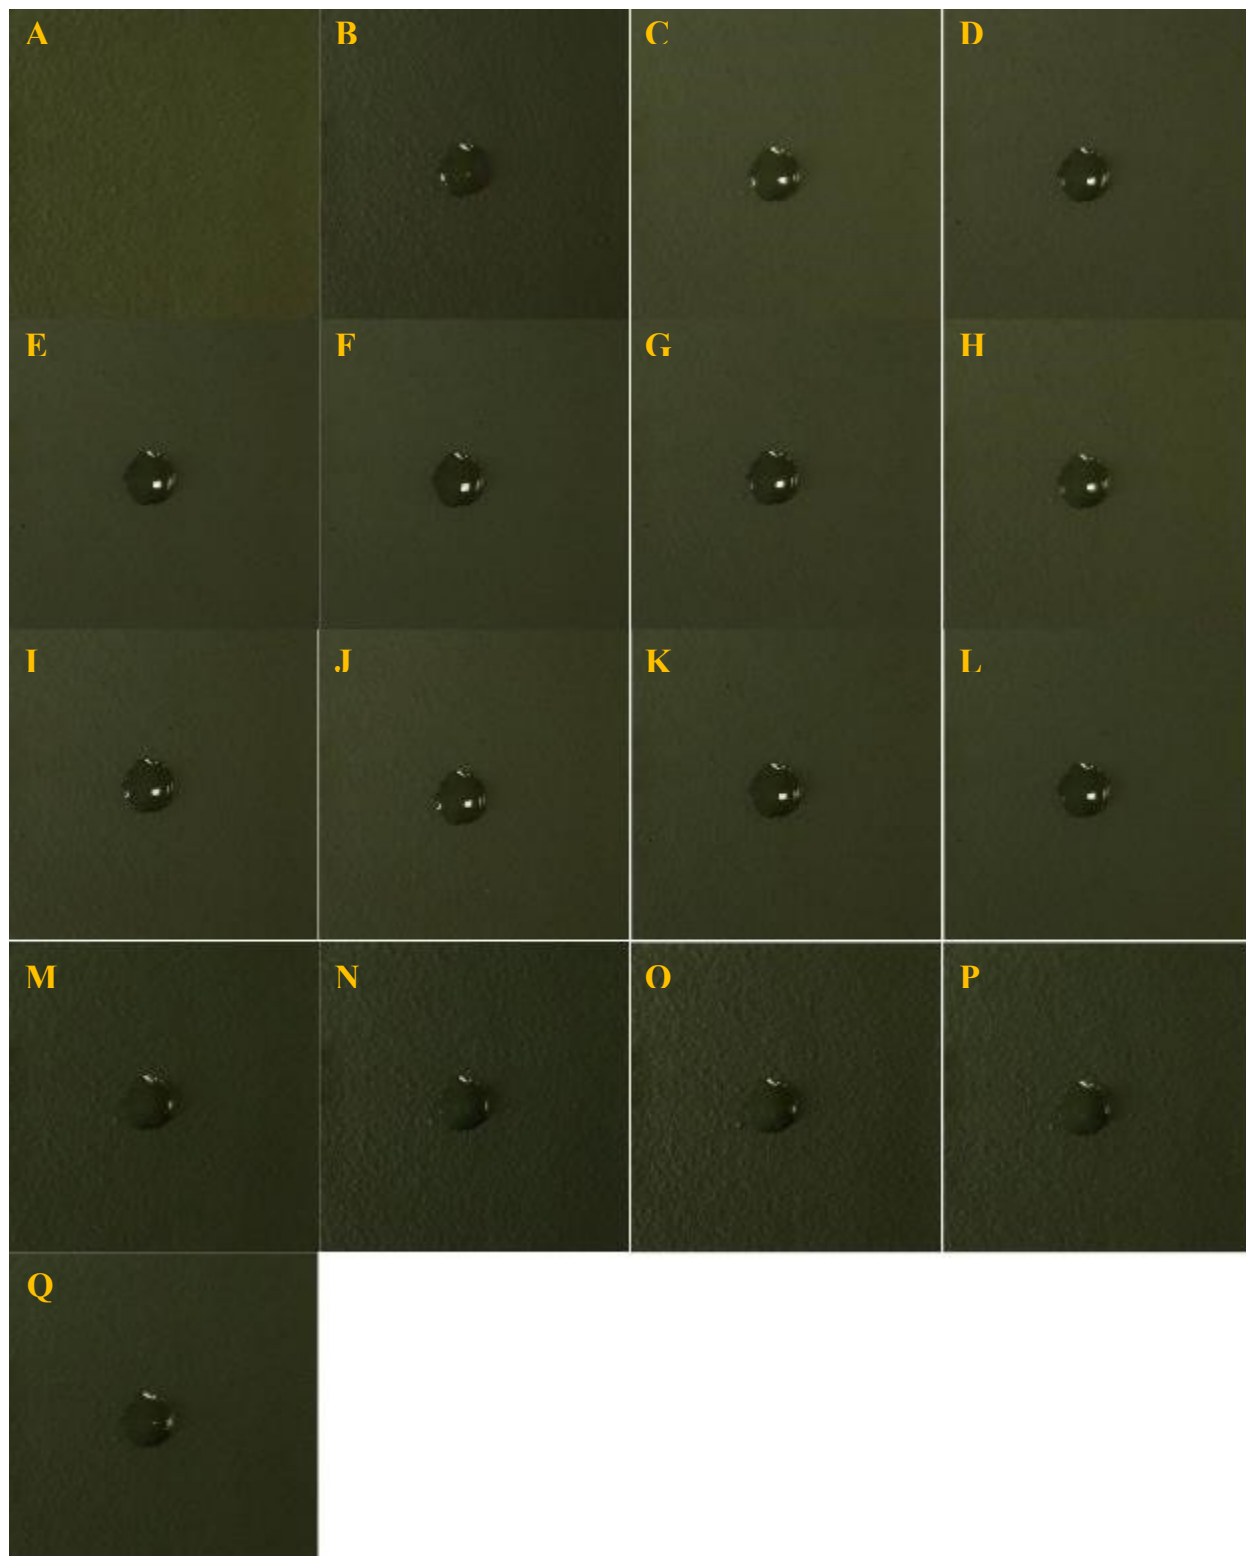

Appendix B**IMAGES OF FOMBLIN Y OILED COUPONS**

Fig. B1 — DFP on Fomblin Y oiled paint. Images of a coupon before application (A) and at 0 (B), 0.5 (C), 1 (D), 1.5 (E), 2 (F), 2.5 (G), 3 (H), 3.5 (I), 4 (J), 4.5 (K), 5 (L), 5.5 (M), 10 (N), 15 (O), 20 (P), 25 (Q), and 30 (R) min following application of the target. These images were collected with a glass cover in place to limit evaporation. Reflections from the cover can be seen in some images.

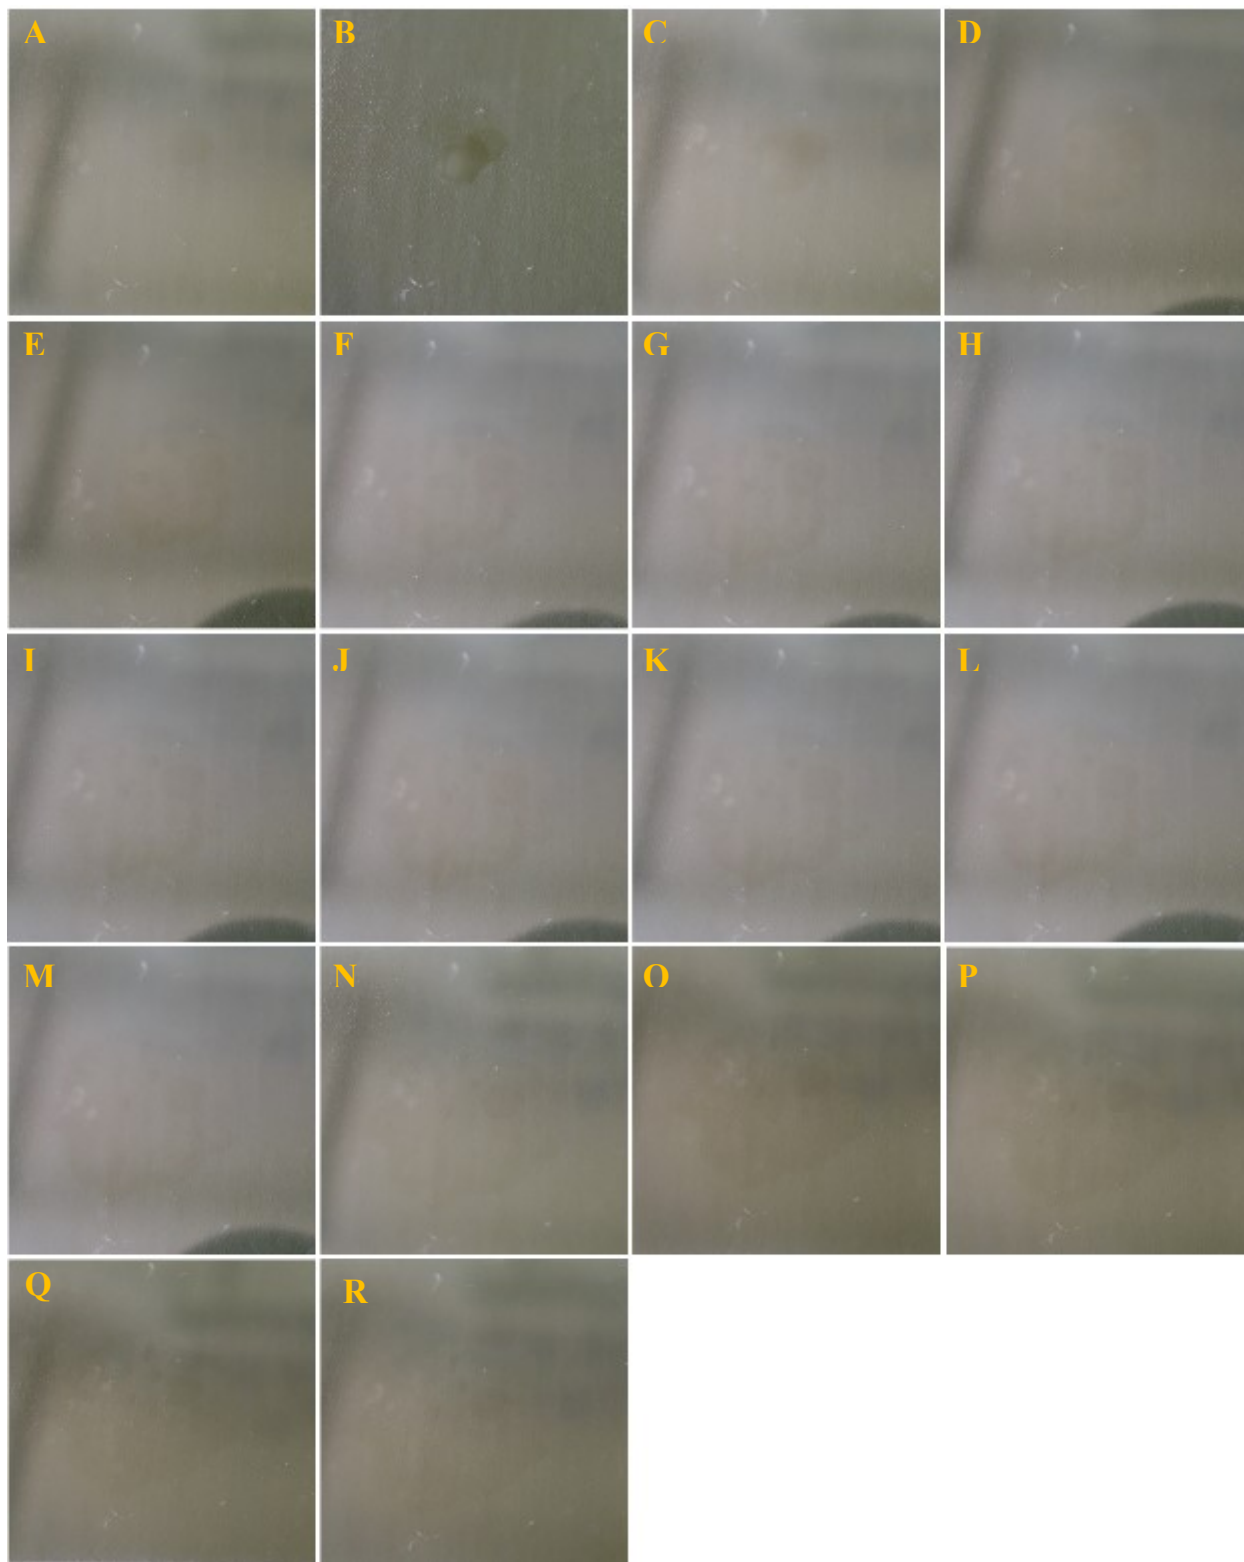


Fig. B2 — MES on Fomblin Y oiled paint. Images of a coupon before application (A) and at 0 (B), 0.5 (C), 1 (D), 1.5 (E), 2 (F), 2.5 (G), 3 (H), 3.5 (I), 4 (J), 4.5 (K), 5 (L), 5.5 (M), 10 (N), 15 (O), 20 (P), 25 (Q), and 30 (R) min following application of the target.


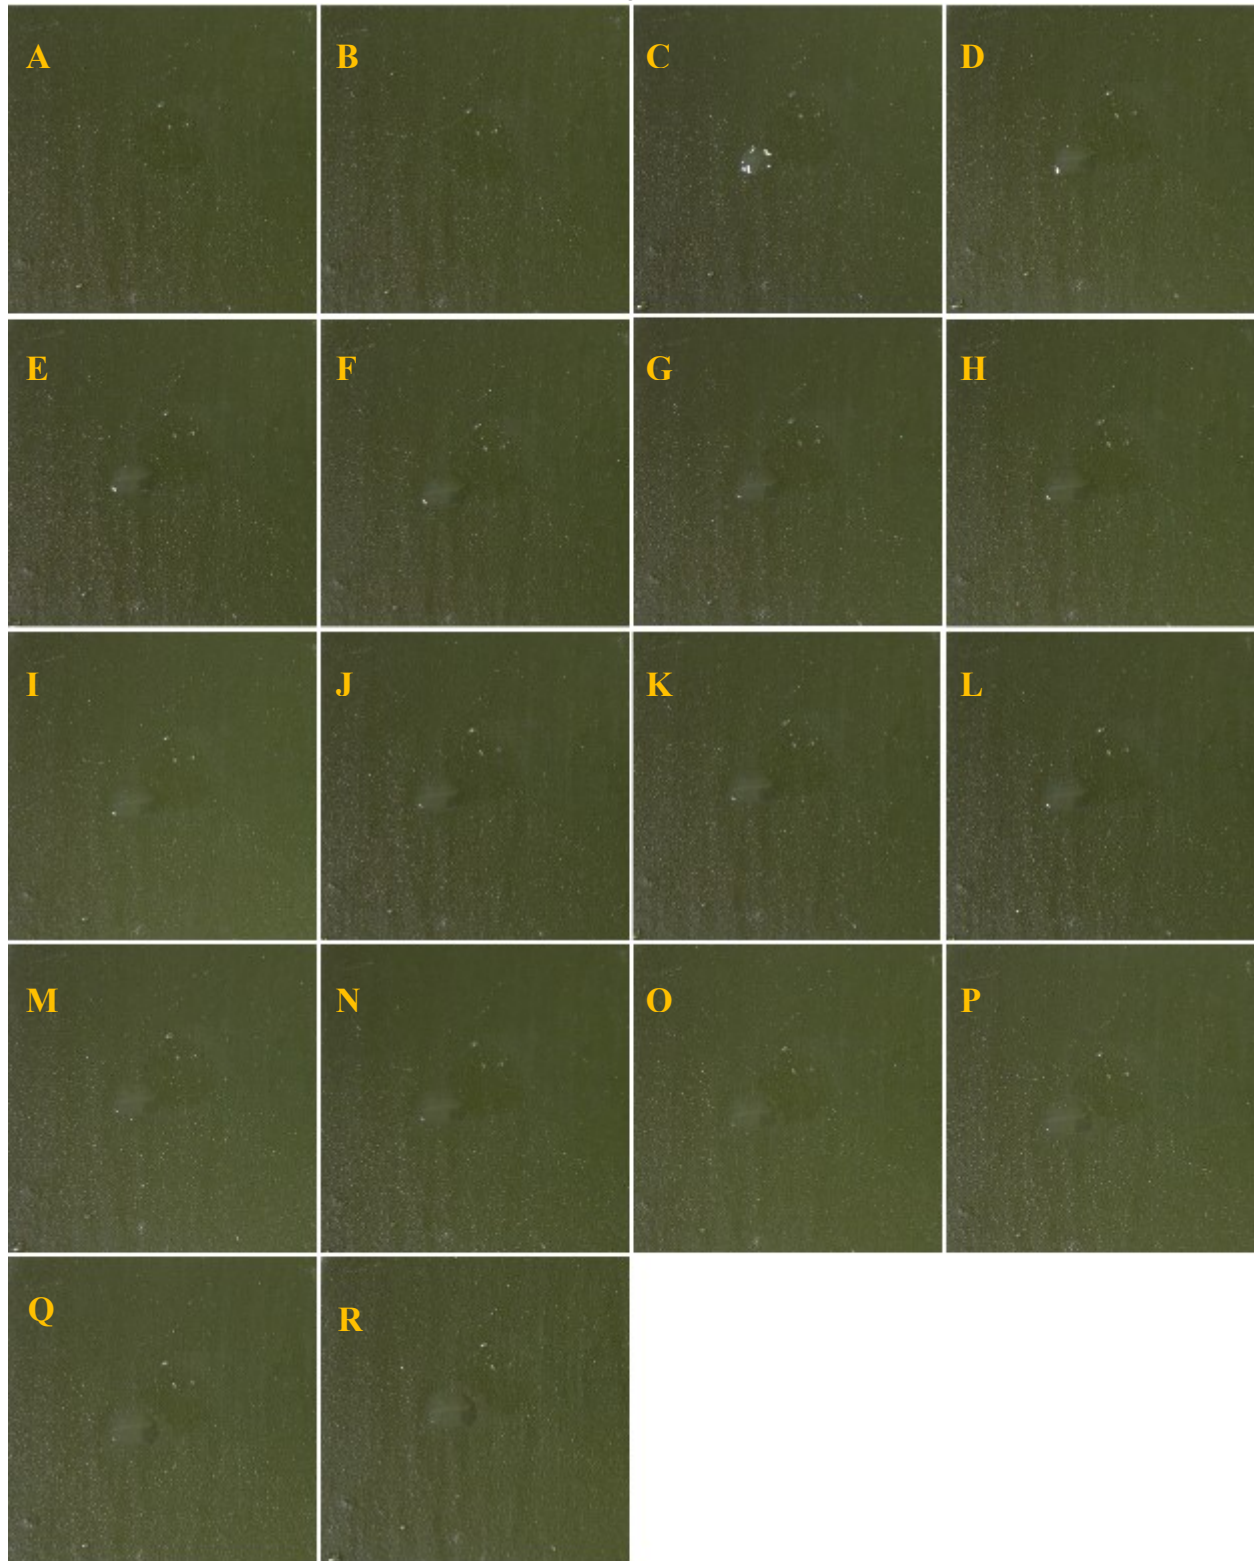


Fig. B3 — DMMP on Fomblin Y oiled paint. Images of a coupon before application (A) and at 0 (B), 0.5 (C), 1 (D), 1.5 (E), 2 (F), 2.5 (G), 3 (H), 3.5 (I), 4 (J), 4.5 (K), 5 (L), 5.5 (M), 10 (N), 15 (O), 20 (P), 25 (Q), and 30 (R) min following application of the target.

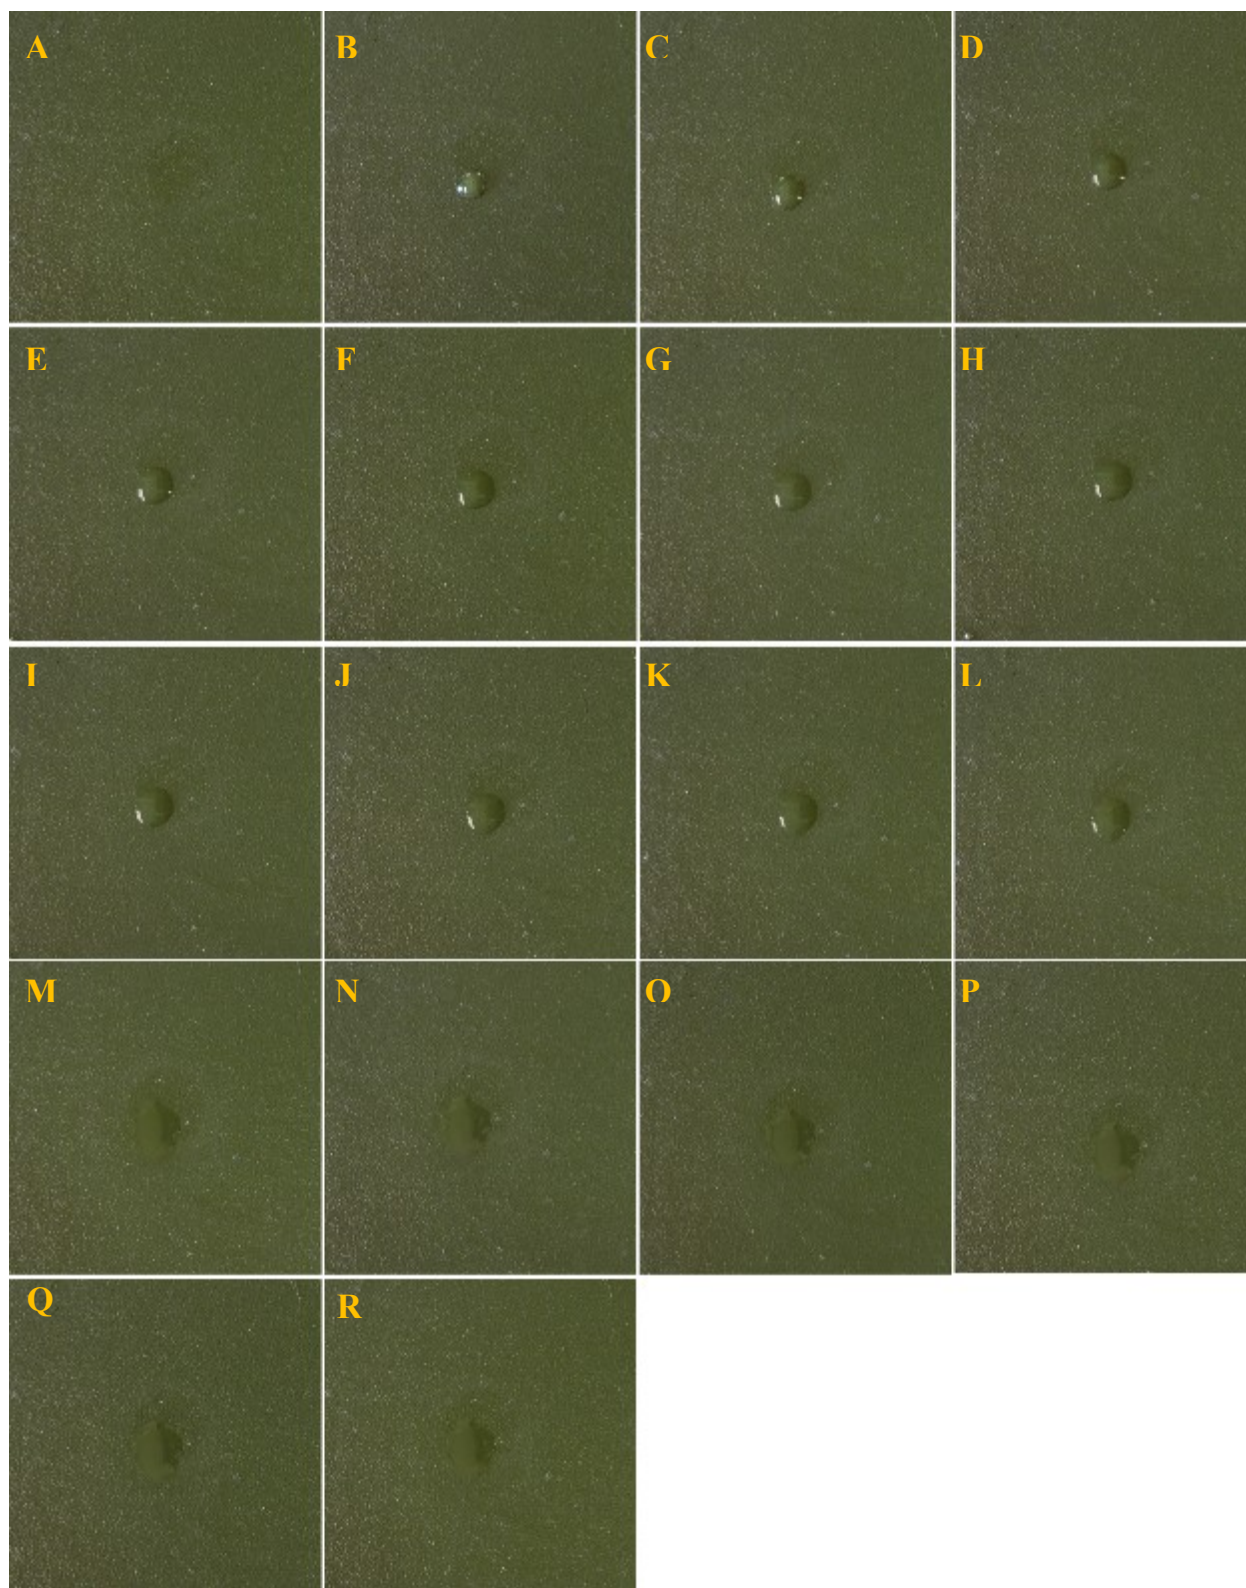

Appendix C

IMAGES OF FLUOROPOLYMER TREATED COUPONS

Fig. C1 — DFP on the fluoropolymer coating. Images of a coupon before application (A) and at 0 (B), 0.5 (C), 1 (D), 1.5 (E), 2 (F), 2.5 (G), 3 (H), 3.5 (I), 4 (J), 4.5 (K), 5 (L), 5.5 (M), 10 (N), 15 (O), 20 (P), 25 (Q), and 30 (R) min following application of the target. These images were collected with a glass cover in place to limit evaporation. Reflections from the cover can be seen in some images.

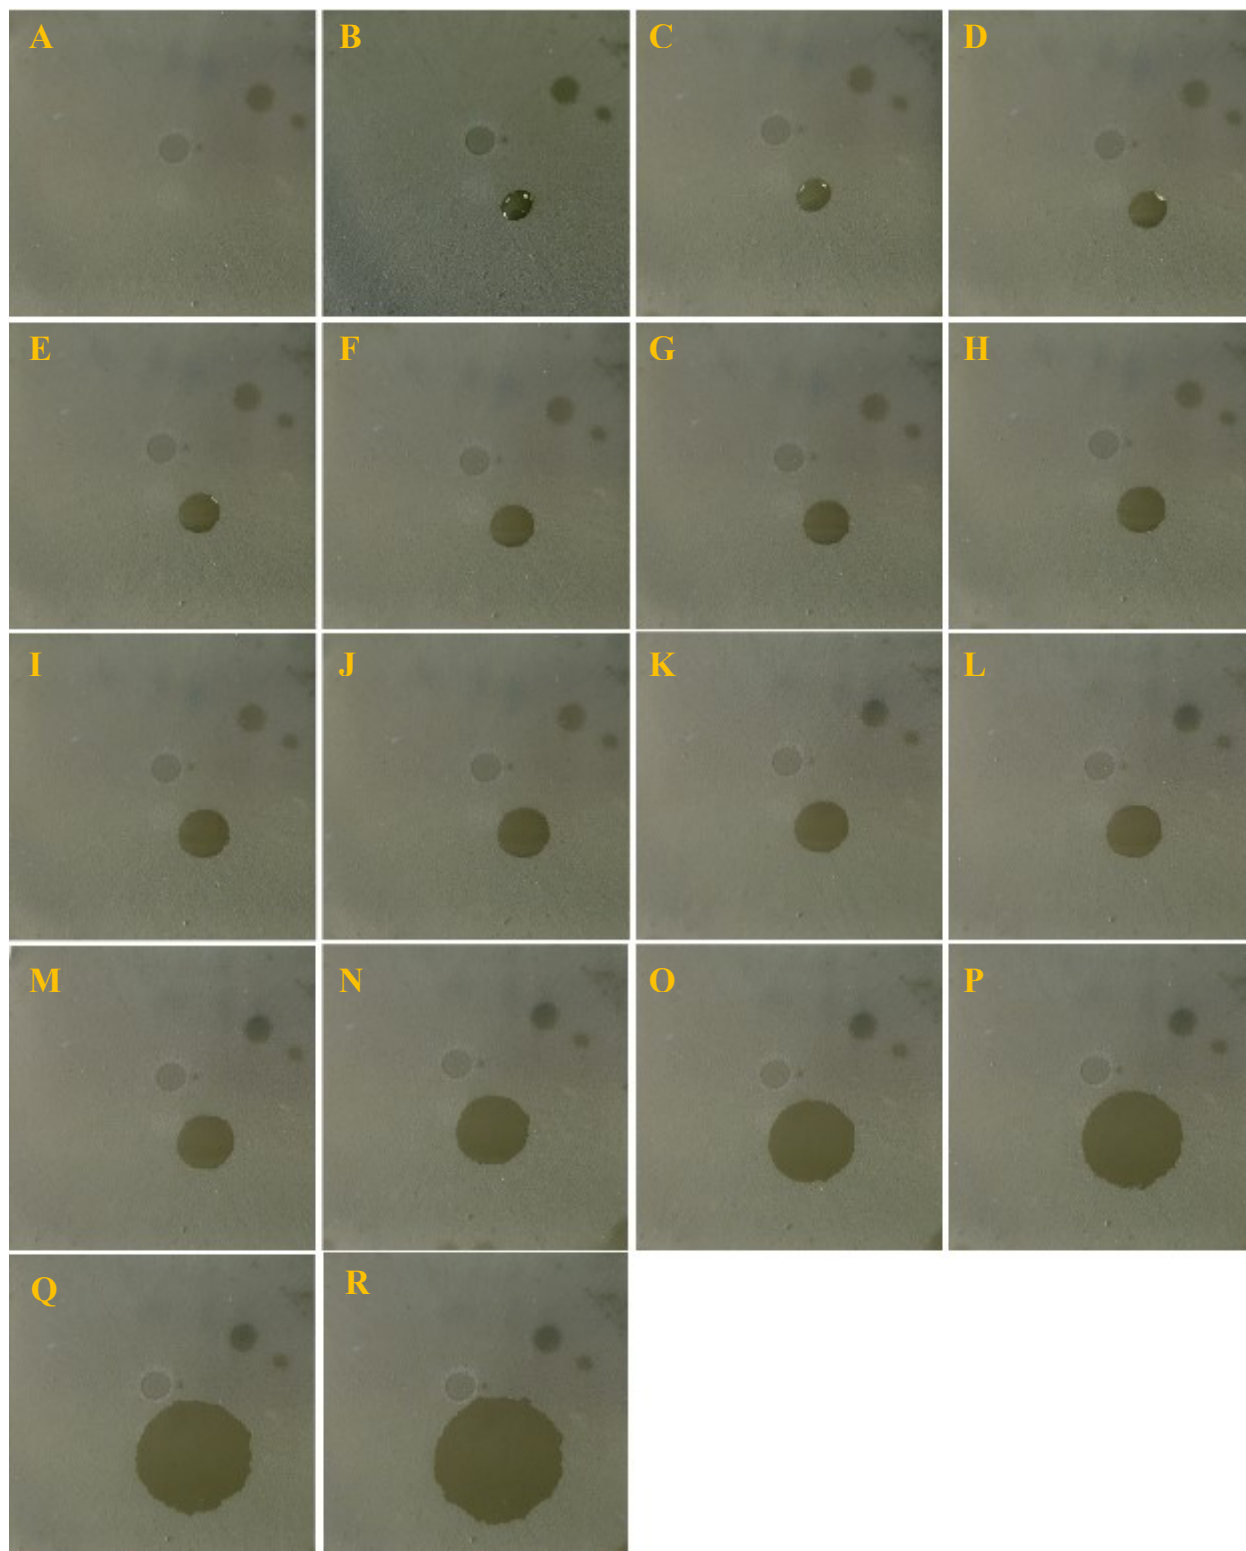


Fig. C2 — MES on the fluoropolymer coating. Images of a coupon before application (A) and at 0 (B), 0.5 (C), 1 (D), 1.5 (E), 2 (F), 2.5 (G), 3 (H), 3.5 (I), 4 (J), 4.5 (K), 5 (L), 10 (M), 15 (N), 20 (O), 25 (P), and 30 (Q) min following application of the target.


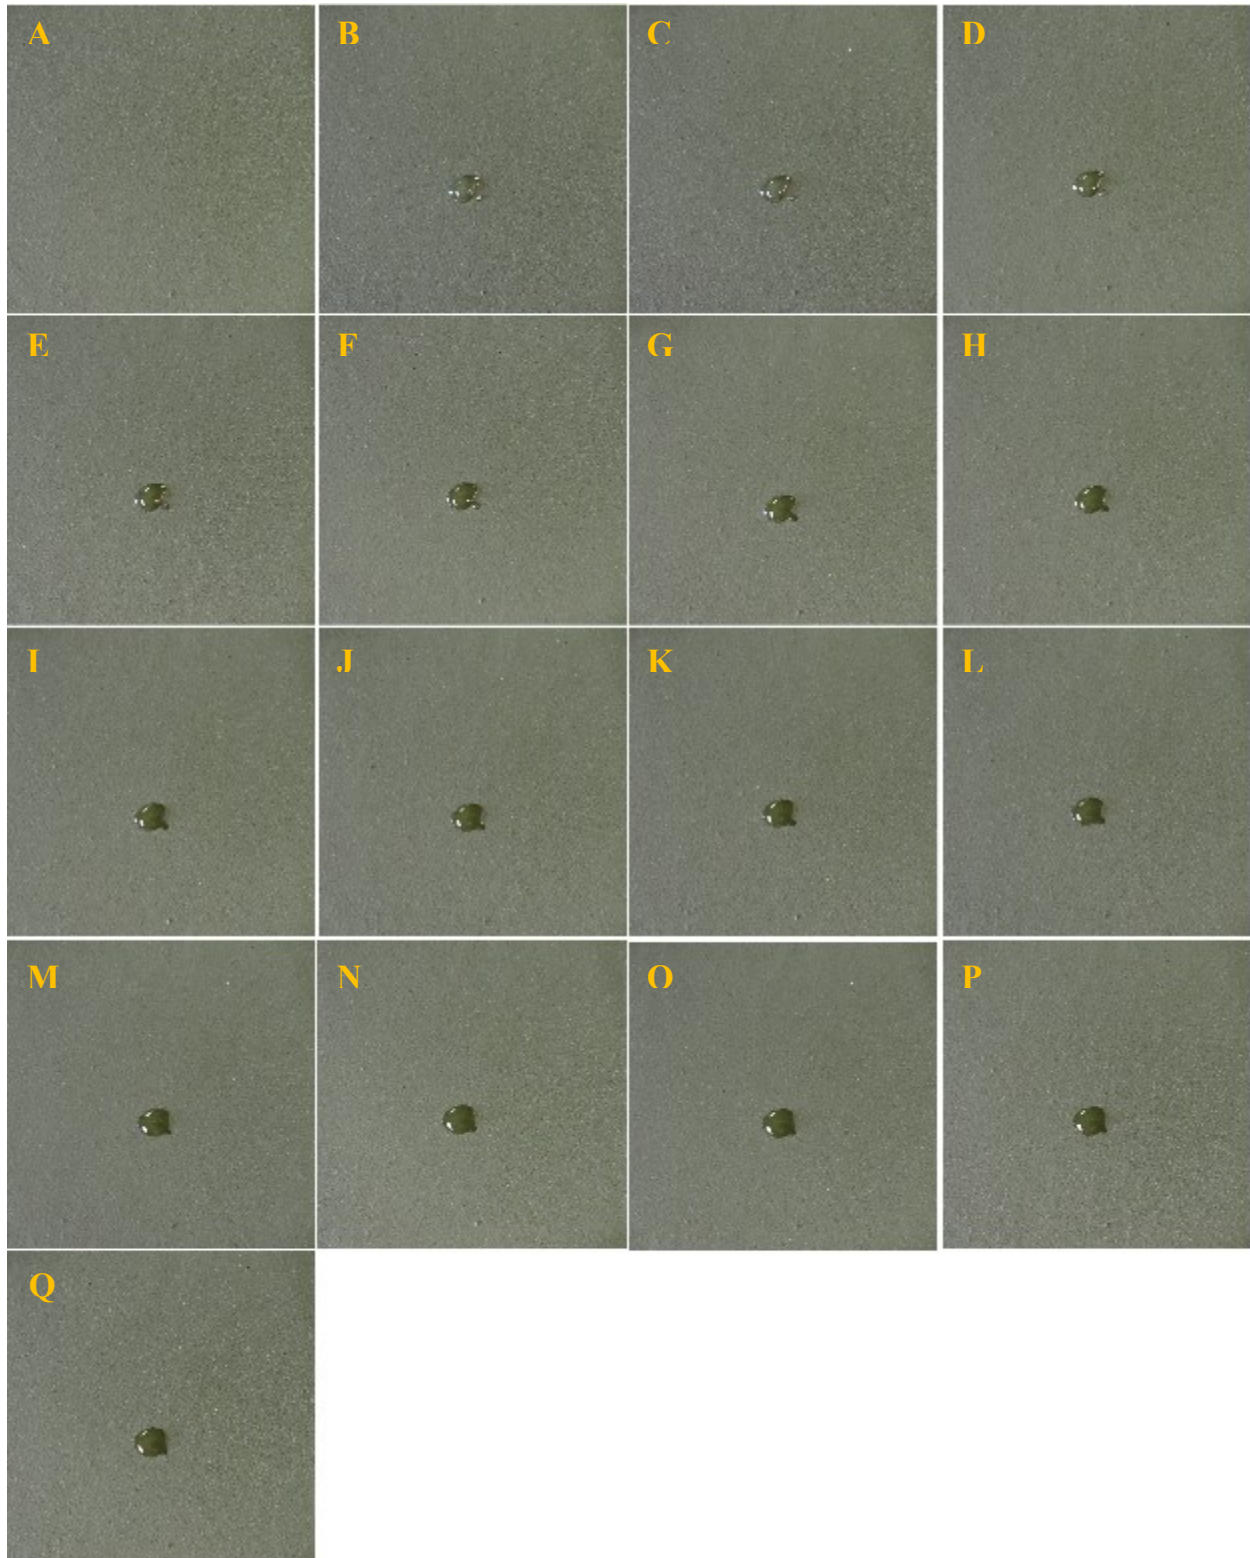


Fig. C3 — DMMP on the fluoropolymer coating. Images of a coupon before application (A) and at 0 (B), 0.5 (C), 1 (D), 1.5 (E), 2 (F), 2.5 (G), 3 (H), 3.5 (I), 4 (J), 4.5 (K), 5 (L), 10 (M), 15 (N), 20 (O), 25 (P), and 30 (Q) min following application of the target.

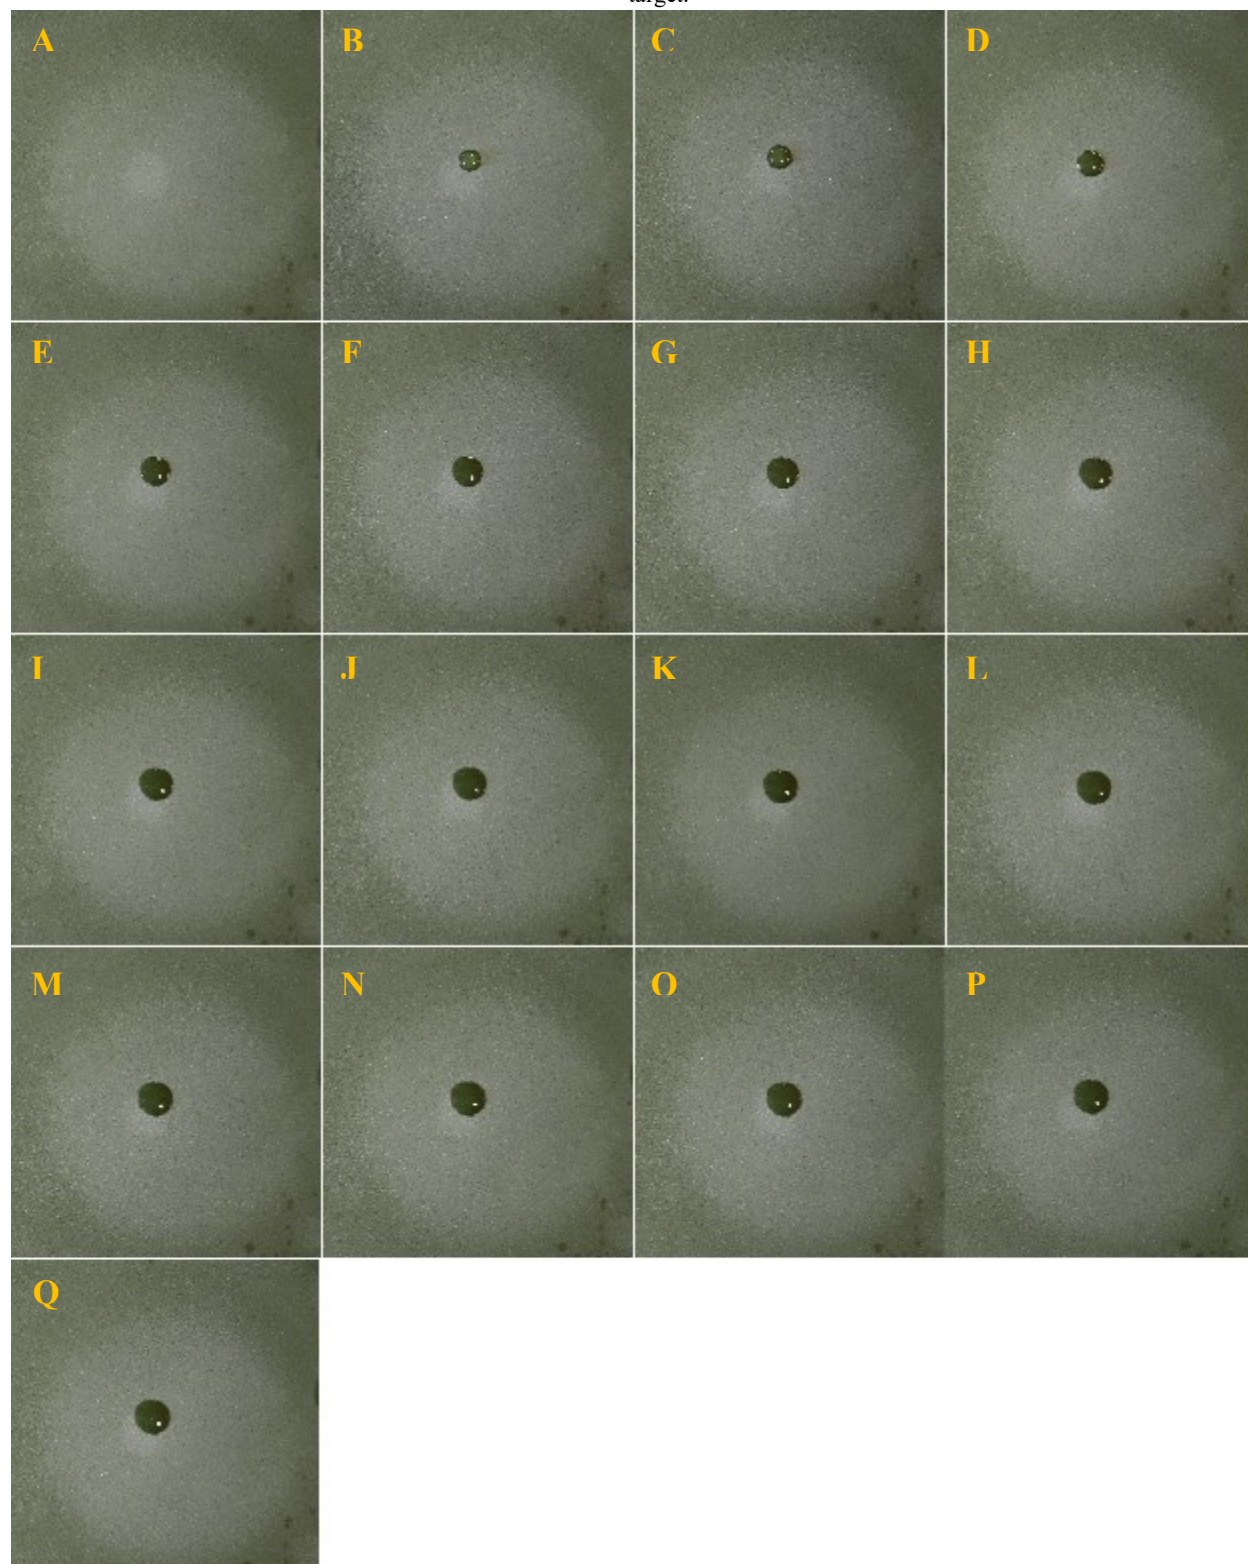

Appendix D**IMAGES OF AVIRAL TREATED COUPONS (THICK)**

Fig. D1 — DFP on thick AVIRAL coating. Images of a coupon before application (A) and at 0 (B), 0.5 (C), 1 (D), 1.5 (E), 2 (F), 2.5 (G), 3 (H), 3.5 (I), 4 (J), 4.5 (K), 5 (L), 10 (M), 15 (N), 20 (O), 25 (P), and 30 (Q) min following application of the target. These images were collected with a glass cover in place to limit evaporation. Reflections from the cover can be seen in some images. (B) No cover at initial application.

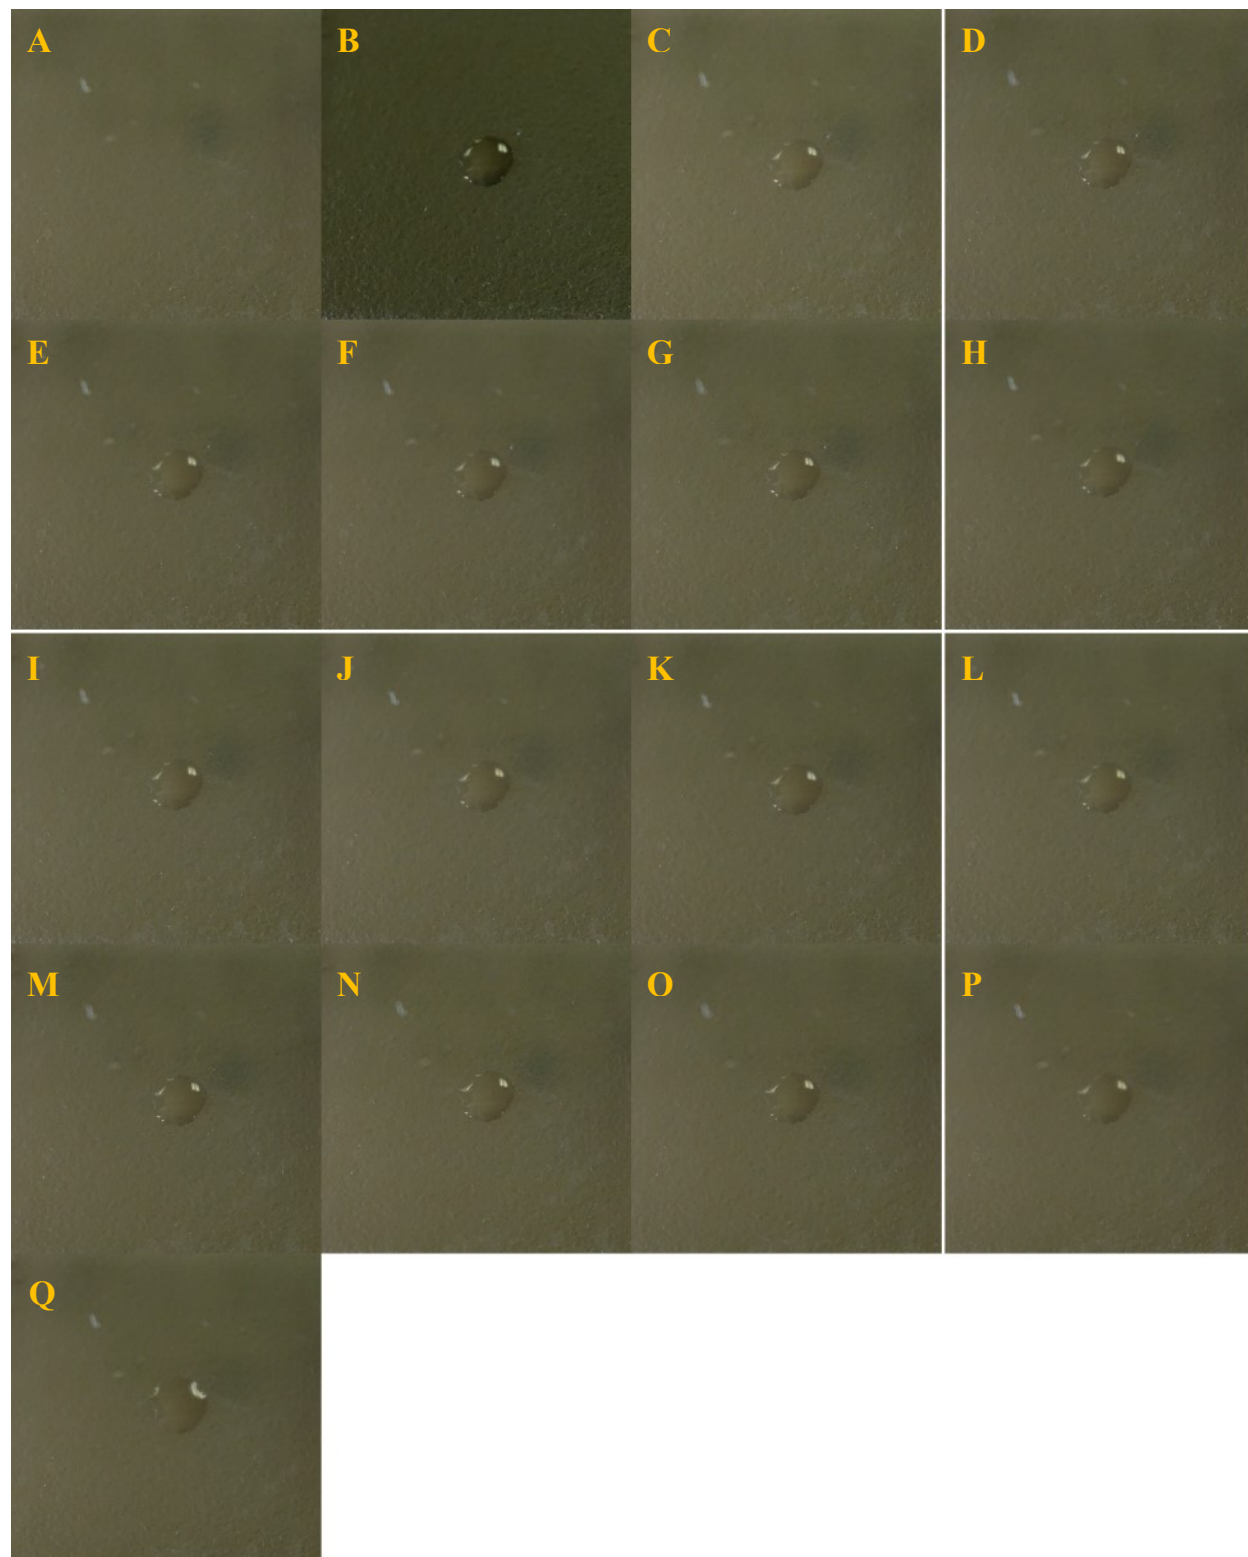


Fig. D2 — MES on thick AVIRAL coating. Images of a coupon before application (A) and at 0 (B), 0.5 (C), 1 (D), 1.5 (E), 2 (F), 2.5 (G), 3 (H), 3.5 (I), 4 (J), 4.5 (K), 5 (L), 10 (M), 15 (N), 20 (O), 25 (P), and 30 (Q) min following application of the target.


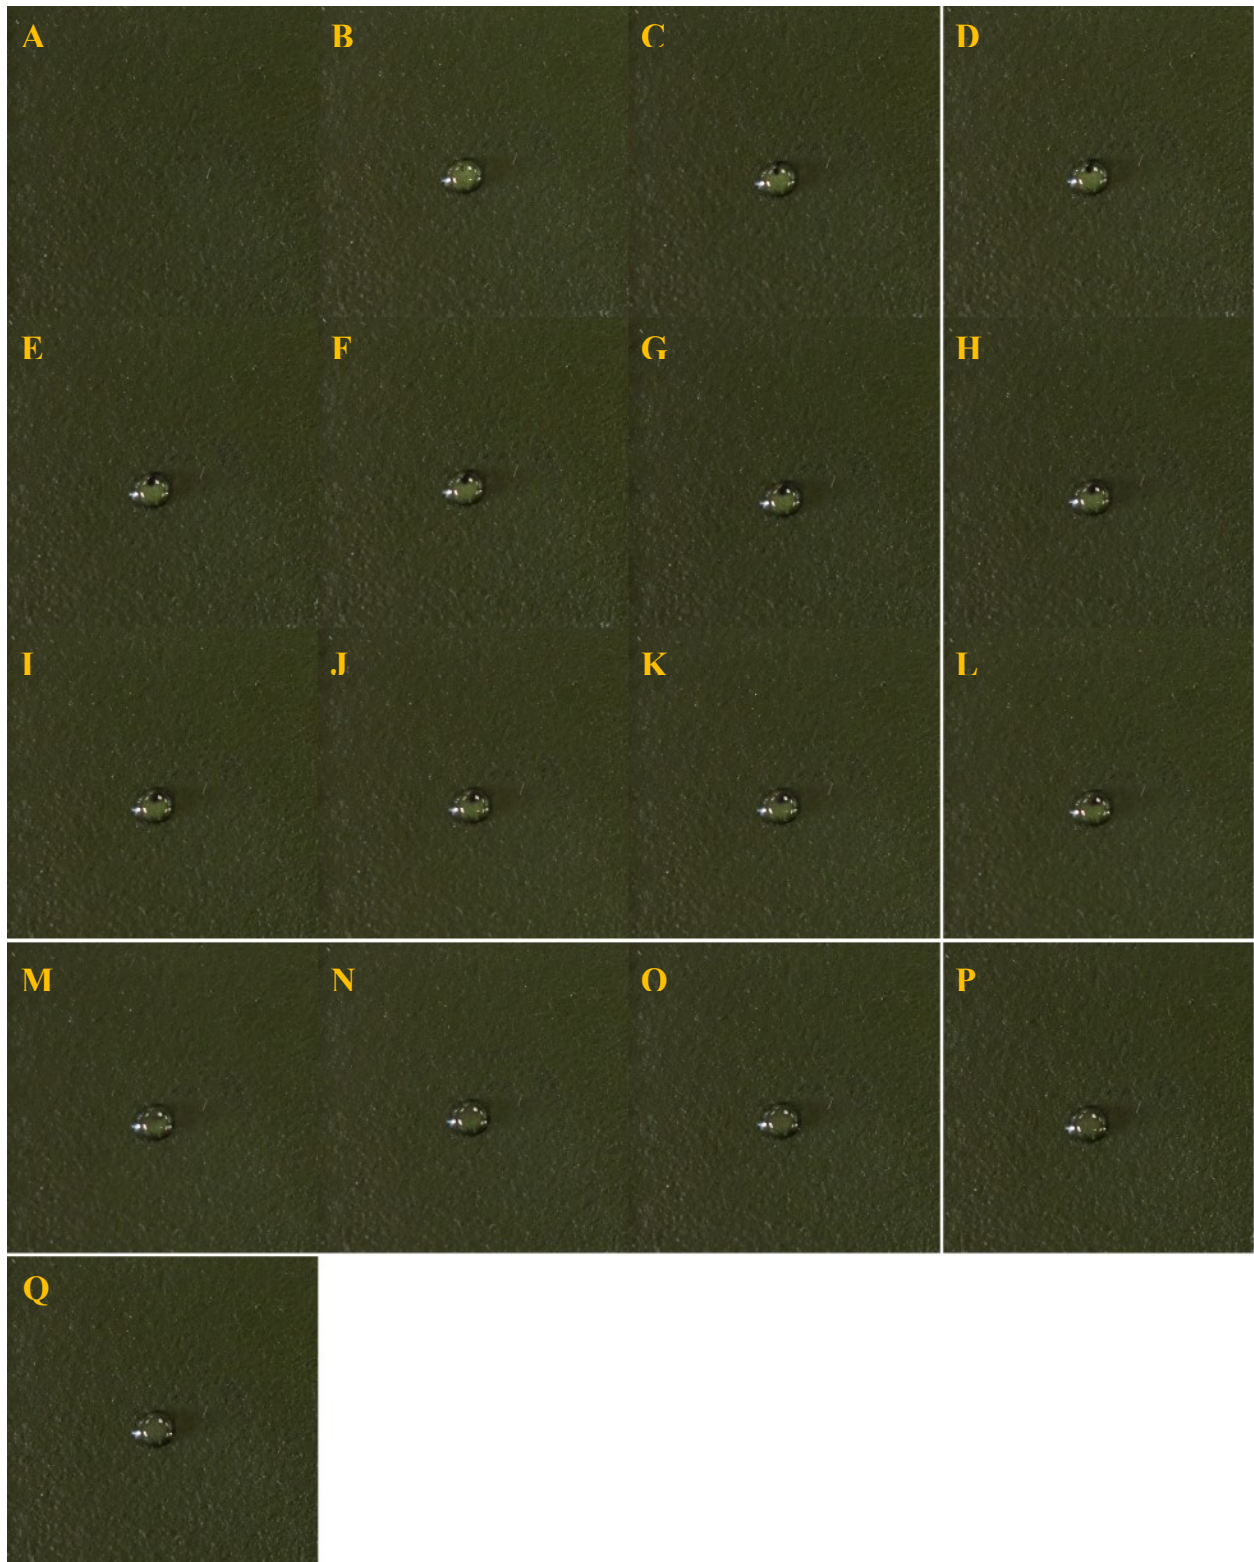


Fig. D3 — DMMP on thick AVIRAL coating. Images of a coupon before application (A) and at 0 (B), 0.5 (C), 1 (D), 1.5 (E), 2 (F), 2.5 (G), 3 (H), 3.5 (I), 4 (J), 4.5 (K), 5 (L), 10 (M), 15 (N), 20 (O), 25 (P), and 30 (Q) min following application of the target.

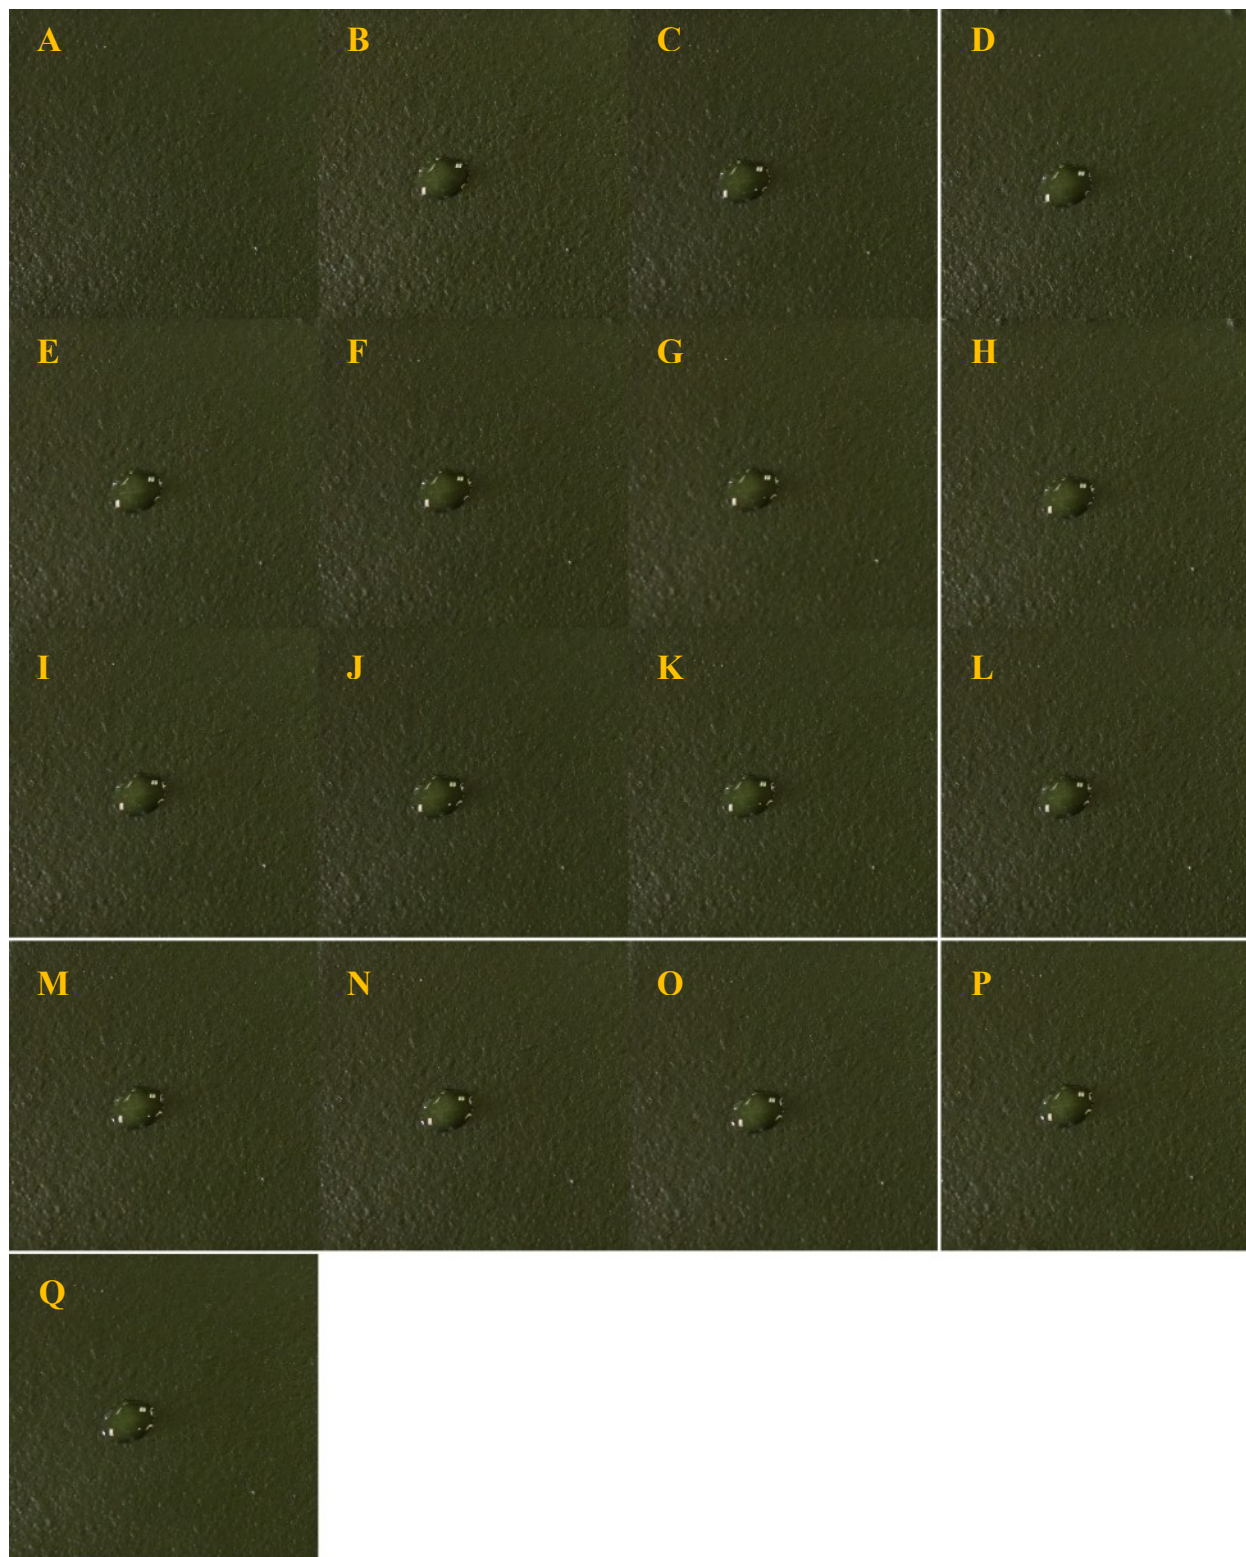

Appendix E**IMAGES OF INVESIL TREATED COUPONS**

Fig. E1 — DFP on INVESIL coating. Images of a coupon before application (A) and at 0 (B), 0.5 (C), 1 (D), 1.5 (E), 2 (F), 2.5 (G), 3 (H), 3.5 (I), 4 (J), 4.5 (K), 5 (L), 10 (M), 15 (N), 20 (O), 25 (P), and 30 (Q) min following application of the target. These images were collected with a glass cover in place to limit evaporation. Reflections from the cover can be seen in some images.



Fig. E2 — MES on thin INVESIL coating. Images of a coupon before application (A) and at 0 (B), 0.5 (C), 1 (D), 1.5 (E), 2 (F), 2.5 (G), 3 (H), 3.5 (I), 4 (J), 4.5 (K), 5 (L), 10 (M), 15 (N), 20 (O), 25 (P), and 30 (Q) min following application of the target.

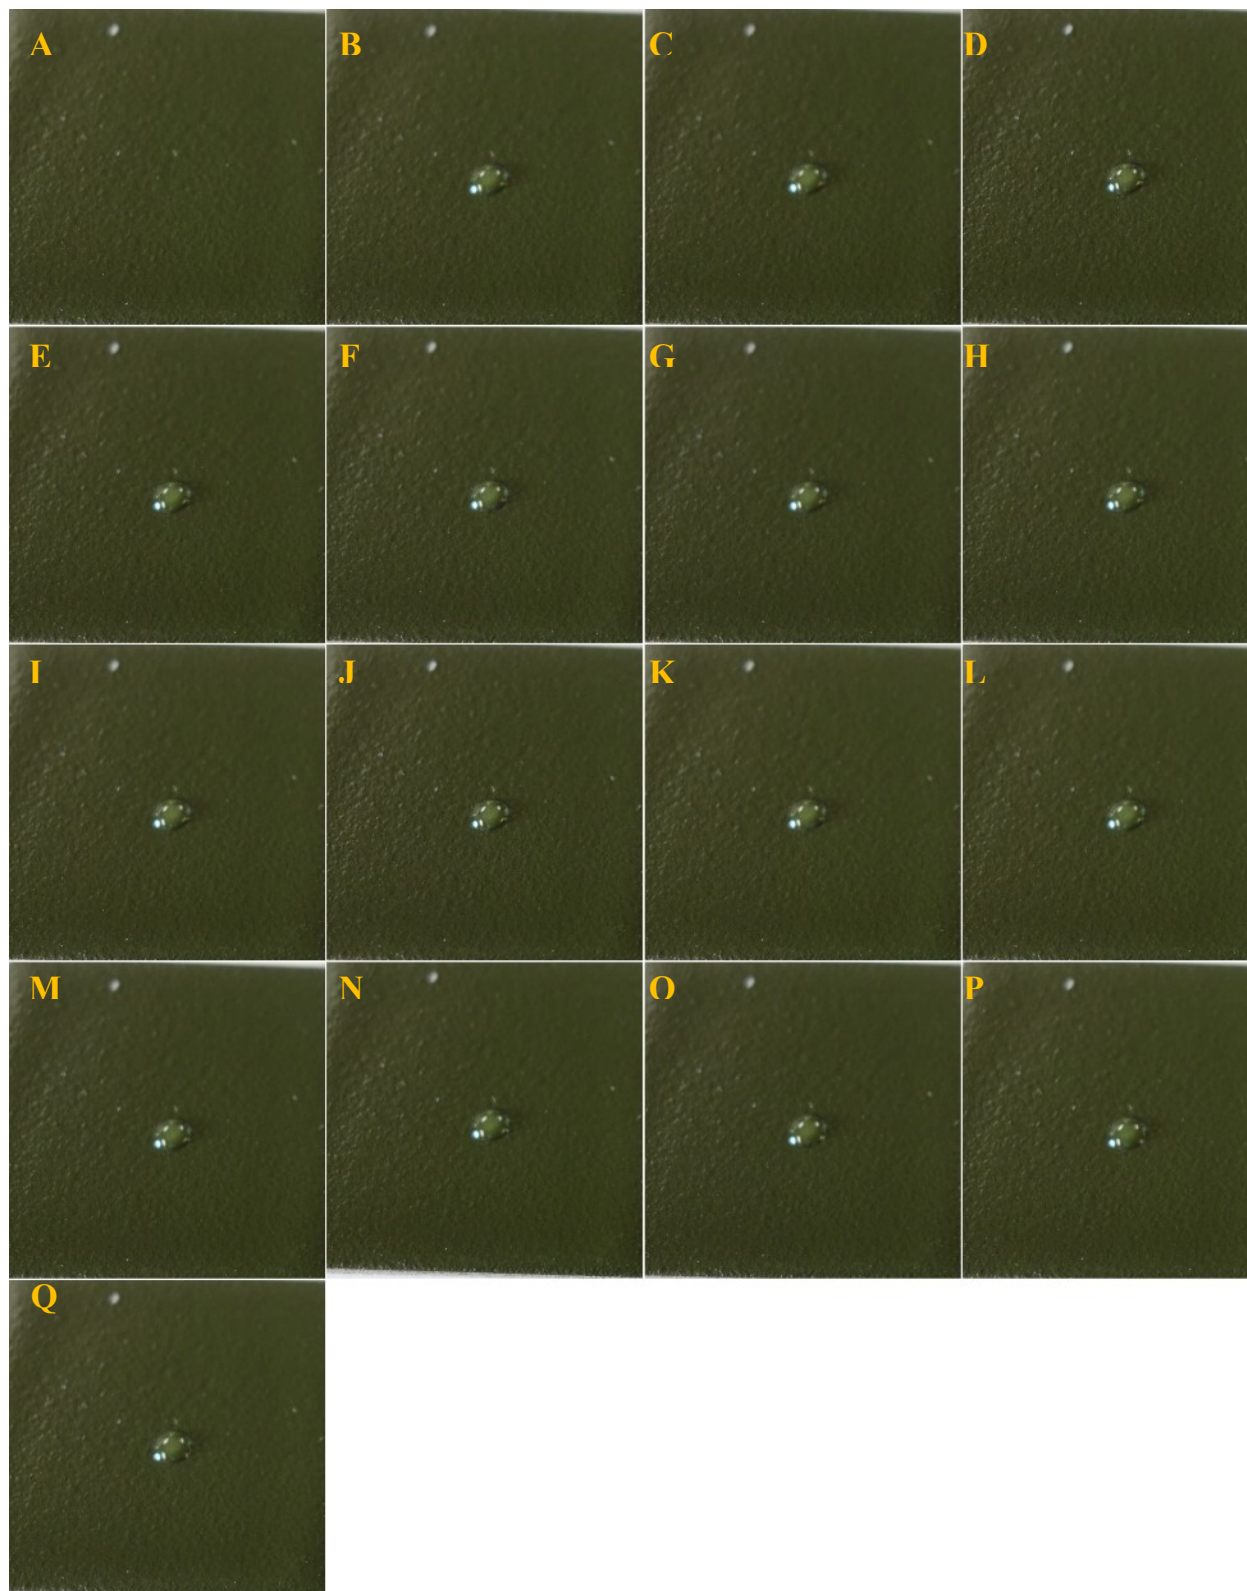


Fig. E3 — DMMP on thin INVESIL coating. Images of a coupon before application (A) and at 0 (B), 0.5 (C), 1 (D), 1.5 (E), 2 (F), 2.5 (G), 3 (H), 3.5 (I), 4 (J), 4.5 (K), 5 (L), 10 (M), 15 (N), 20 (O), 25 (P), and 30 (Q) min following application of the target.

