

Naval Submarine Medical Research Laboratory

NSMRL/F1016/TM--2022-1388

March 09, 2022



Impulse Assessment of the MSA Supreme® Pro-X Earmuff

Alexa H. Kolas, AuD ^{1,2}
Jacob J. See, BS ^{1,2}
Derek W. Schwaller, BS ¹
Stephanie J. Karch, AuD, PhD ¹
Jeremy S. Federman, PhD ¹

¹ Naval Submarine Medical Research Laboratory, Groton, CT, United States

² Leidos, Inc., Reston, VA, United States

Approved and Released by:
K. K. Shobe, CAPT, MSC, USN
Commanding Officer
NAVSUBMEDRSCHLAB

DISTRIBUTION A. Approved for public release: distribution unlimited.

REPORT DOCUMENTATION PAGE

*Form Approved
OMB No. 0704-0188*

The public reporting burden for this collection of information is estimated to average 1 hour per response, including the time for reviewing instructions, searching existing data sources, gathering and maintaining the data needed, and completing and reviewing the collection of information. Send comments regarding this burden estimate or any other aspect of this collection of information, including suggestions for reducing the burden, to the Department of Defense, Executive Services and Communications Directorate (0704-0188). Respondents should be aware that notwithstanding any other provision of law, no person shall be subject to any penalty for failing to comply with a collection of information if it does not display a currently valid OMB control number.

PLEASE DO NOT RETURN YOUR FORM TO THE ABOVE ORGANIZATION.

1. REPORT DATE (DD-MM-YYYY)		2. REPORT TYPE		3. DATES COVERED (From - To)	
4. TITLE AND SUBTITLE			5a. CONTRACT NUMBER		
			5b. GRANT NUMBER		
			5c. PROGRAM ELEMENT NUMBER		
6. AUTHOR(S)			5d. PROJECT NUMBER		
			5e. TASK NUMBER		
			5f. WORK UNIT NUMBER		
7. PERFORMING ORGANIZATION NAME(S) AND ADDRESS(ES)				8. PERFORMING ORGANIZATION REPORT NUMBER	
9. SPONSORING/MONITORING AGENCY NAME(S) AND ADDRESS(ES)				10. SPONSOR/MONITOR'S ACRONYM(S)	
				11. SPONSOR/MONITOR'S REPORT NUMBER(S)	
12. DISTRIBUTION/AVAILABILITY STATEMENT					
13. SUPPLEMENTARY NOTES					
14. ABSTRACT					
15. SUBJECT TERMS					
16. SECURITY CLASSIFICATION OF:			17. LIMITATION OF ABSTRACT	18. NUMBER OF PAGES	19a. NAME OF RESPONSIBLE PERSON
a. REPORT	b. ABSTRACT	c. THIS PAGE			19b. TELEPHONE NUMBER (Include area code)

[THIS PAGE INTENTIONALLY LEFT BLANK]

Impulse Assessment of the MSA Supreme[®] Pro-X Earmuff

Alexa H. Kalias, AuD^{1,2}
Jacob J. See, BS^{1,2}
Derek W. Schwaller, BS¹
Stephanie J. Karch, AuD, PhD¹
Jeremy S. Federman, PhD¹

¹ Naval Submarine Medical Research Laboratory, Groton, CT, United States

² Leidos, Inc., Reston, VA, United States

Naval Submarine Medical Research Laboratory

Approved and Released by:

CAPT K. K. Shobe, MSC, USN
Commanding Officer
Naval Submarine Medical Research Laboratory
Submarine Base New London Box 900
Groton, CT 06349-5900

This work was supported by the U.S. Navy Bureau of Medicine and Surgery funding work unit F1016 and the Office of Naval Research funding work unit F2002. The views expressed in this article are those of the authors and do not necessarily reflect the official policy or position of the Department of the Navy, Department of Defense, nor the U.S. Government. This work was prepared by employees of the U.S. Government as part of their official duties. Title 17 U.S.C. §105 provides that 'Copyright protection under this title is not available for any work of the United States Government.' Title 17 U.S.C. §101 defines a U.S. Government work as a work prepared by a military service member or employee of the U.S. Government as part of that person's official duties.

DISTRIBUTION A. Approved for public release: distribution unlimited.

[THIS PAGE INTENTIONALLY LEFT BLANK]

Acknowledgements

The authors would like to thank Ms. Rachael Maten for assistance in the collection of resource materials.

CONTENTS

ACKNOWLEDGEMENTS	iii
EXECUTIVE SUMMARY	1
INTRODUCTION	2
METHODS	2
RESULTS	6
DISCUSSION	7
CONCLUSIONS.....	8
REFERENCES	10
APPENDIX A.....	11
APPENDIX B	16
APPENDIX C	21
APPENDIX D.....	26
APPENDIX E	31
APPENDIX F.....	36
APPENDIX G.....	41
APPENDIX H.....	44
APPENDIX I	47
APPENDIX J	50
APPENDIX K.....	55
APPENDIX L	60
APPENDIX M	65
APPENDIX N.....	70
APPENDIX O.....	75
APPENDIX P.....	80
APPENDIX Q.....	83
APPENDIX R.....	86

Executive Summary

The impulse peak insertion loss (IPIL) is the standard measure of attenuation provided by hearing protection devices (HPDs) in response to an impulsive noise. This technical memorandum describes the IPIL testing conducted on the MSA Supreme[®] Pro-X Earmuff (Supreme[®] Pro-X; Model: 10149445). Testing included two test modes for the Supreme[®] Pro-X: passive (i.e., turned OFF) and active (i.e., turned on and output level set to MAX). Testing was completed in accordance with the American National Standards Institute (ANSI) standard S12.42-2010, “Methods for the Measurement of Insertion Loss of Hearing Protection Devices in Continuous or Impulsive Noise Using Microphone-in-Real-Ear or Acoustic Test Fixture Procedures.” All device samples were tested at the nominal levels of 150, 160, and 170 decibel peak (dBP, re: 20 μ Pa). A total of five samples were fitted to an acoustic test fixture two times each for a total of 10 trials per test level in both the passive and active test modes. No samples of the HPD were rejected. The mean and standard deviation (SD) IPIL values were 21.1 (4.3) dB SPL at 150 dBP, 23.9 (3.9) dB SPL at 160 dBP, and 25.7 (2.9) dB SPL at 170 dBP in the passive (i.e., OFF) mode, and 21.0 (3.8) dB SPL at 150 dBP, 23.0 (3.8) dB SPL at 160 dBP, and 25.6 (3.0) dB SPL at 170 dBP in the active (i.e., MAX) mode (See Table 1). These results suggest that the Supreme[®] Pro-X Earmuff, when properly fit and functional, can adequately protect (i.e., reduce exposure to less than 140 dBP) against impulses below 163.9 dBP in the passive (OFF) test mode, and 163.0 dBP in the active (on and set to MAX) test mode.

Table 1.
Supreme[®] Pro-X mean (SD) IPIL value (in dB) for all test conditions.

	150 dBP	160 dBP	170 dBP
OFF	21.1 (4.3)	23.9 (3.9)	25.7 (2.9)
MAX	21.0 (3.8)	23.0 (3.8)	25.6 (3.0)

Introduction

The MSA Supreme[®] Pro-X Earmuff (Supreme[®] Pro-X; MSA Safety Inc., Cranberry Township, PA) is an active, electronic, circumaural earmuff that is powered by two AAA batteries. The Supreme[®] Pro-X is outfitted with level-dependent microphones and a 3.5 mm mono jack plug to allow for external audio input. The Supreme[®] Pro-X active signal processor function amplifies low level sounds (e.g., speech), while simultaneously attenuating loud impulsive noises (e.g., weapon fire) via compression (MSA Safety Inc., 2014).

The Department of Defense Instruction 6055.12 (2019) “Hearing Conservation Program (HCP)” limits impulse noise exposure to 140 peak decibels (dBP). Therefore, should an impulse noise meet or exceed 140 dBP, hearing conservation efforts to prevent hearing loss resulting from occupational and operational illness and injury are mandated. One conservation measure used to reduce the user’s noise hazard below the 140 dBP limit is the use of hearing protection devices (HPDs; e.g., earplug or earmuff).

To calculate whether an HPD or HPD combination will reduce the impulse noise exposure below the 140 dBP limit, the impulse peak insertion loss (IPIL) value of the HPD is subtracted from the impulse noise level (Department of Defense, 2015). The IPIL value is the standard metric (ANSI/ASA S12.42) used to determine the amount of protection afforded by an HPD in response to impulse noise. At the time of this writing, the IPIL values of the Supreme[®] Pro-X at 150, 160, and 170 dBP were unknown. This report describes the methods used to determine the IPIL value for the Supreme[®] Pro-X Earmuff in both the passive (i.e., OFF) and active (i.e., turned on and set to MAX) test modes and reports the results. Specifically, both an overall device IPIL and ear-specific IPILs are reported for the tested nominal levels.

Methods

Facility

IPIL testing described herein was completed in the Naval Submarine Medical Research Laboratory (NSMRL) 1000 m³ anechoic chamber in order to minimize any effects of sound reflections.

Equipment

Hardware. NSMRL’s 4 inch (in., 10.2 centimeters [cm]) shock tube (B/C Precision, Inc., Greendale, IN) generated all acoustic impulses. The shock tube pressure chamber is approximately 34 in. (86.4 cm) long with an inner diameter of 4 in. (10.2 cm). A 64 in. (162.6 cm) long catenoidal tube horn consisting of four welded steel flat-projection sheets forming a square cross section was connected to the shock tube using a PVC 4.5 in. (11.4 cm) coupler. An industrial air compressor (ILA#1883054; Industrial Air Corporation, Memphis, TN) supplied pressurized air (900 kilopascal) to the shock tube.

For each trial at 150 dBP, a 7 in. (17.8 cm) by 7 in. (17.8 cm) polyester sheet (SEVA Technical Services, Inc, Newport News, VA) was used as a membrane between the pressurized chamber and the catenoidal tube horn to enable pressurization of the air chamber. Each polyester sheet was 0.001 in. (1.0 mil, 25.4 micrometer [μm]) thick. For


each trial at 160 and 170 dB_P, a 7 in. (17.8 cm) by 7 in. (17.8 cm) acetate sheet (Grafix Plastic, Maple Heights, OH) was used as the membrane. Each acetate sheet was 0.002 in. (2.0 mil, 50.8 micrometer [μm]) thick.

All waveforms were recorded with an ANSI/ASA S12.42 (2010) compliant GRAS 45CB acoustic test fixture (ATF) with GRAS RA0045-S7 Ear Simulators (GRAS Sound and Vibration, Twinsburg, OH). The ATF was connected to a conditioning amplifier which served as the power supply (GRAS Type 12AA; GRAS Sound and Vibration, Twinsburg, OH). As required by ANSI/ASA S12.42/2010, the ATF was placed to front-face (i.e., nose facing) the catenoidal tube horn at 0° elevation and 0° azimuth.

A reference microphone (Type 378C20; PCB Piezotronics Inc., Depew, NY) was placed 6 in. (15.2 cm) from the ATF left pinna. The reference microphone, the left ATF microphone, and the right ATF microphone were calibrated prior to data collection at 124 dB sound pressure level (SPL) using a 250 hertz (Hz) tone generator (Bruel & Kjaer, Marlborough, MA). A diagram depicting the aerial view of the NSMRL 4 in. (10.2 cm) shock tube and test system is presented in Figure 1.

Figure 1.

Diagram of the NSMRL Acoustic Shock Tube and ATF.

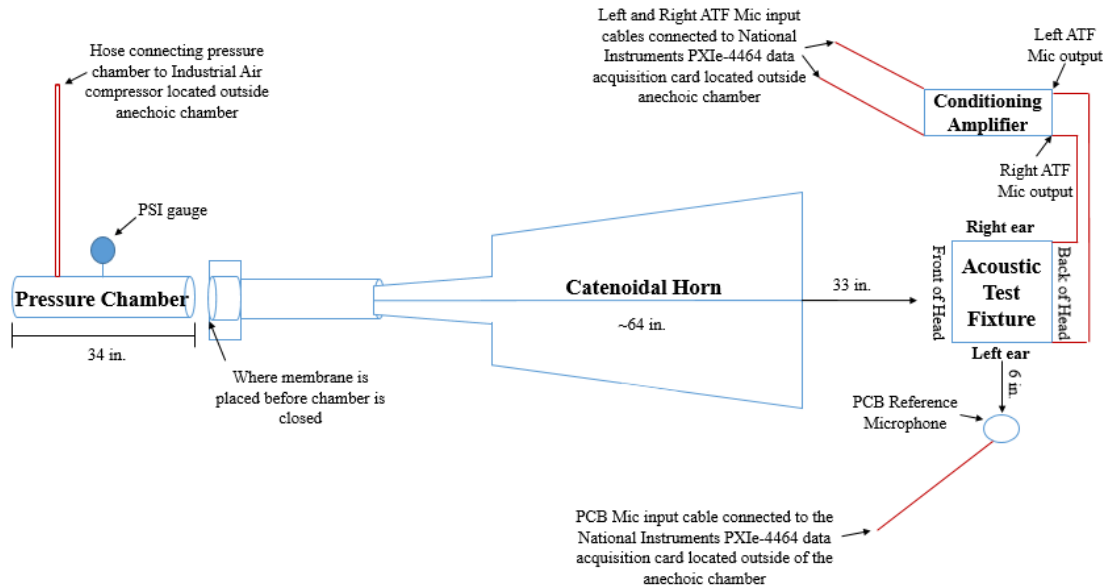

Data Acquisition System. The data acquisition system (NI chassis PXIe-1071 with NI PXIe-4460 and NI PXIe-4464; National Instruments Corp., Austin, TX) was controlled by a standalone laptop computer running project specific software (LabVIEW; National Instruments Corp., Austin, TX). In addition, it was connected to the laptop using an MXI cord and host interface card (NI PXIe-8360). The software controlled the acquisition of waveforms from the three source microphones (left ATF microphone, right ATF microphone, reference microphone) at a sampling rate of 204.8 k samples/second during each impulse recording. Pre-trigger settings were 1024 samples per 0.005 seconds, with a trigger level of 110 dB SPL. Each recording was 0.3 seconds in duration.

Rather than using an ANSI/ASA S12.42-2010 compliant in-line analog external Bessel filter to filter impulses during data acquisition, anti-alias filtering was accomplished by an analog filter and a digital filter. First, an electronic analog anti-aliasing filter (corner frequency of 93.0 kHz [3 dB down]) was applied to all waveforms by the National Instruments data acquisition system during data collection. Then, a second digital Butterworth filter (6th order, low-pass, corner frequency of 20 kHz [3 dB down]) was applied to all recordings by the MATLAB post-processing script. This digital filter was used to mimic the effect of the ANSI/ASA S12.42-2010 standard required anti-aliasing Bessel filter.

The custom-written software program saved all recorded waveforms as files (*.tdms), which were exported from the software for conversion into data files using an additional custom software programming script. The script compiled the reference PCB microphone, left ATF microphone, and right ATF microphone channels into a file (*.mat) that saved variables for input to analysis script (MATLAB) similar to the script provided in Annex H of the ANSI/ASA S12.42-2010 standard. Minor alterations were made to the analysis script in order to accept 150, 160, and 170 dBp data (see Data Analysis below).

Hearing Protection Device Samples. Five samples (See Figure 2 for example) of the MSA Supreme[®] Pro-X Earmuff (Manufacturer Product Number: 10149445) with gel ear cushions and neckband were tested in accordance with ANSI/ASA S12.42-2010. Each sample was randomly assigned a number 1 through 5.

Figure 2.

Sample of the Supreme[®] Pro-X Earmuff (Neckband Model)



Procedure

Because the Supreme[®] Pro-X employs active technology, it was tested in both the passive (OFF) and active (i.e., the headset turned on and the sound output level set at its maximum limit [MAX]) modes. Each HPD was fitted to the ATF twice, resulting in two trials (trials A and B) per sample, and 10 total trials per nominal level test condition (160 and 170 dBp) for each HPD mode. Supreme[®] Pro-X functionality and settings were confirmed via a listening check prior to each trial. No samples of the HPD were rejected.

To achieve an appropriate fit that would provide maximum attenuation, each sample was expertly fitted to the ATF following the instructions provided on the device packaging. The manufacturer fitting guidelines stated that all samples should be inspected for any wear, cracks, or damage prior to use. Once inspected, earmuffs were placed over the ears to encompass the pinnae, and the neckband adjusted to just rest on the neck of the ATF.

Testing at the 130 dBp nominal level was omitted, and the nominal level of 160 dBp was incorporated as impulses generated with the NSMRL 4 in. (10.2 cm) shock tube at levels below the nominal level of 150 dBp were found to be without a shock front. Measurement of IPIL at 160 dBp was added in order to provide accurate guidance for exposures between 150 and 170 dBp. At the measured levels described herein, all generated impulses had a shock front. As previously stated, the action level for the US Department of Defense (DoD) is 140 dBp for impulse noises. Therefore, IPIL values below 140 dBp are of marginal value to the DoD. Due to non-linear effects of HPDs on IPIL, it is best to use IPIL values measured close to the level of the predicted exposure (Department of Defense, 2015).

Impulse noises were presented to the ATF in the occluded (i.e., HPD donned) and unoccluded (i.e., HPD doffed) test configurations. For all occluded measures, the headset was fitted to the ATF in accordance with the specifications outlined in ANSI/ASA S12.42-2010. Specifically, each HPD sample was exposed to two impulses at each tested nominal level in each test mode. Adequate pressure for each impulse was determined by increasing pressure (measured in pounds per square inch [psi]) to a point within a pre-specified range necessary for producing either 150 dBp (8.9 to 9.3 psi, 61 to 64 kilopascals [kPa]), 160 dBp (19.5 to 22.1 psi, 134 to 152 kPa), or 170 dBp impulses (28.5 to 29.5 psi, 197 to 203 kPa). The membrane was then punctured using a manual trigger, releasing pressurized air into the catenoidal horn, which created an impulse wave through the catenoidal horn to the ATF. The peak decibel level emitted was dependent upon the amount of air pressure released.

In place of the ANSI/ASA S12.42-2010 standardized calibration impulses at 130 dBp, six total calibration impulses (three pre-, three post-testing) were generated per nominal level (150,160 dBp) in the unoccluded (i.e., without products) test configuration. Calibrations were not completed at the 170 dBp nominal level in order to avoid exceeding the input limitations of the ATF microphones.

The clamping force of each Supreme[®] Pro-X earmuff sample was measured using Michael & Associates, Inc.'s Muff-type HPD Force Measurement System (S/N: 00001). Per ANSI/ASA S12.42-2010, each headset was fit to the measurement device, and left in place for two minutes before clamping force was recorded in pounds force

(lbf). Clamping force was measured once post-data collection for all five Supreme® Pro-X samples (See Table 3.).

Data Analysis

MATLAB (Natick, MA) was used to calculate the IPIL values at the 150, 160, and 170 dB nominal levels and to generate all waveform graphs (See Appendices A to R). The mean pressure of each waveform was subtracted from the waveforms to remove any constant offset. The peak levels were then calculated by converting the maximum absolute value of each waveform into dB SPL. The transfer functions of the free-field probe to each ear of the ATF was calculated for the unoccluded waveforms gathered at the 160 dB nominal level. The mean transfer function for each ear was then calculated, and the first element of the transfer function was set to zero in order to avoid calculations at 0 Hz. The fit of the mean transfer function was tested by applying the mean transfer function for each ear to the free-field probe data gathered in the 160 dB nominal level. Then, the difference between the maximum absolute values of the calculated and measured values was determined, converted to dB SPL, and displayed.

The calculated IPIL value (in dB) equaled the mean difference of the maximum absolute value of the waveforms from the ears of the ATF in dB SPL and the maximum absolute value of the estimated values of the unoccluded ears in dB SPL. The estimated values of the unoccluded ears are the waveforms from the free-field probe with the mean transfer function applied to them. These values were calculated for each ear in each trial and condition. The mean values were calculated across both ears and trials, resulting in a mean for each nominal level. Every waveform was plotted with time on the x-axis and pressure on the y-axis. The transfer functions were not plotted.

Results

As shown in Table 2, the overall mean (SD) IPIL values for the Supreme® Pro-X earmuffs were 21.1 (4.3) dB in the passive (i.e., OFF) test mode and 21.0 (3.8) dB in the active (i.e., MAX) test mode in response to the 150 dB nominal level impulse. At 160 dB, the calculated overall mean (SD) IPIL values were 23.9 (3.9) dB in the passive (i.e., OFF) mode and 23.0 (3.8) dB in the active (i.e., MAX) mode. At 170 dB, the calculated overall mean (SD) IPIL values were 25.7 (2.9) dB in the passive (i.e., OFF) mode and 25.6 (3.0) dB in the active (i.e., MAX) mode. Calculated IPIL values for all sample trials in the OFF mode ranged between 13.9 to 28.8 dB at 150 dB, between 17.5 to 29.6 dB at 160 dB, and 19.5 to 29.8 dB at 170 dB, while all tested sample trials in the MAX mode ranged between 14.7 to 26.9 dB at 150 dB, between 13.7 to 27.5 dB at 160 dB, and between 19.2 to 29.5 dB at 170 dB.

[THIS SPACE INTENTIONALLY LEFT BLANK]

Table 2.*Mean (SD) IPIL values (in dB) for Tested Supreme® Pro-X Samples.*

	150 dBP				160 dBP				170 dBP			
	OFF		MAX		OFF		MAX		OFF		MAX	
	Right	Left	Right	Left	Right	Left	Right	Left	Right	Left	Right	Left
HPD 1, Trial A	25.1	22.9	23.5	20.9	27.8	27.0	26.0	24.5	28.7	28.2	28.2	26.9
HPD 1, Trial B	20.9	14.9	22.6	16.8	23.8	18.3	25.6	20.9	26.0	22.5	26.3	21.9
HPD 2, Trial A	23.7	17.2	25.5	20.2	28.3	23.5	26.6	22.7	28.7	25.5	28.2	25.2
HPD 2, Trial B	25.5	17.9	22.8	16.4	26.5	19.9	24.3	17.8	27.9	22.7	27.9	22.7
HPD 3, Trial A	26.3	28.8	25.7	26.9	27.7	29.6	25.5	27.5	28.0	29.8	27.9	29.5
HPD 3, Trial B	23.5	24.5	22.5	22.7	26.6	27.9	26.0	26.8	26.3	26.8	27.8	27.4
HPD 4, Trial A	18.8	13.9	24.5	14.7	23.1	17.5	22.5	13.7	25.5	20.4	26.7	19.2
HPD 4, Trial B	23.3	19.1	22.3	17.4	24.1	22.3	24.1	21.0	27.3	26.5	27.6	25.1
HPD 5, Trial A	14.0	19.5	15.0	16.9	17.7	21.1	17.7	19.3	19.5	23.3	21.1	22.4
HPD 5, Trial B	24.3	17.0	24.6	17.8	26.6	19.2	26.4	20.1	27.2	22.8	27.6	21.8
Ear Specific Mean (SD)	22.5 (3.7)	19.6 (4.6)	22.9 (3.0)	19.1 (3.6)	25.2 (3.2)	22.6 (4.3)	24.5 (2.7)	21.4 (4.2)	26.5 (2.7)	24.9 (3.0)	26.9 (2.1)	24.2 (3.1)
Level Overall Mean (SD)	21.1 (4.3) 21.0 (3.8)				23.9 (3.9) 23.0 (3.8)				25.7 (2.9) 25.6 (3.0)			

As shown in Table 3, the measured clamping force of the Supreme® Pro-X samples ranged from 2.2 to 2.4 lbf, with a mean (SD) of 2.3 (0.1) lbf.

Table 3.*Mean (SD) Band Force (lbf) for Tested Supreme® Pro-X Samples.*

	Band Force
HPD 1	2.2
HPD 2	2.2
HPD 3	2.3
HPD 4	2.3
HPD 5	2.4
MEAN (SD)	2.3 (0.1)

The waveforms for the passive (i.e., OFF) test mode for all trials of the Supreme® Pro-X are provided in Appendices A to I and are color-coded green. The waveforms for the active (i.e., MAX) test mode of the Supreme® Pro-X are provided in Appendices J to R and are color-coded orange.

Discussion

As required by ANSI/ASA S12.42-2010 the Supreme® Pro-X Earmuff was tested in both its passive and active modes. The Supreme® Pro-X uses an external microphone, an amplifier, an electronic signal limiting circuit, and an internal loudspeaker to pass low-level sounds through the HPD. According to the manufacturer, when a signal exceeds 82 dB A-weighted (dBA), the limiting circuit compresses the sound within milliseconds and turns the amplifier off (MSA Safety Inc., 2014). Once

the amplifier is turned off, the headset acts as a passive HPD, attenuating all incoming noise above 82 dBA. Therefore, when the active technology is functional and the ear cups are fitted properly, it is anticipated that the passive (i.e., OFF) and active (i.e., MAX) test modes will perform similarly. One possible mode of failure could occur if the limiting circuit fails to turn off quickly enough. This would allow some portion of the impulse noise to be amplified and actively passed through the device. To test for this possibility, the MSA Supreme[®] Pro-X Earmuff was tested both powered off and with the unit powered on and volume set to its maximum setting.

Results revealed overall mean IPILs across test modes (i.e., OFF, MAX) within 0.1 dB of each other for the 150 dBP nominal test level, within 0.9 dB of each other for the 160 dBP nominal test level, and within 0.1 dB of each other for the 170 dBP nominal test level. Across ears, the individual trial mean IPIL values were found to vary as much as 14.9 dB at 150 dBP, 12.1 dB at 160 dBP, and 10.3 dB at 170 dBP in the OFF test mode, while all individual trial mean IPIL values varied as much as 12.2 dB at 150 dBP, 13.8 dB at 160 dBP, and 10.3 dB at 170 dBP in the MAX test mode. These results may be explained by a combination of inherent variance within the impulse system, variability in passive (i.e., OFF) and active (i.e., MAX) attenuation, and/or variability in fit as a result of each HPD sample being fitted twice.

In addition, results consistency across the passive (i.e., OFF) and active (i.e., MAX) test modes could be explained by proper function of the active limiting circuit, or, alternatively, a Supreme[®] Pro-X device complete failure (i.e., device complete failure would be equivalent to passive mode). Variance in the data could also be explained by intermittent function or digital signal processing algorithms contained in the active electronics. However, device complete failures were accounted for via a listening check before each test trial to confirm that the active electronics were functioning and set at the appropriate maximum sound output level. Further, based on the results obtained, there is little reason to conclude that the active limiting circuit was intermittent in any tested samples of the Supreme[®] Pro-X. However, additional testing of the Supreme[®] Pro-X's signal processing and subsequent effects on input and output signals was outside of the scope of this report.

It is important to note that these results do not guarantee similar performance of the tested products across all users and environments. Product performance may be impacted by factors such as variability in physical fit of the device, integrity of the acoustic seal around the ear, HPD configuration (e.g., single, double- or triple-configuration), and/or use with other head worn protective devices like that of eye protection.

Conclusions

This report described the process for determining the mean impulse peak insertion loss (IPIL) values provided by the MSA Supreme[®] Pro-X Earmuff at the nominal levels of 150, 160, and 170 dBP. The calculated overall mean (SD) IPIL values for the Supreme[®] Pro-X earmuff in the passive (OFF) mode were found to be 21.1 (4.3) dB at 150 dBP, 23.9 (3.9) dB at 160 dBP, and 25.7 (2.9) dB at 170 dBP. When the Supreme[®] Pro-X was donned in the active mode (turned on, and output level set to

MAX), the overall mean (SD) IPIL values were 21.0 (3.8) dB at 150 dBP, 23.0 (3.8) dB at 160 dBP, and 25.6 (3.0) dB at 170 dBP.


These results of testing suggest that, when properly fit and functional, the Supreme[®] Pro-X earmuffs can adequately protect (i.e., reduce the exposure level below 140 dBP) the user from impulses below 163.9 dBP in the passive (i.e., OFF) test mode and 163.0 dBP in the active (i.e., MAX) test mode.

References


- American National Standards Institute, Inc. (2010). *ANSI S12.42-2010: Methods for the Measurement of Insertion Loss of Hearing Protection Devices in Continuous or Impulsive Noise Using Microphone-in-Real-Ear or Acoustic Test Fixture Procedures*. Acoustical Society of America.
- Department of Defense (2015). *MIL-STD-1474E Department of Defense Design Criteria Standard Noise Limits*. Washington, DC: Department of Defense.
- Department of the Navy (2007). *OPNAVINST 5100.19E: Navy Safety and Occupational Health (SOH) Program Manual for Forces Afloat*. Arlington County, VA: Department of the Navy.
- MSA Safety Inc. (2014). *Supreme[®] Pro Earmuffs: For Hunting and Shooting*. Cranberry Township, PA: MSA Safety Inc.
- Office of the Under Secretary of Defense for Personnel and Readiness (2019). *Department of Defense Instruction 6055.12 Hearing Conservation Program (HCP)*. Washington, DC: Department of Defense.

Appendix A. Recorded occluded (closed-ear) waveforms (in kilopascals [kPa]) over time (in seconds [s]) in response to 150 dBp with the Supreme[®] Pro-X (OFF).


Occluded 150 1AL

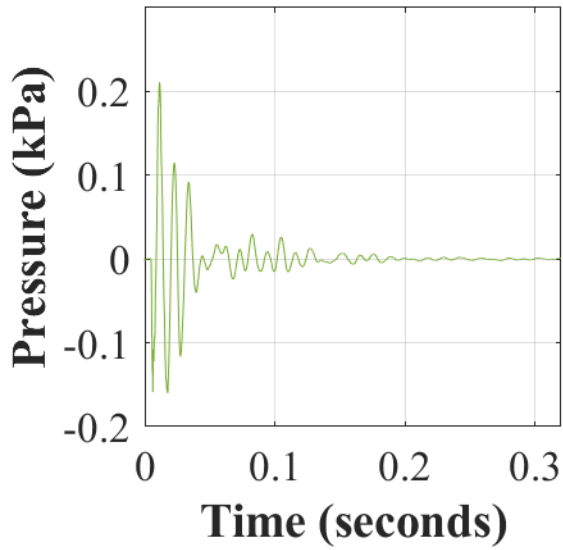


Occluded 150 1AR




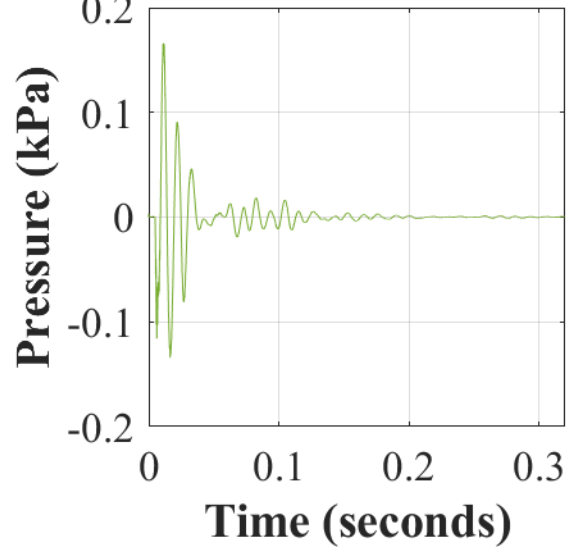






Occluded 150 1BL

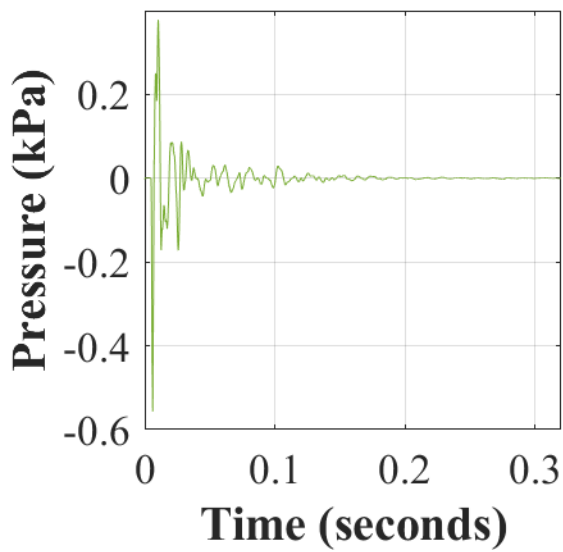


Occluded 150 1BR

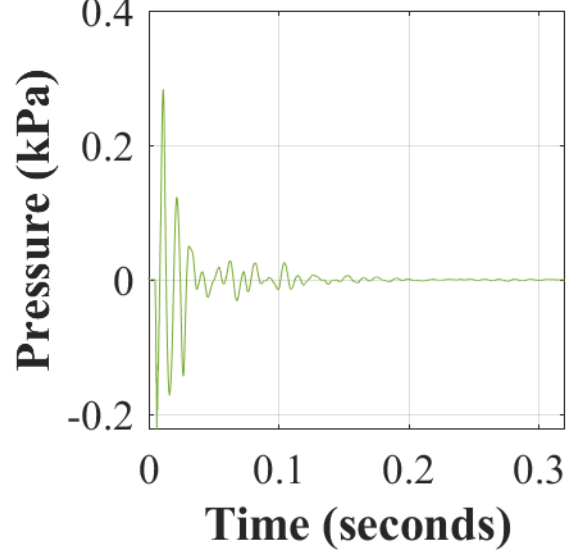

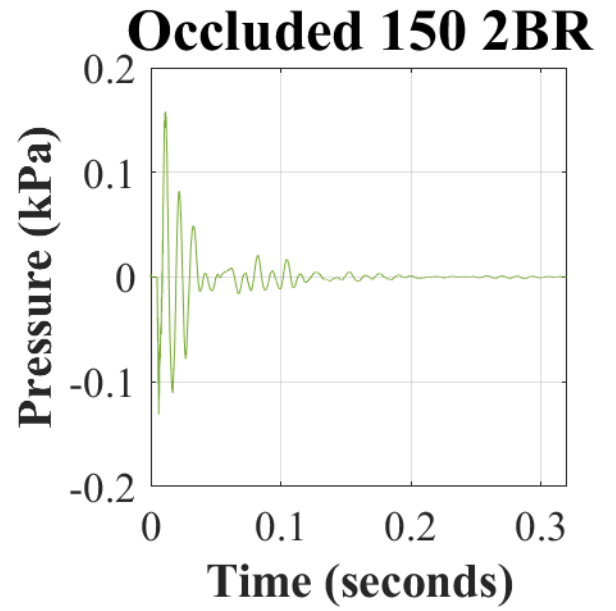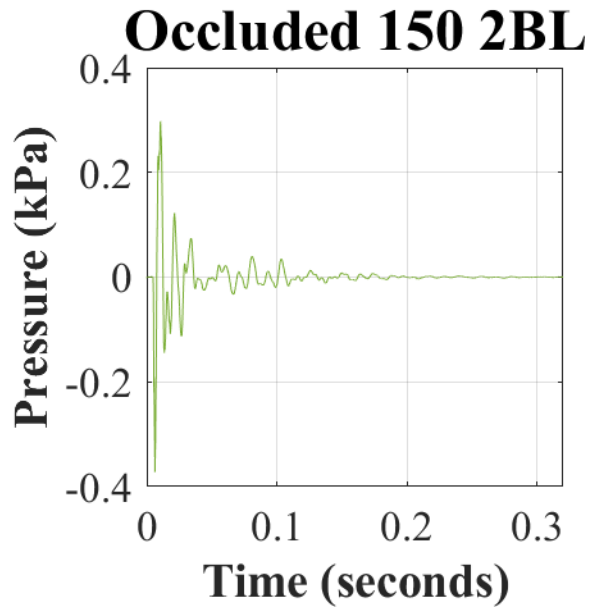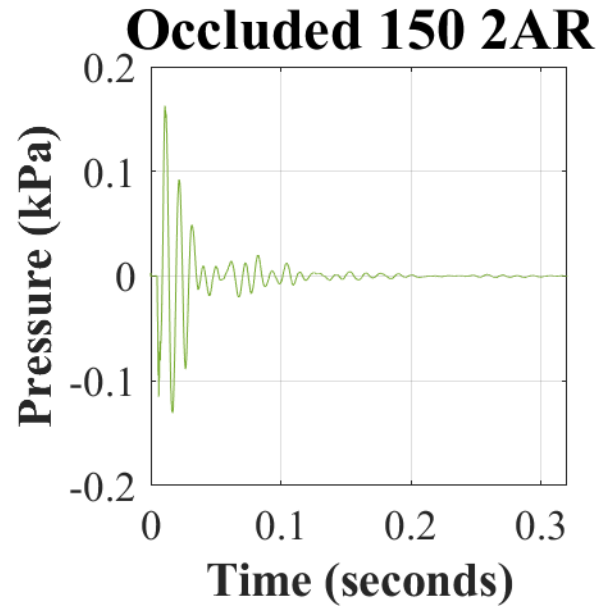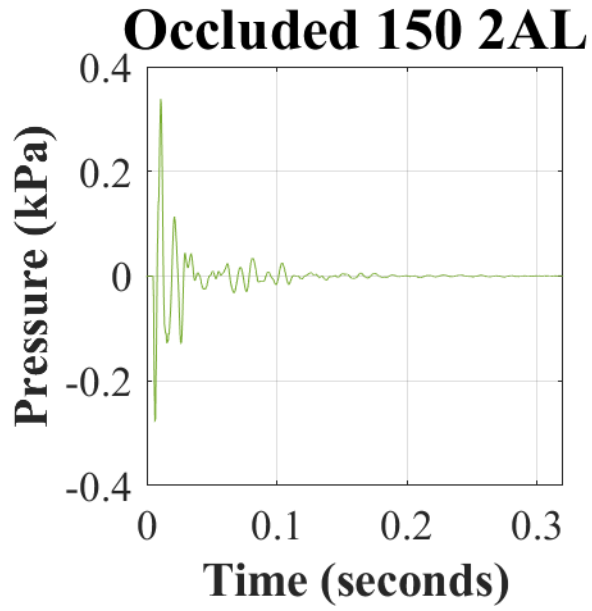


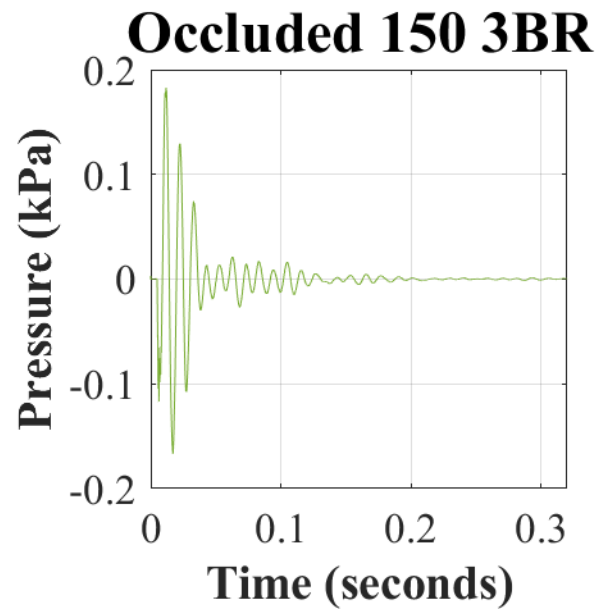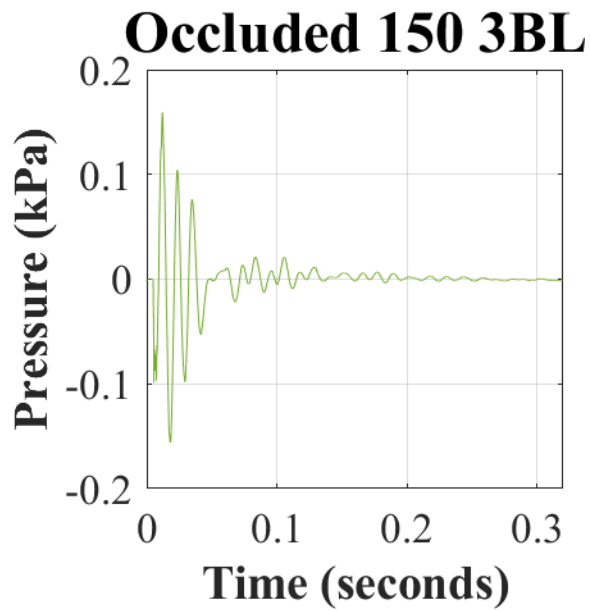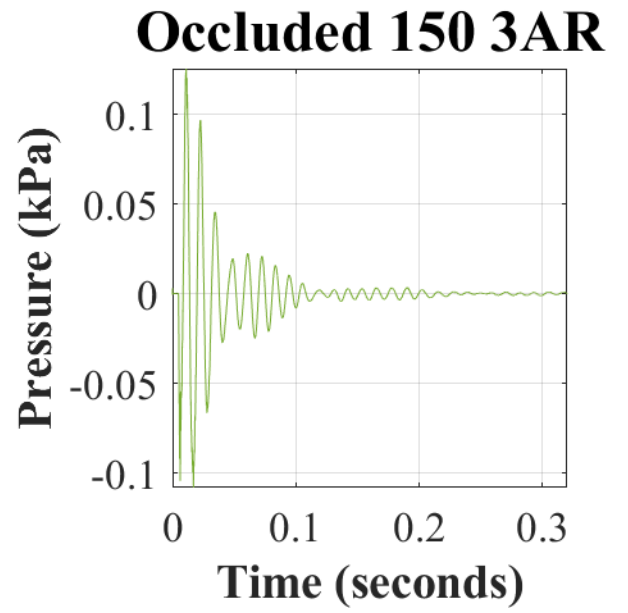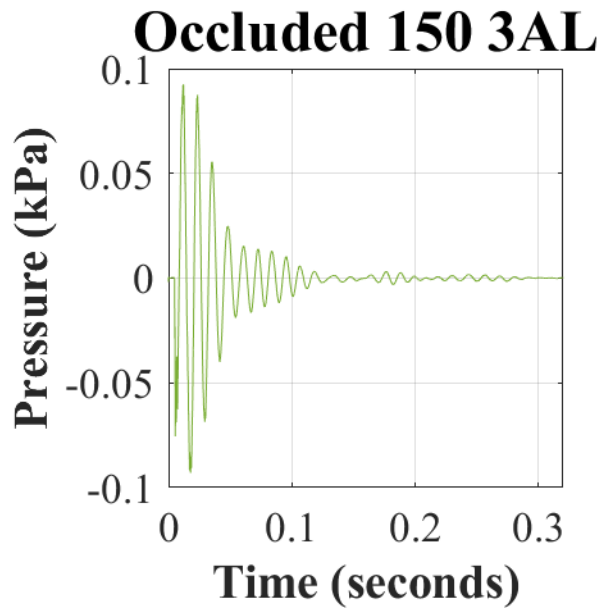


Occluded 150 4AL

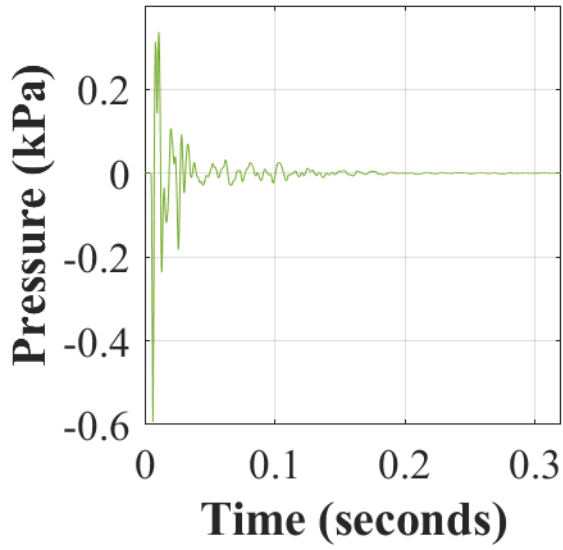


Occluded 150 4AR




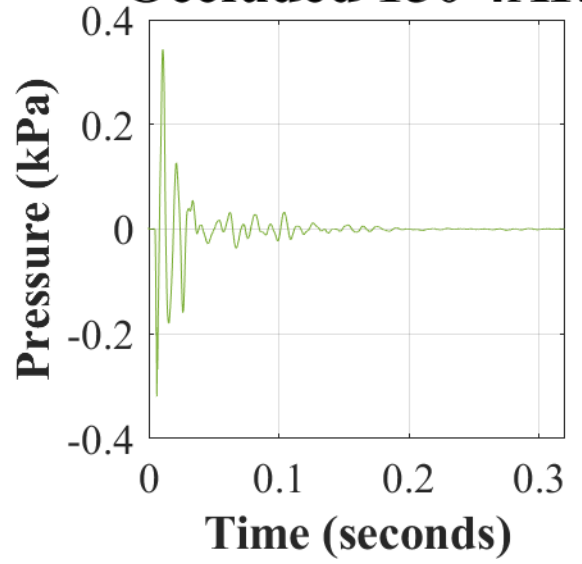


Occluded 150 4BL

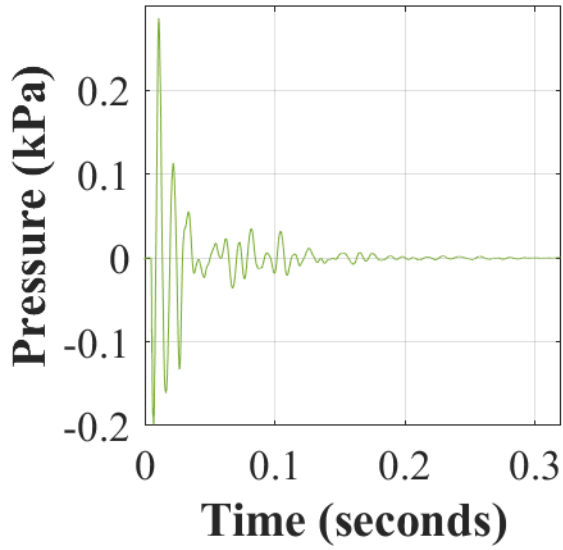





Occluded 150 4BR




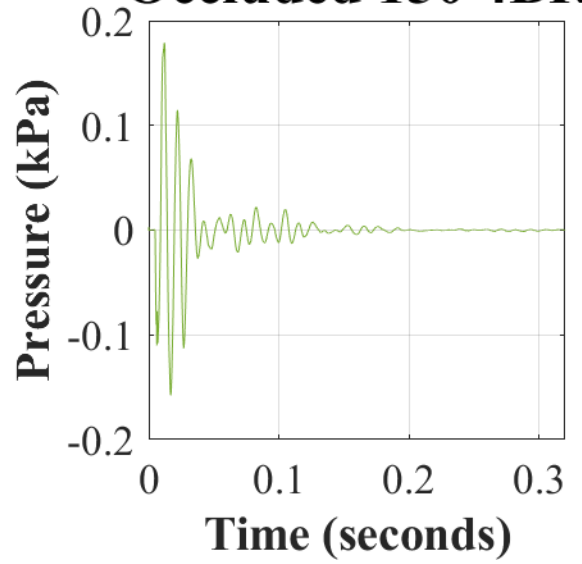


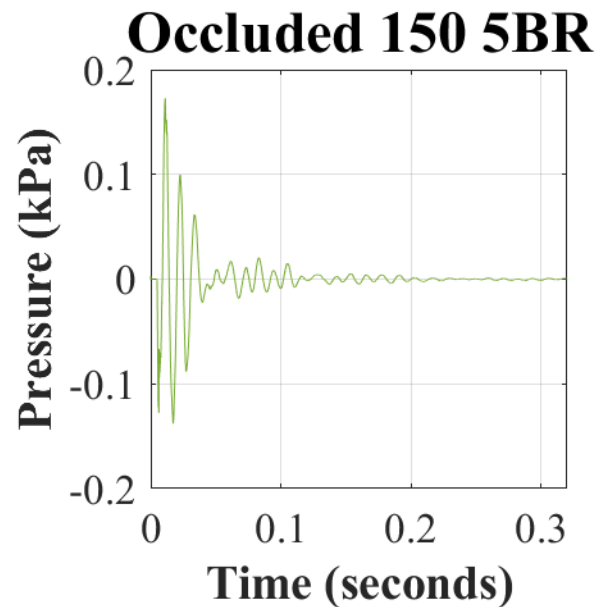
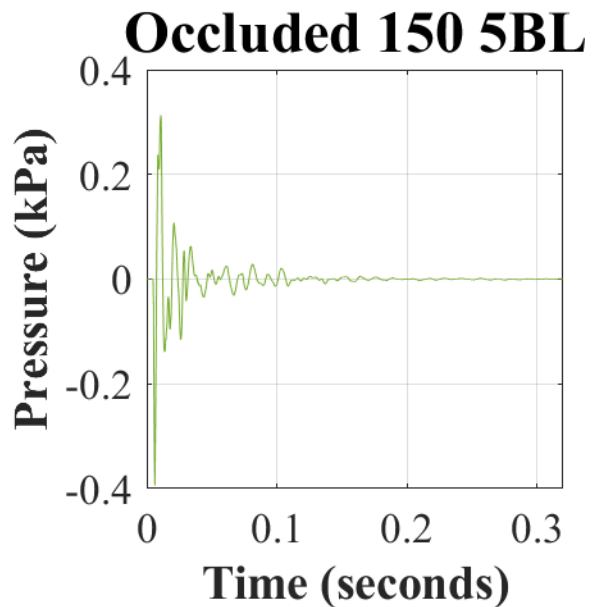
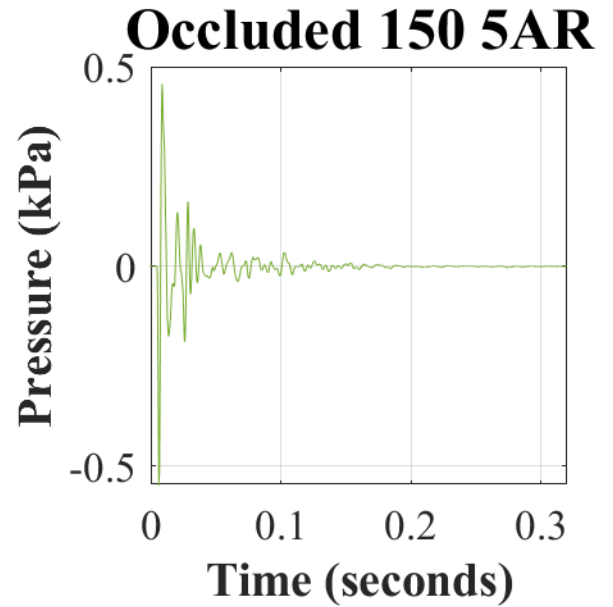
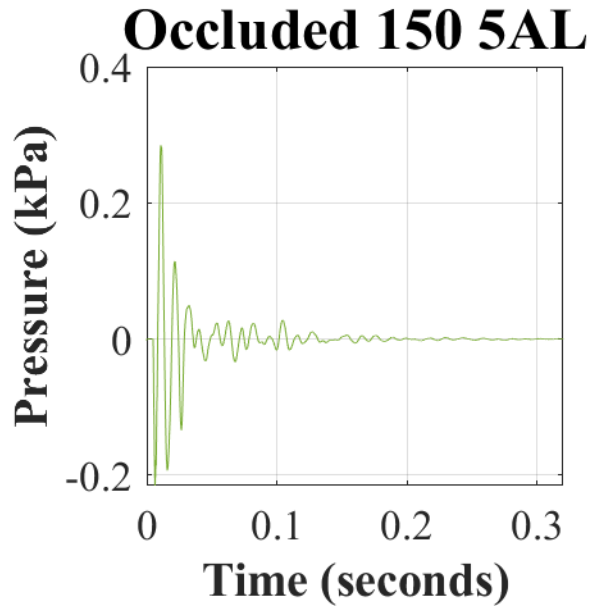






Note. The naming convention for all occluded waveforms is “Occluded LvL NnX”, where ‘Occluded’ is the test condition (i.e., ATF has the HPD donned), ‘LvL’ is the nominal test level (i.e., 150, 160 or 170 dBp), ‘N’ is the sample number (i.e., 1 to 5) of the device tested, ‘n’ is the trial (i.e., A or B) indicating HPD fit (i.e., first or second, respectively), and ‘X’ indicates from what ATF microphone the recording is from (i.e., right [R] or left [L] pinnae).





Appendix B. Estimated unoccluded (open-ear) waveforms (in kilopascals [kPa]) over time (in seconds [s]) in response to 150 dBp with the Supreme[®] Pro-X (OFF).

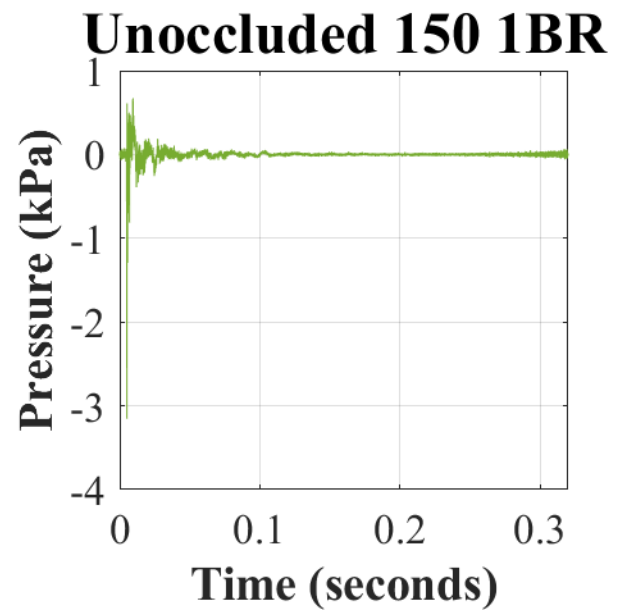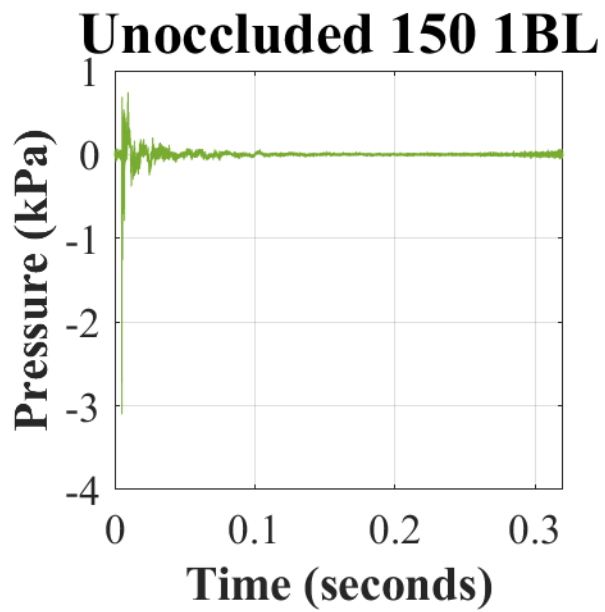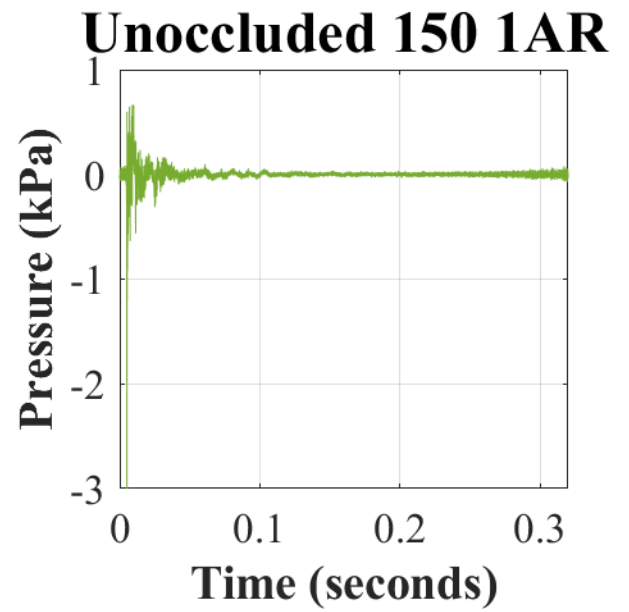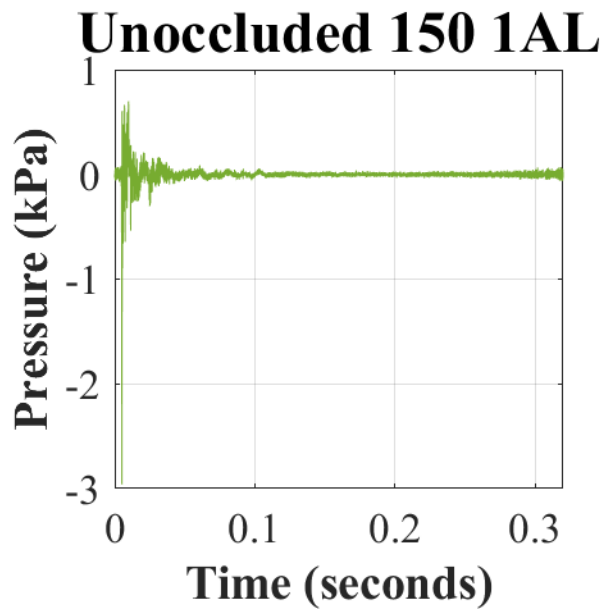

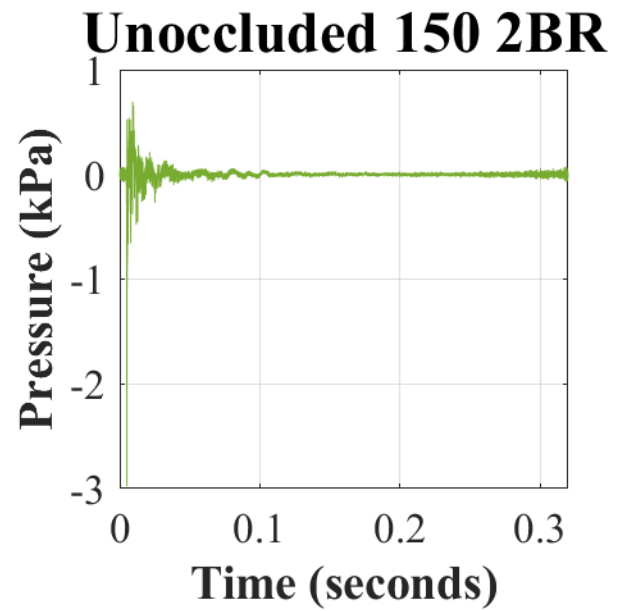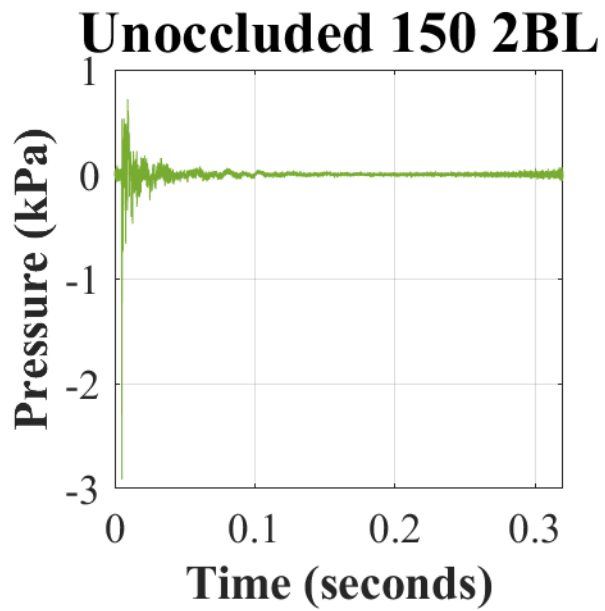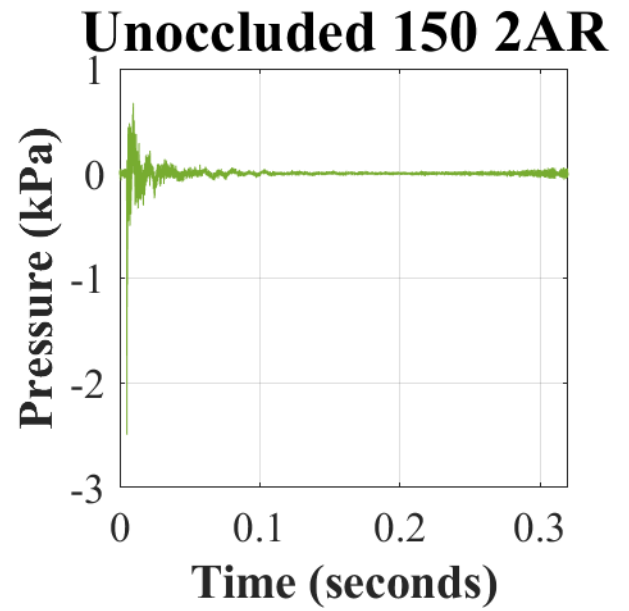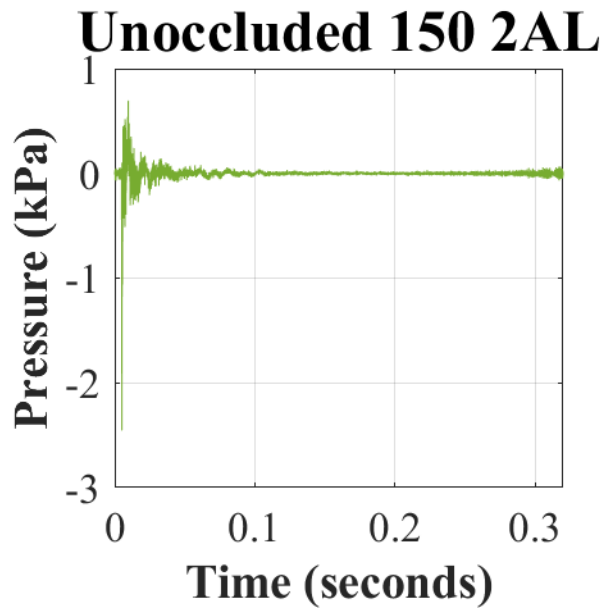

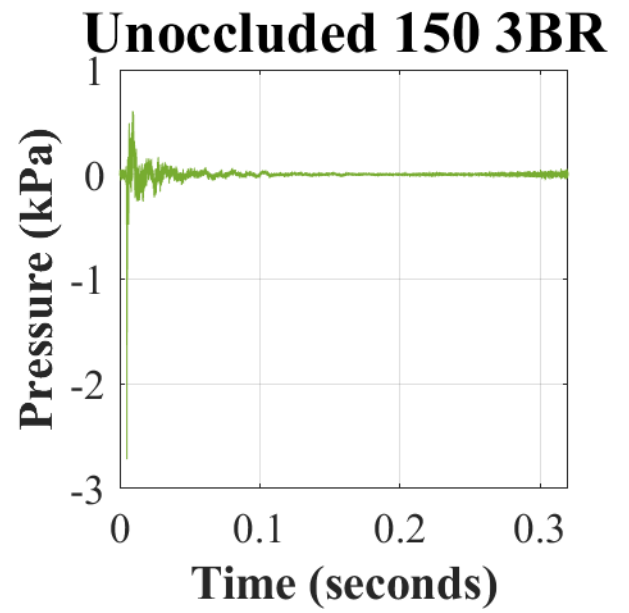
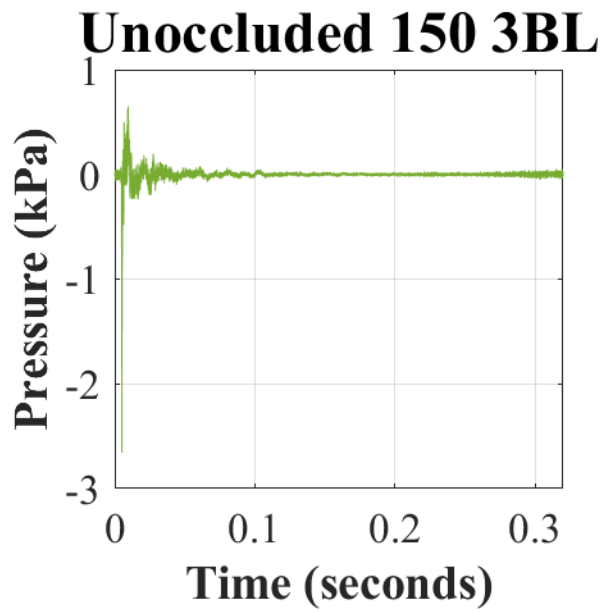
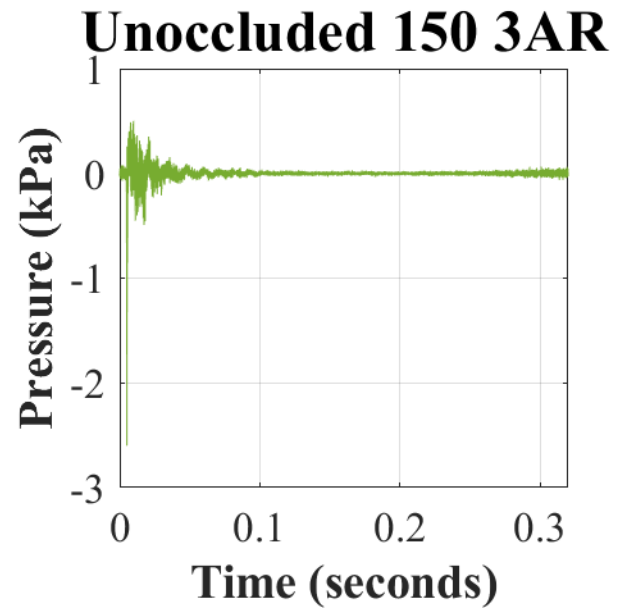
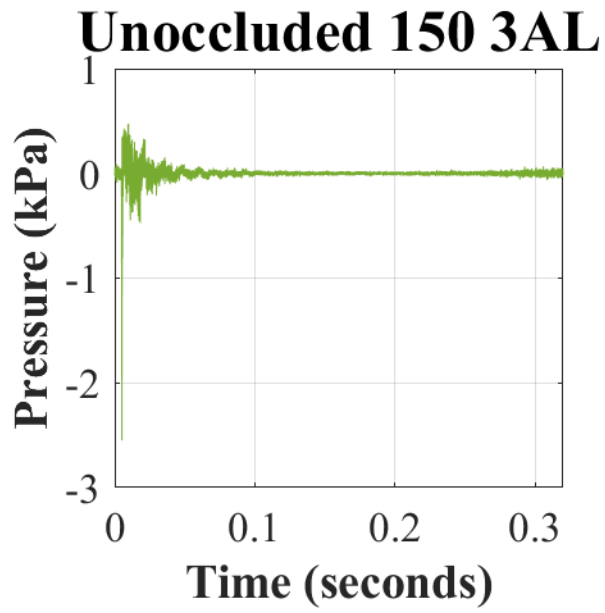


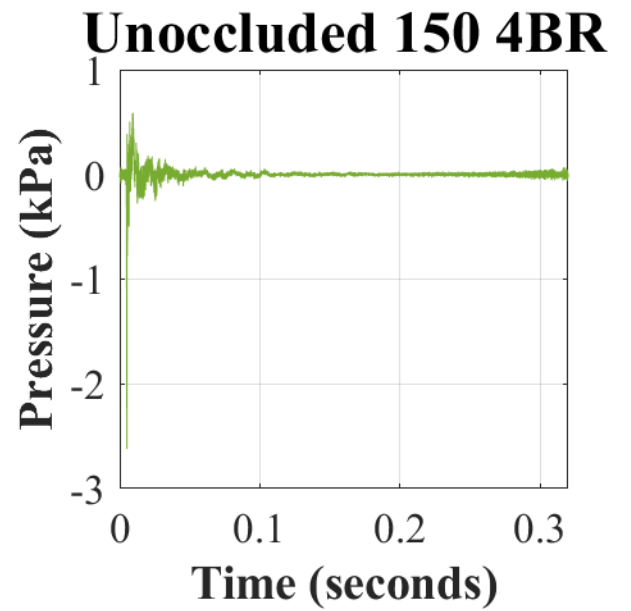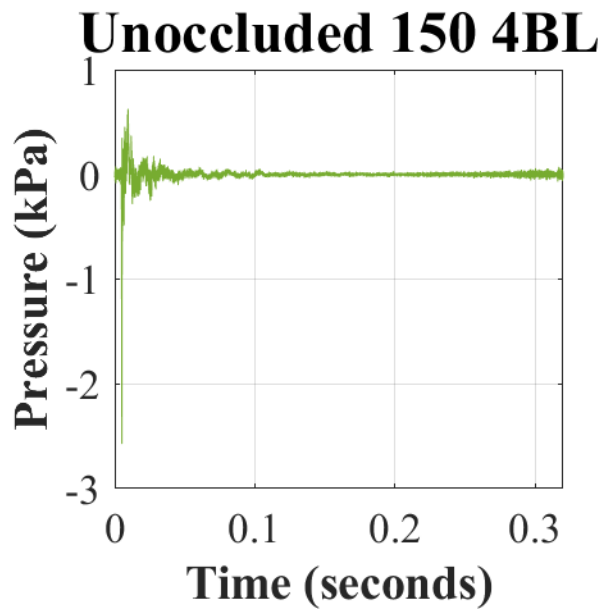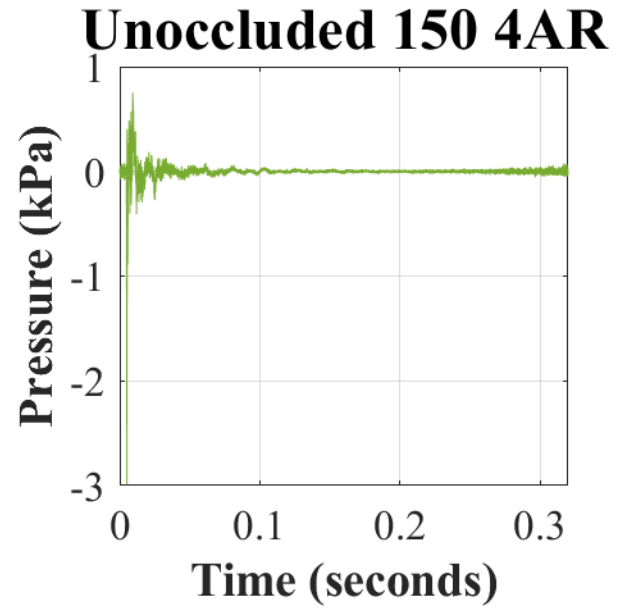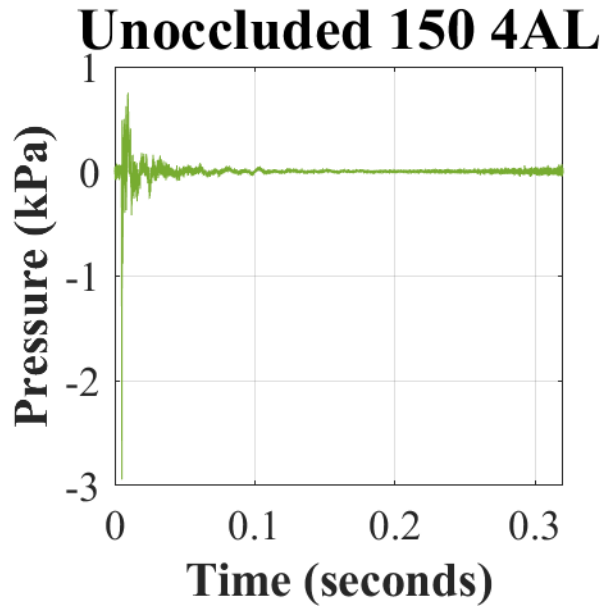

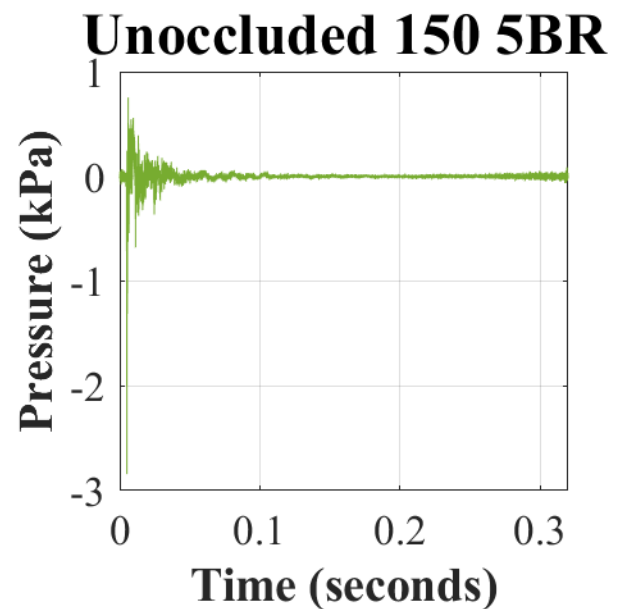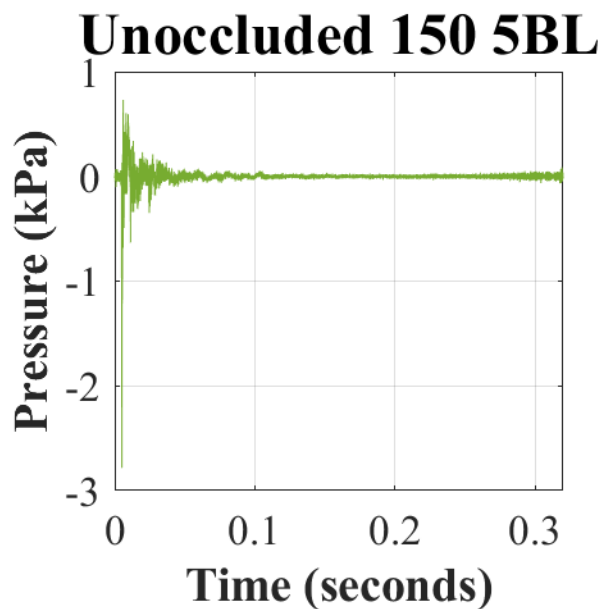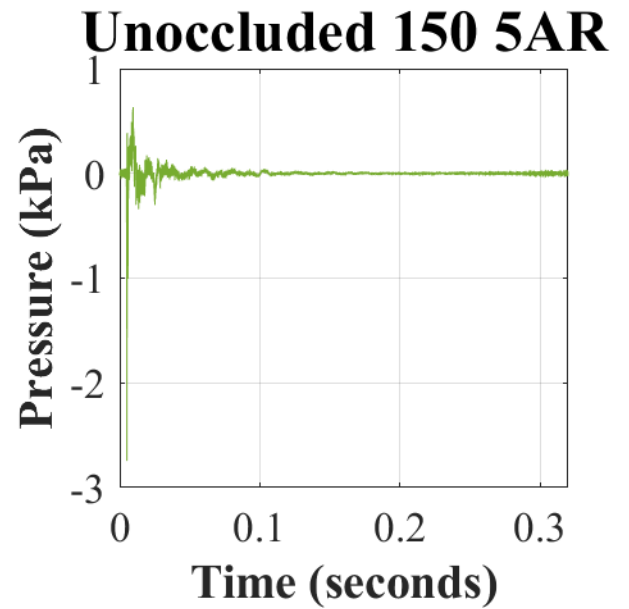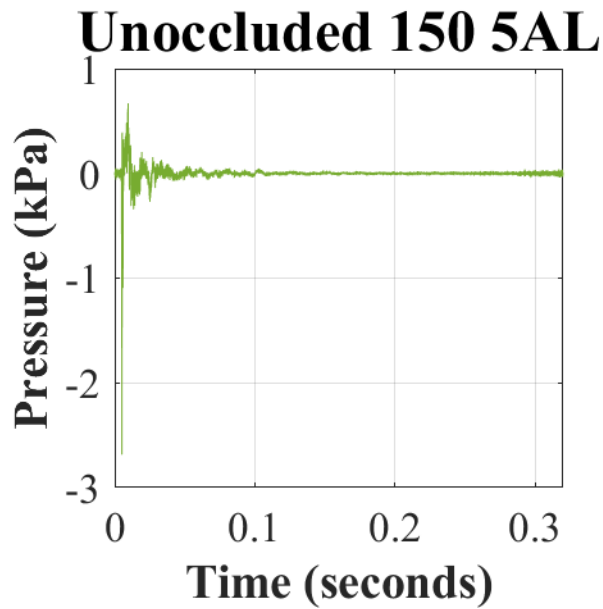


Note. The naming convention for all unoccluded waveforms is “Unoccluded LvL NnX”, where ‘Unoccluded’ is the test condition (i.e., ATF has the HPD doffed), ‘LvL’ is the nominal test level (i.e., 150, 160 or 170 dB), ‘N’ is the sample number (i.e., 1 to 5) of the device tested, ‘n’ is the trial (i.e., A or B) indicating HPD fit (i.e., first or second, respectively), and ‘X’ indicates from what ATF microphone the recording is from (i.e., right [R] or left [L] pinnae).


Appendix C. Recorded occluded (closed-ear) waveforms (in kilopascals [kPa]) over time (in seconds [s]) in response to 160 dBp with the Supreme[®] Pro-X (OFF).

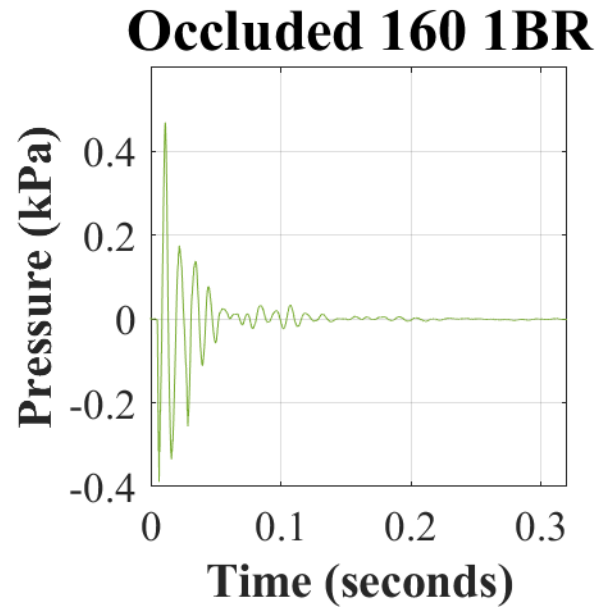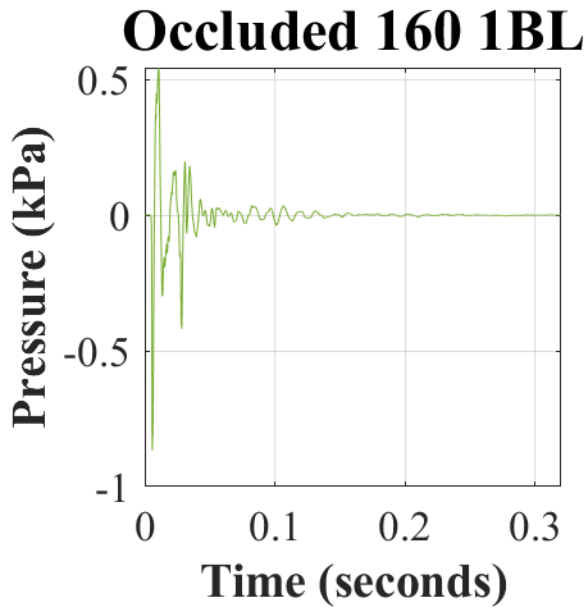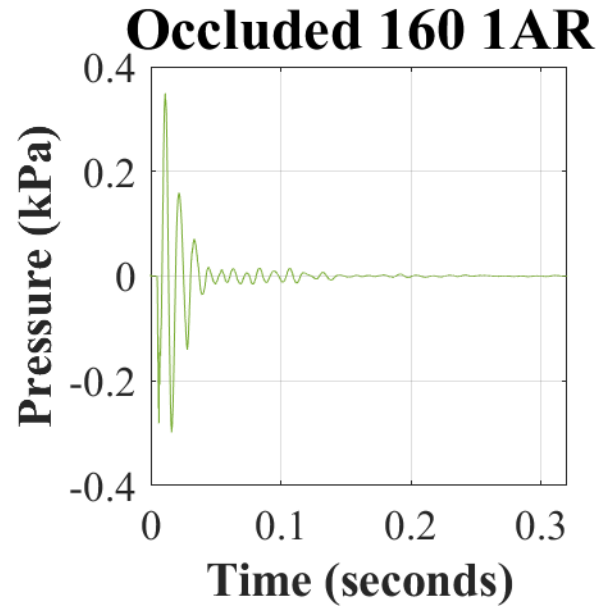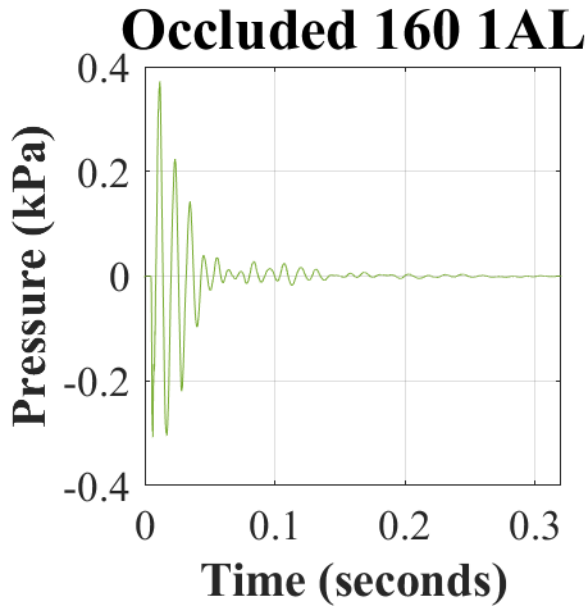


Occluded 160 2AL

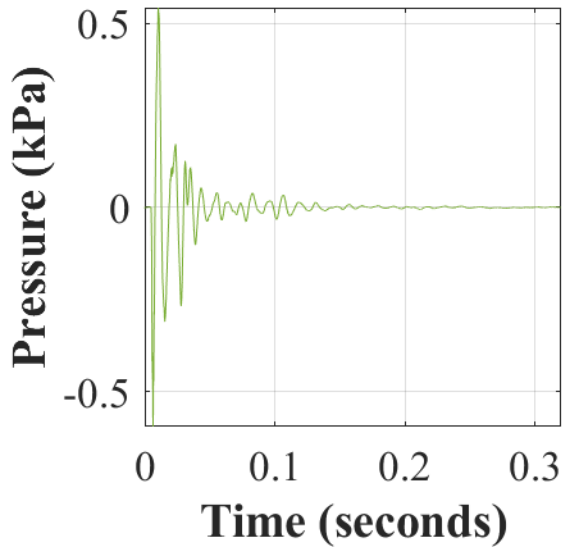


Occluded 160 2AR




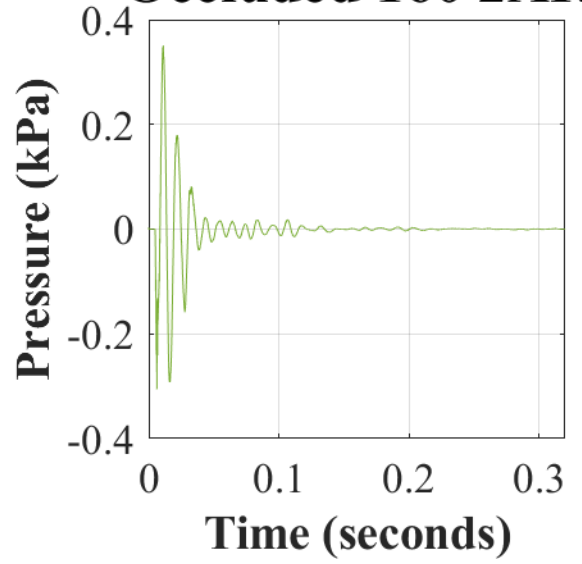






Occluded 160 2BL




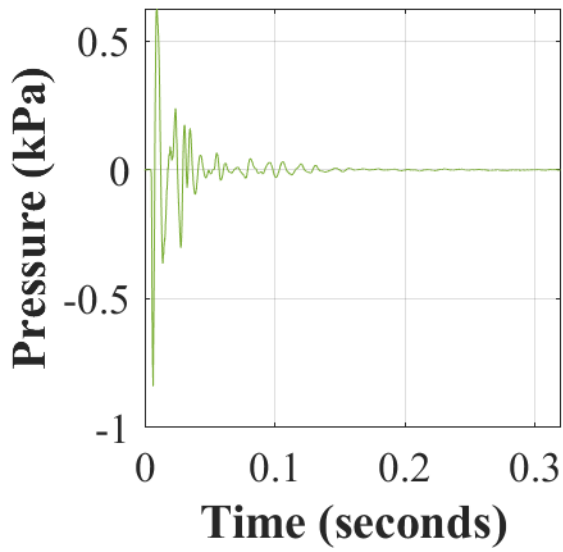


Occluded 160 2BR

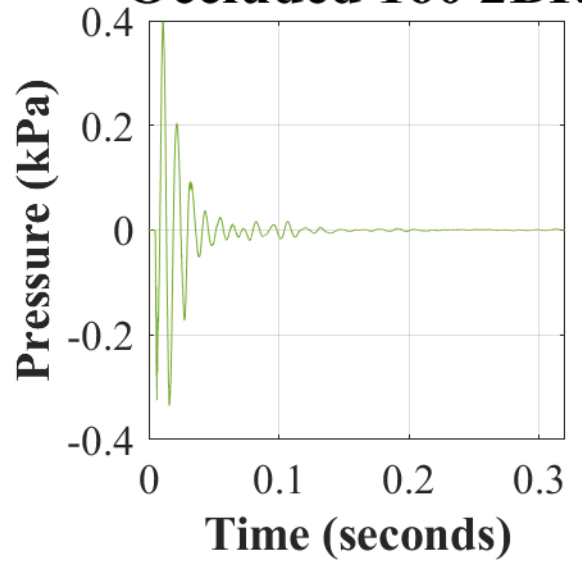

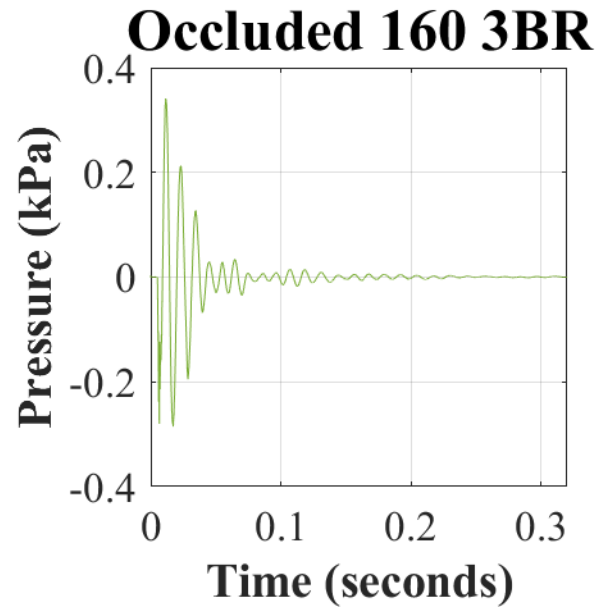
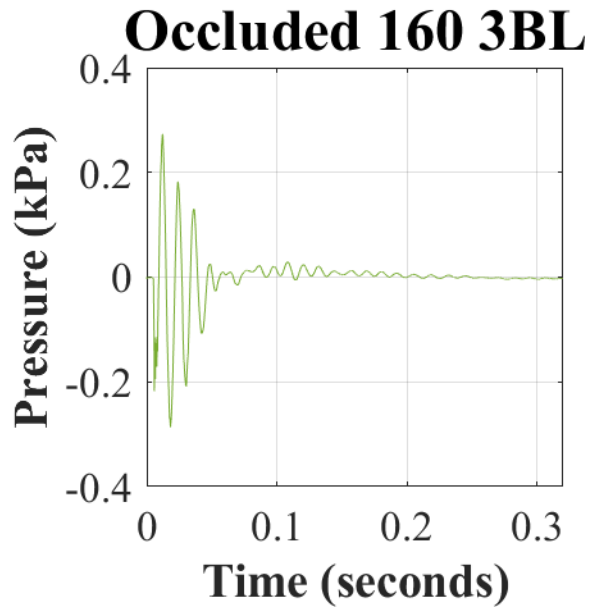
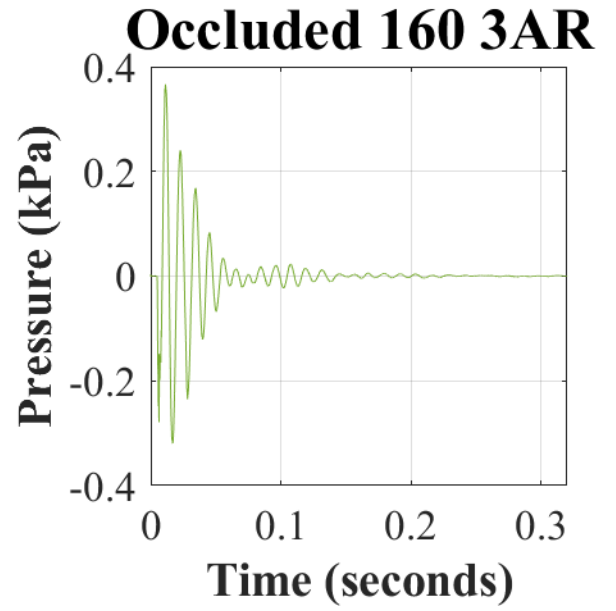
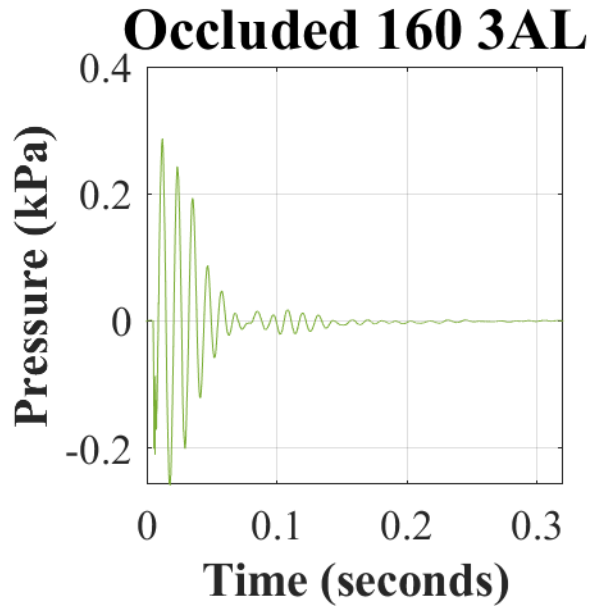


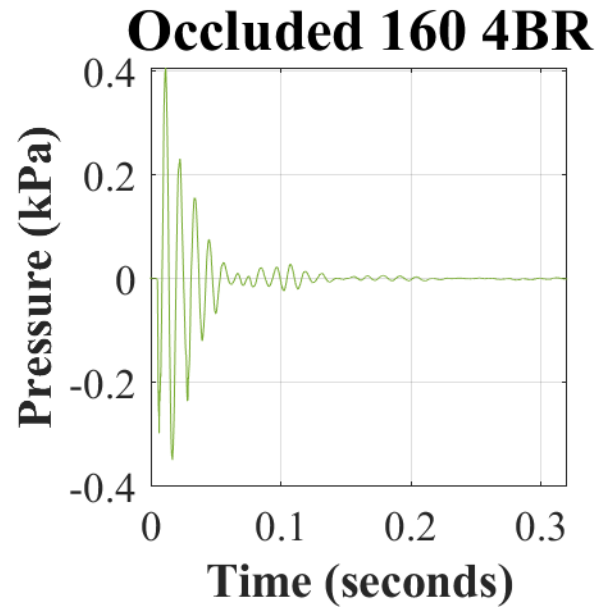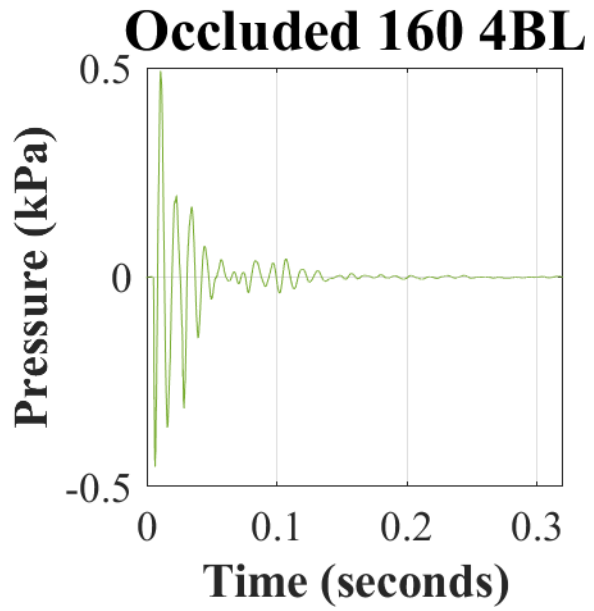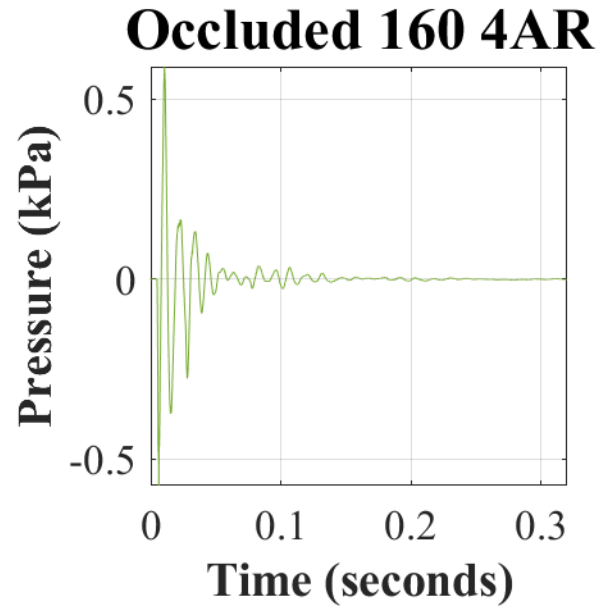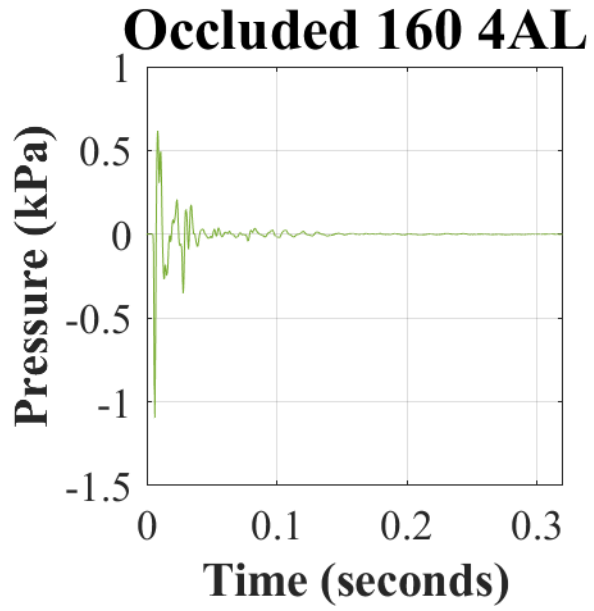

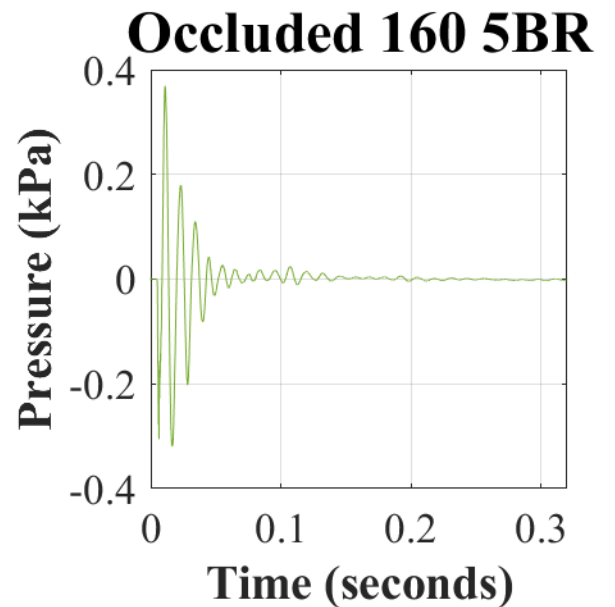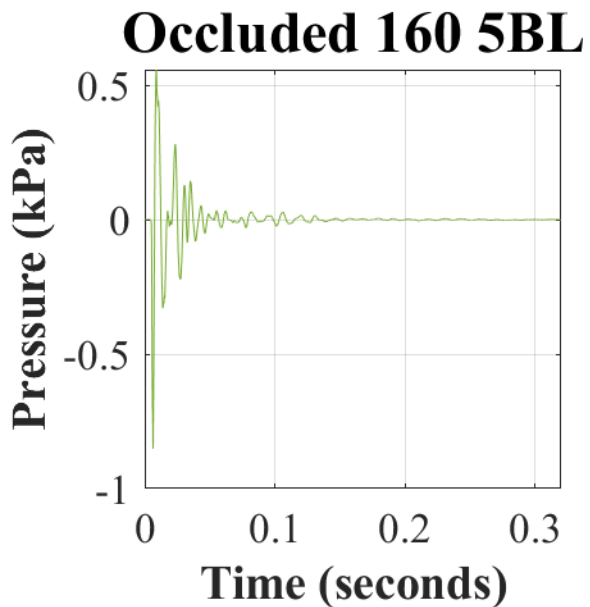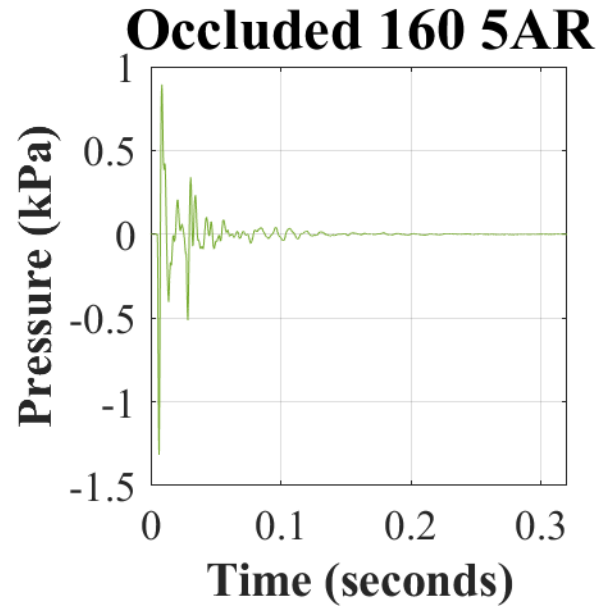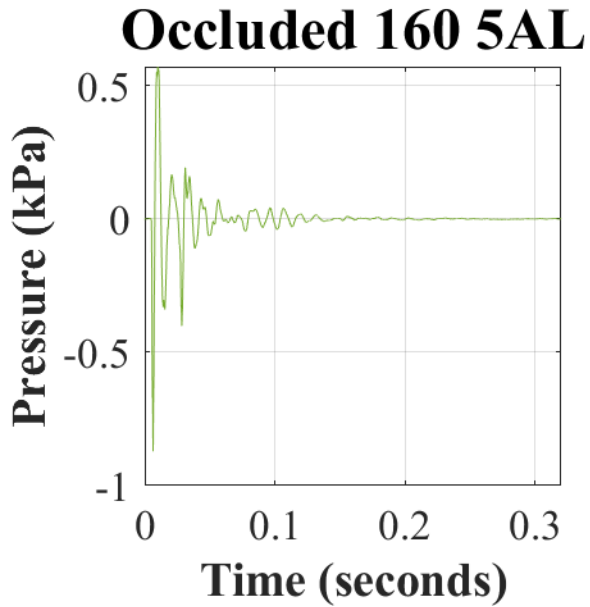


Note. The naming convention for all occluded waveforms is “Occluded LvL NnX”, where ‘Occluded’ is the test condition (i.e., ATF has the HPD donned), ‘LvL’ is the nominal test level (i.e., 150, 160 or 170 dBp), ‘N’ is the sample number (i.e., 1 to 5) of the device tested, ‘n’ is the trial (i.e., A or B) indicating HPD fit (i.e., first or second, respectively), and ‘X’ indicates from what ATF microphone the recording is from (i.e., right [R] or left [L] pinnae).


Appendix D. Estimated unoccluded (open-ear) waveforms (in kilopascals [kPa]) over time (in seconds [s]) in response to 160 dBp with the Supreme[®] Pro-X (OFF).

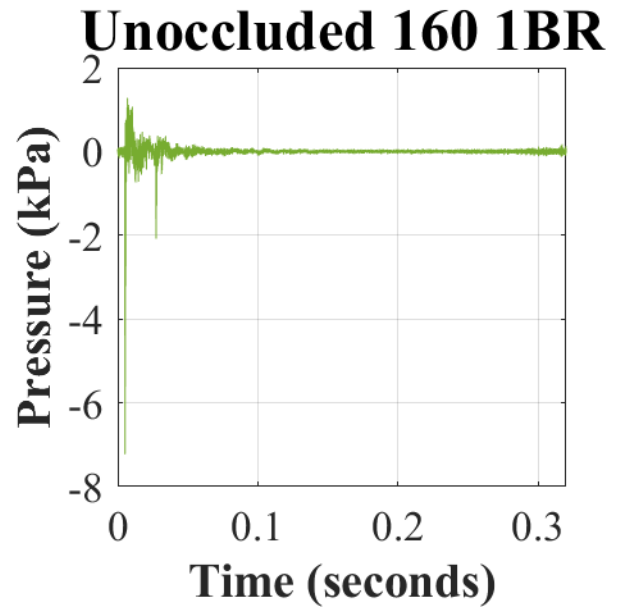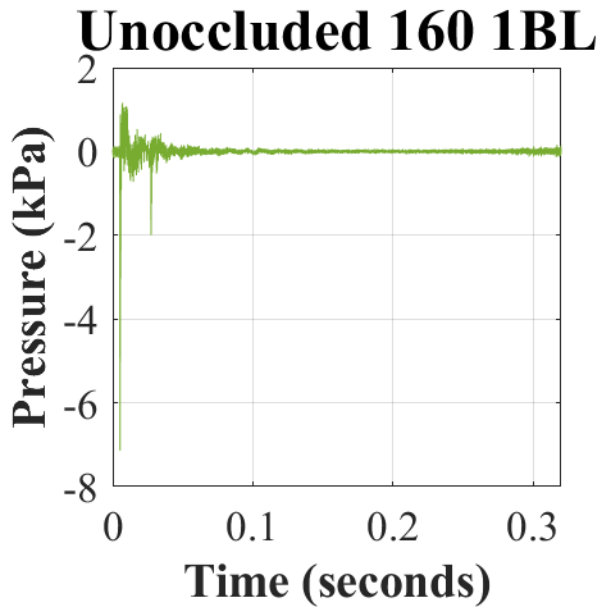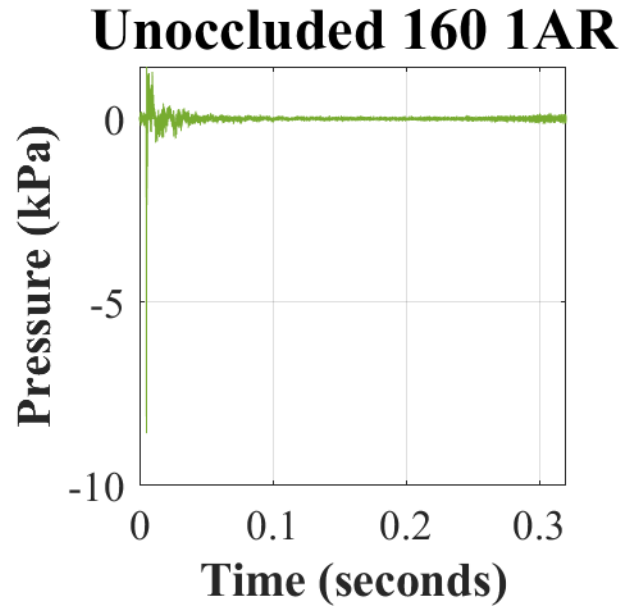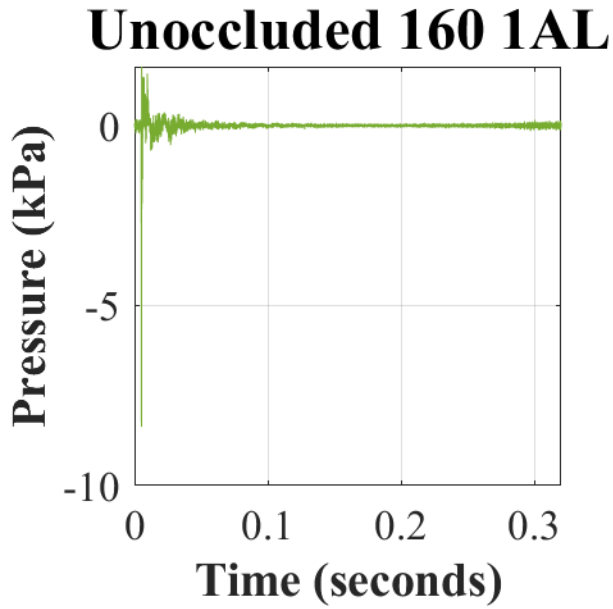


Unoccluded 160 2AL

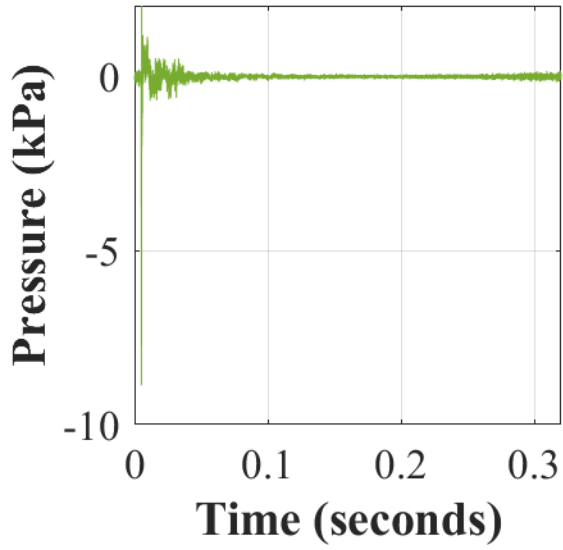


Unoccluded 160 2AR

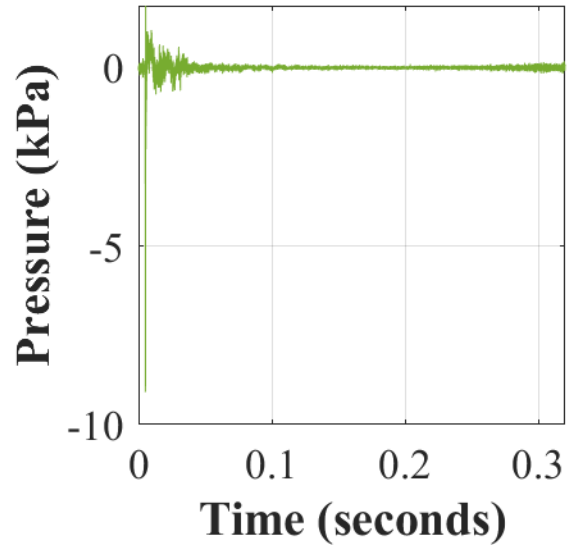


Unoccluded 160 2BL

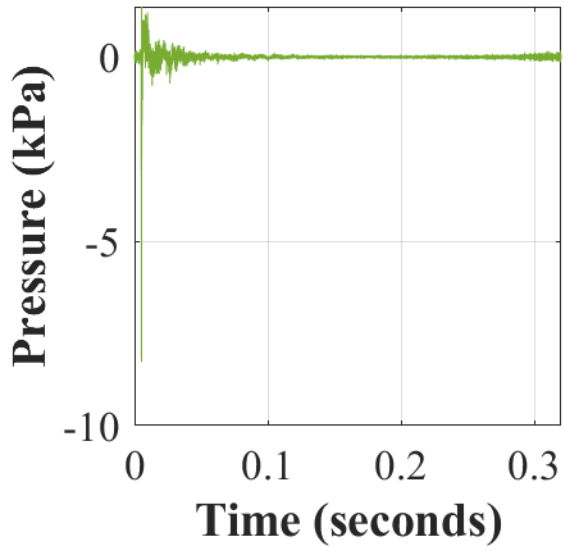


Unoccluded 160 2BR

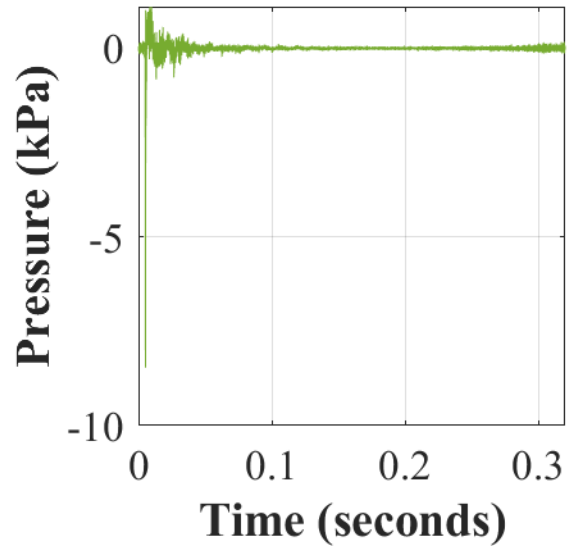


Unoccluded 160 3AL

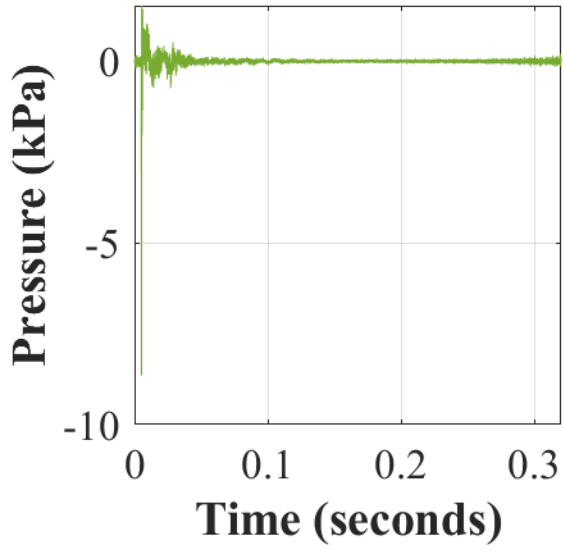


Unoccluded 160 3AR

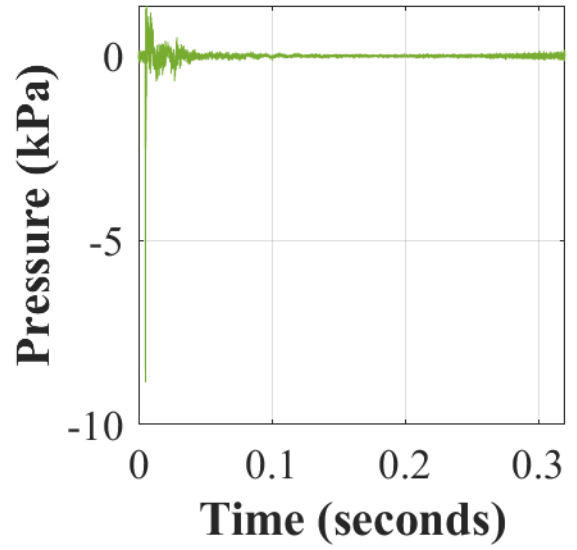


Unoccluded 160 3BL

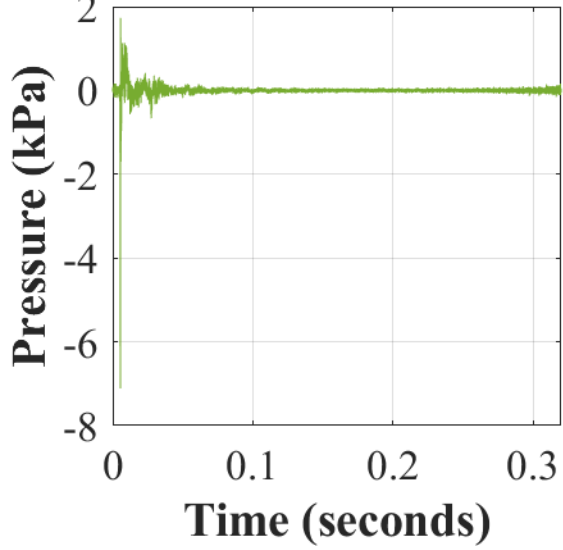


Unoccluded 160 3BR

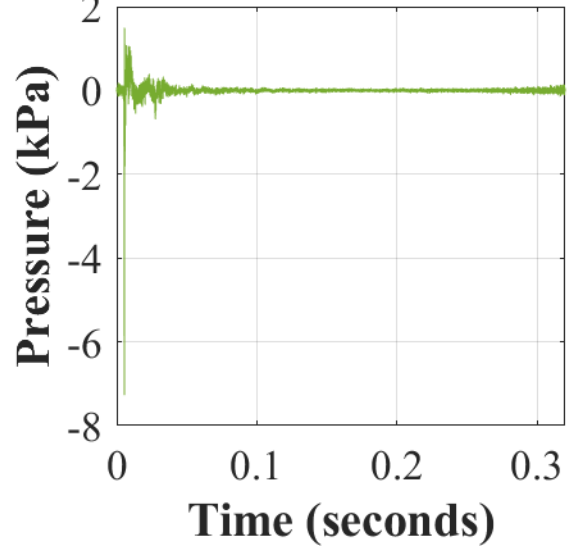


Unoccluded 160 4AL

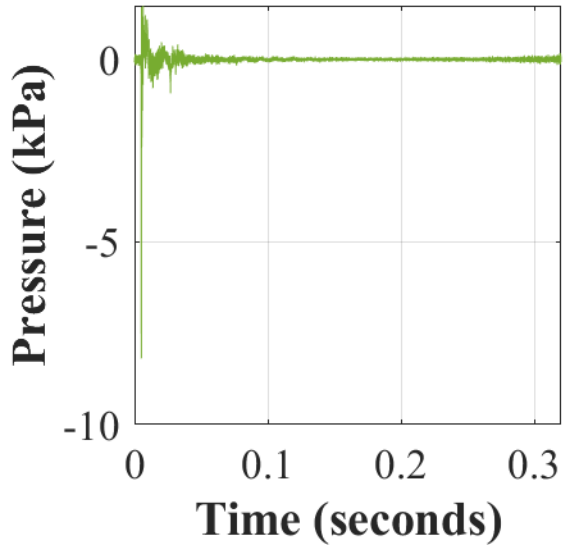


Unoccluded 160 4AR




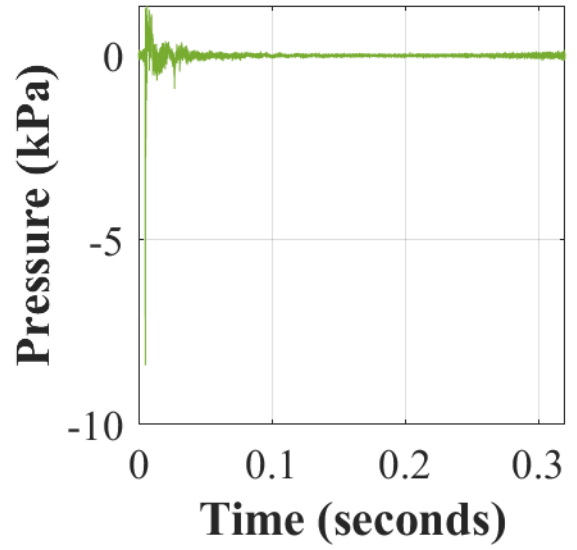


Unoccluded 160 4BL

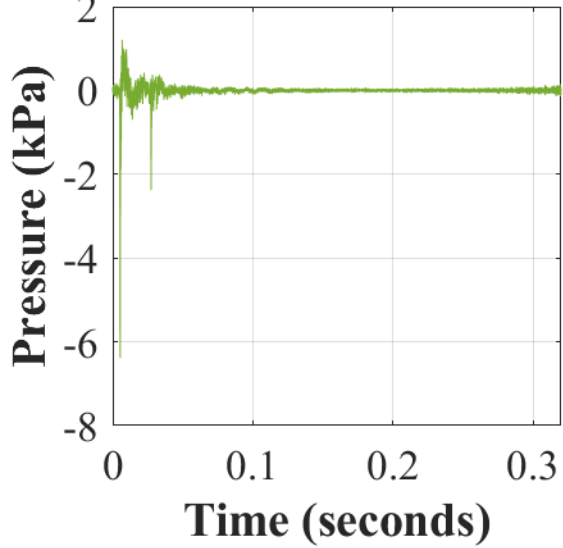

Unoccluded 160 4BR

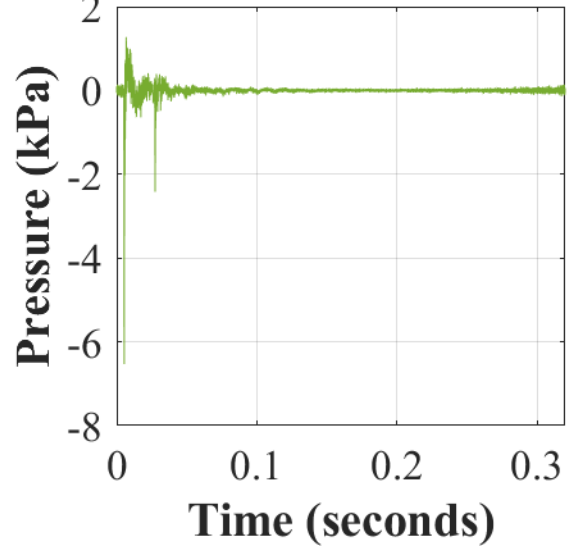


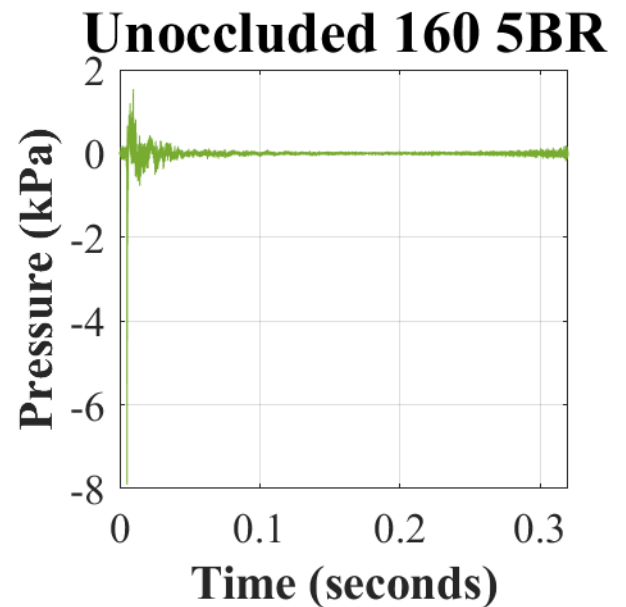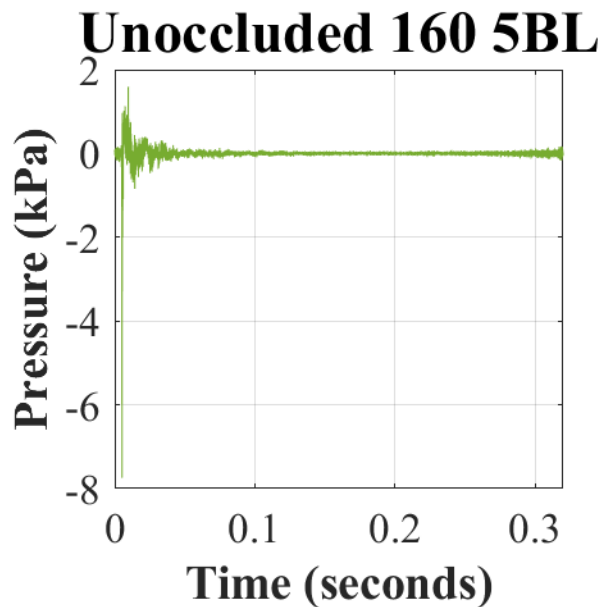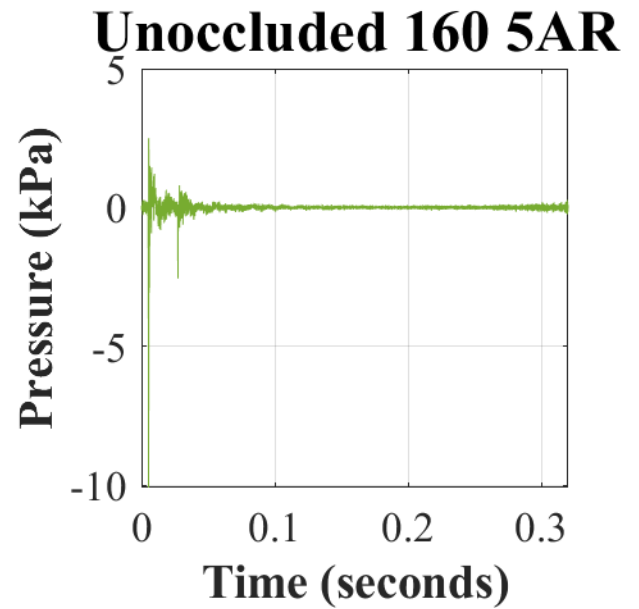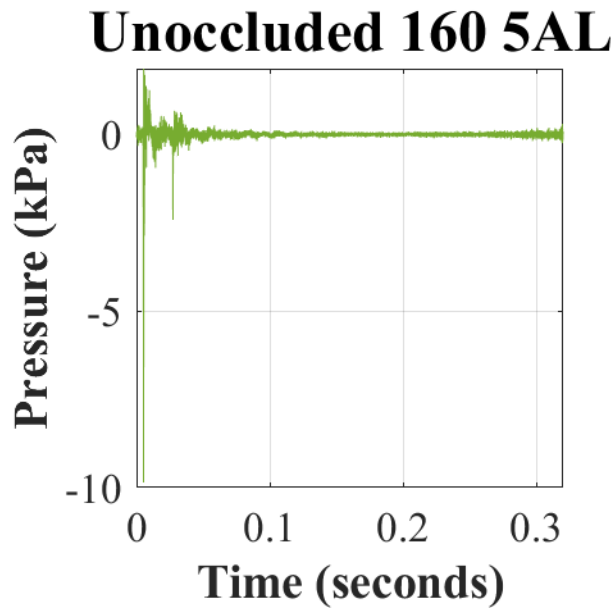


Note. The naming convention for all unoccluded waveforms is “Unoccluded LvL NnX”, where ‘Unoccluded’ is the test condition (i.e., ATF has the HPD doffed), ‘LvL’ is the nominal test level (i.e., 150, 160 or 170 dB), ‘N’ is the sample number (i.e., 1 to 5) of the device tested, ‘n’ is the trial (i.e., A or B) indicating HPD fit (i.e., first or second, respectively), and ‘X’ indicates from what ATF microphone the recording is from (i.e., right [R] or left [L] pinnae).

Appendix E. Recorded occluded (closed-ear) waveforms (in kilopascals [kPa]) over time (in seconds [s]) in response to 170 dBp with the Supreme[®] Pro-X (OFF).


Occluded 170 1AL

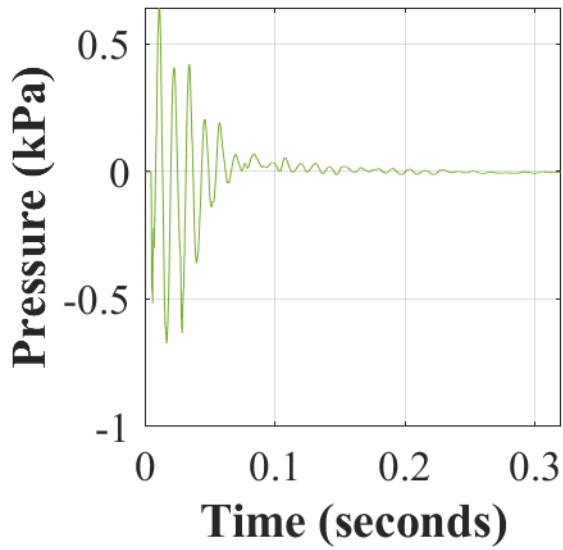


Occluded 170 1AR




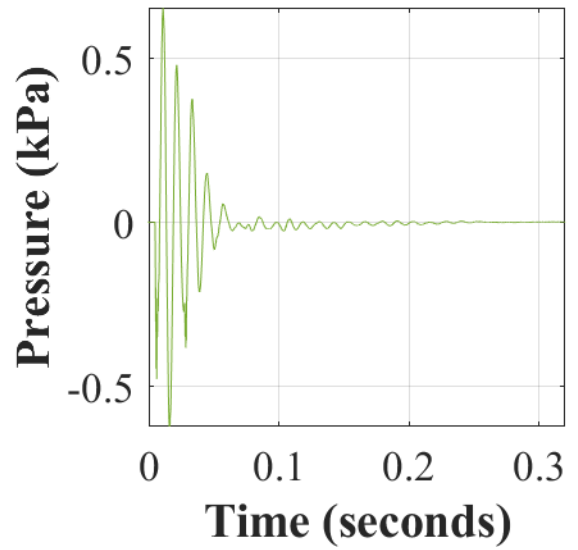


Occluded 170 1BL

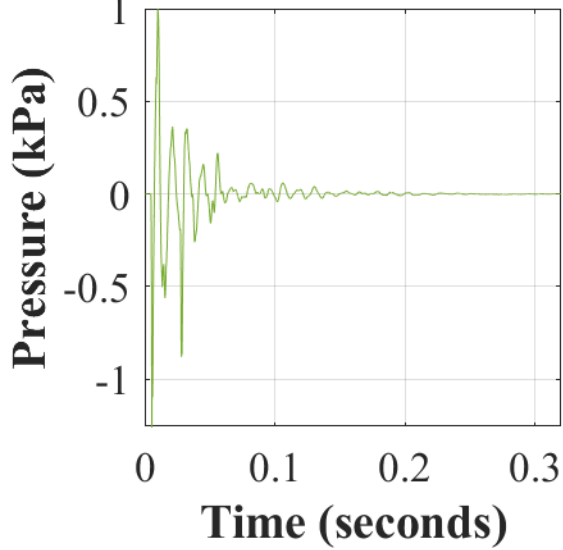


Occluded 170 1BR

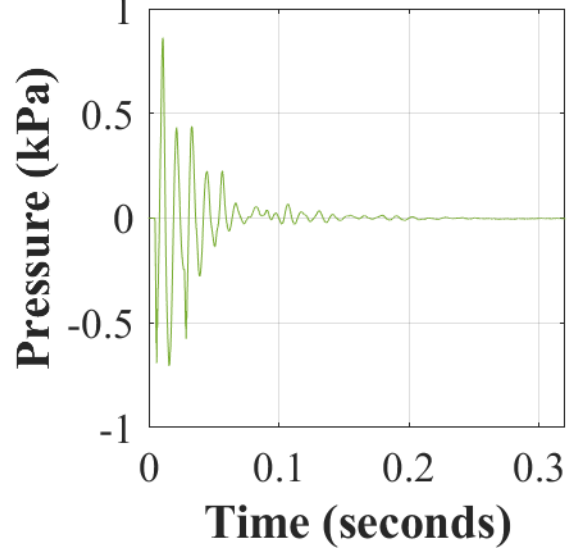


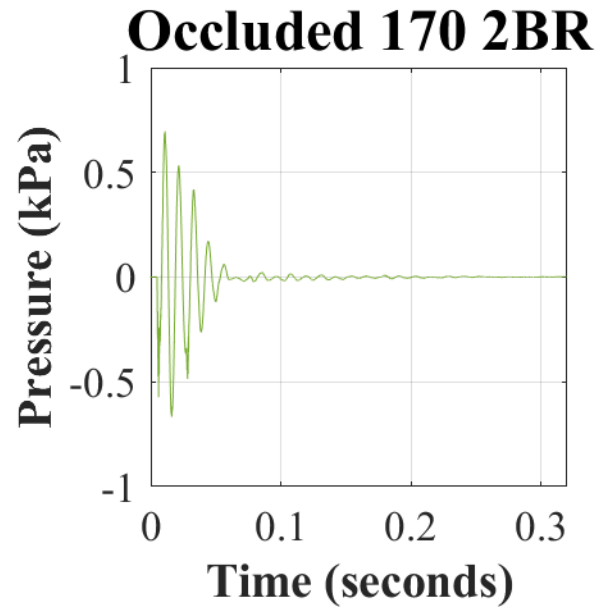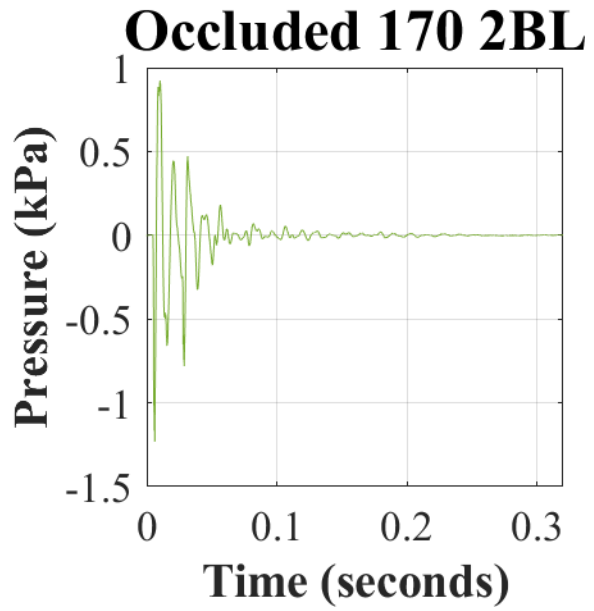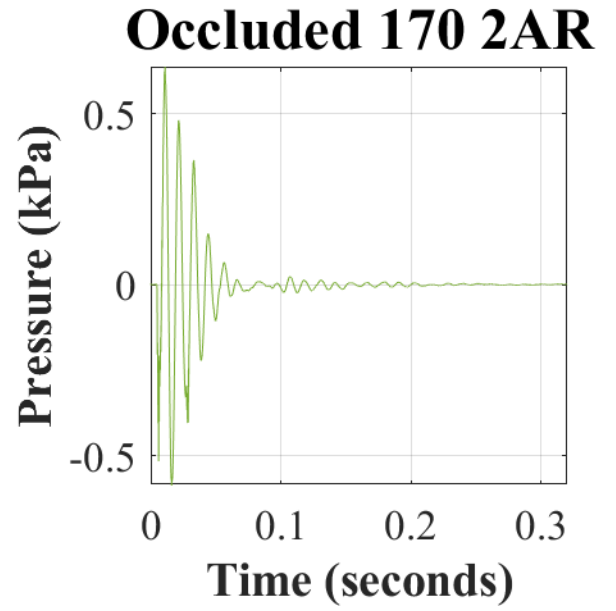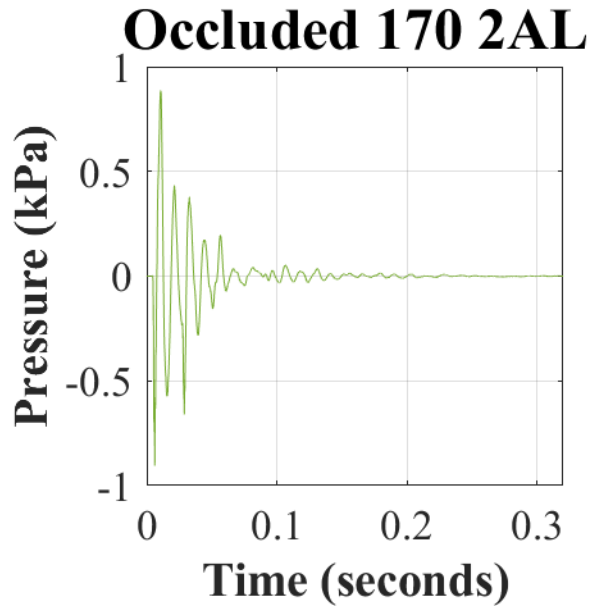


Occluded 170 3AL

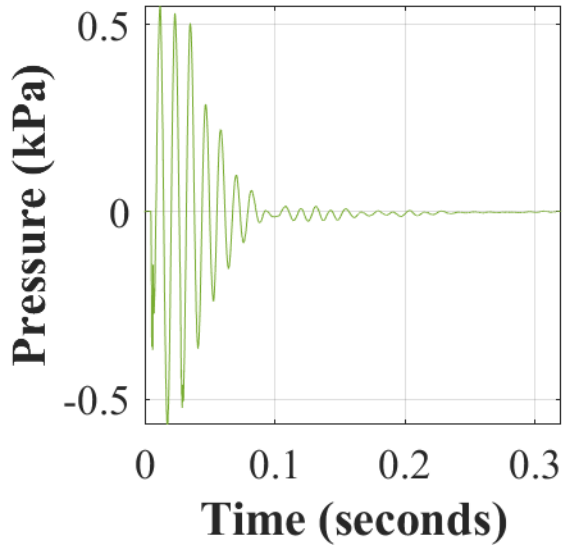


Occluded 170 3AR




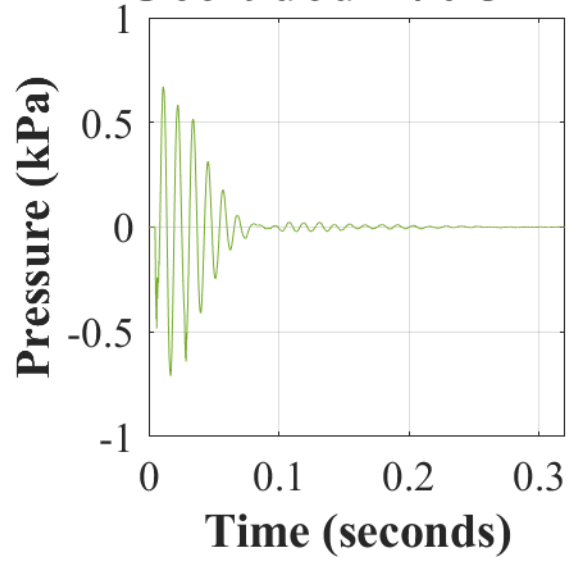






Occluded 170 3BL

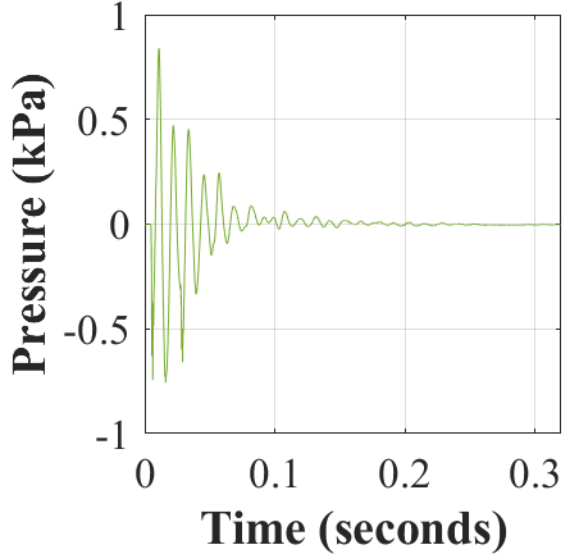

Occluded 170 3BR




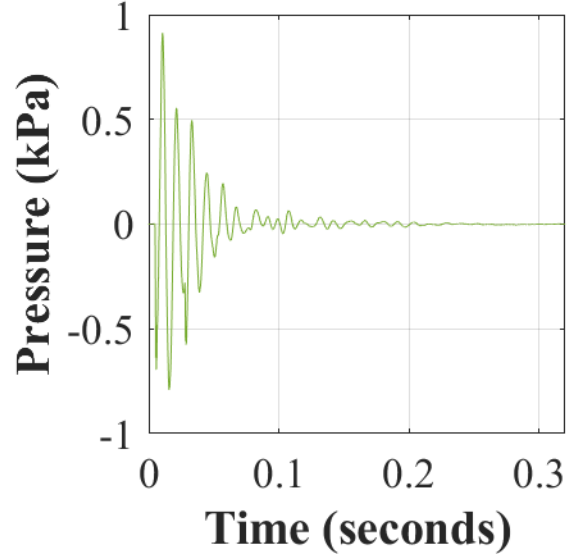


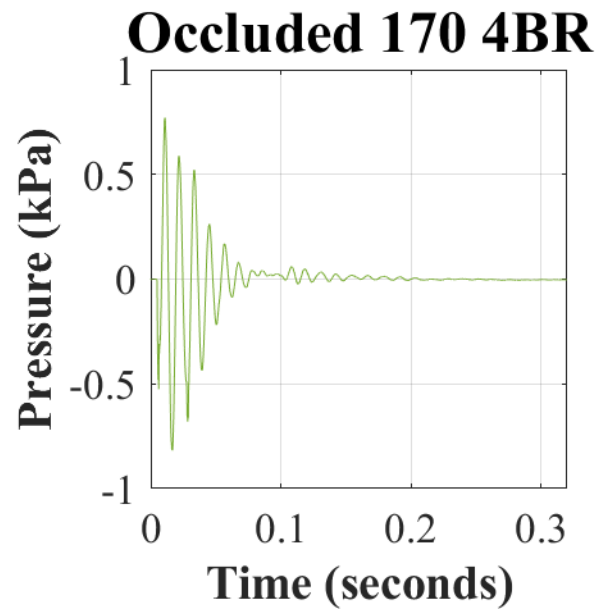
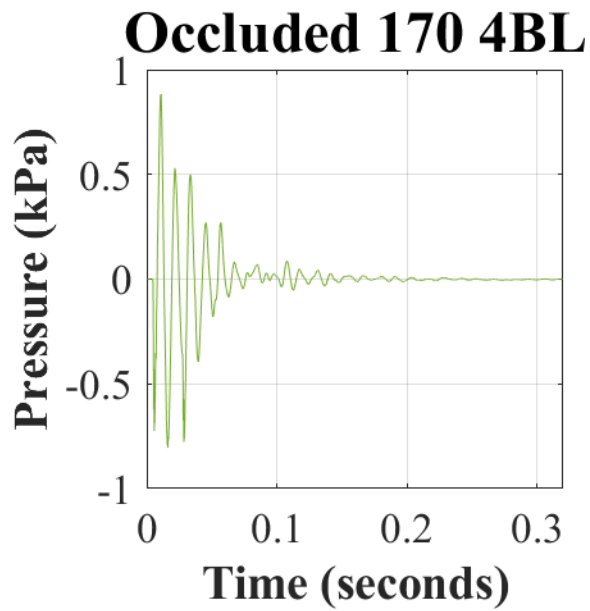
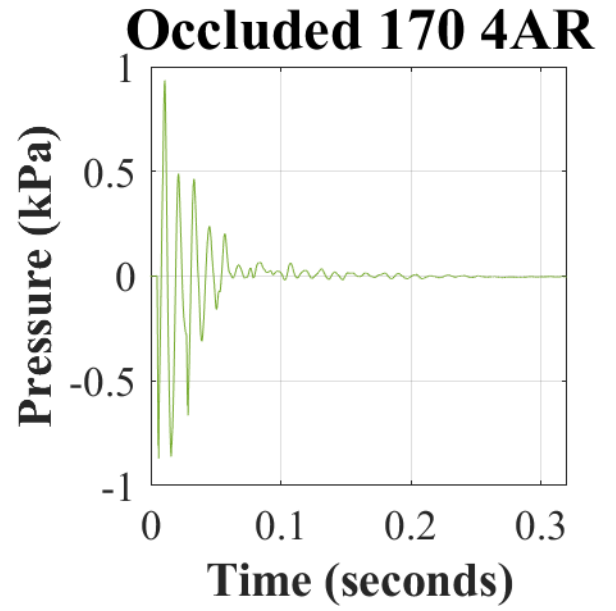
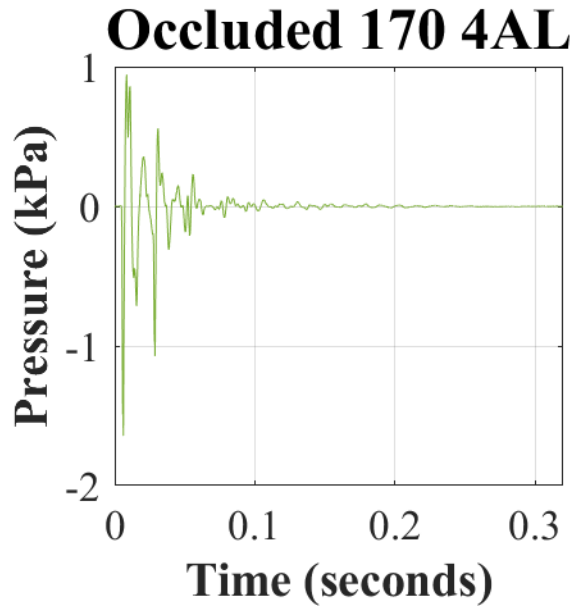


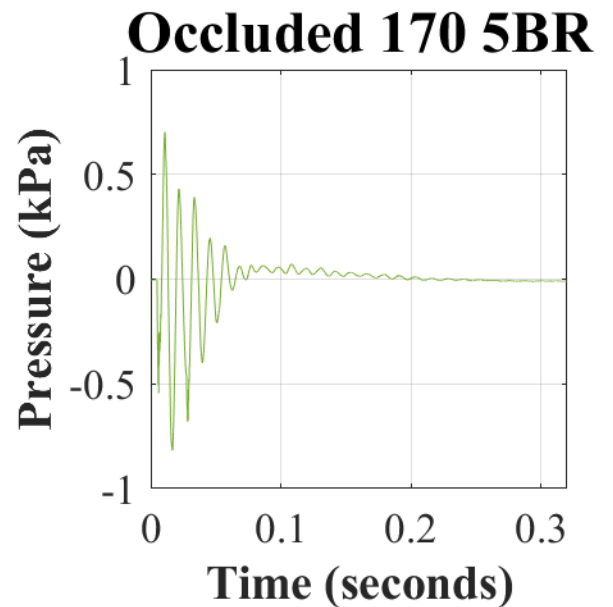
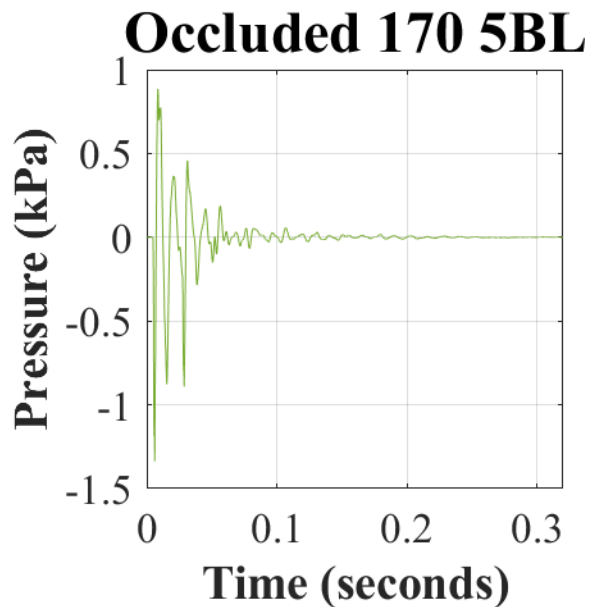
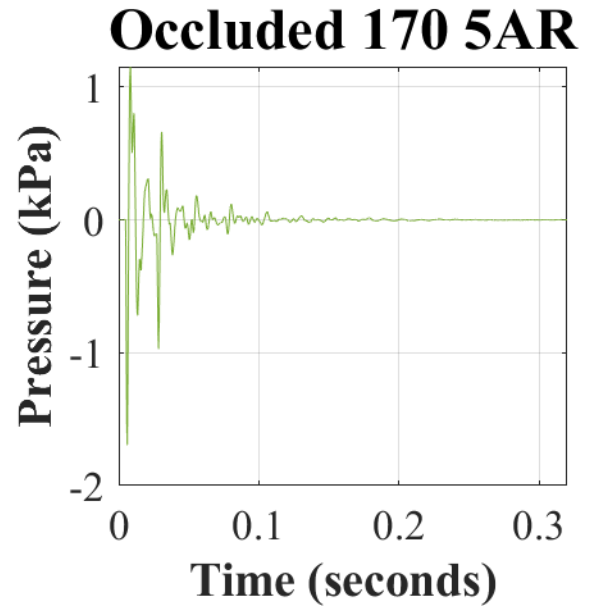
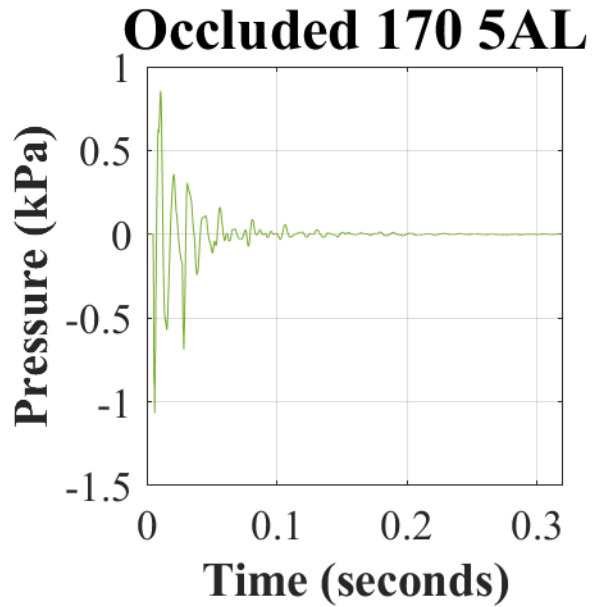






Note. The naming convention for all occluded waveforms is “Occluded LvL NnX”, where ‘Occluded’ is the test condition (i.e., ATF has the HPD donned), ‘LvL’ is the nominal test level (i.e., 150, 160 or 170 dBp), ‘N’ is the sample number (i.e., 1 to 5) of the device tested, ‘n’ is the trial (i.e., A or B) indicating HPD fit (i.e., first or second, respectively), and ‘X’ indicates from what ATF microphone the recording is from (i.e., right [R] or left [L] pinnae).





Appendix F. Estimated unoccluded (open-ear) waveforms (in kilopascals [kPa]) over time (in seconds [s]) in response to 170 dBp with the Supreme[®] Pro-X (OFF).

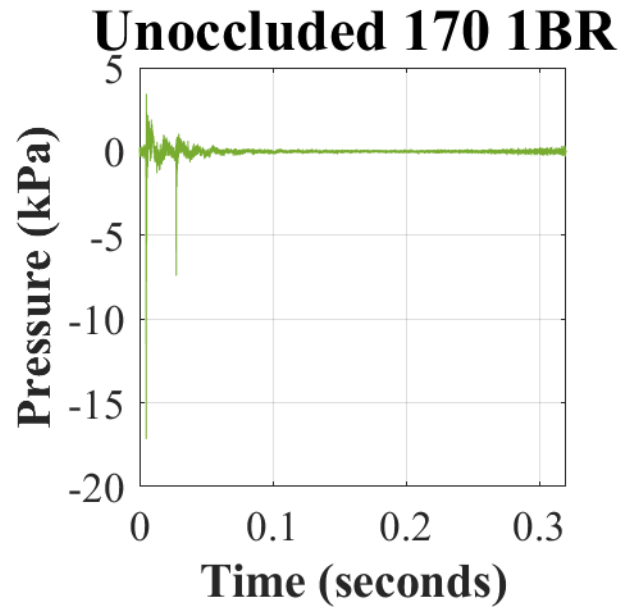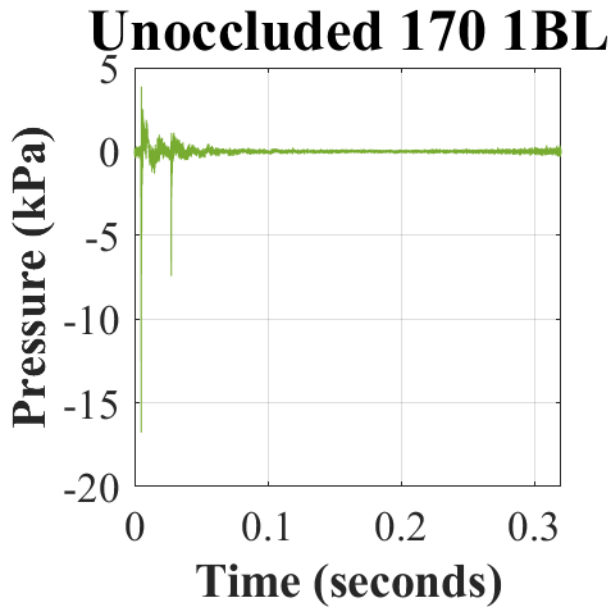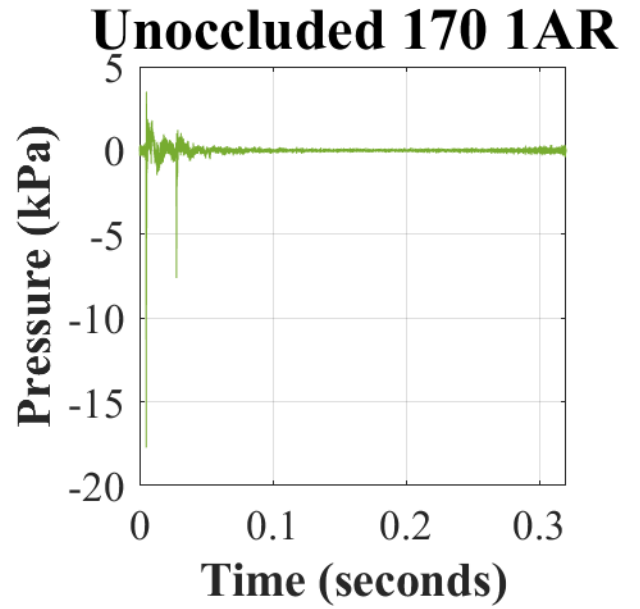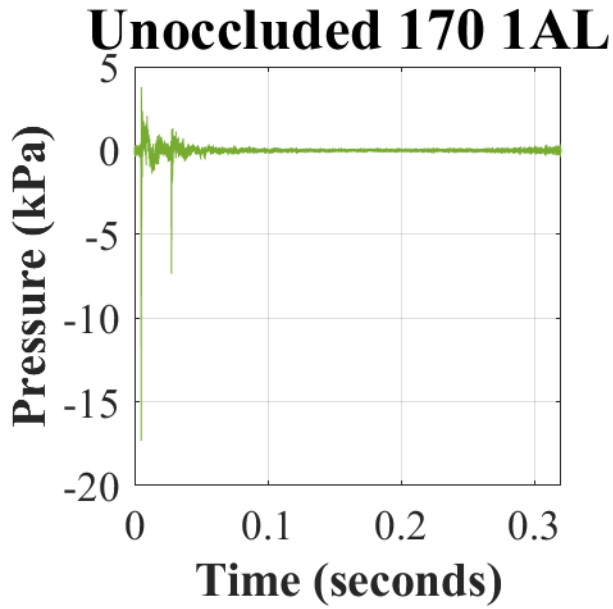

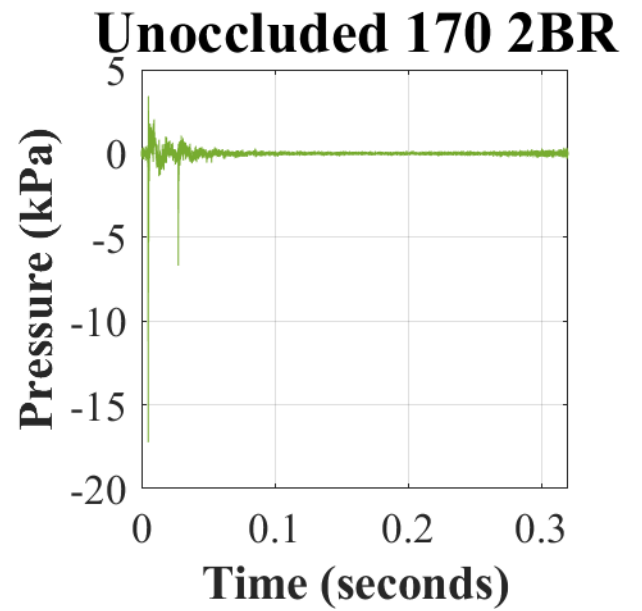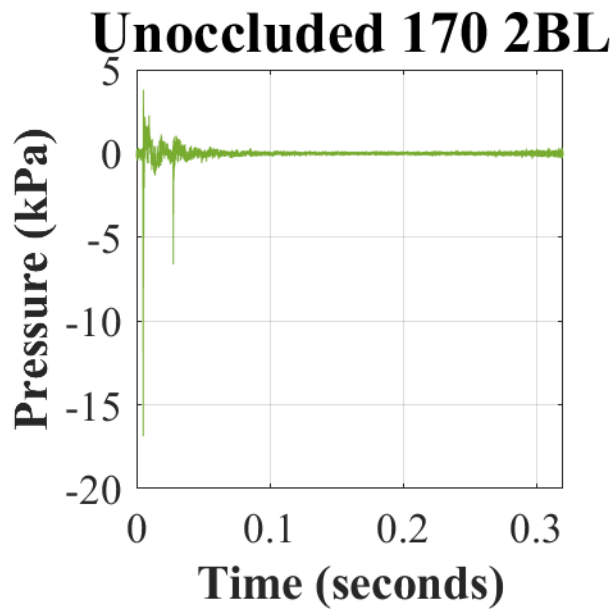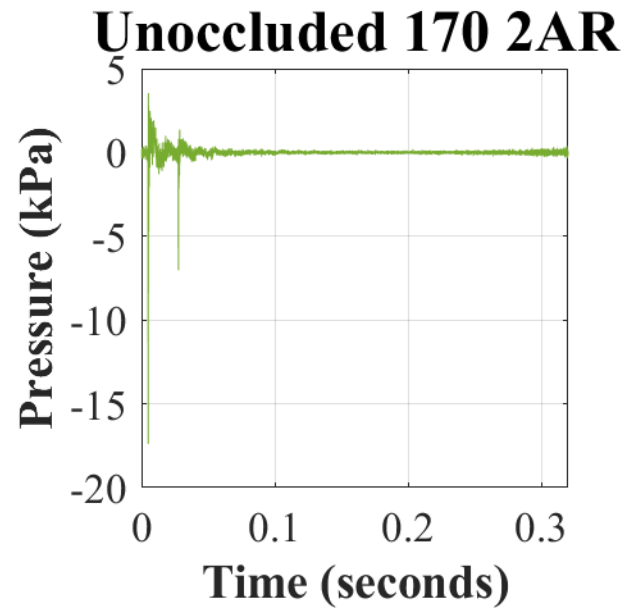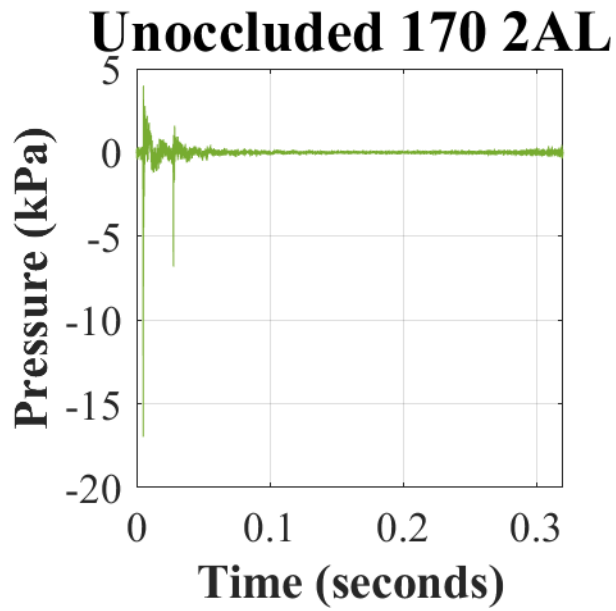

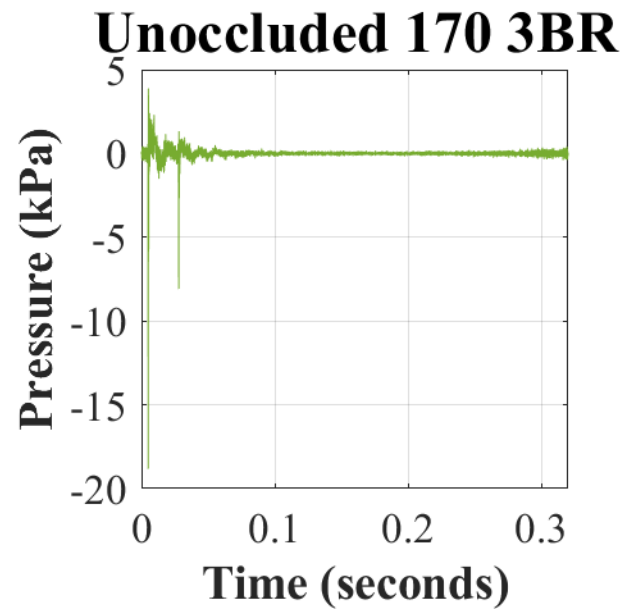
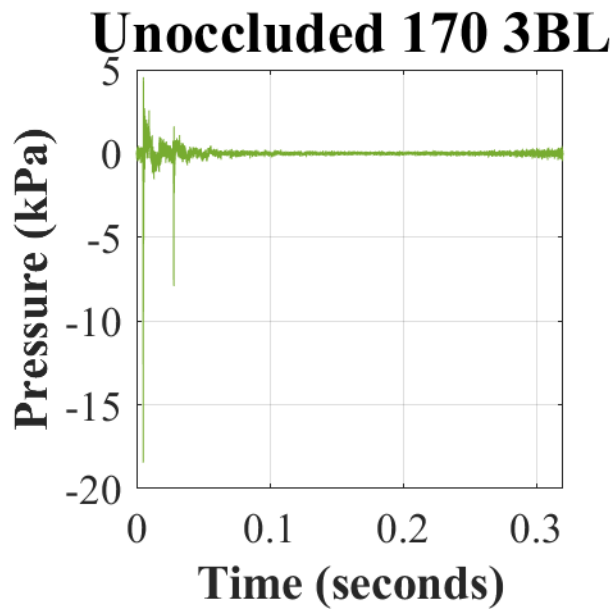
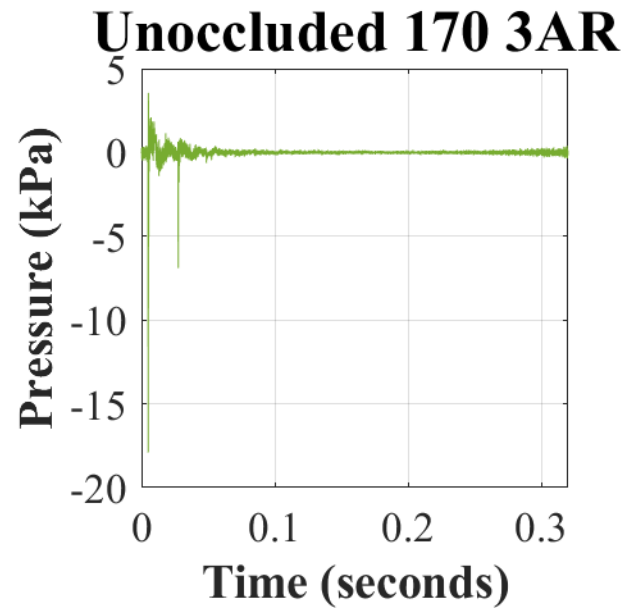
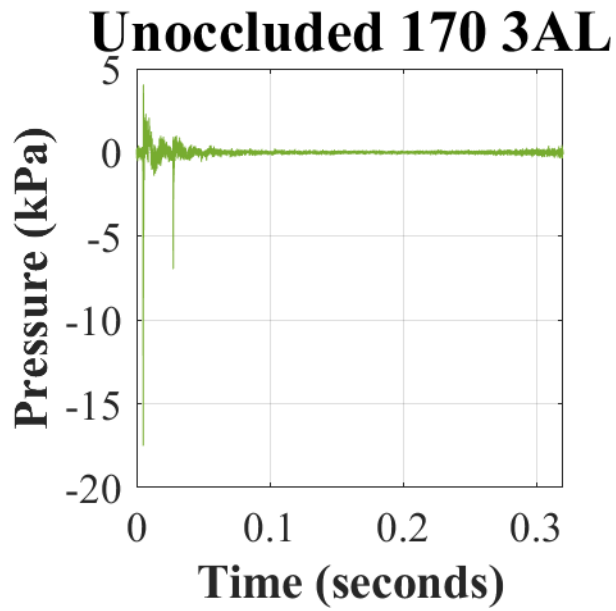


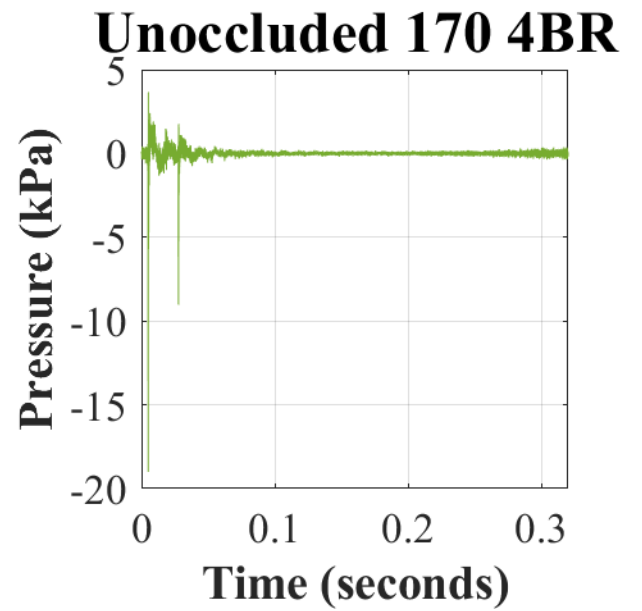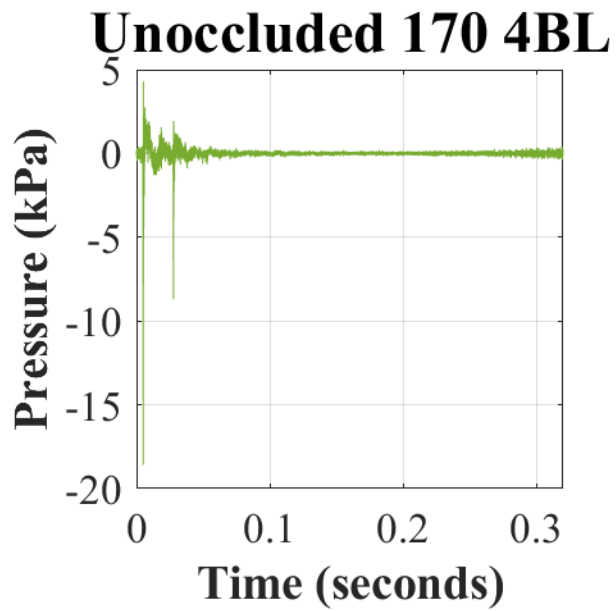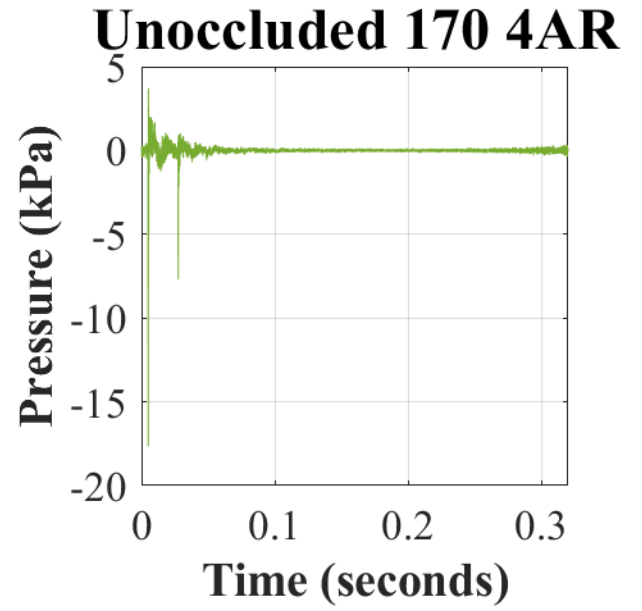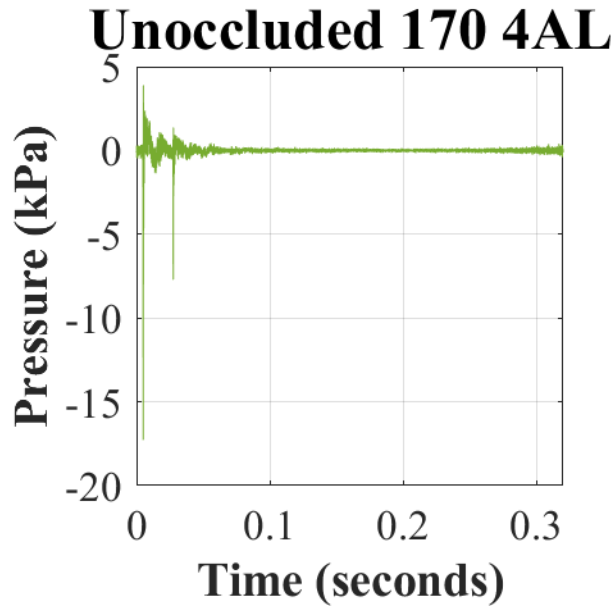

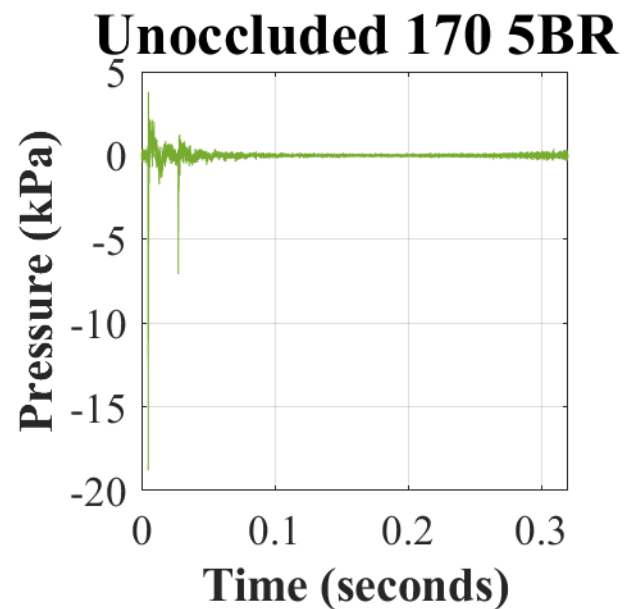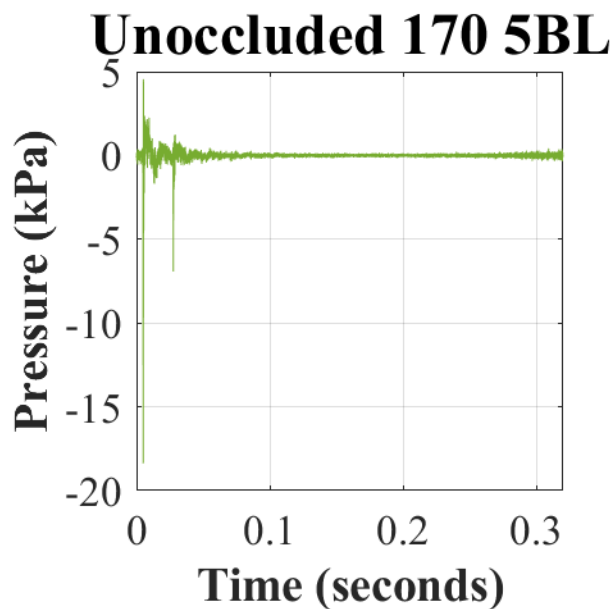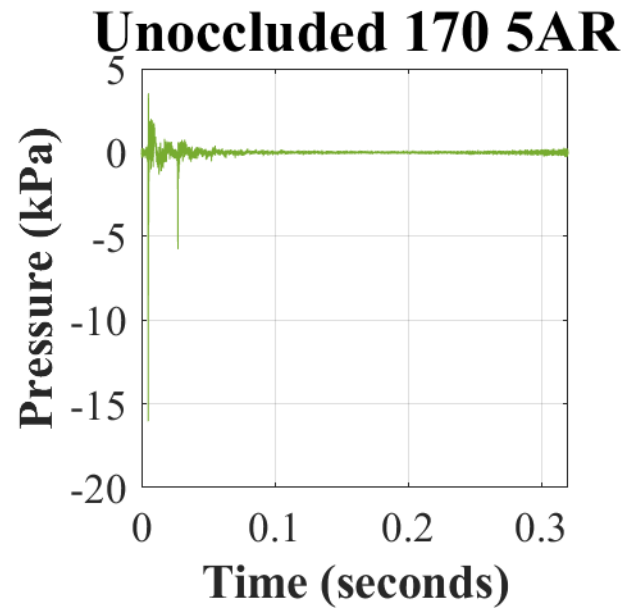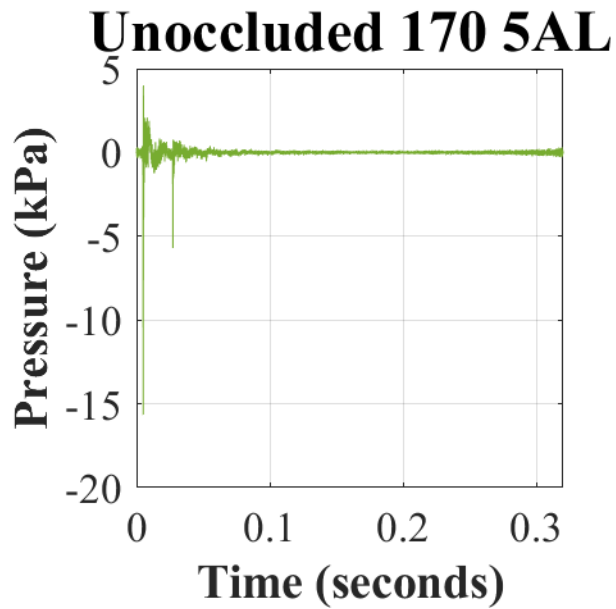


Note. The naming convention for all unoccluded waveforms is “Unoccluded LvL NnX”, where ‘Unoccluded’ is the test condition (i.e., ATF has the HPD doffed), ‘LvL’ is the nominal test level (i.e., 150, 160 or 170 dBp), ‘N’ is the sample number (i.e., 1 to 5) of the device tested, ‘n’ is the trial (i.e., A or B) indicating HPD fit (i.e., first or second, respectively), and ‘X’ indicates from what ATF microphone the recording is from (i.e., right [R] or left [L] pinnae).


Appendix G. Recorded waveform (in kilopascals [kPa]) over time (in seconds [s]) of the impulse measured with the free-field probe at 150 dBp and the Supreme[®] Pro-X (OFF) donned.

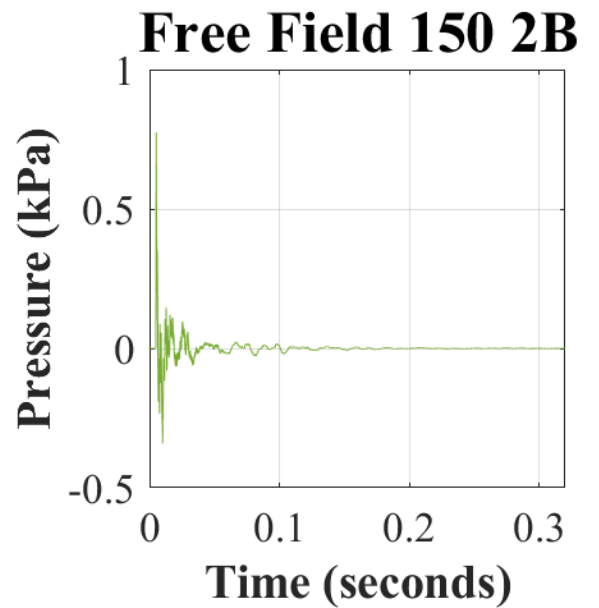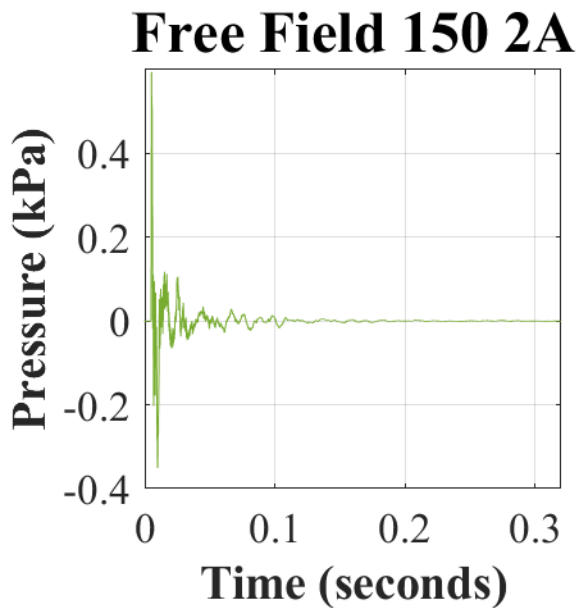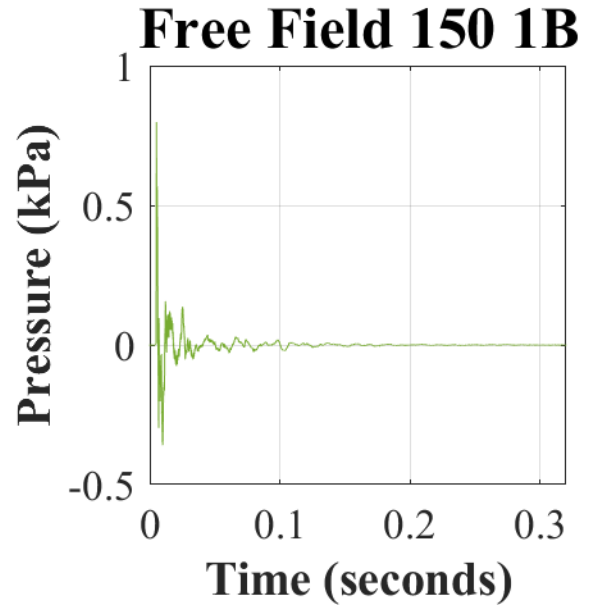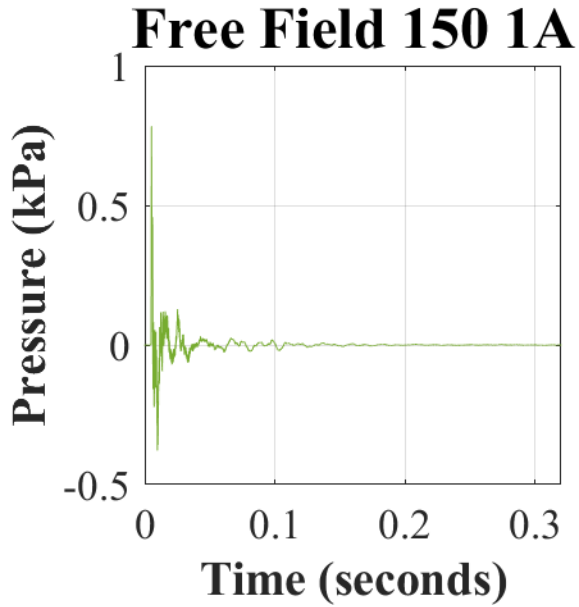


Free Field 150 3A

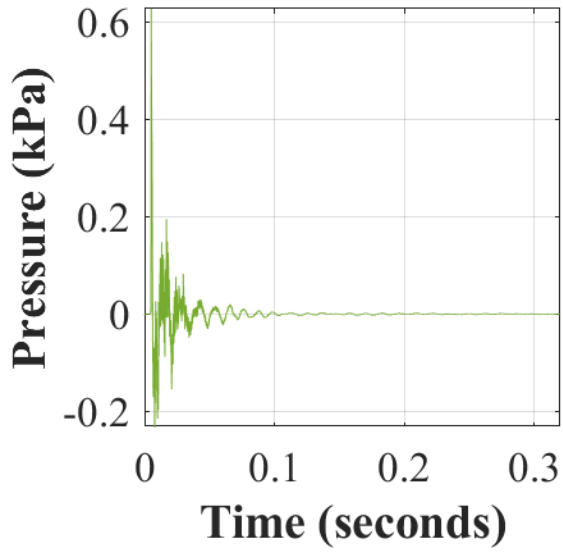


Free Field 150 3B


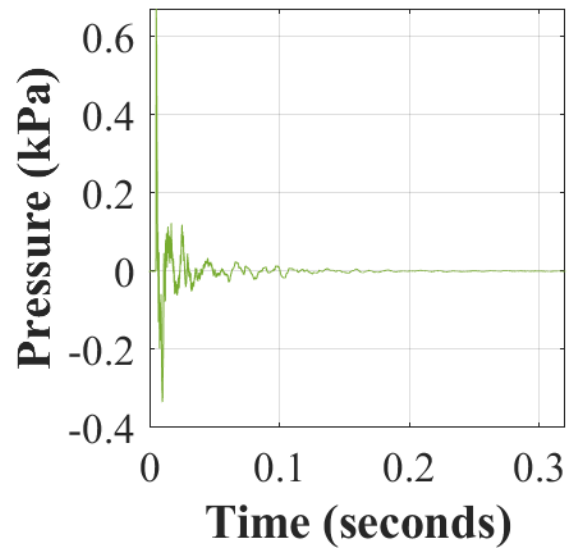


Free Field 150 4A

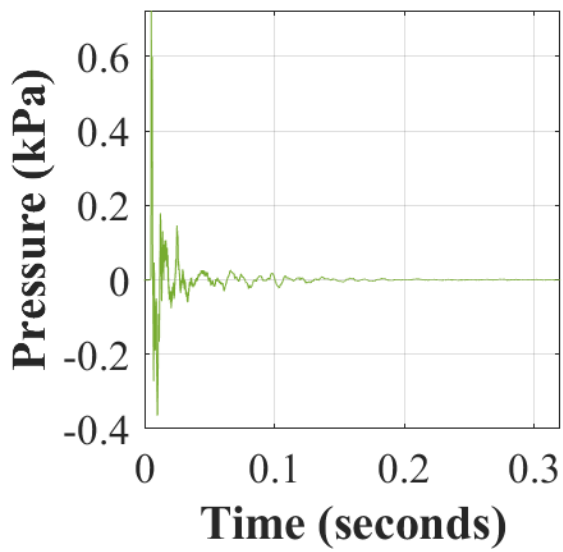





Free Field 150 4B

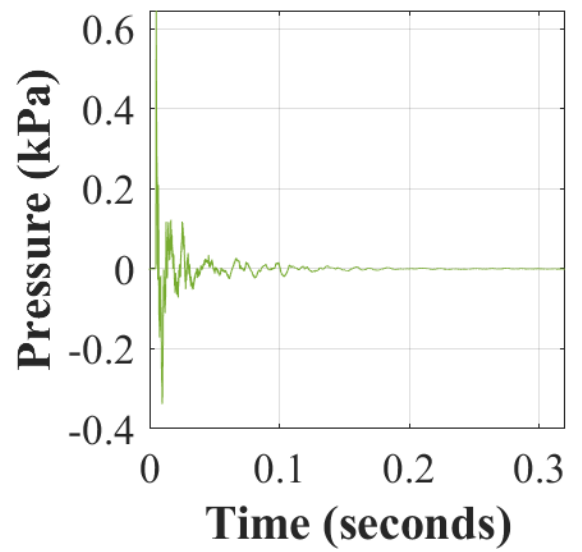

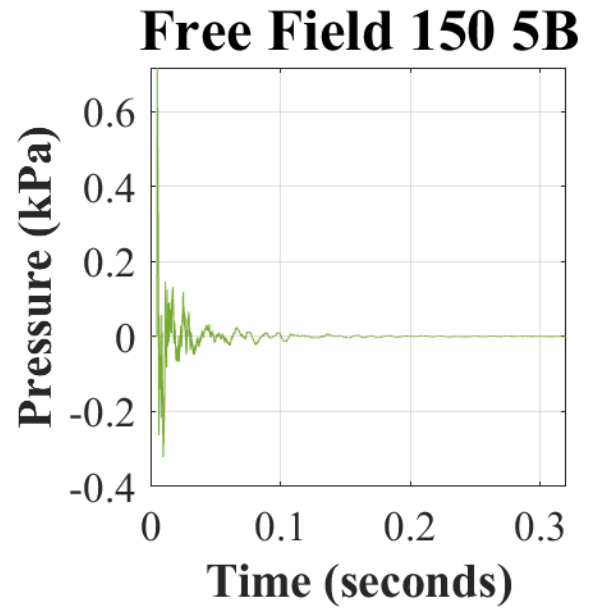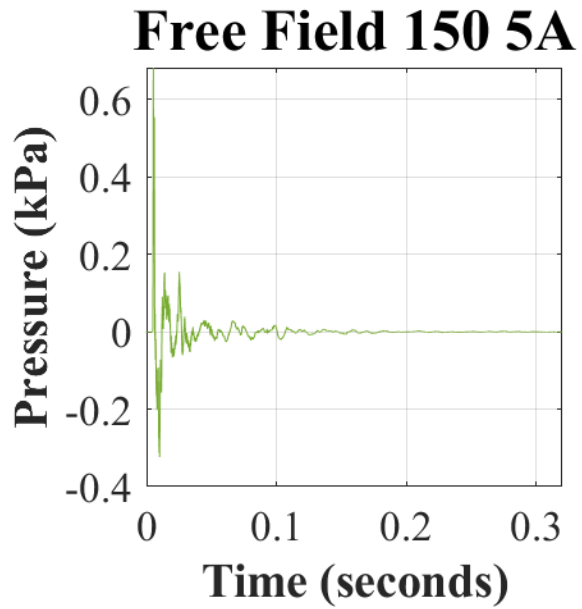


Note. The naming convention for all free-field waveforms is “Free Field LvL Nn”, where ‘Free Field’ indicates that the recording was obtained using the PCB reference microphone, ‘LvL’ is the nominal test level (150 dB), ‘N’ is the device sample number (1 to 5), and ‘n’ is the device trial (i.e., A or B).


Appendix H. Recorded waveform (in kilopascals [kPa]) over time (in seconds [s]) of the impulse measured with the free-field probe at 160 dBp and the Supreme[®] Pro-X (OFF) donned.

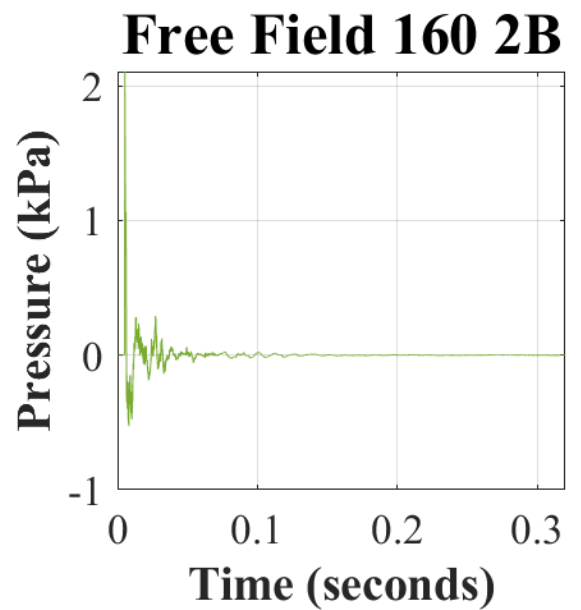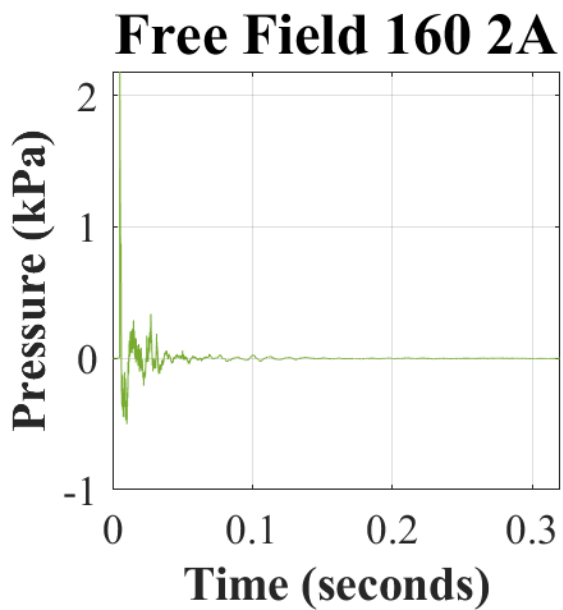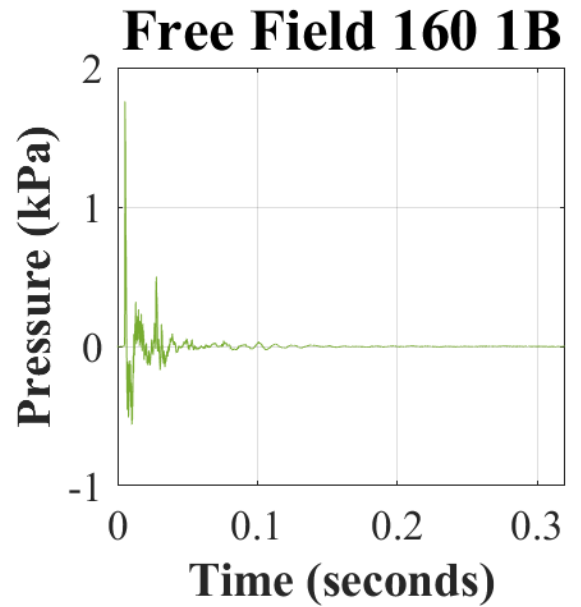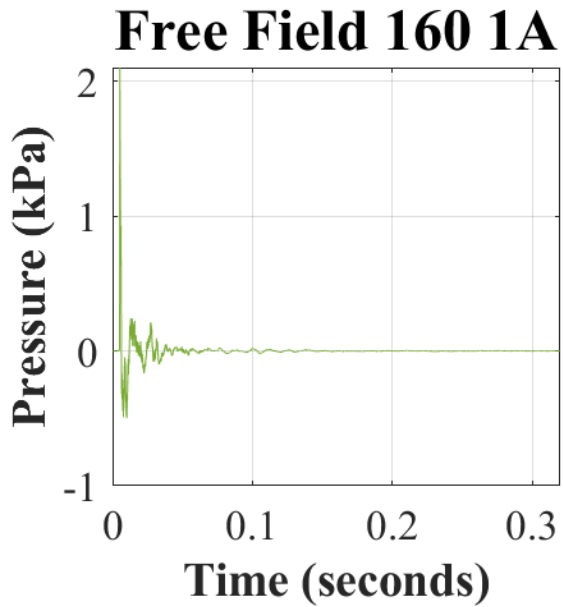


Free Field 160 3A

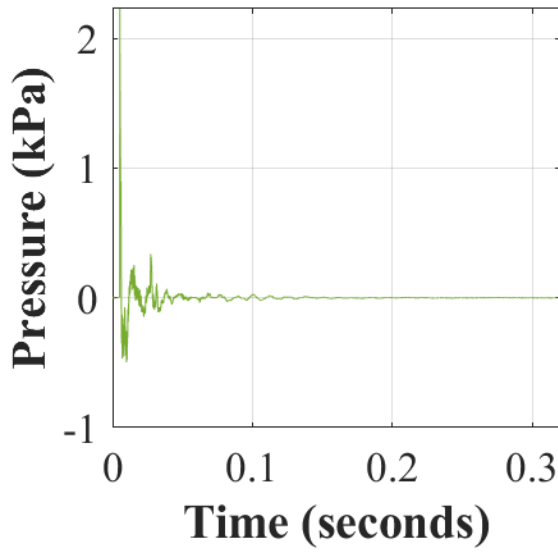


Free Field 160 3B


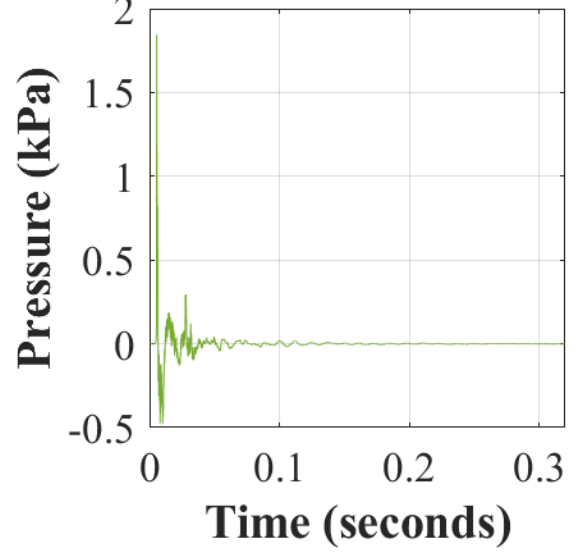


Free Field 160 4A

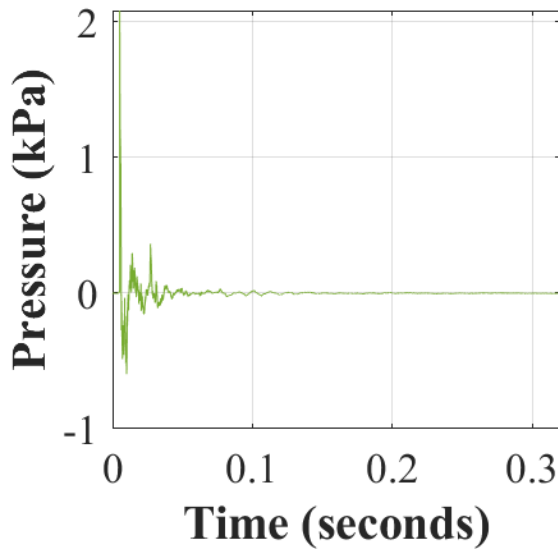





Free Field 160 4B

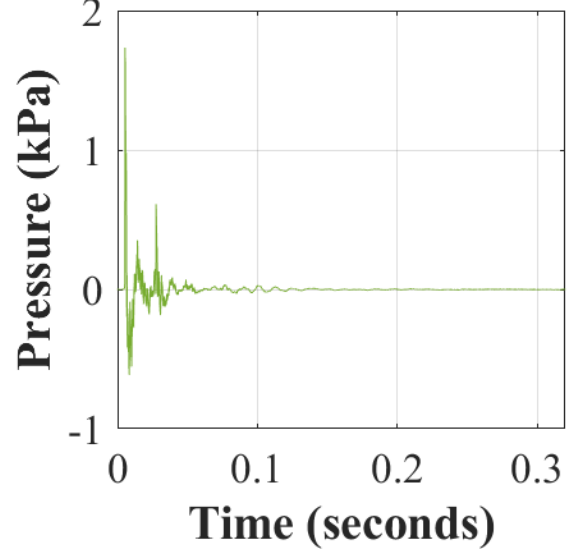

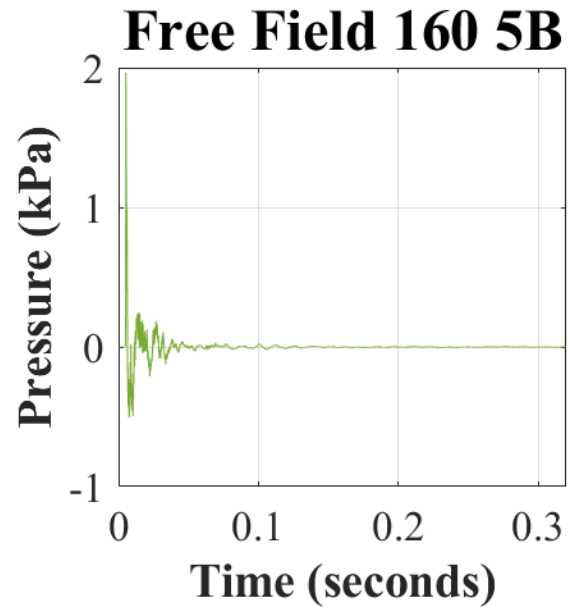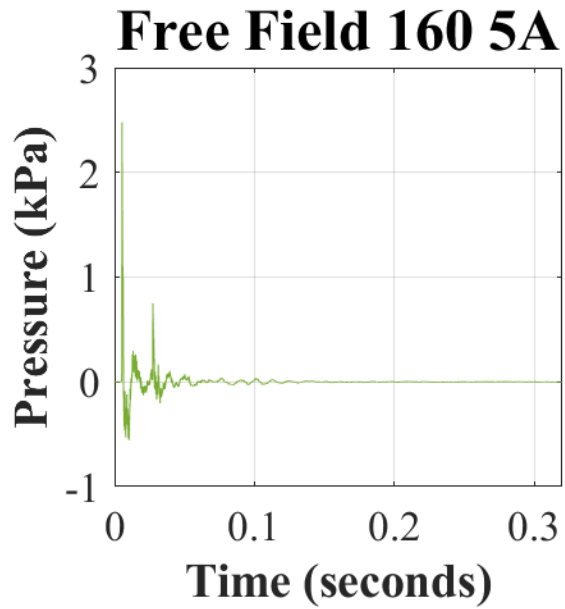


Note. The naming convention for all free-field waveforms is “Free Field LvL Nn”, where ‘Free Field’ indicates that the recording was obtained using the PCB reference microphone, ‘LvL’ is the nominal test level (160 dB), ‘N’ is the device sample number (1 to 5), and ‘n’ is the device trial (i.e., A or B).


Appendix I. Recorded waveform (in kilopascals [kPa]) over time (in seconds [s]) of the impulse measured with the free-field probe at 170 dBp and the Supreme[®] Pro-X (OFF) donned.

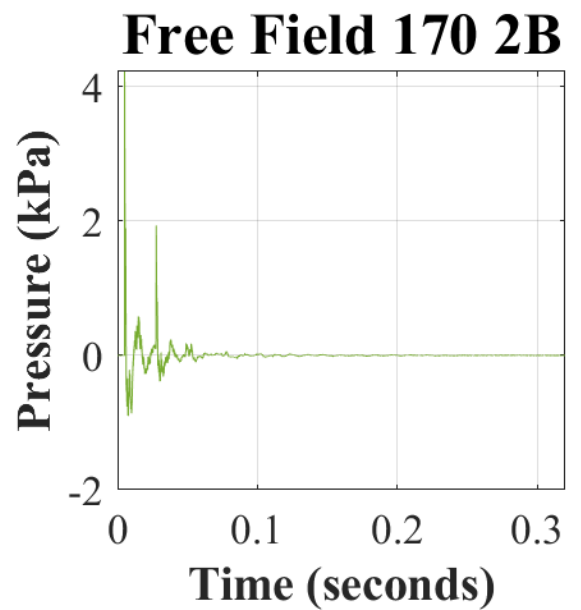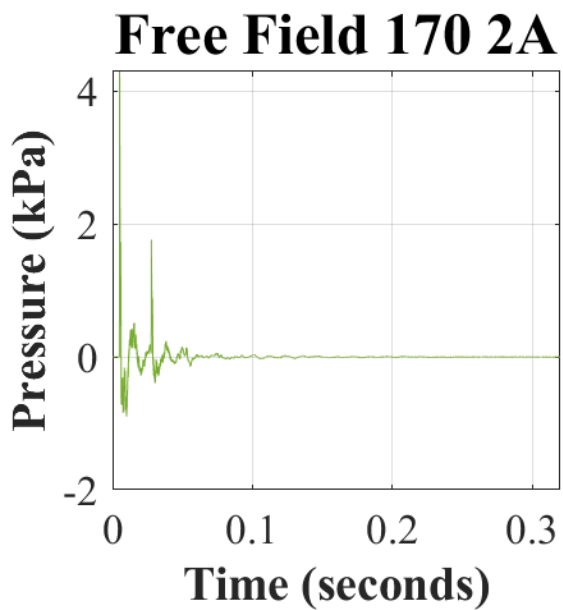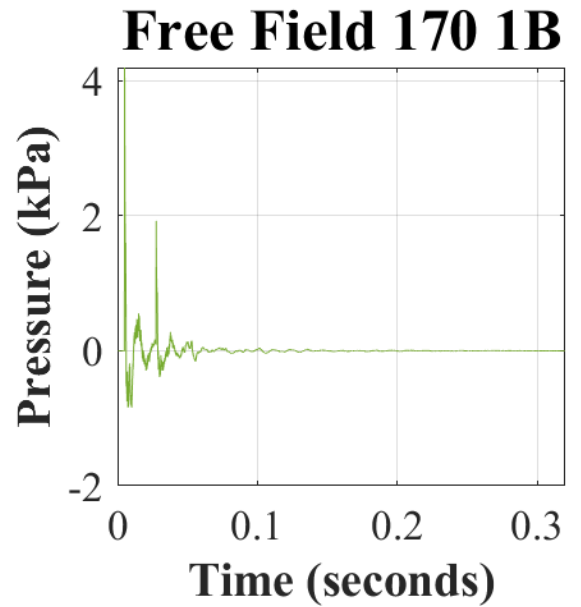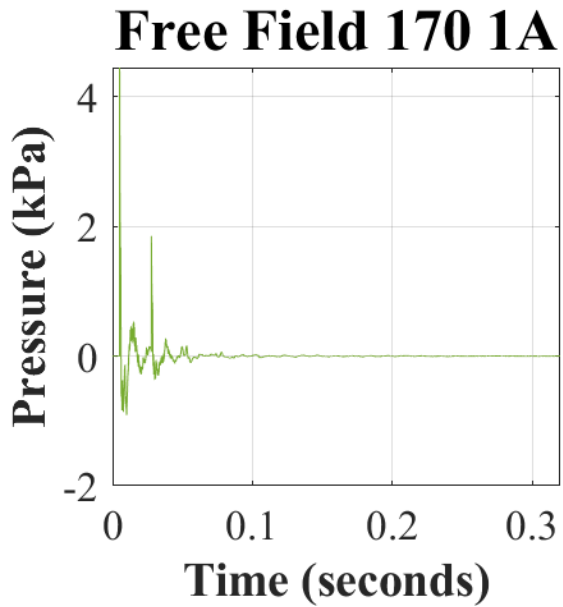


Free Field 170 3A

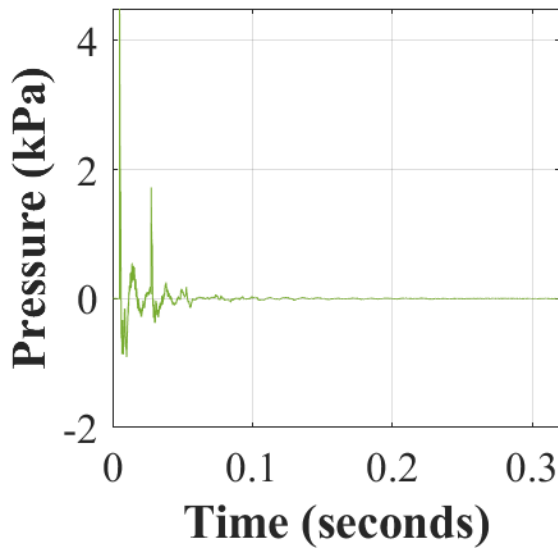


Free Field 170 3B


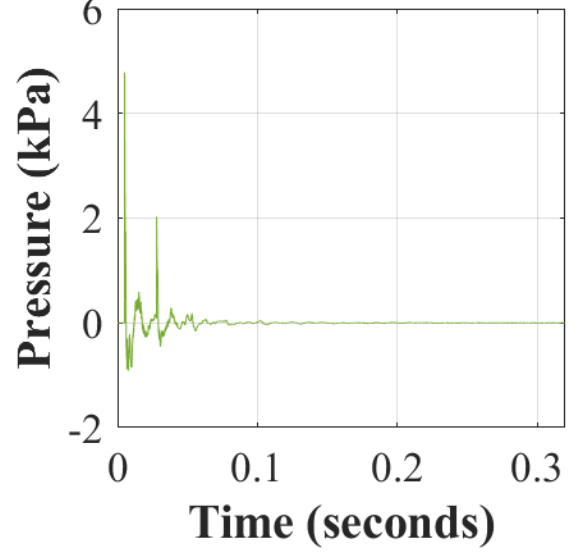


Free Field 170 4A

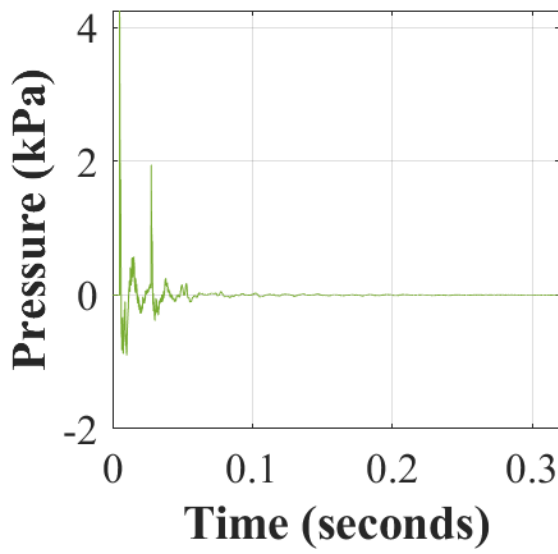





Free Field 170 4B




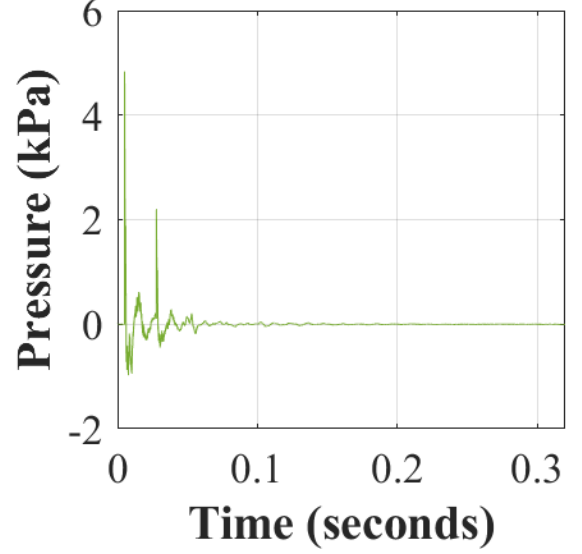


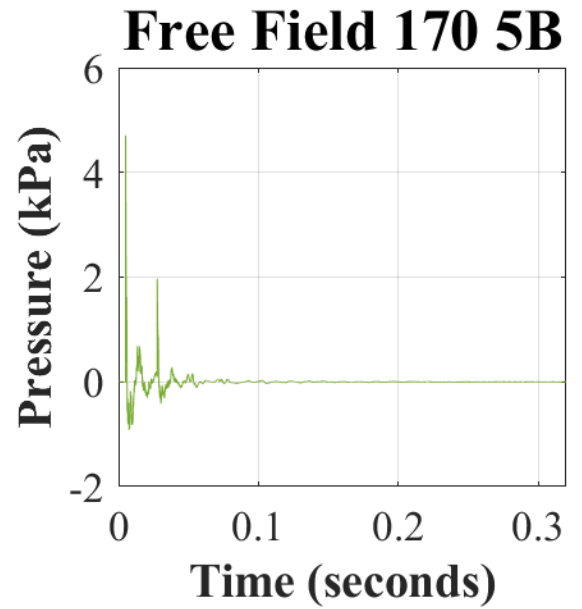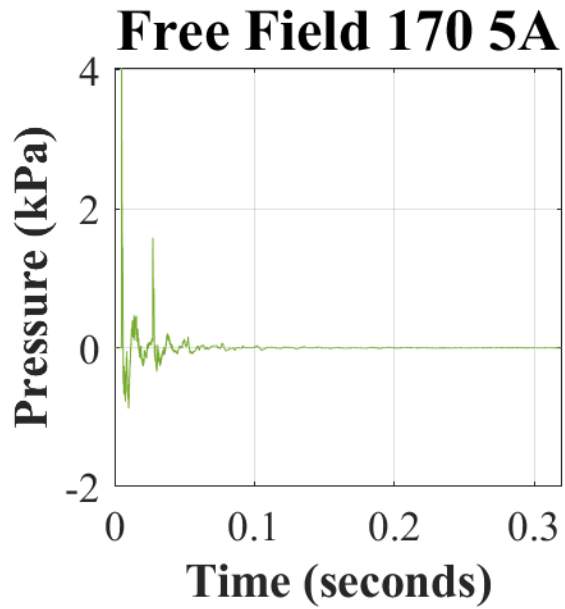


Note. The naming convention for all free-field waveforms is “Free Field LvL Nn”, where ‘Free Field’ indicates that the recording was obtained using the PCB reference microphone, ‘LvL’ is the nominal test level (170 dB), ‘N’ is the device sample number (1 to 5), and ‘n’ is the device trial (i.e., A or B).

Appendix J. Recorded occluded (closed-ear) waveforms (in kilopascals [kPa]) over time (in seconds [s]) in response to 150 dBp with the Supreme[®] Pro-X (MAX).

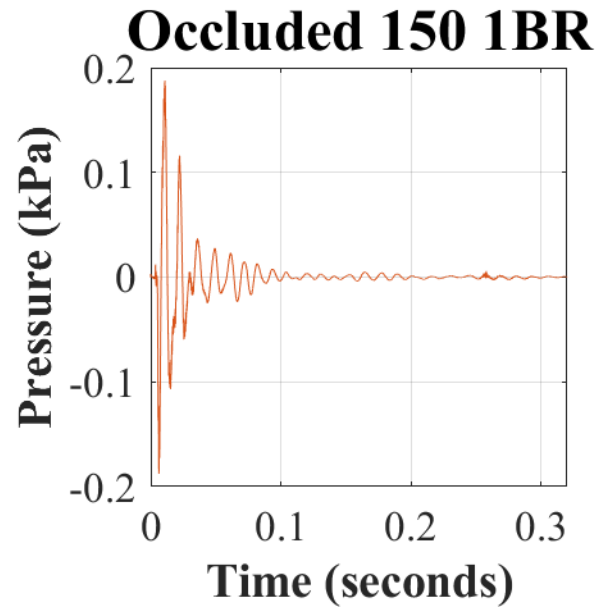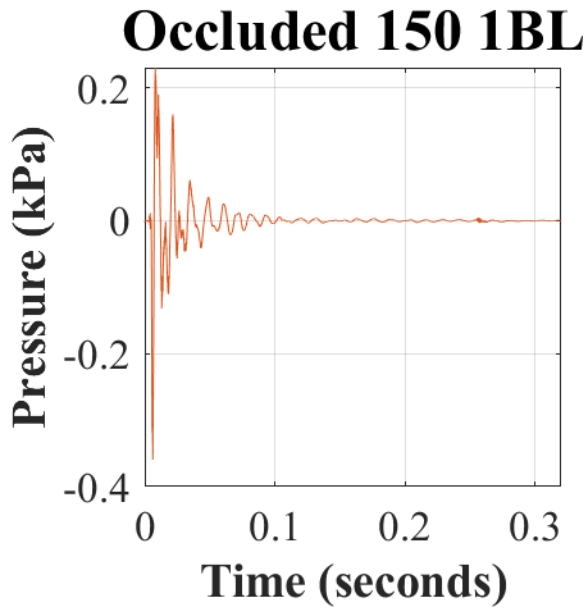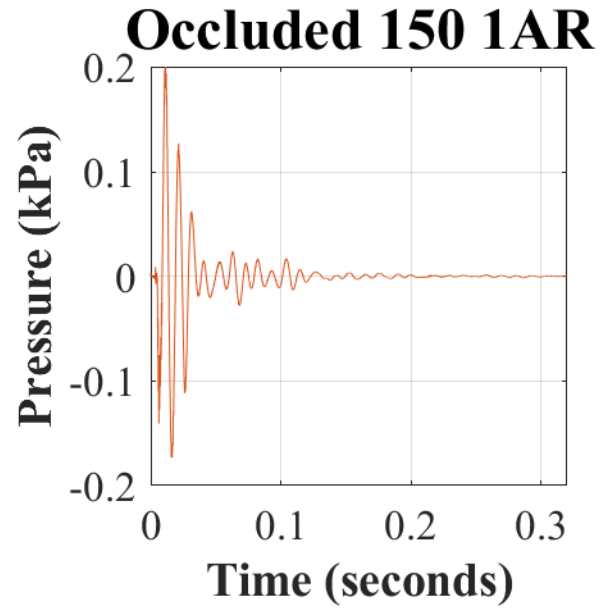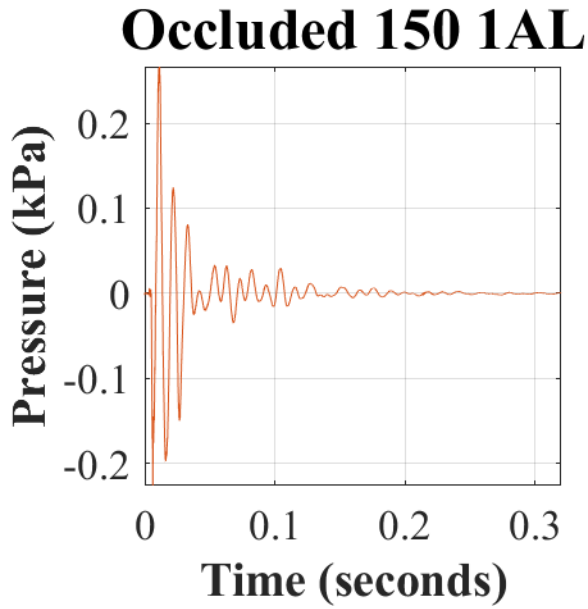


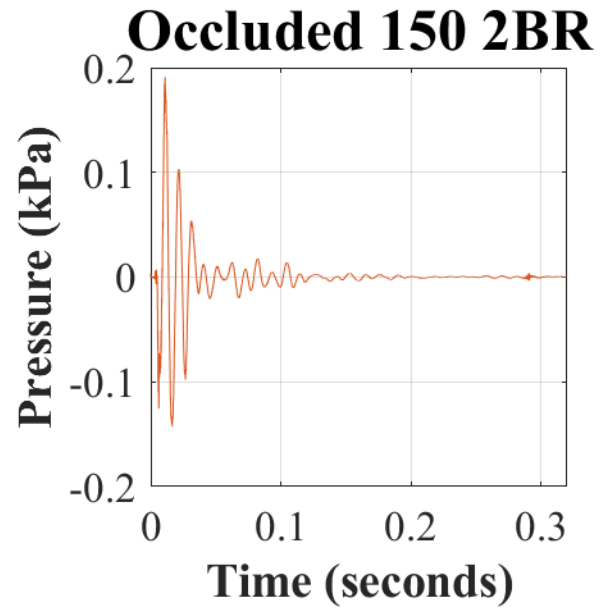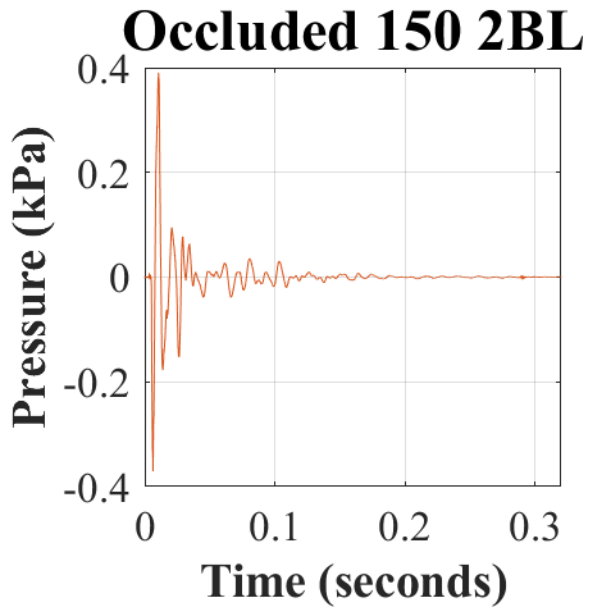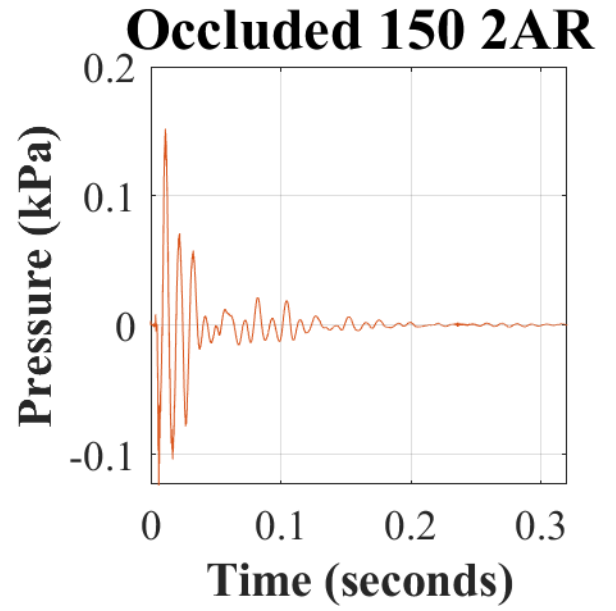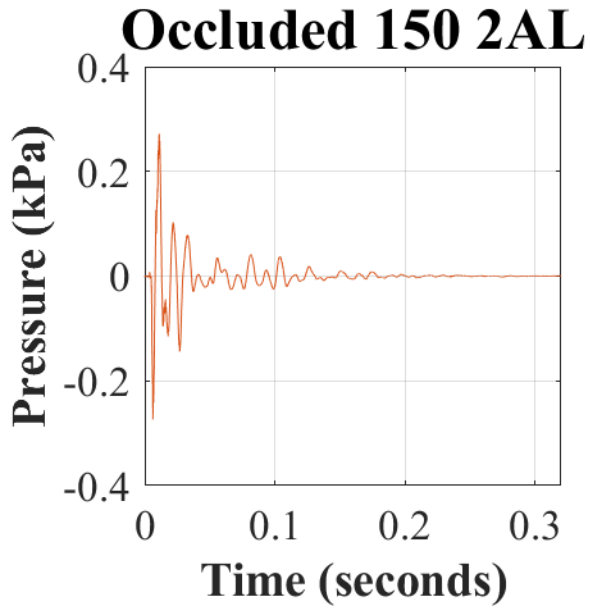


Occluded 150 3AL

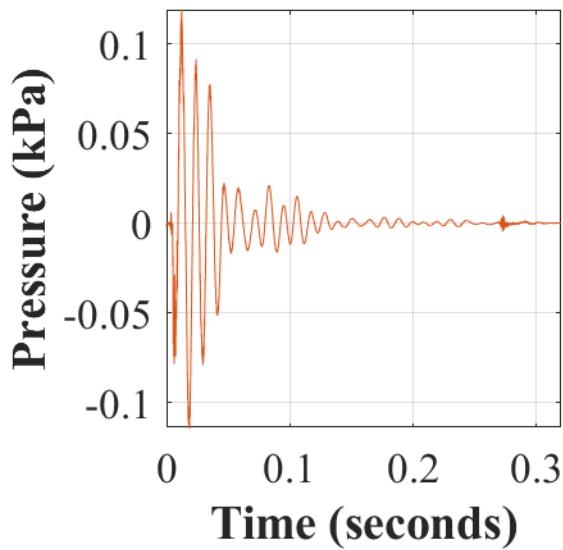


Occluded 150 3AR

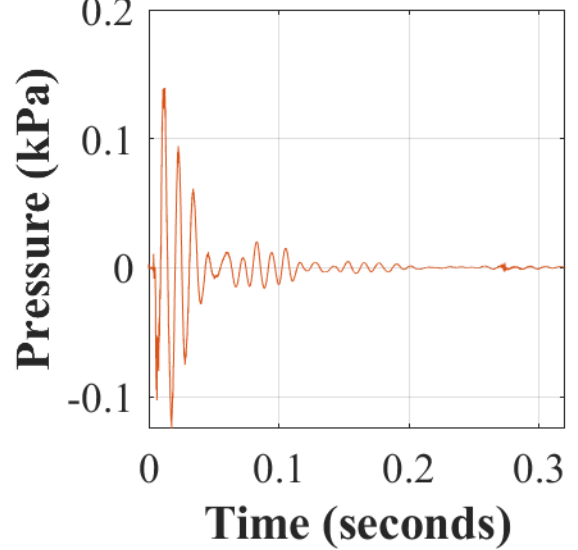


Occluded 150 3BL

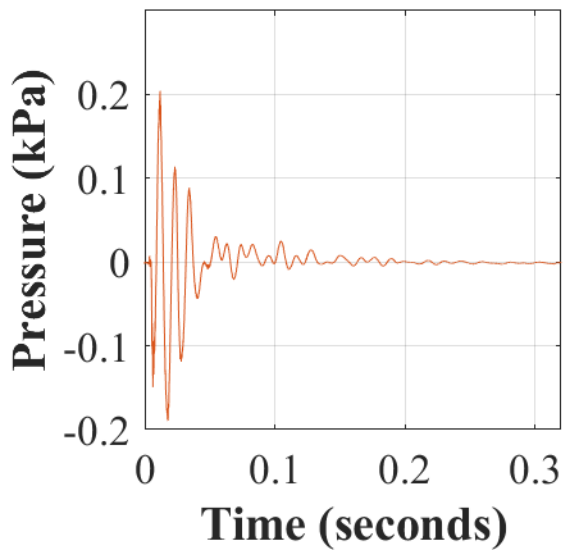


Occluded 150 3BR

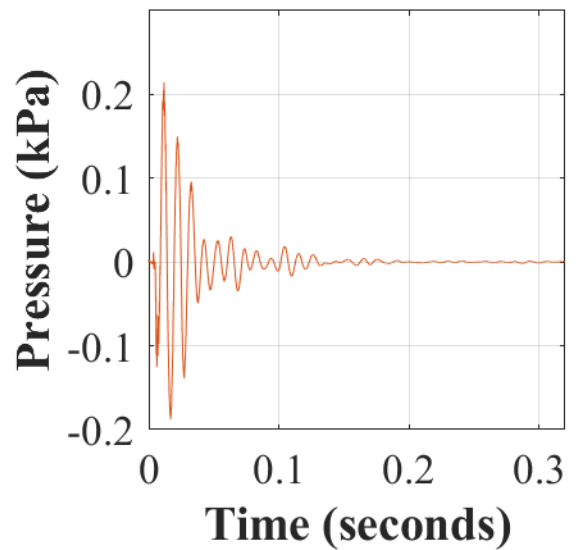


Occluded 150 4AL

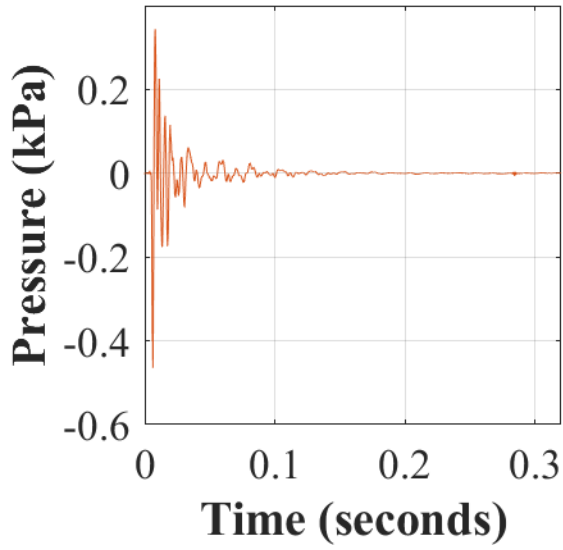


Occluded 150 4AR




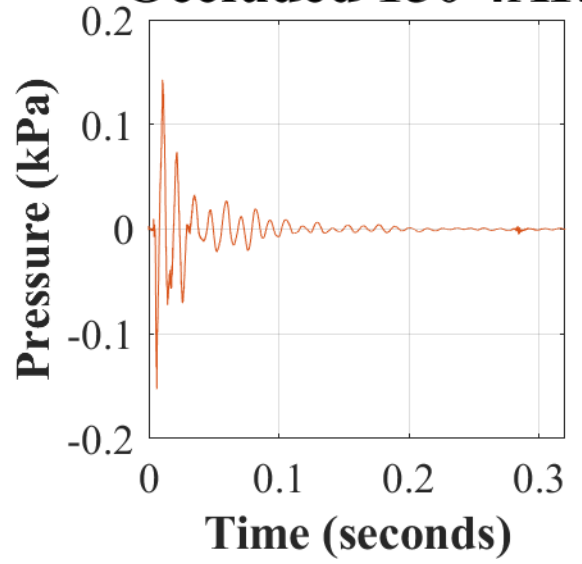


Occluded 150 4BL

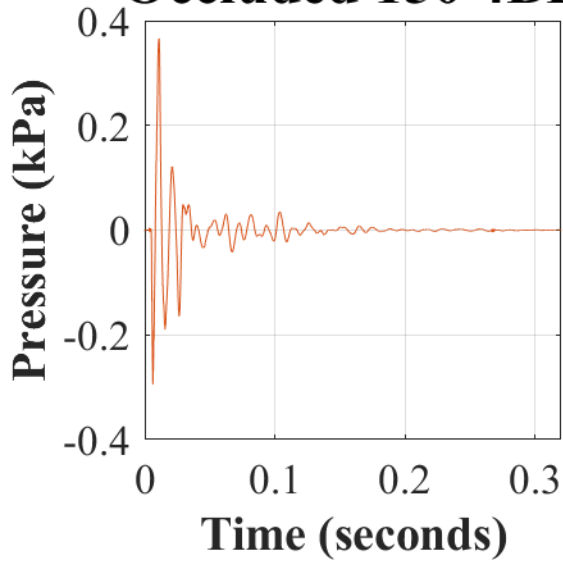





Occluded 150 4BR




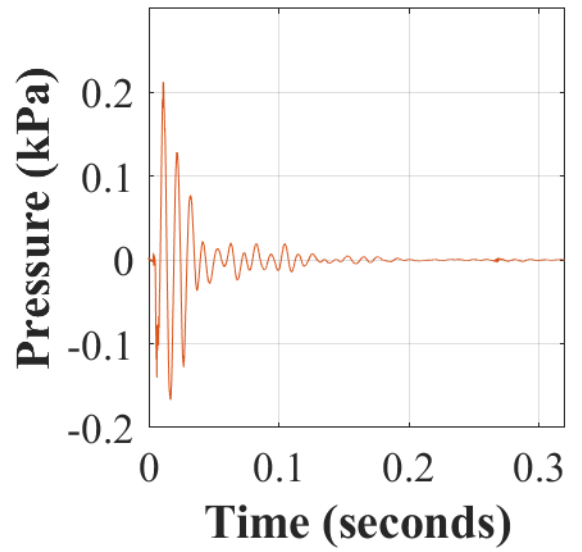


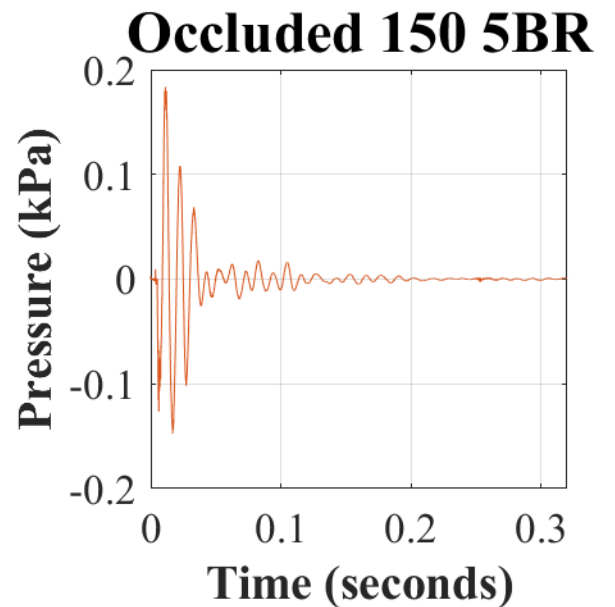
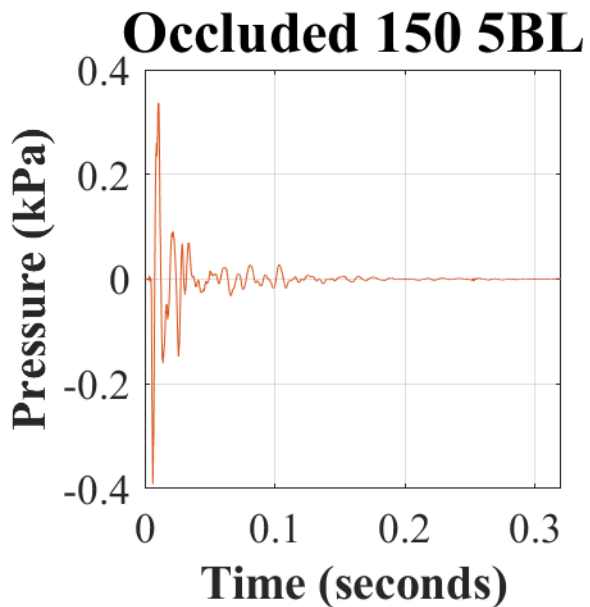
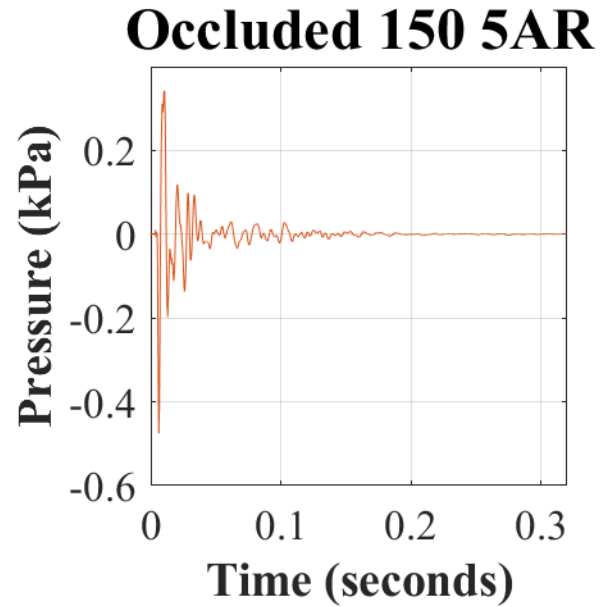
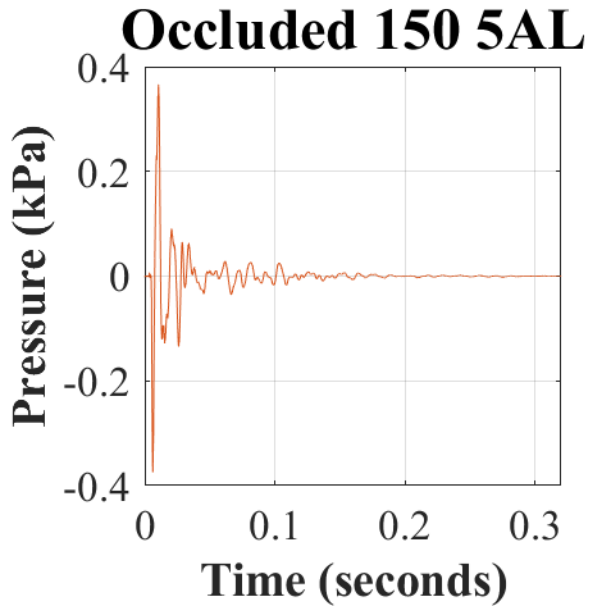






Note. The naming convention for all occluded waveforms is “Occluded LvL NnX”, where ‘Occluded’ is the test condition (i.e., ATF has the HPD donned), ‘LvL’ is the nominal test level (i.e., 150, 160 or 170 dBp), ‘N’ is the sample number (i.e., 1 to 5) of the device tested, ‘n’ is the trial (i.e., A or B) indicating HPD fit (i.e., first or second, respectively), and ‘X’ indicates from what ATF microphone the recording is from (i.e., right [R] or left [L] pinnae).





Appendix K. Estimated unoccluded (open-ear) waveforms (in kilopascals [kPa]) over time (in seconds [s]) in response to 150 dBp with the Supreme[®] Pro-X (MAX).

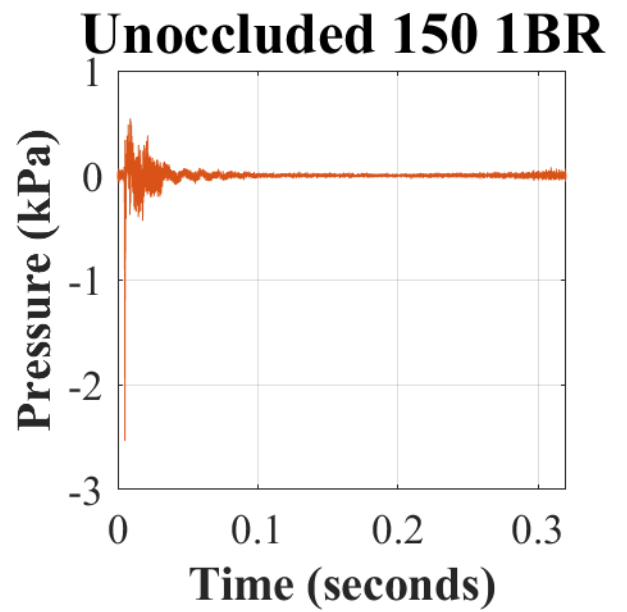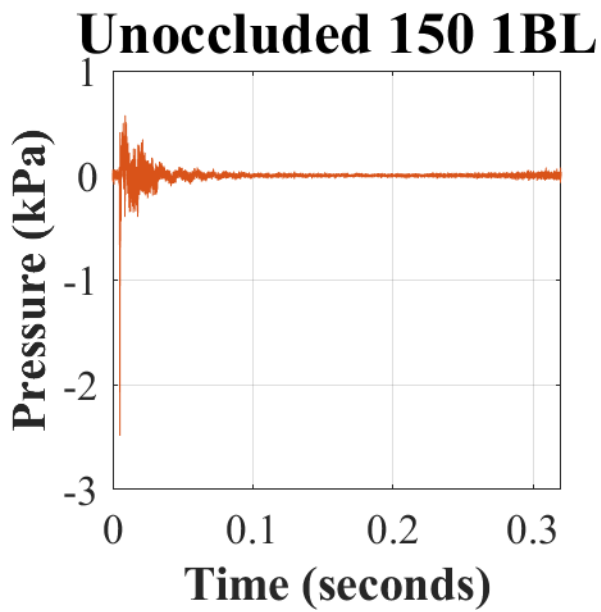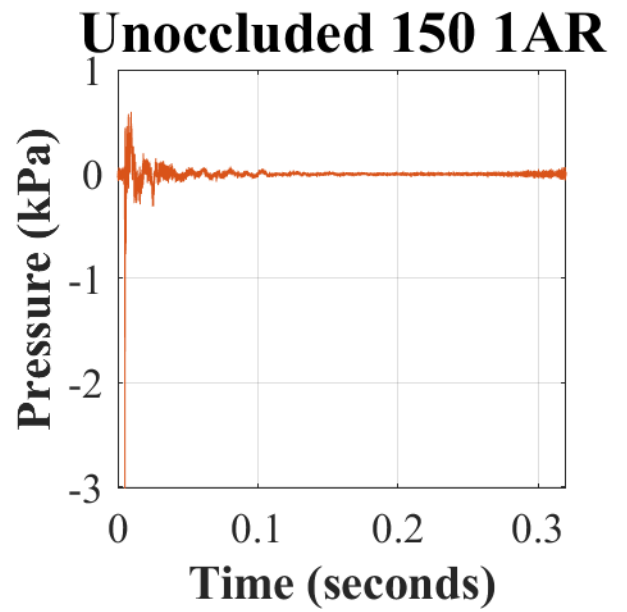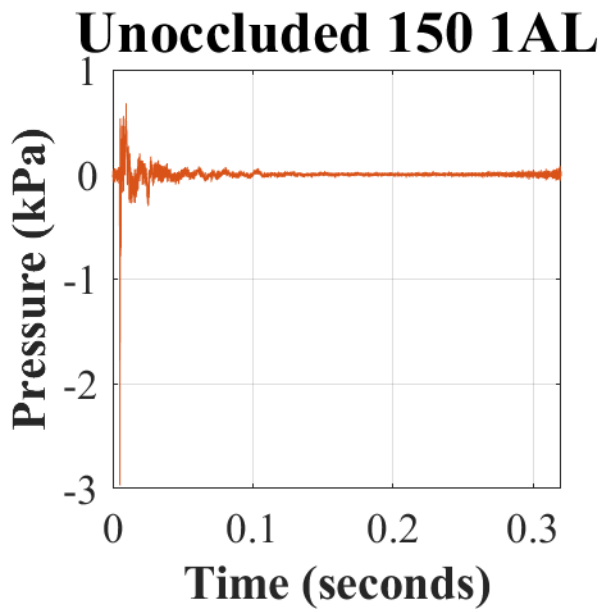

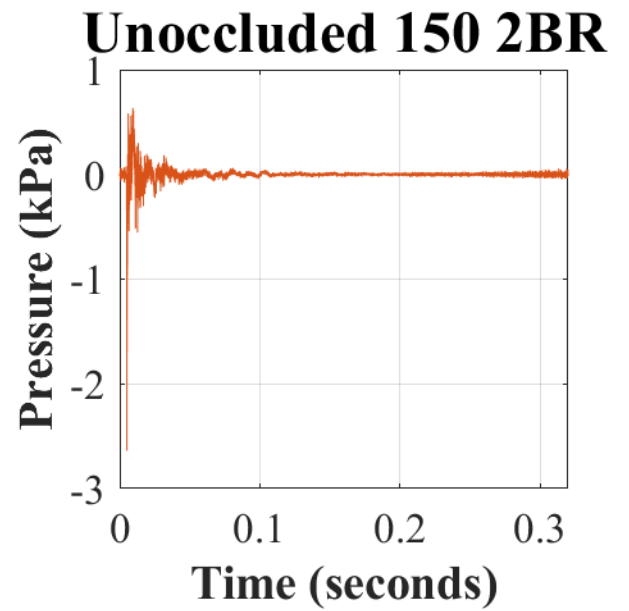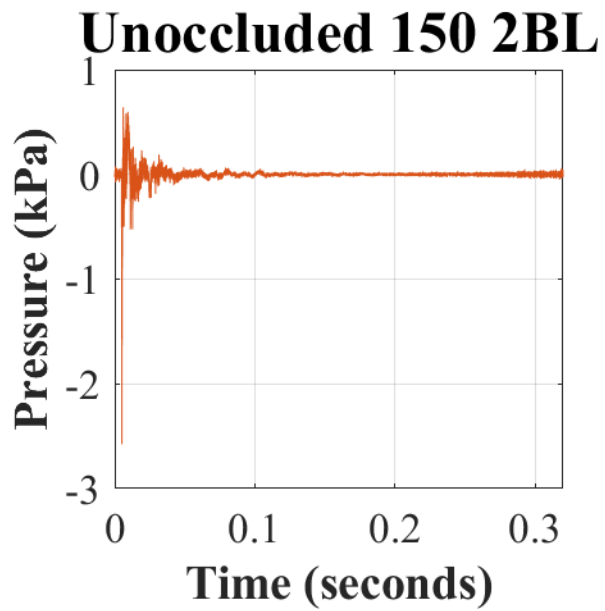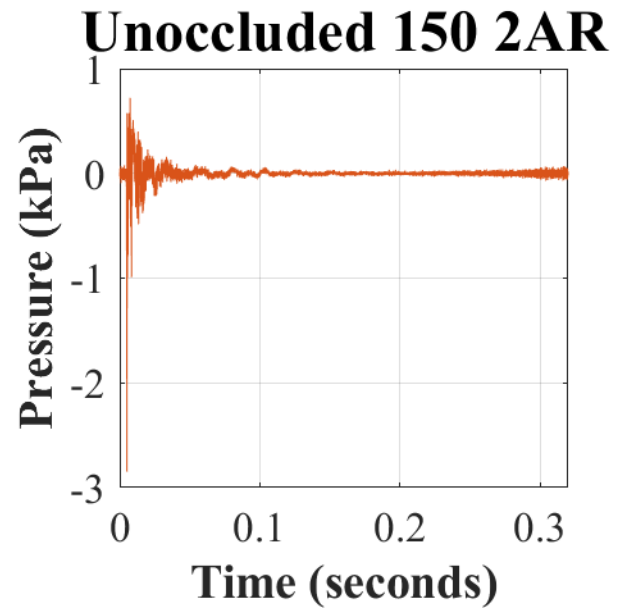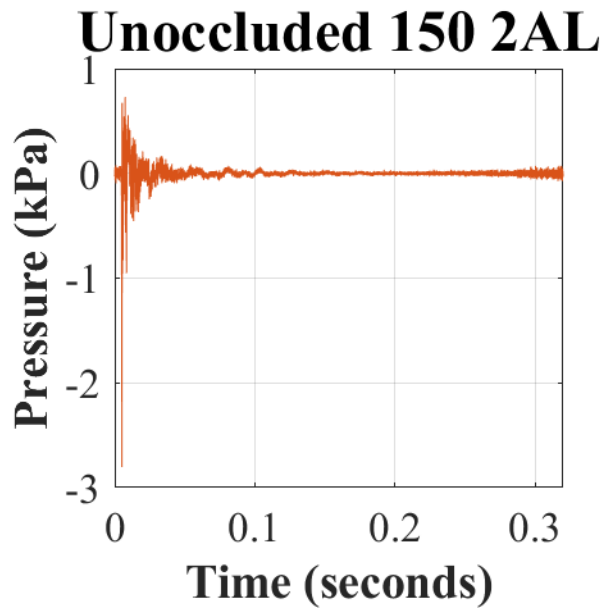

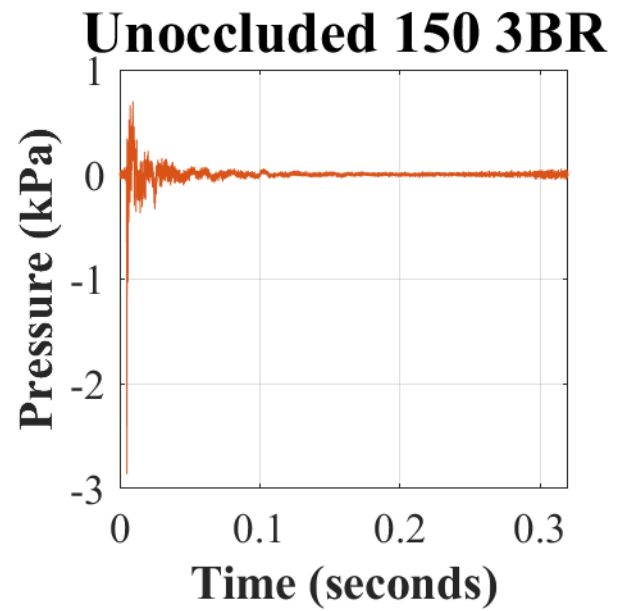
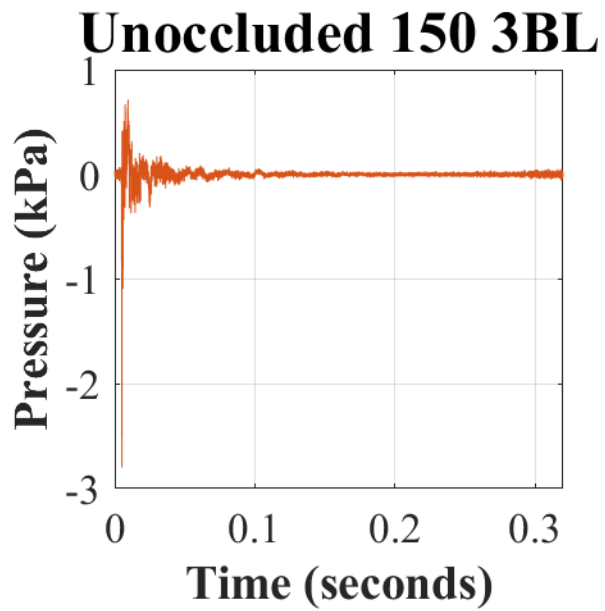
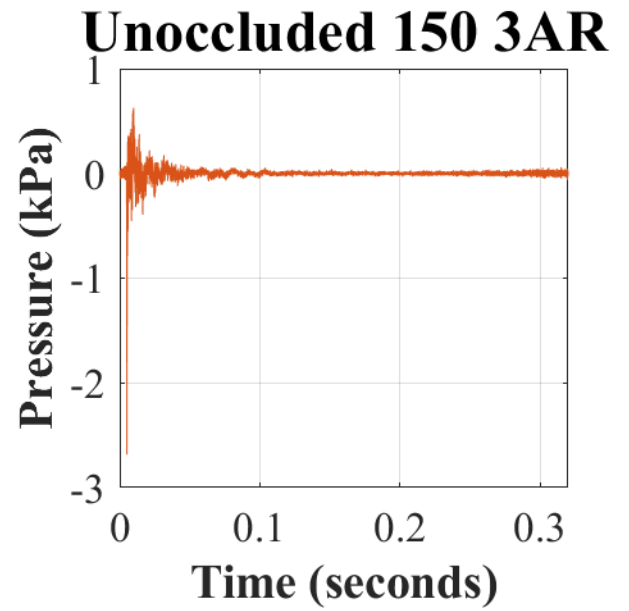
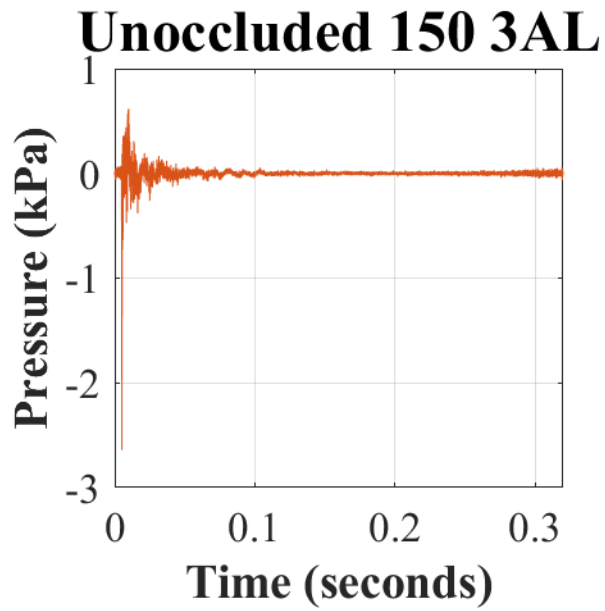


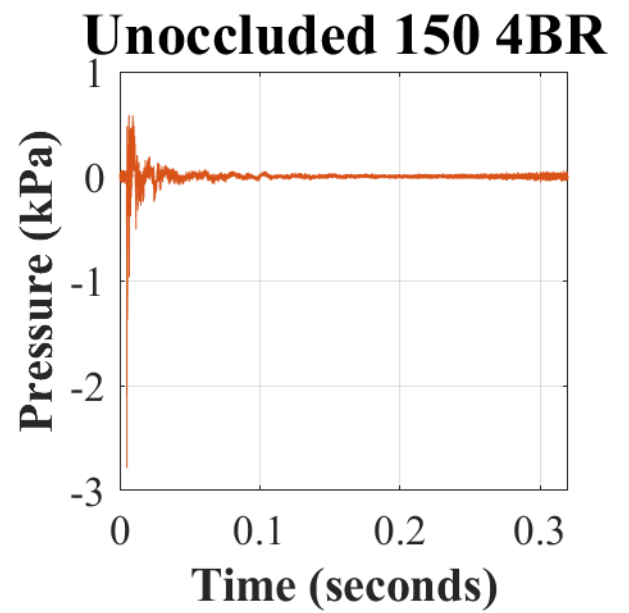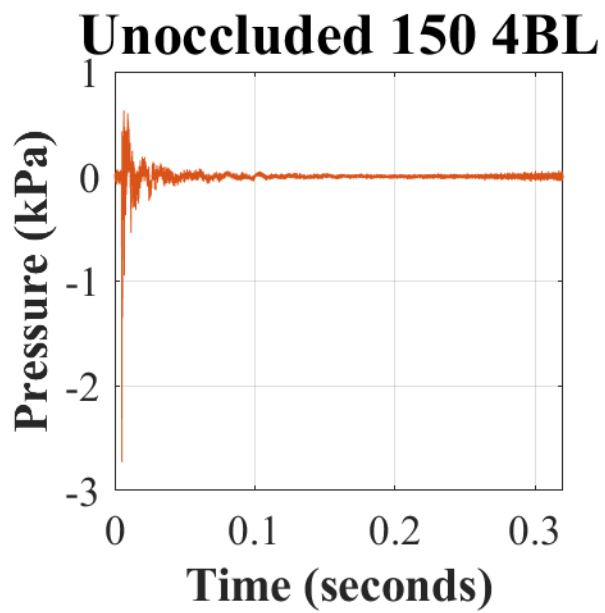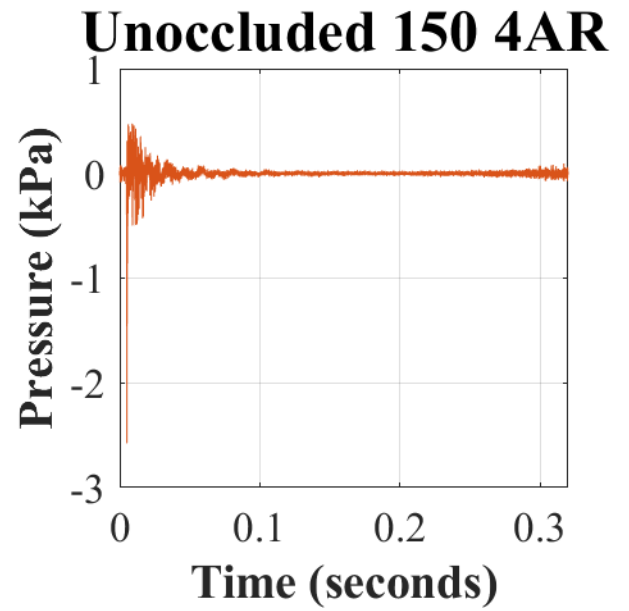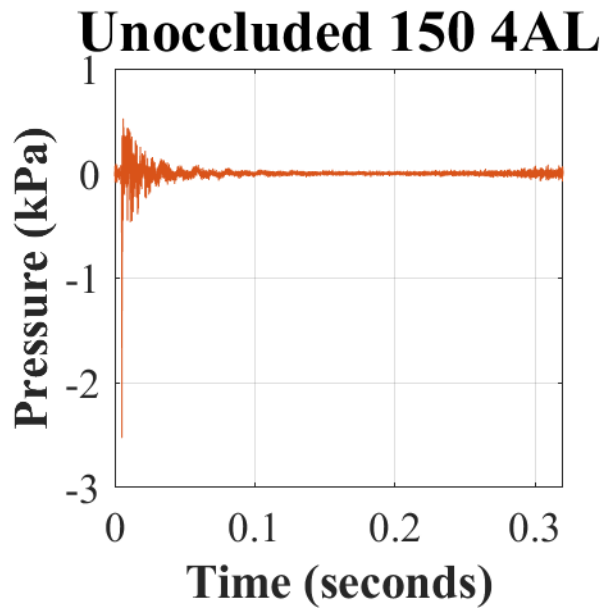

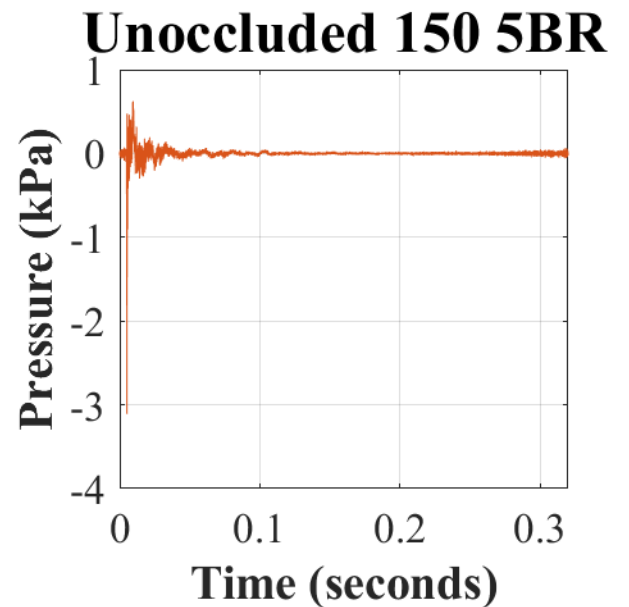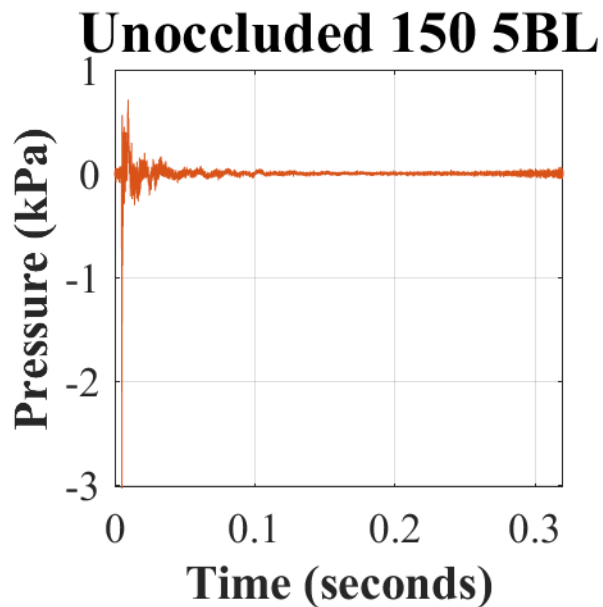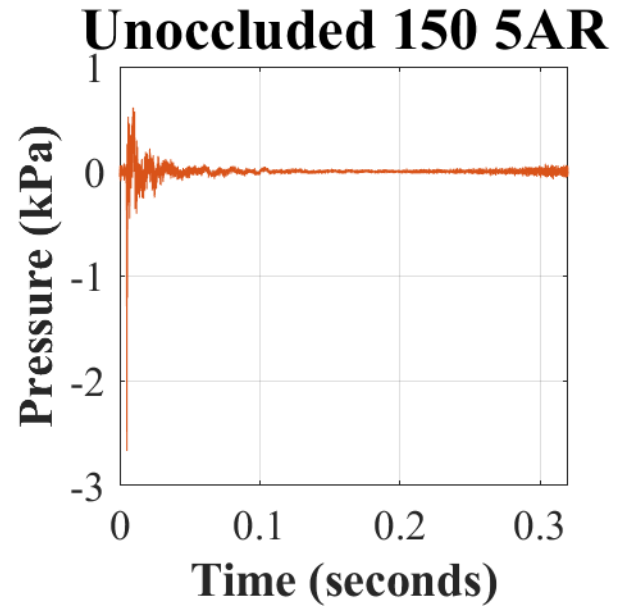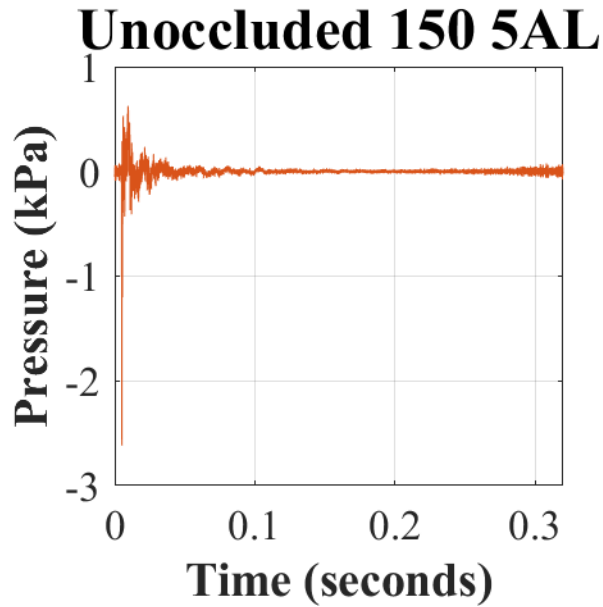


Note. The naming convention for all unoccluded waveforms is “Unoccluded LvL NnX”, where ‘Unoccluded’ is the test condition (i.e., ATF has the HPD doffed), ‘LvL’ is the nominal test level (i.e., 150, 160 or 170 dBp), ‘N’ is the sample number (i.e., 1 to 5) of the device tested, ‘n’ is the trial (i.e., A or B) indicating HPD fit (i.e., first or second, respectively), and ‘X’ indicates from what ATF microphone the recording is from (i.e., right [R] or left [L] pinnae).


Appendix L. Recorded occluded (closed-ear) waveforms (in kilopascals [kPa]) over time (in seconds [s]) in response to 160 dBp with the Supreme[®] Pro-X (MAX).

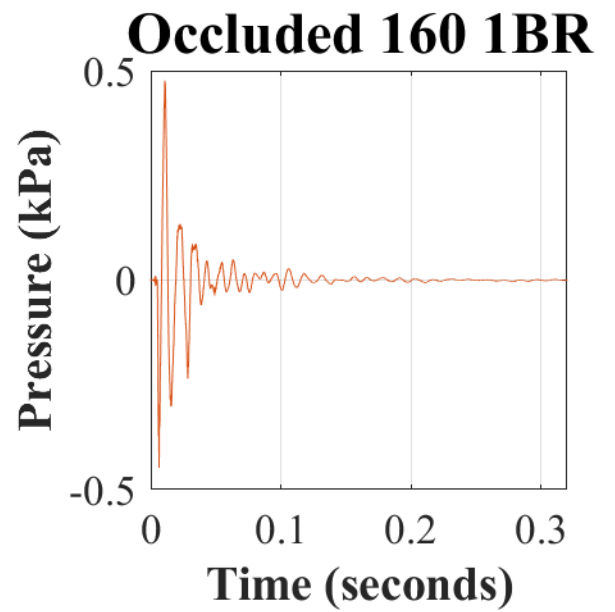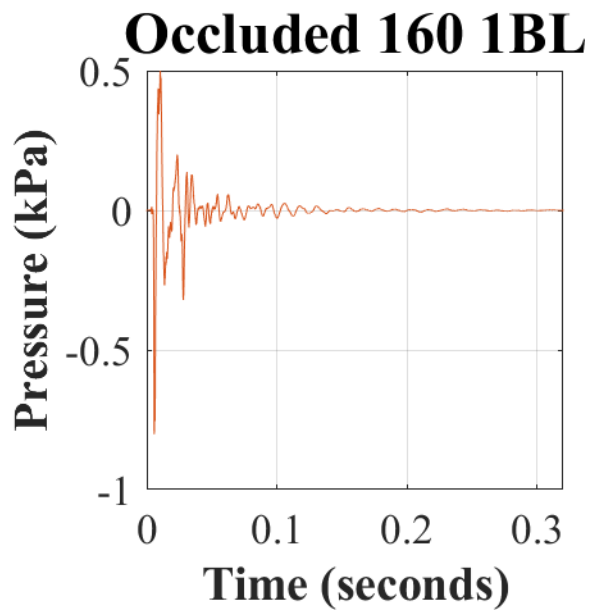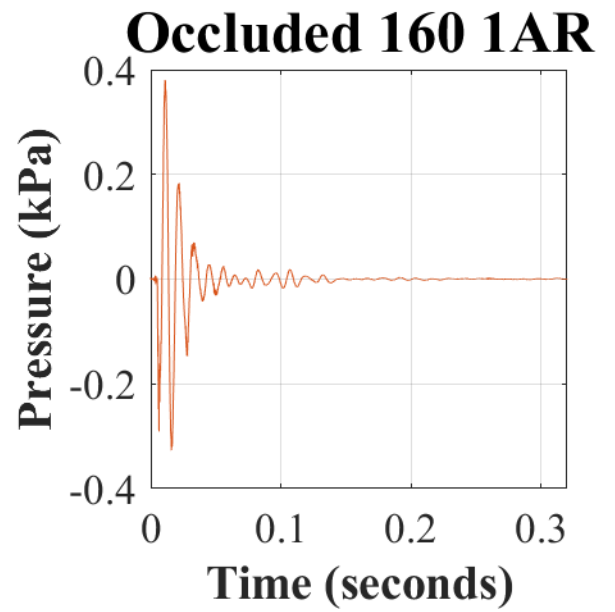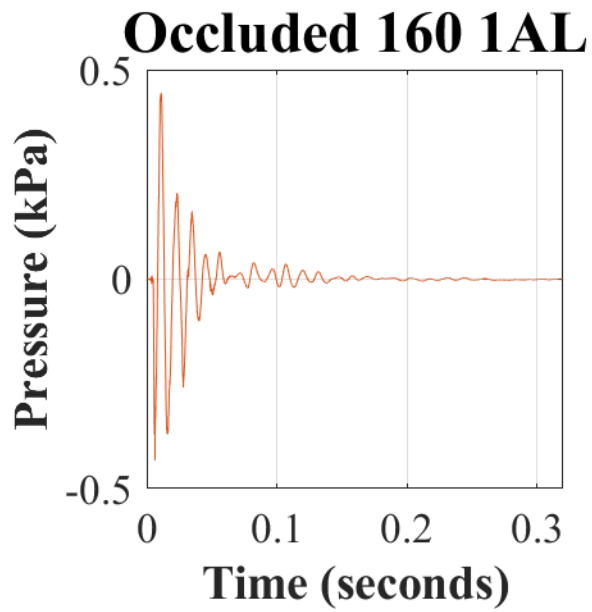


Occluded 160 2AL

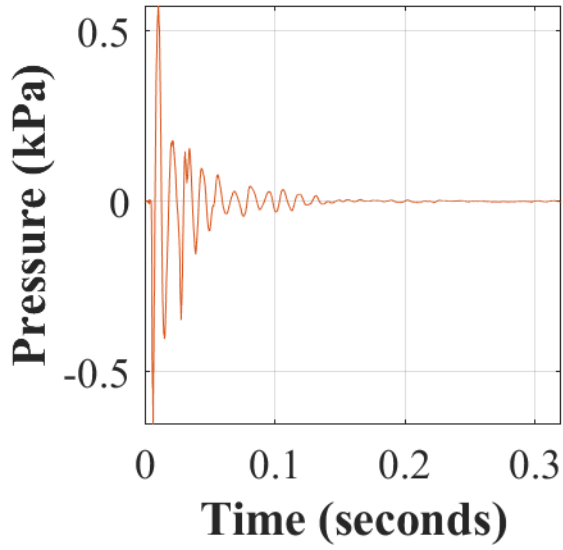


Occluded 160 2AR




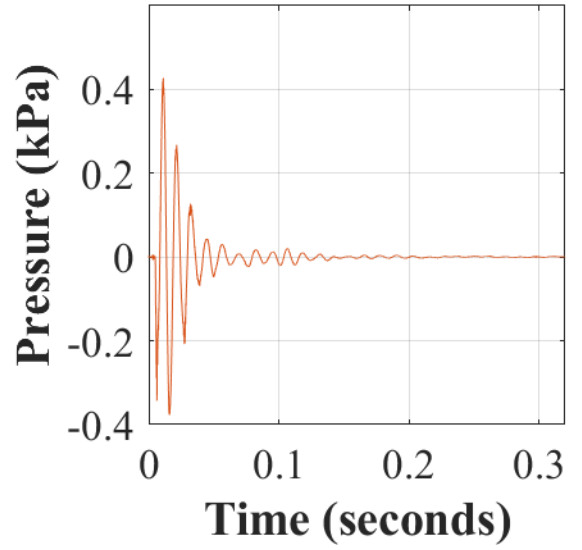






Occluded 160 2BL




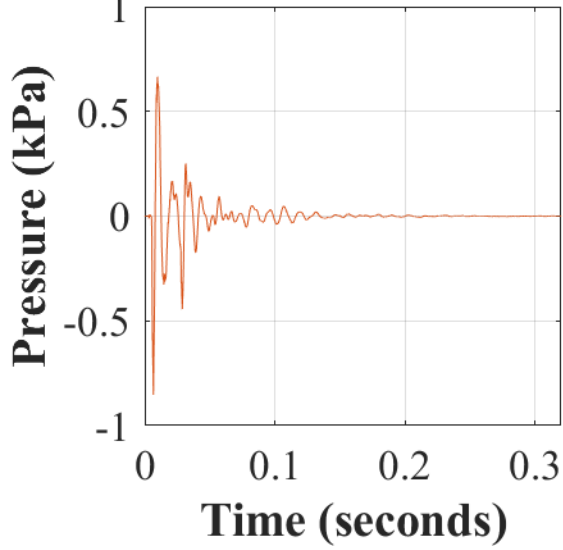


Occluded 160 2BR

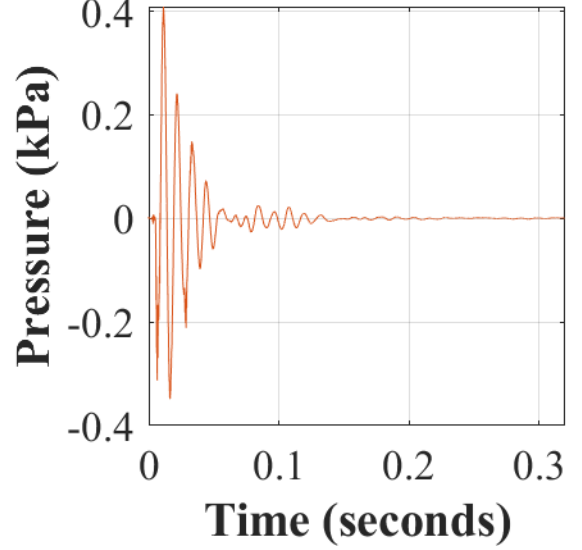

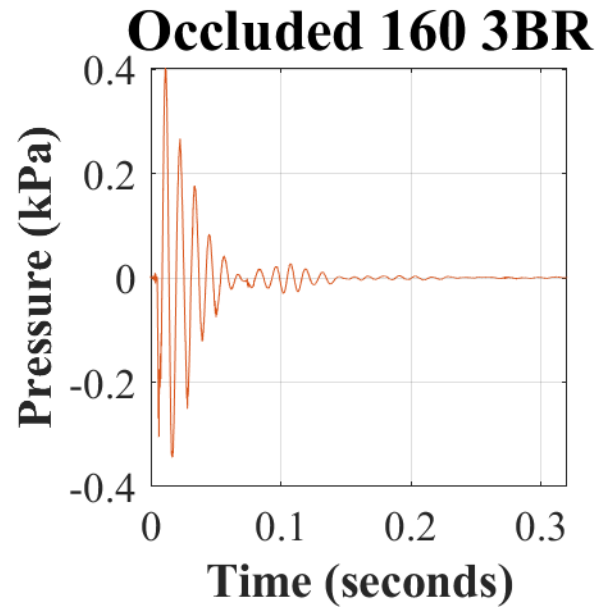
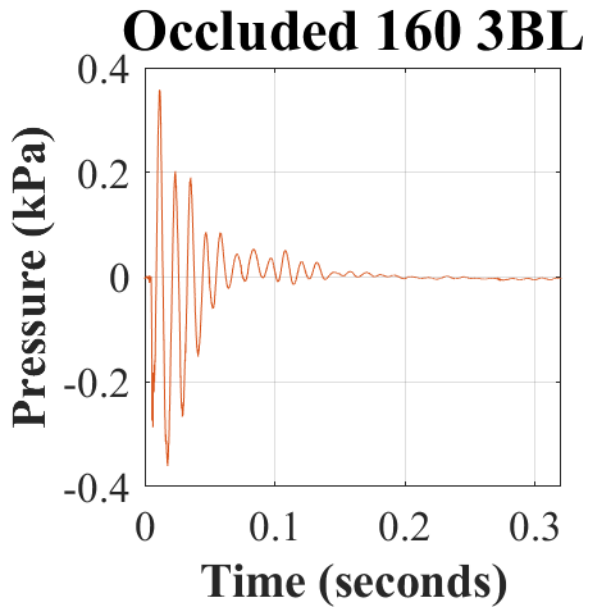
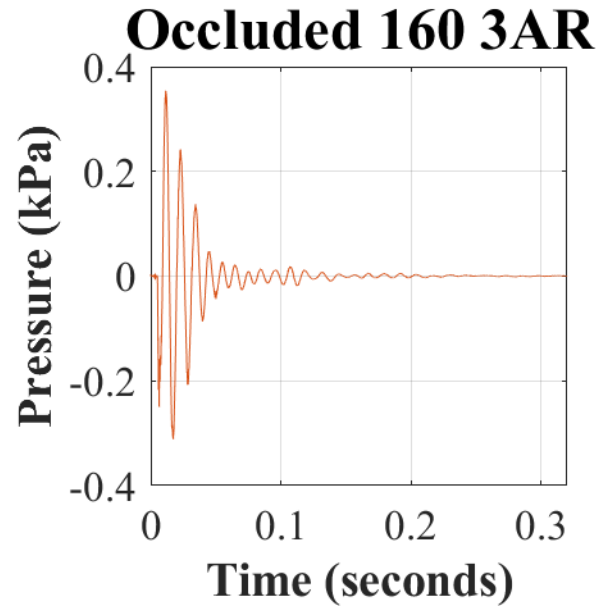
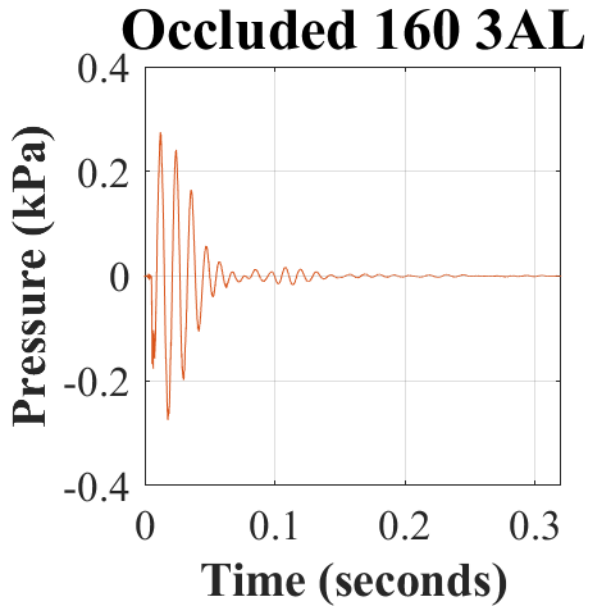


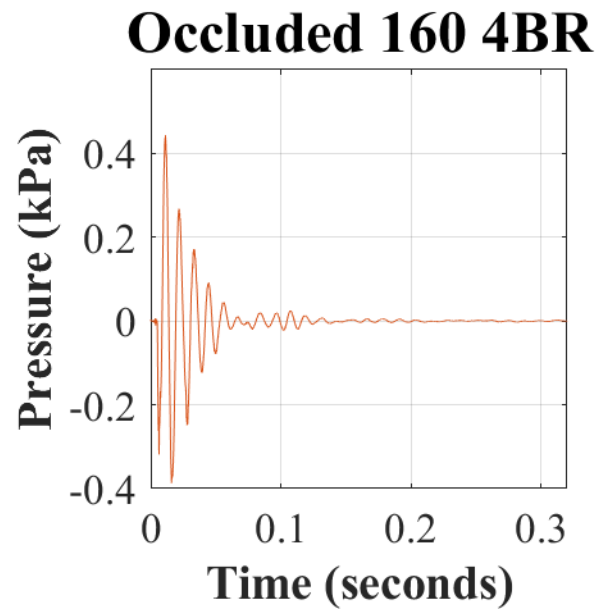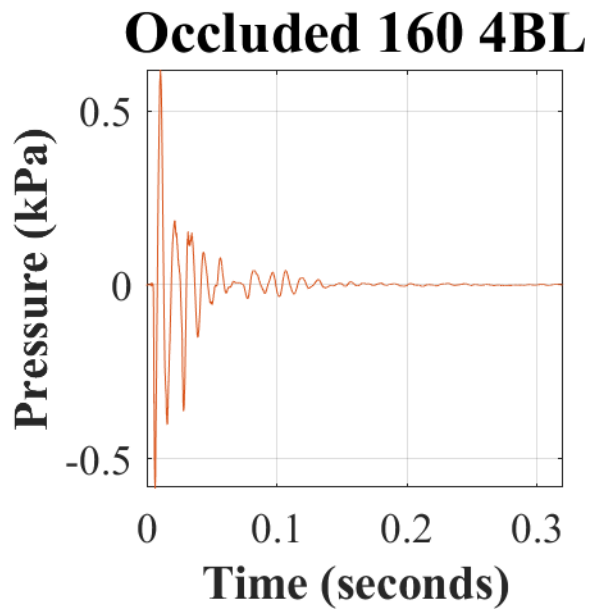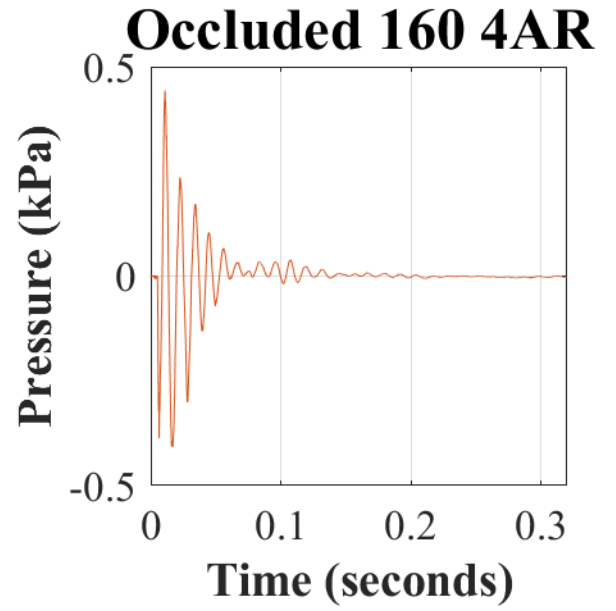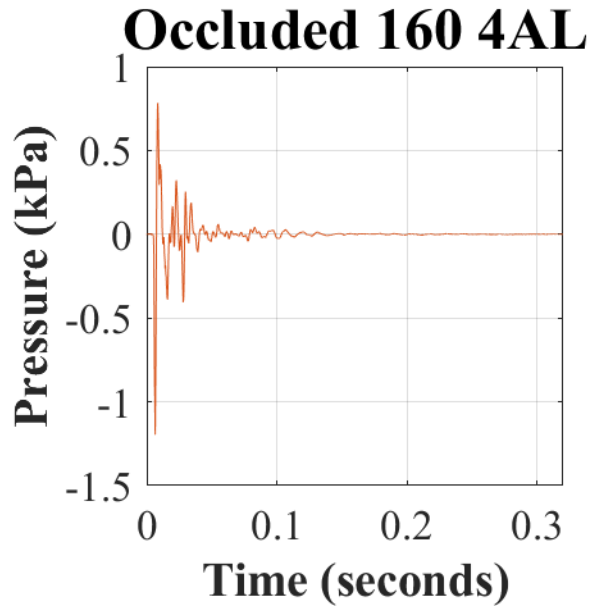

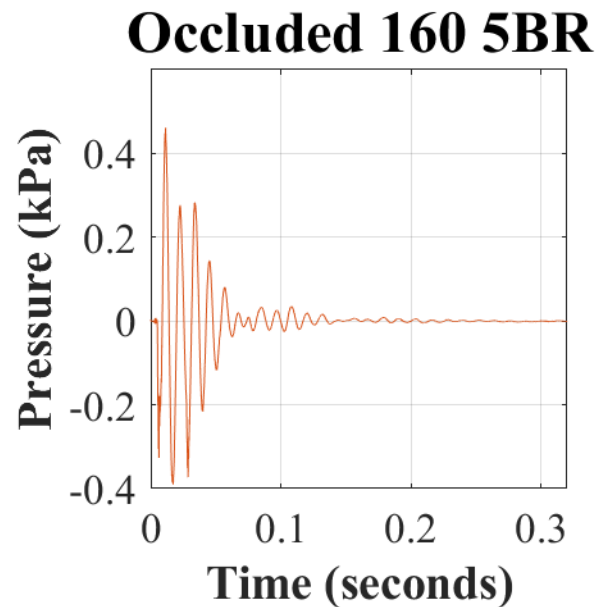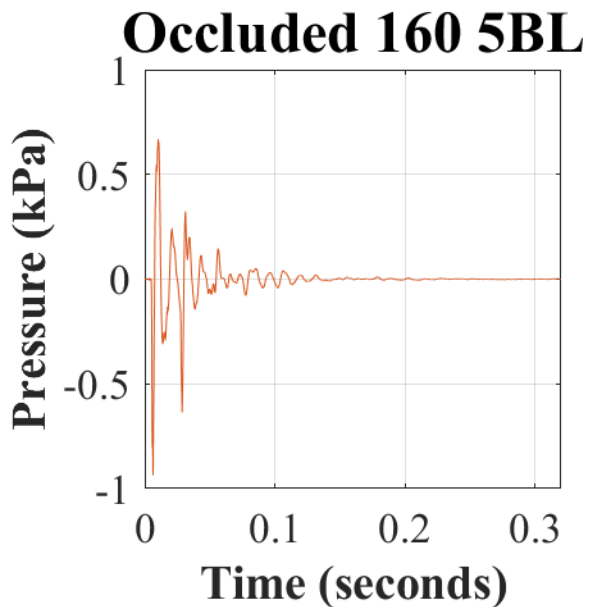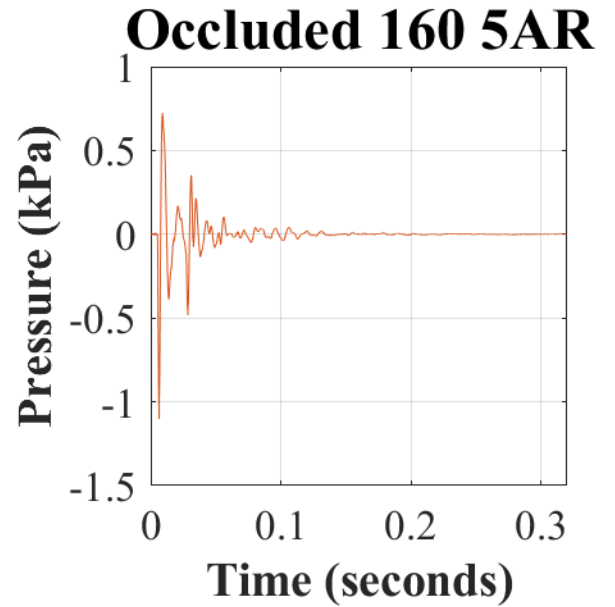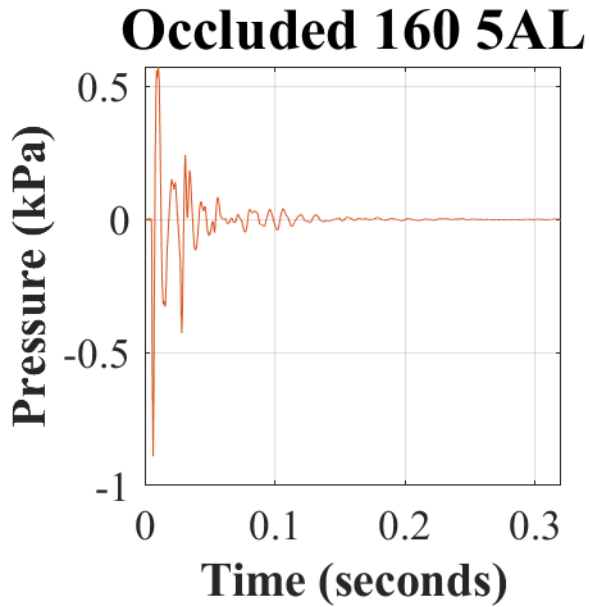


Note. The naming convention for all occluded waveforms is “Occluded LvL NnX”, where ‘Occluded’ is the test condition (i.e., ATF has the HPD donned), ‘LvL’ is the nominal test level (i.e., 150, 160 or 170 dBp), ‘N’ is the sample number (i.e., 1 to 5) of the device tested, ‘n’ is the trial (i.e., A or B) indicating HPD fit (i.e., first or second, respectively), and ‘X’ indicates from what ATF microphone the recording is from (i.e., right [R] or left [L] pinnae).


Appendix M. Estimated unoccluded (open-ear) waveforms (in kilopascals [kPa]) over time (in seconds [s]) in response to 160 dBp with the Supreme[®] Pro-X (MAX).

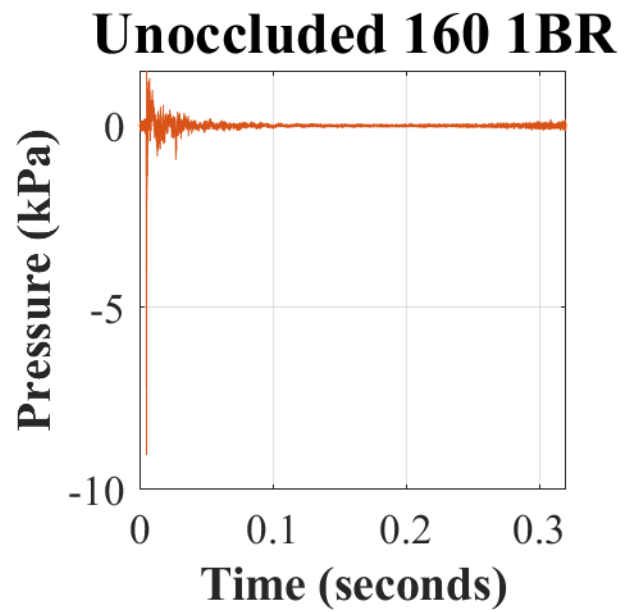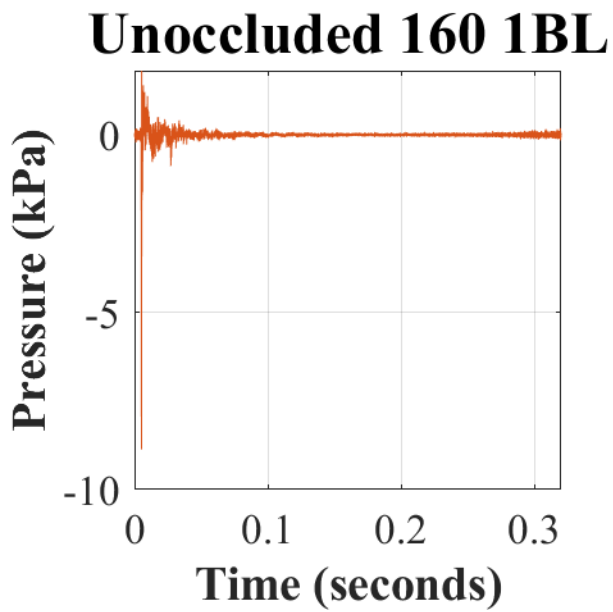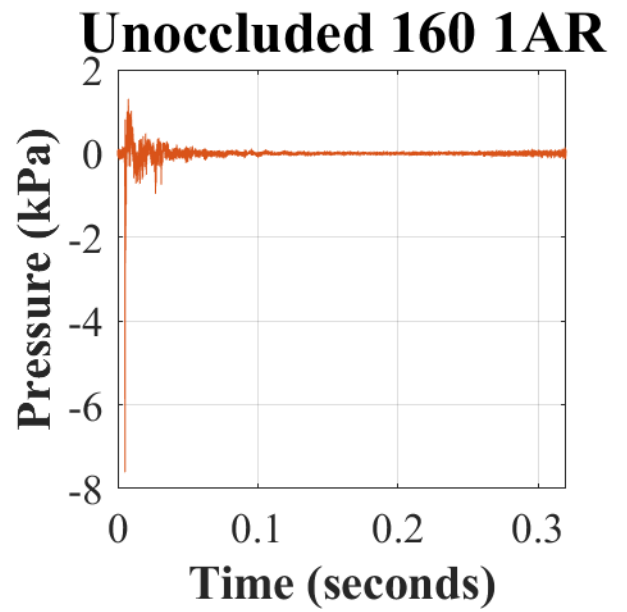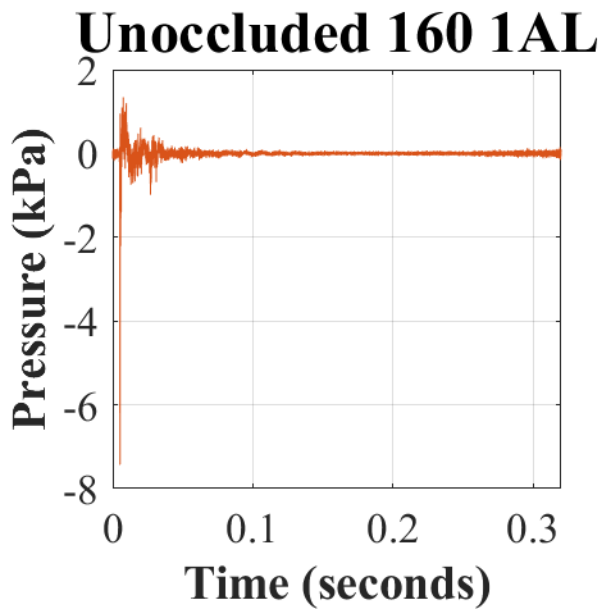


Unoccluded 160 2AL

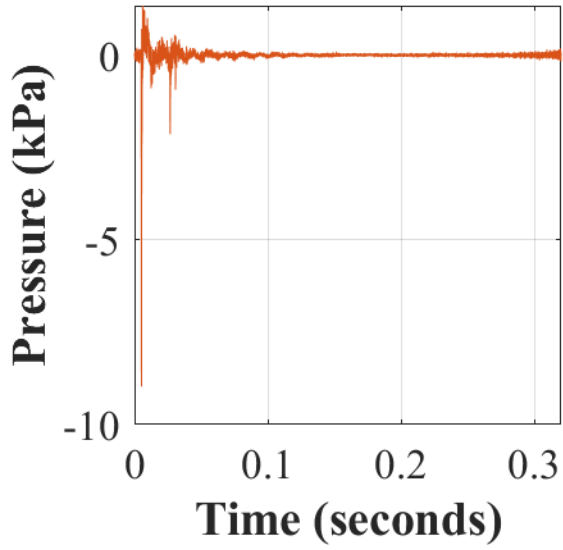


Unoccluded 160 2AR




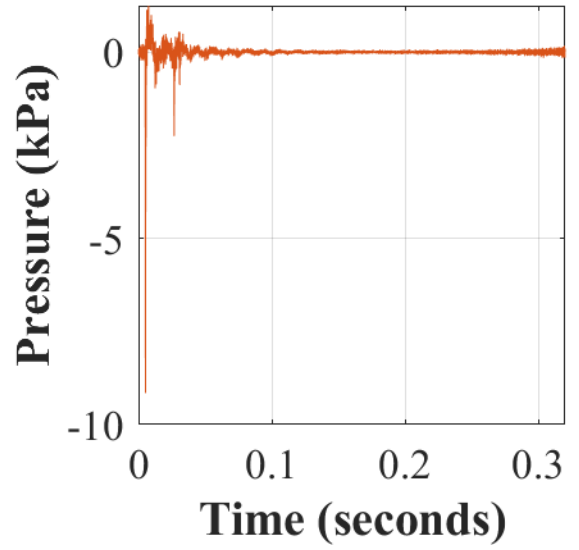






Unoccluded 160 2BL

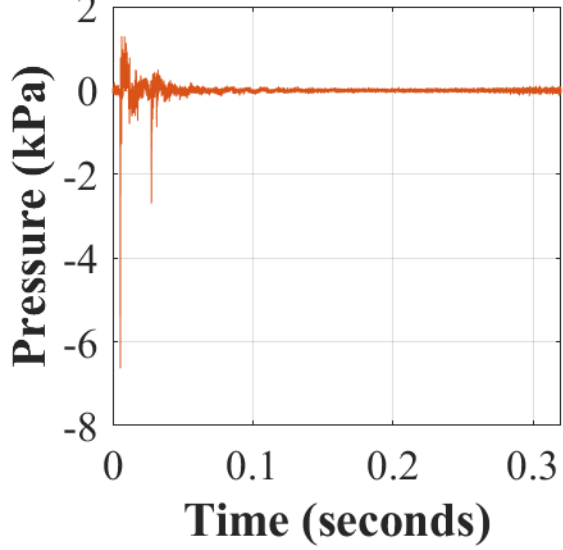


Unoccluded 160 2BR

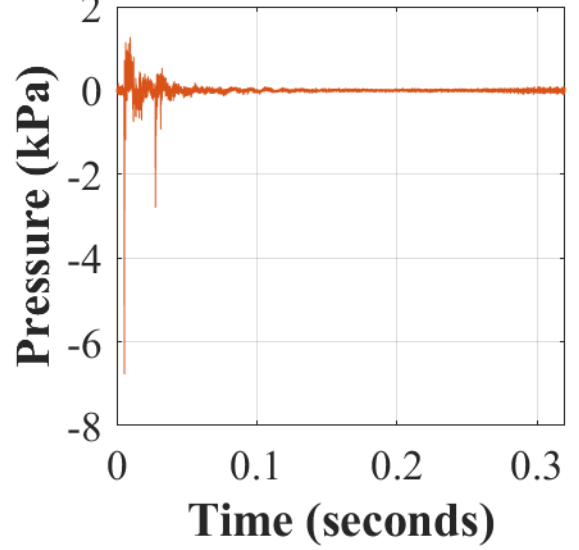

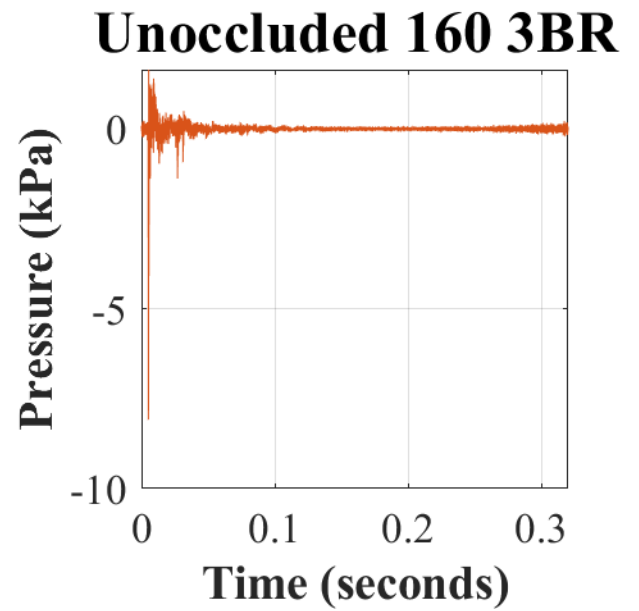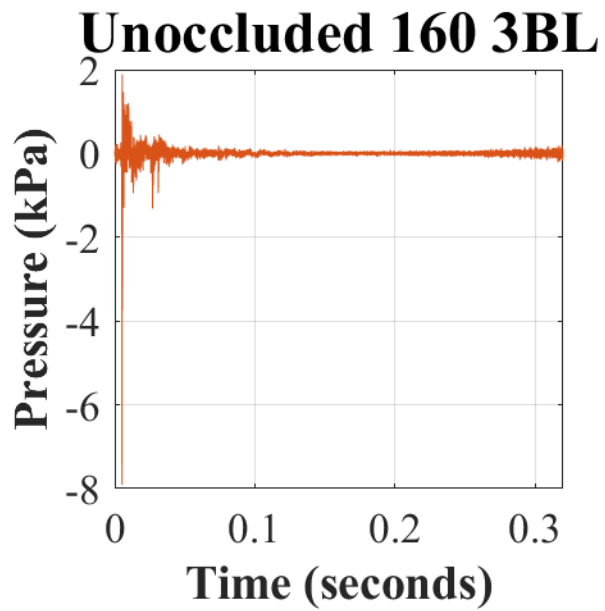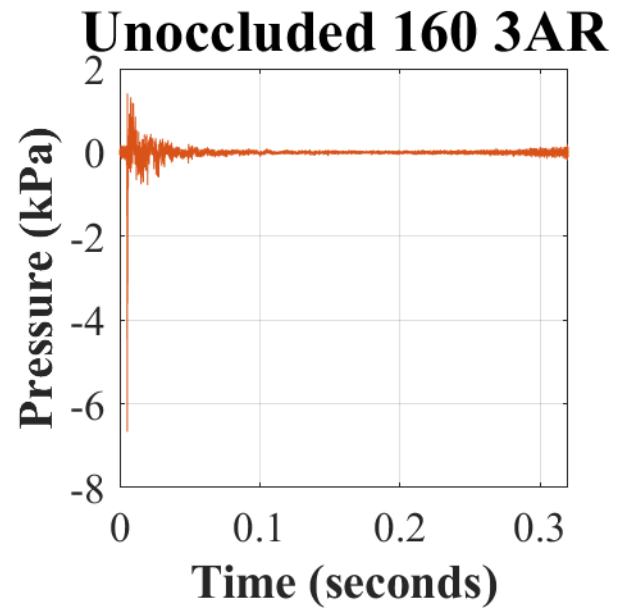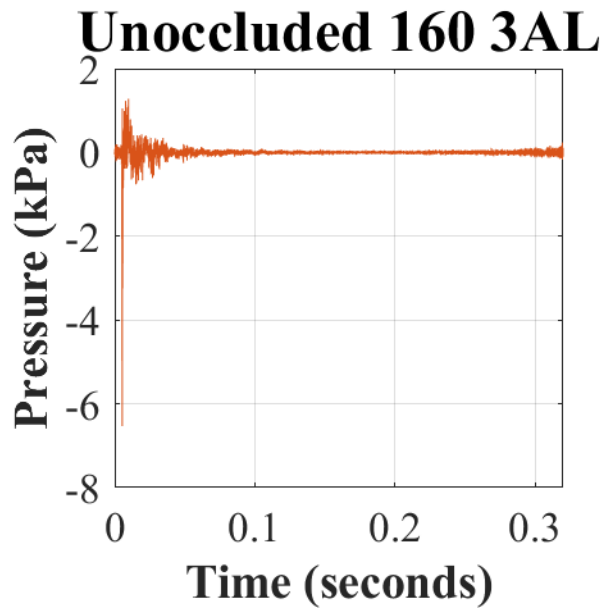


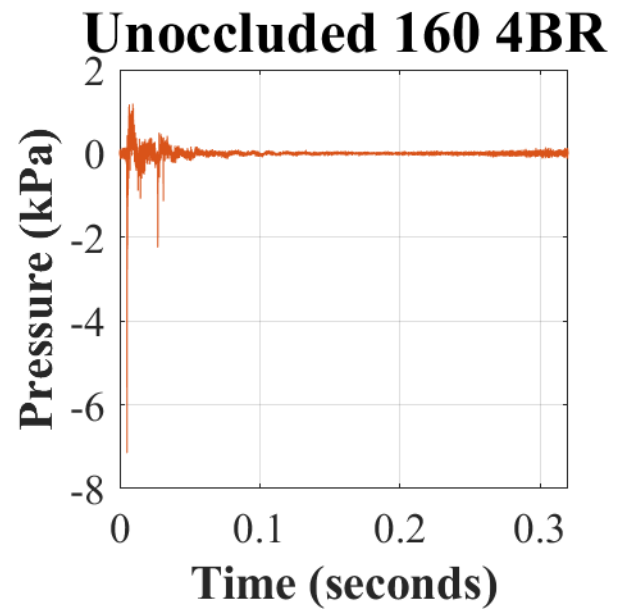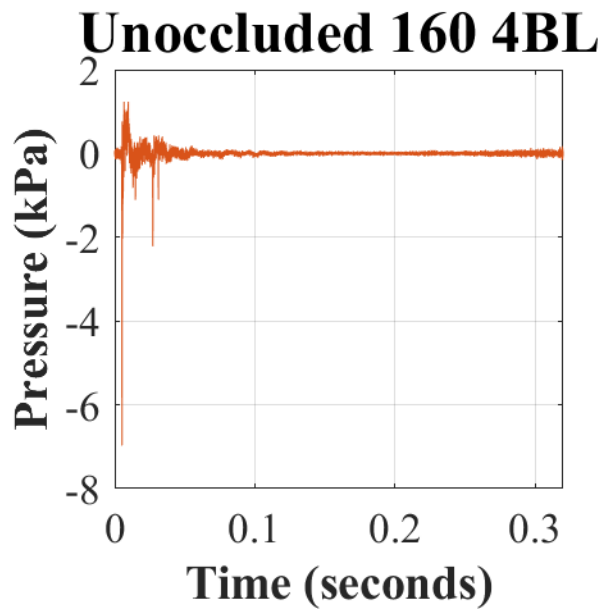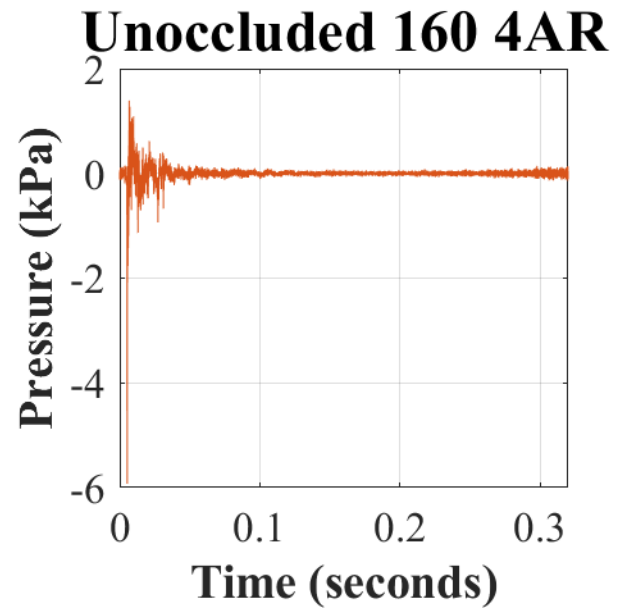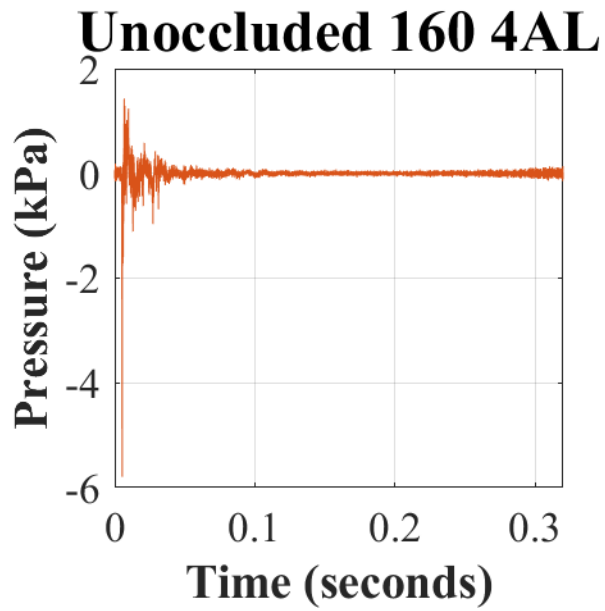


Unoccluded 160 5AL

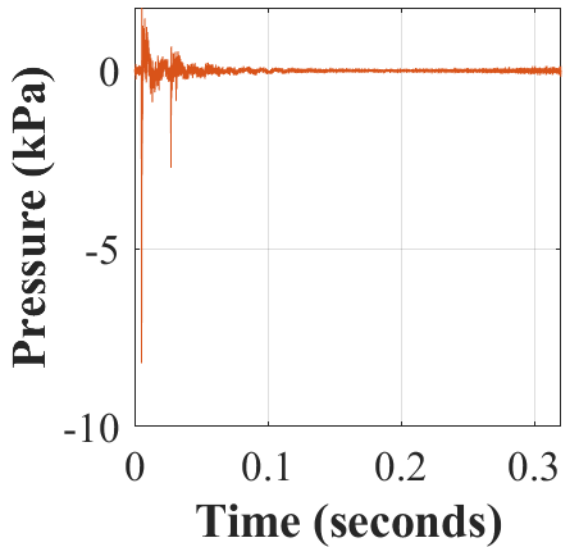


Unoccluded 160 5AR

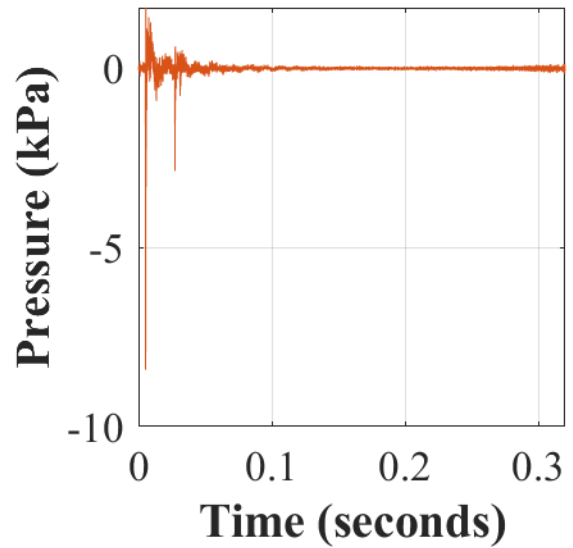

Unoccluded 160 5BL




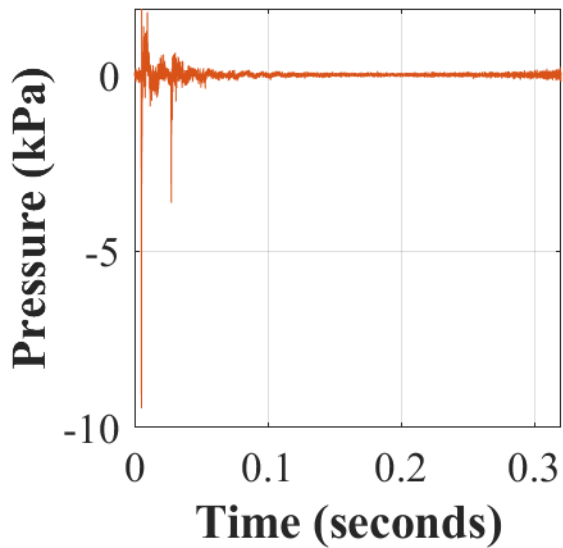






Unoccluded 160 5BR

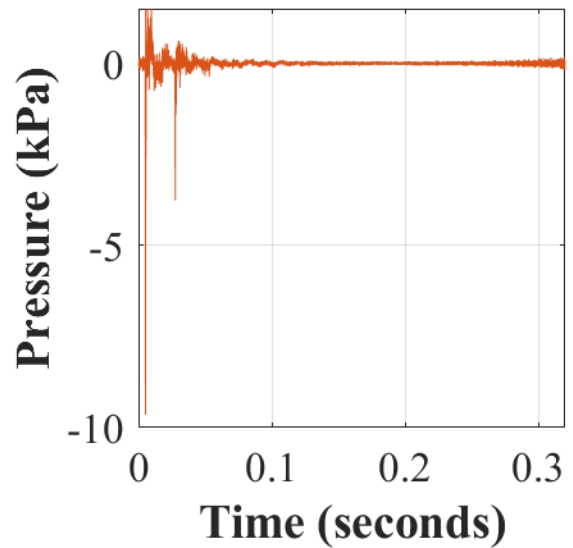


Note. The naming convention for all unoccluded waveforms is “Unoccluded LvL NnX”, where ‘Unoccluded’ is the test condition (i.e., ATF has the HPD doffed), ‘LvL’ is the nominal test level (i.e., 150, 160 or 170 dB), ‘N’ is the sample number (i.e., 1 to 5) of the device tested, ‘n’ is the trial (i.e., A or B) indicating HPD fit (i.e., first or second, respectively), and ‘X’ indicates from what ATF microphone the recording is from (i.e., right [R] or left [L] pinnae).

Appendix N. Recorded occluded (closed-ear) waveforms (in kilopascals [kPa]) over time (in seconds [s]) in response to 170 dBp with the Supreme[®] Pro-X (MAX).

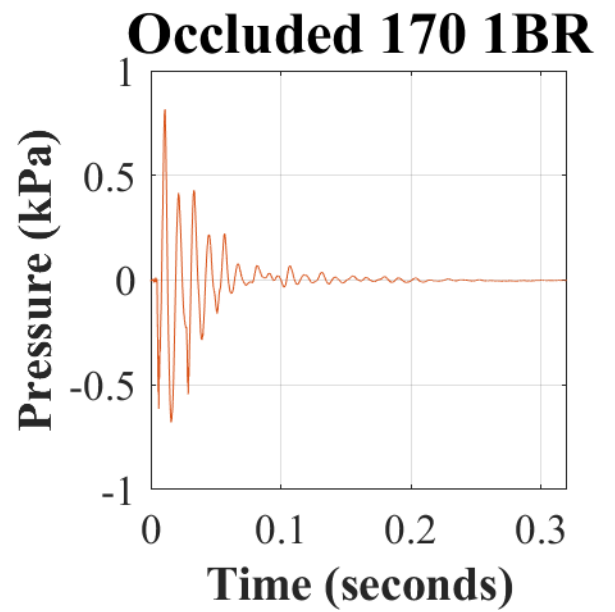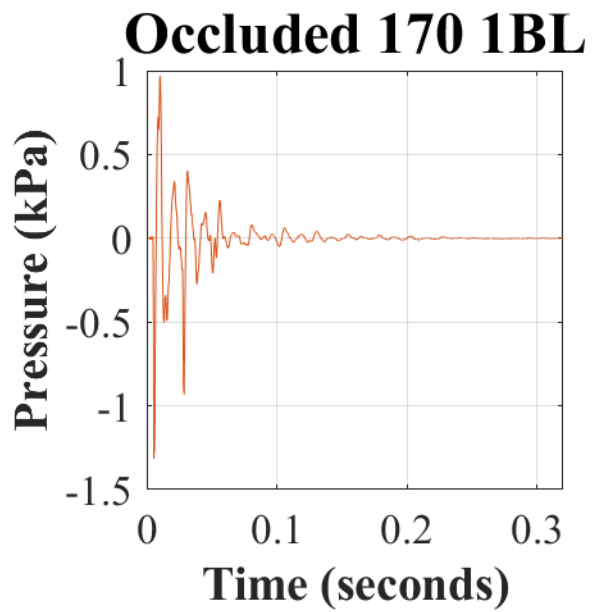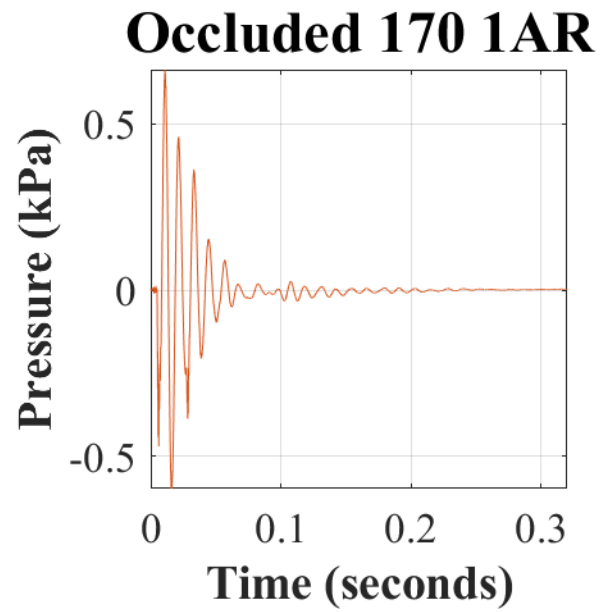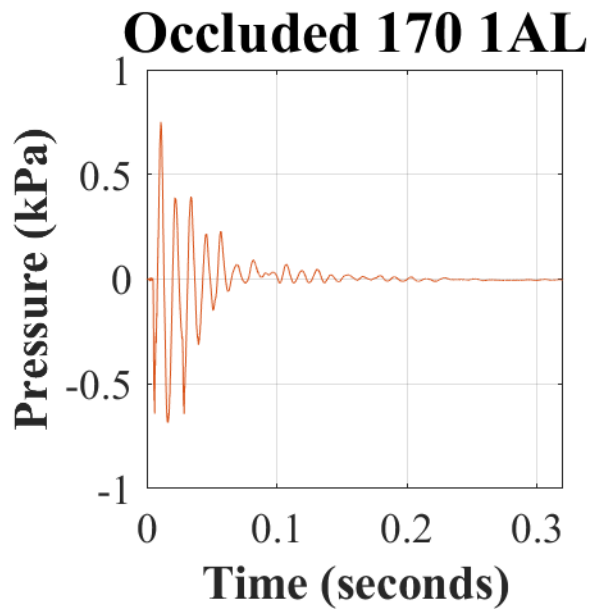


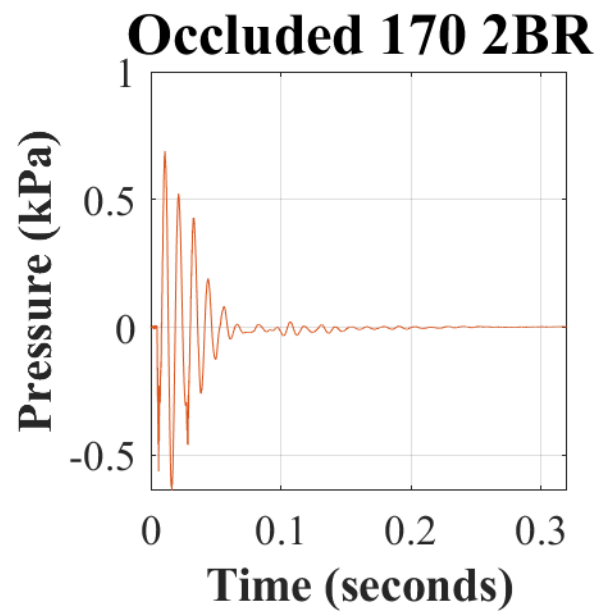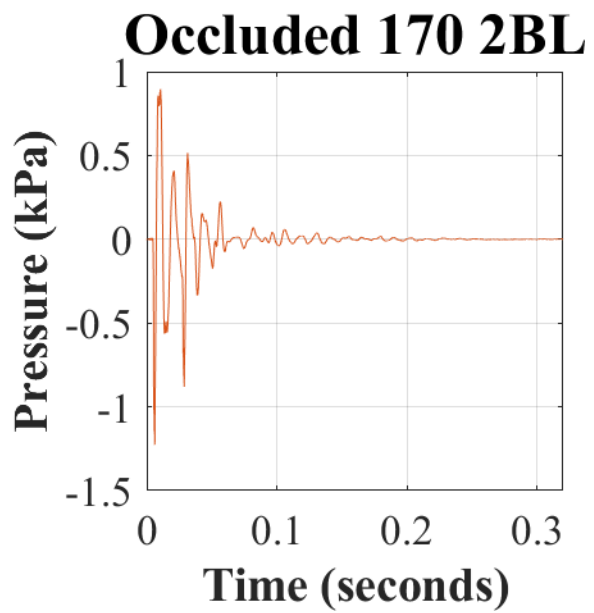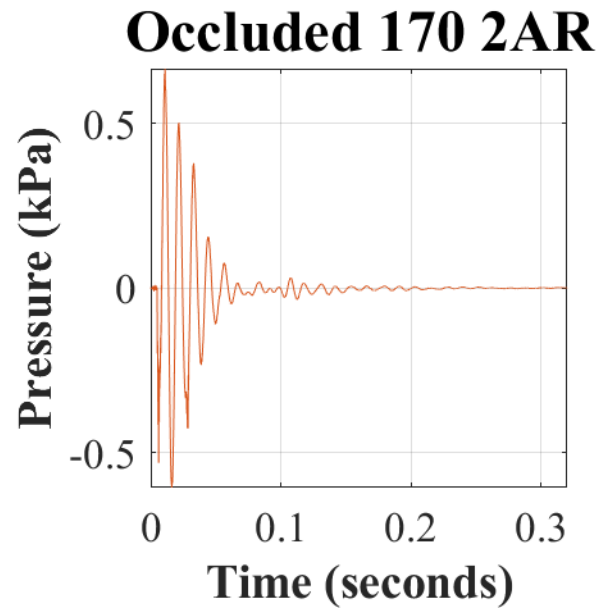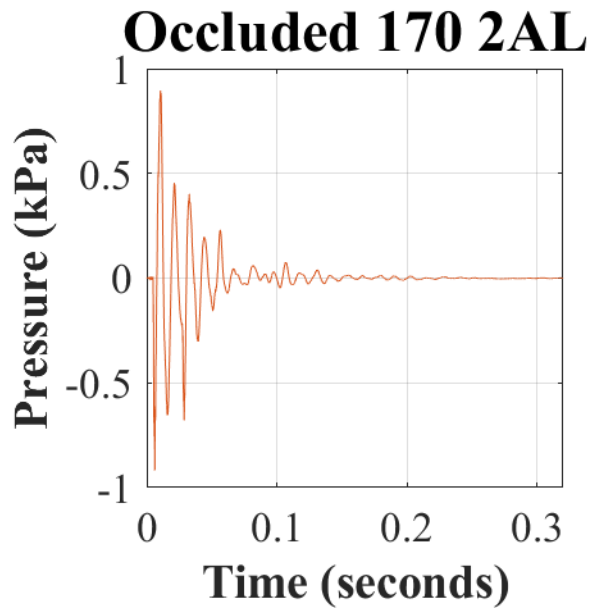


Occluded 170 3AL

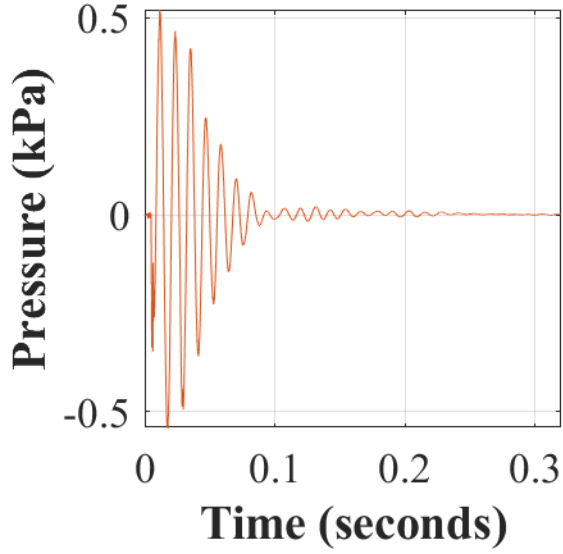


Occluded 170 3AR

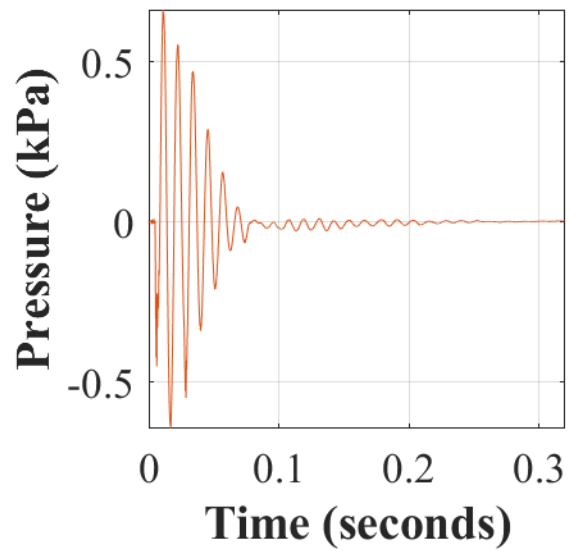


Occluded 170 3BL

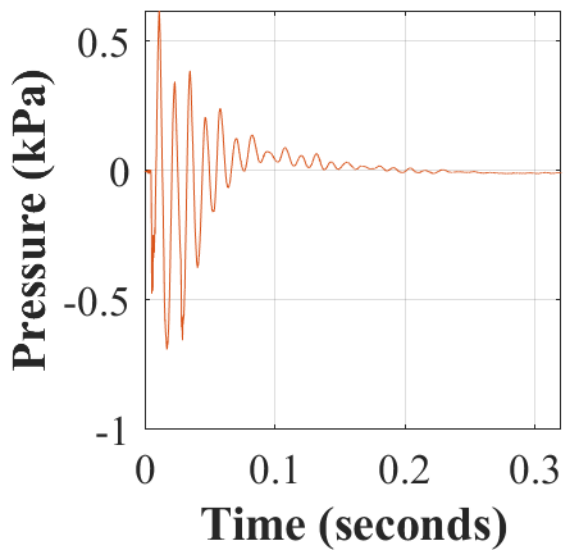


Occluded 170 3BR

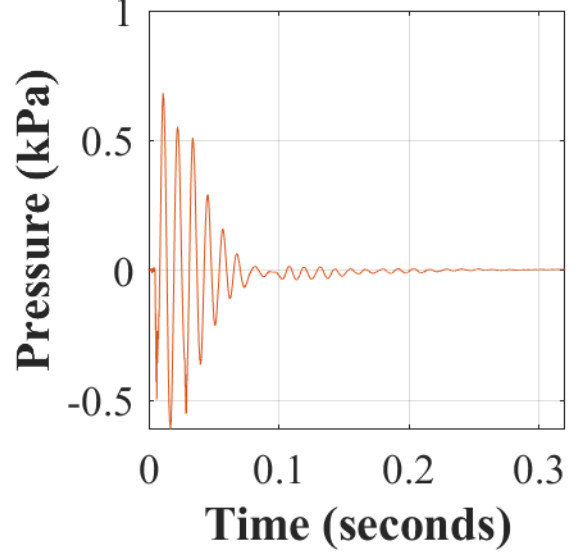


Occluded 170 4AL

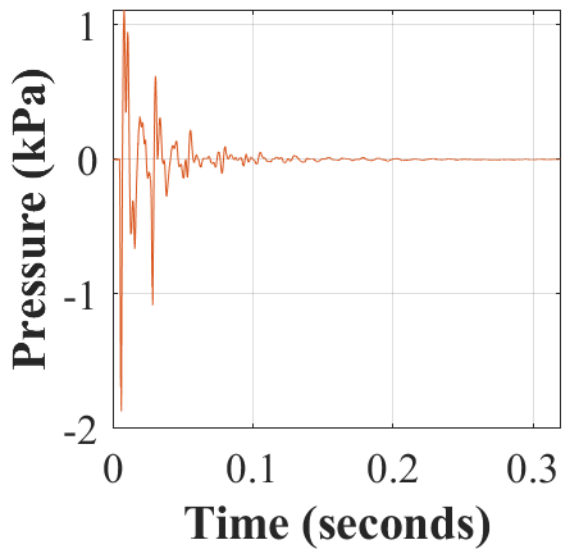


Occluded 170 4AR




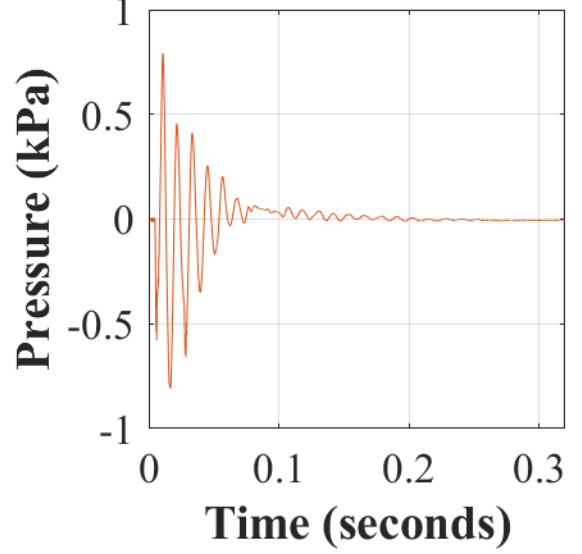


Occluded 170 4BL

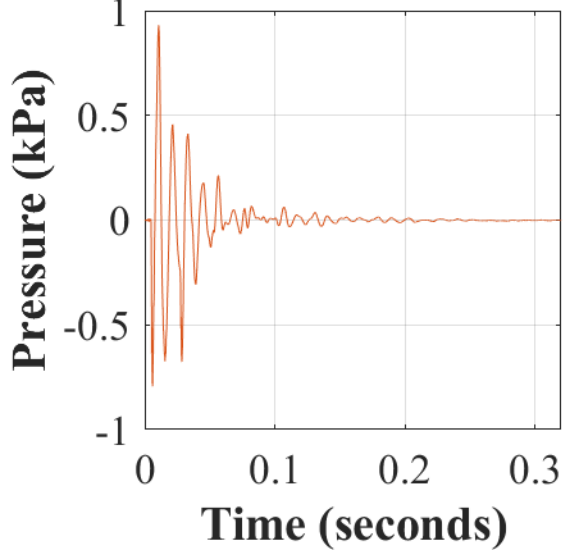





Occluded 170 4BR




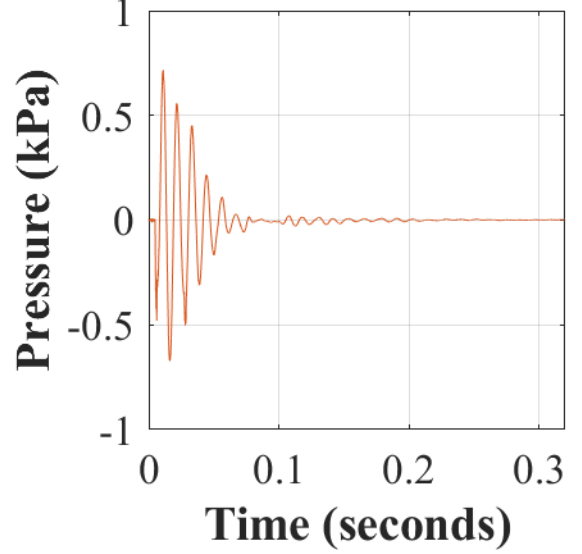


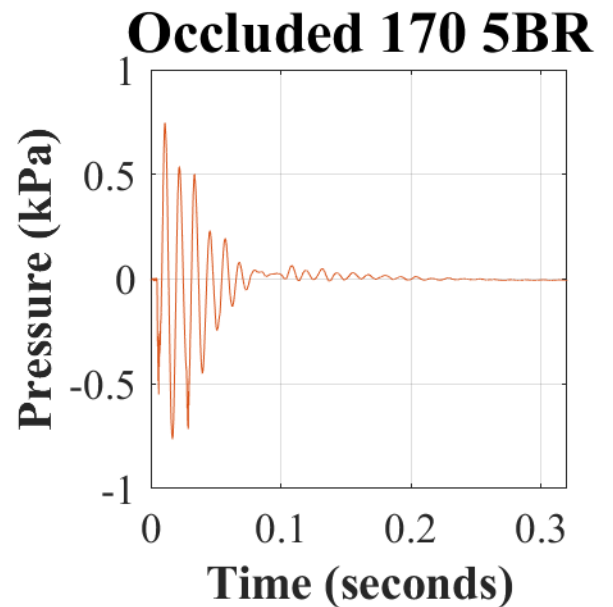
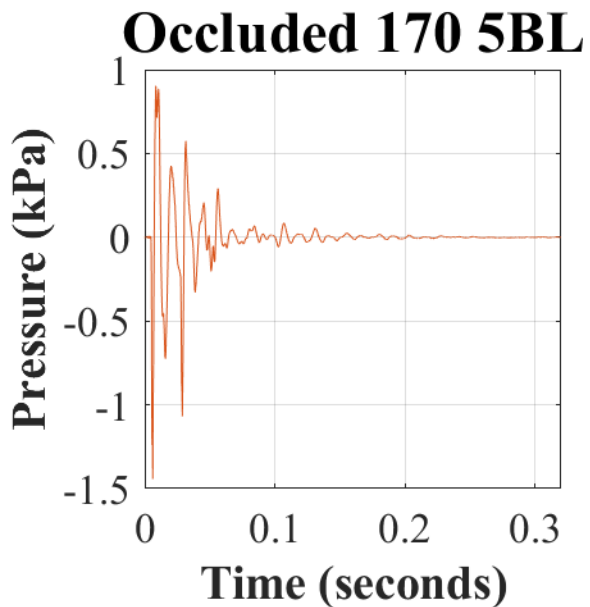
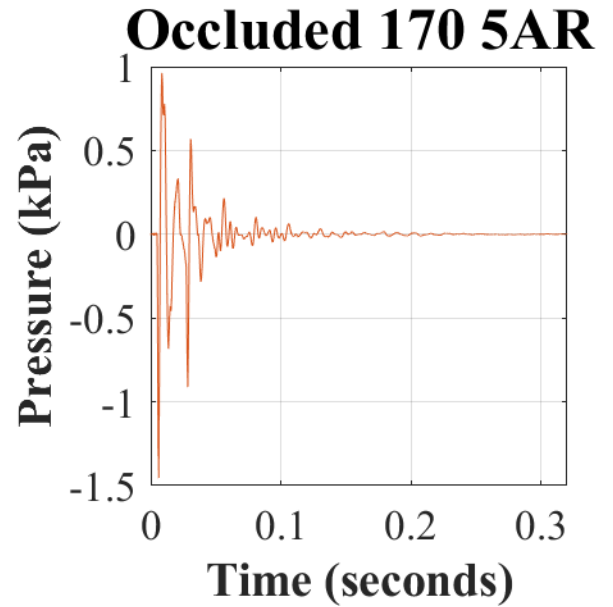
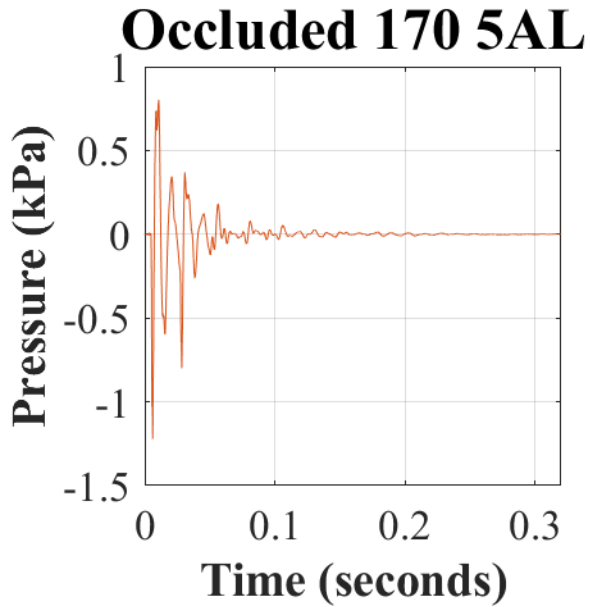






Note. The naming convention for all occluded waveforms is “Occluded LvL NnX”, where ‘Occluded’ is the test condition (i.e., ATF has the HPD donned), ‘LvL’ is the nominal test level (i.e., 150, 160 or 170 dBp), ‘N’ is the sample number (i.e., 1 to 5) of the device tested, ‘n’ is the trial (i.e., A or B) indicating HPD fit (i.e., first or second, respectively), and ‘X’ indicates from what ATF microphone the recording is from (i.e., right [R] or left [L] pinnae).





Appendix O. Estimated unoccluded (open-ear) waveforms (in kilopascals [kPa]) over time (in seconds [s]) in response to 170 dBp with the Supreme[®] Pro-X (MAX).

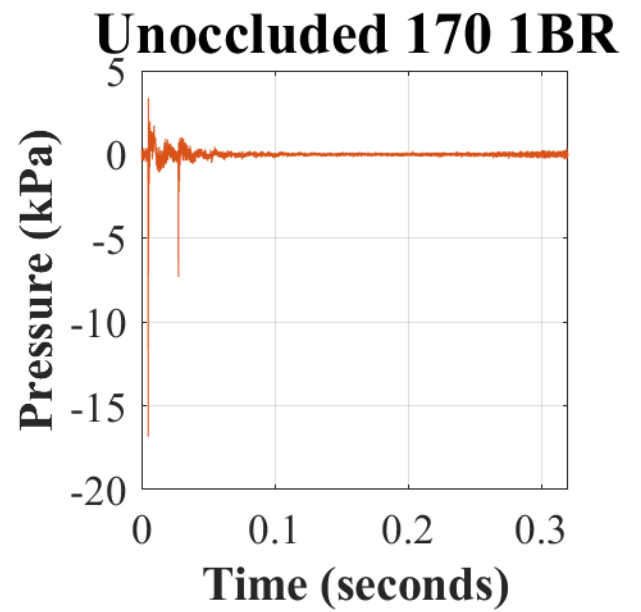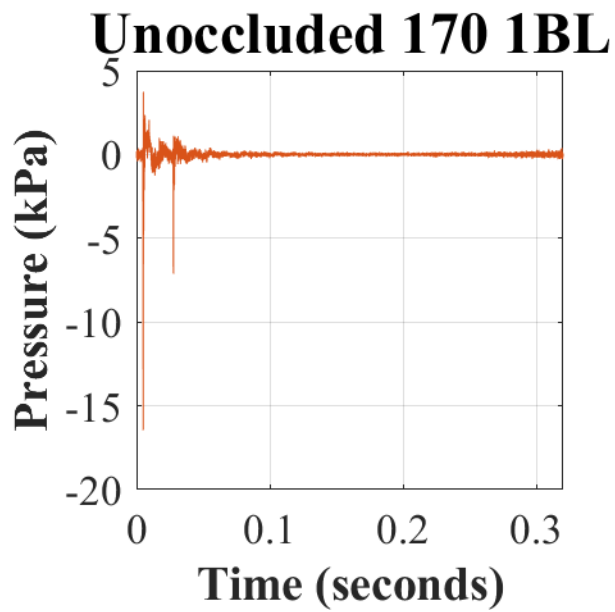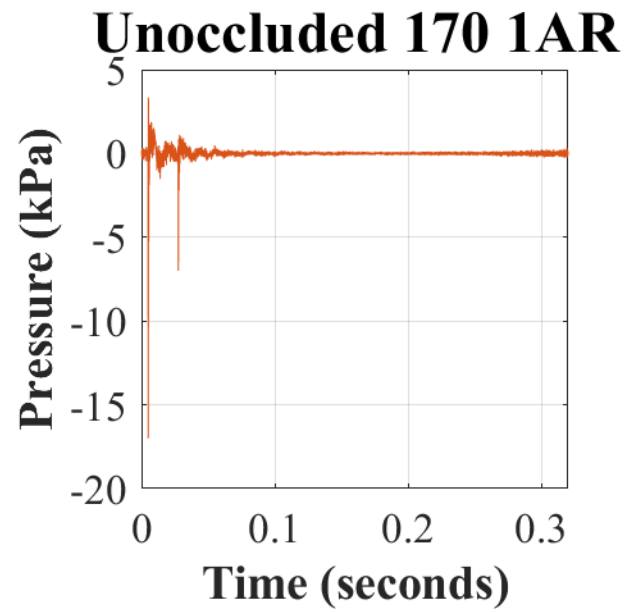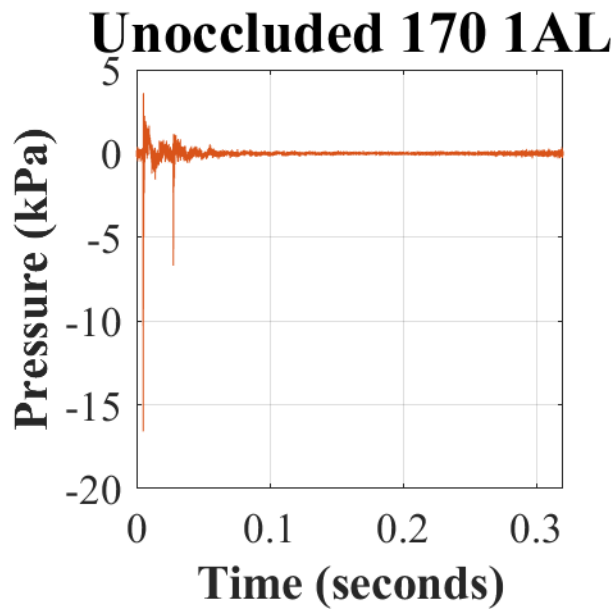

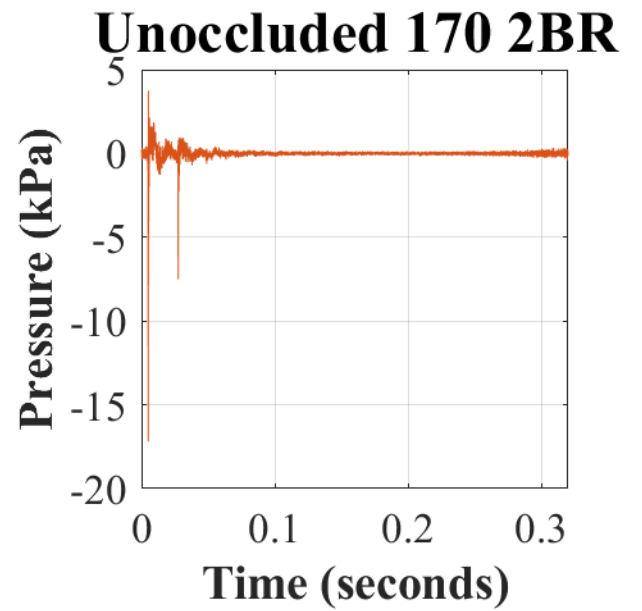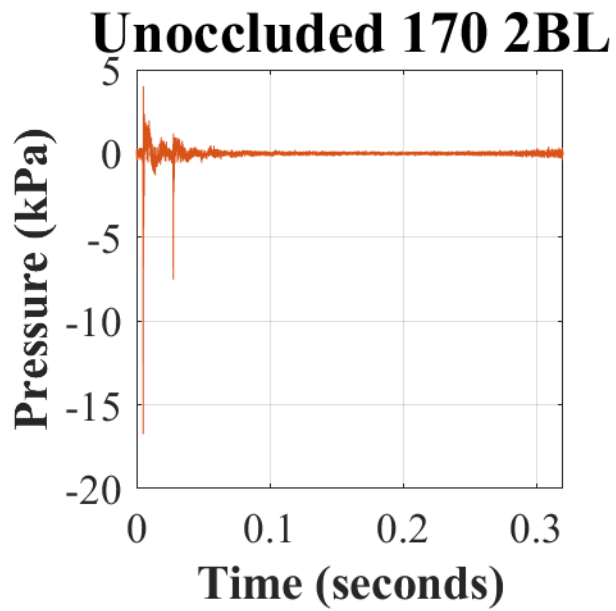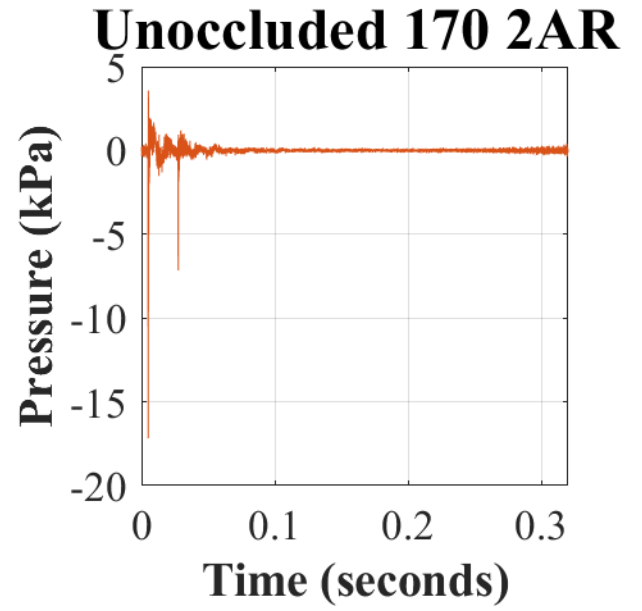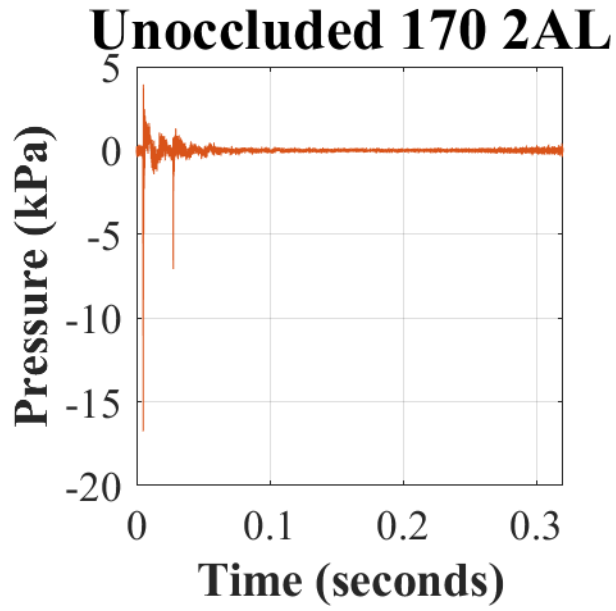

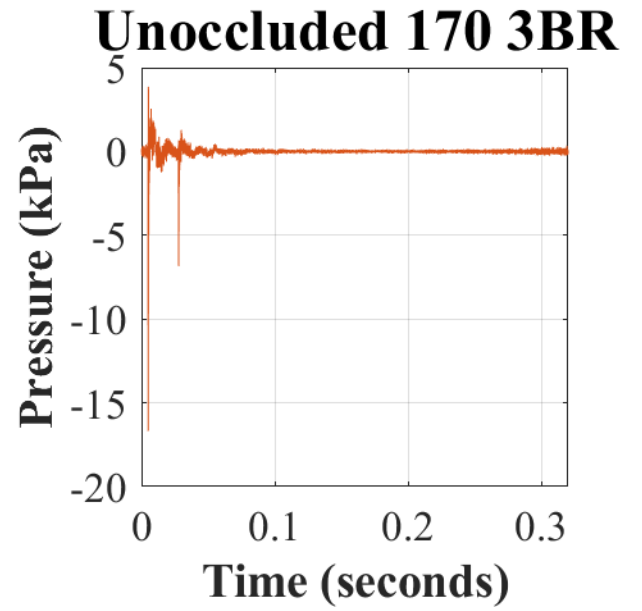
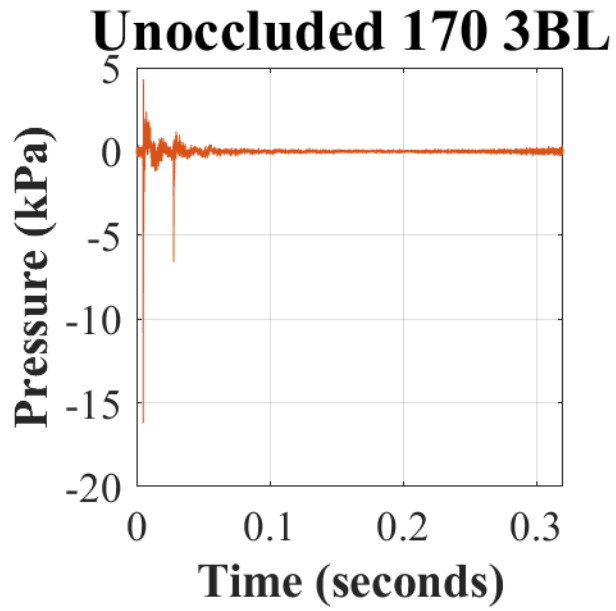
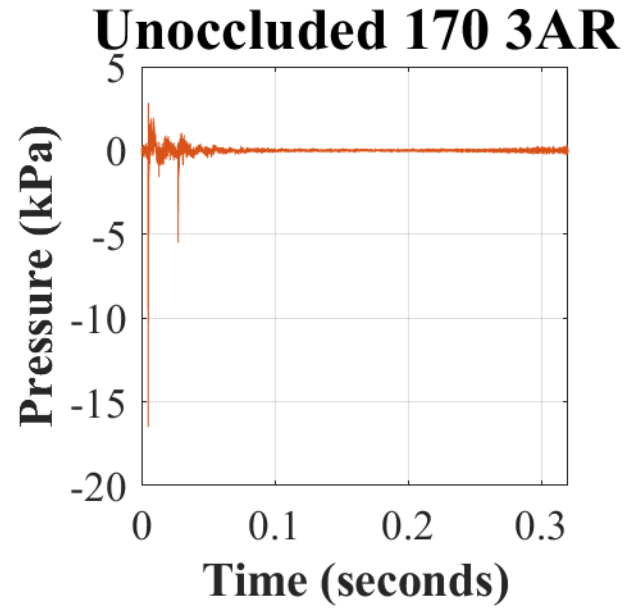
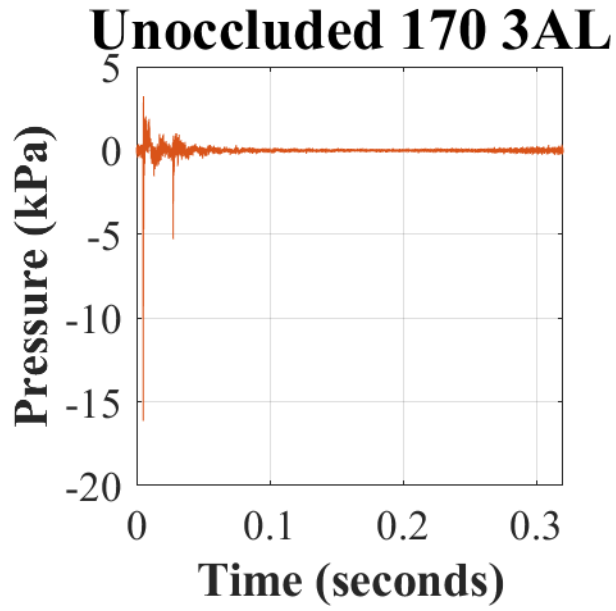


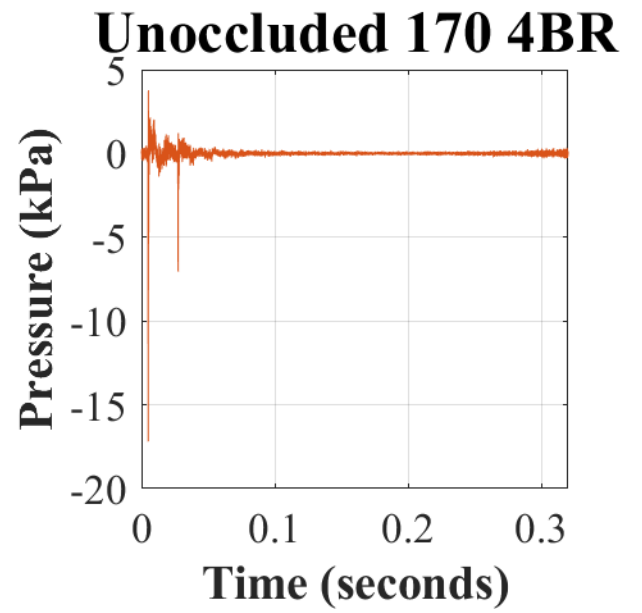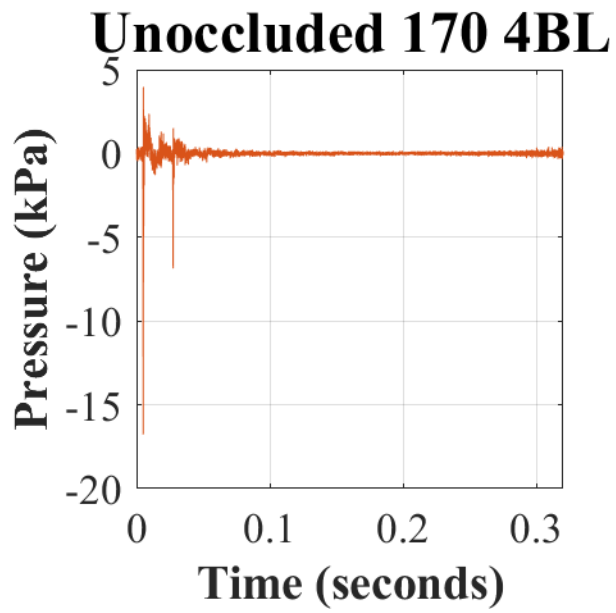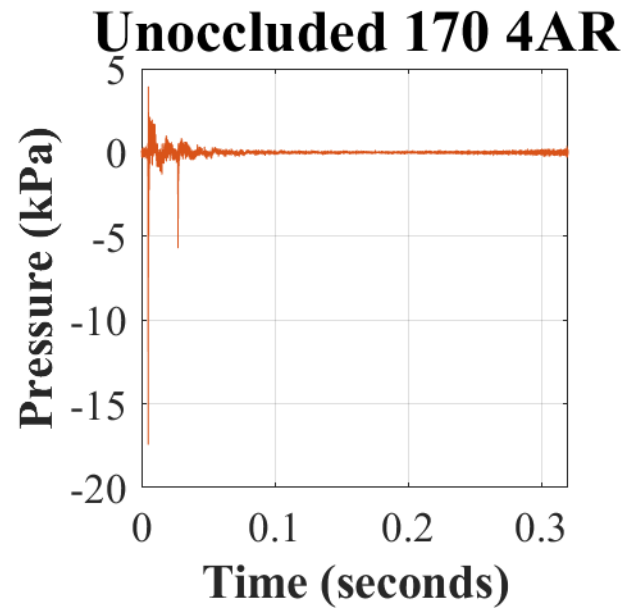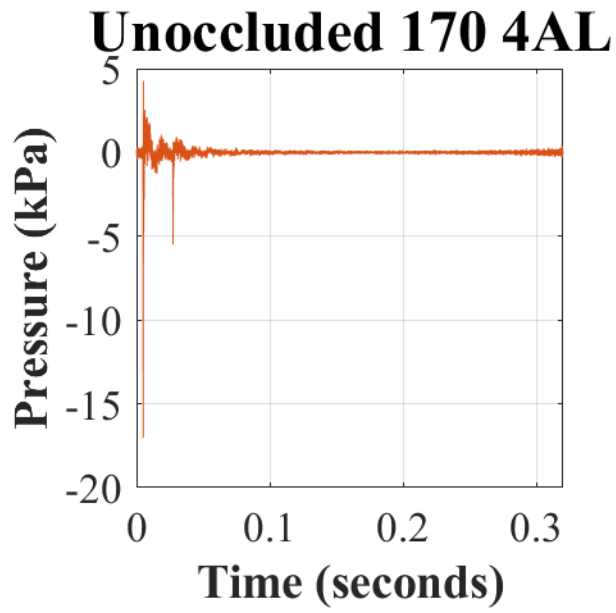

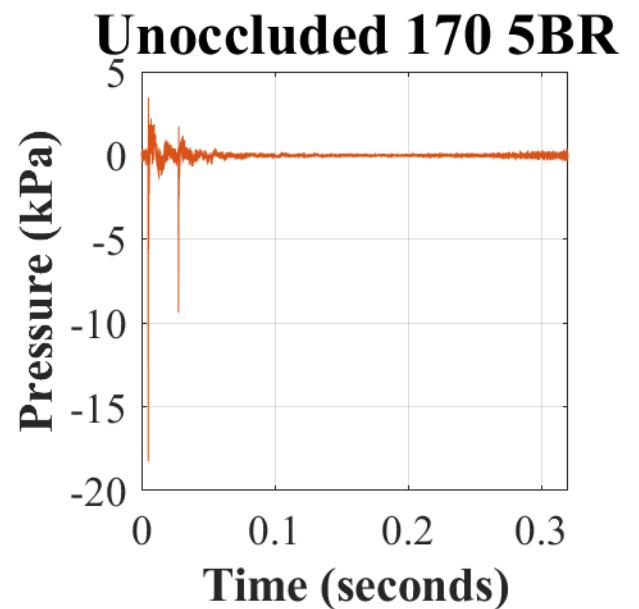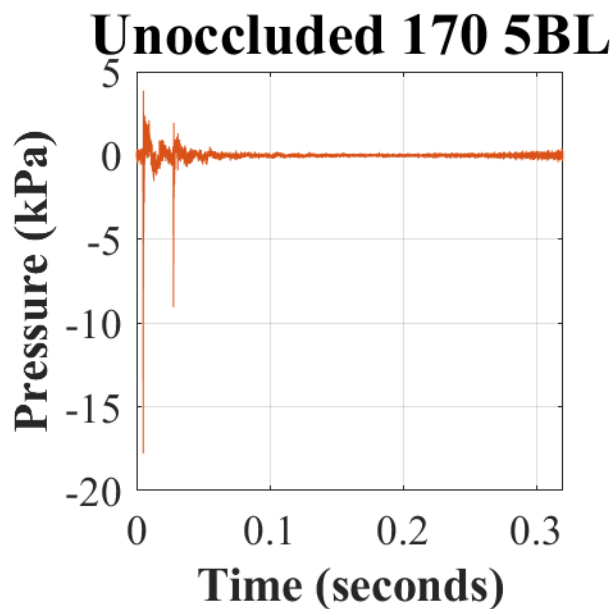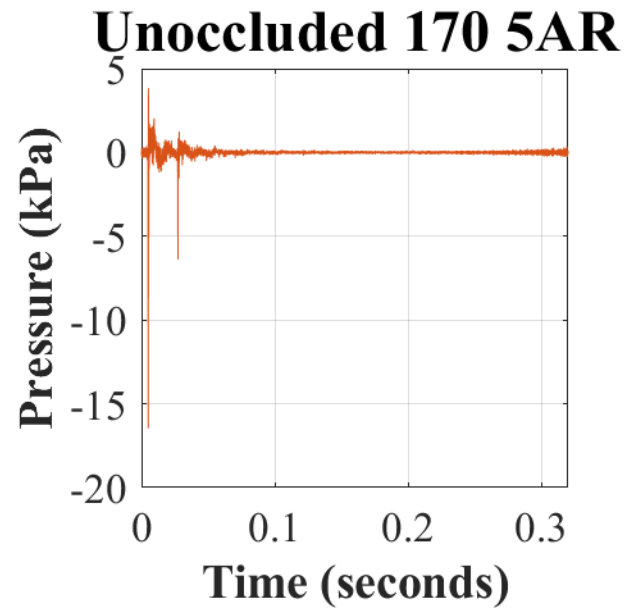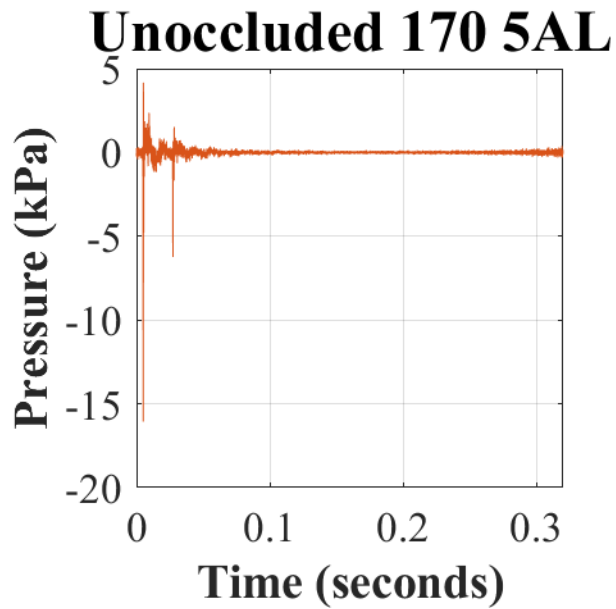


Note. The naming convention for all unoccluded waveforms is “Unoccluded LvL NnX”, where ‘Unoccluded’ is the test condition (i.e., ATF has the HPD doffed), ‘LvL’ is the nominal test level (i.e., 150, 160 or 170 dB), ‘N’ is the sample number (i.e., 1 to 5) of the device tested, ‘n’ is the trial (i.e., A or B) indicating HPD fit (i.e., first or second, respectively), and ‘X’ indicates from what ATF microphone the recording is from (i.e., right [R] or left [L] pinnae).


Appendix P. Recorded waveform (in kilopascals [kPa]) over time (in seconds [s]) of the impulse measured with the free-field probe at 150 dBp and the Supreme[®] Pro-X (MAX) donned.

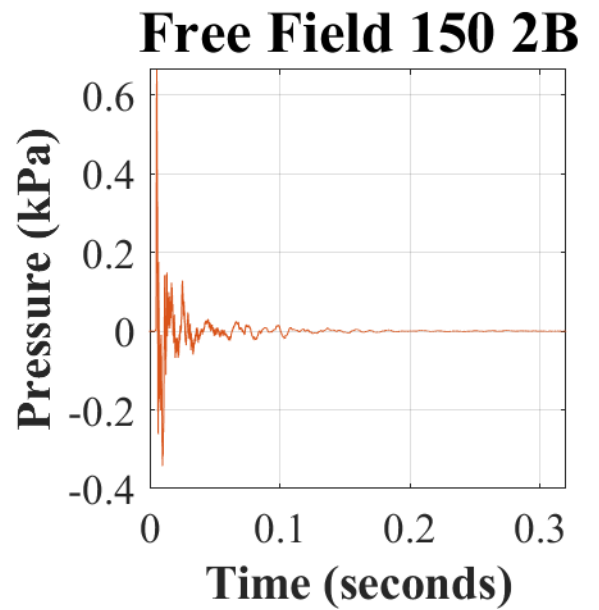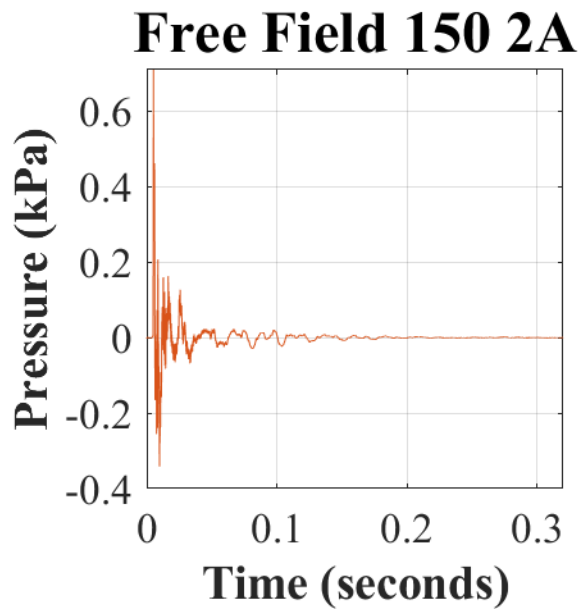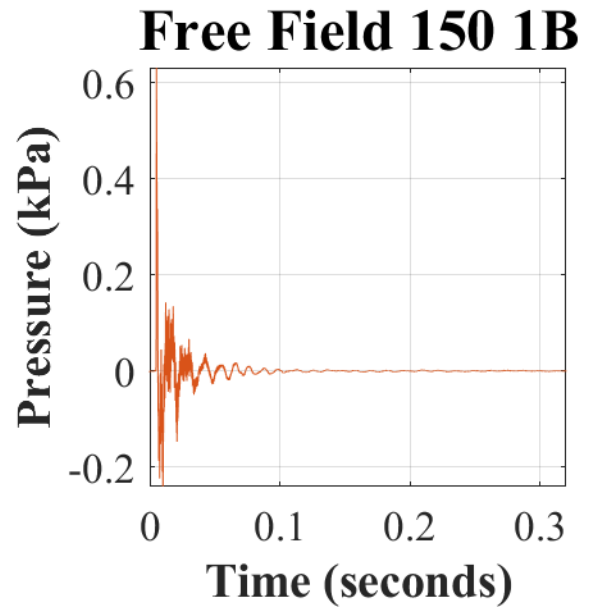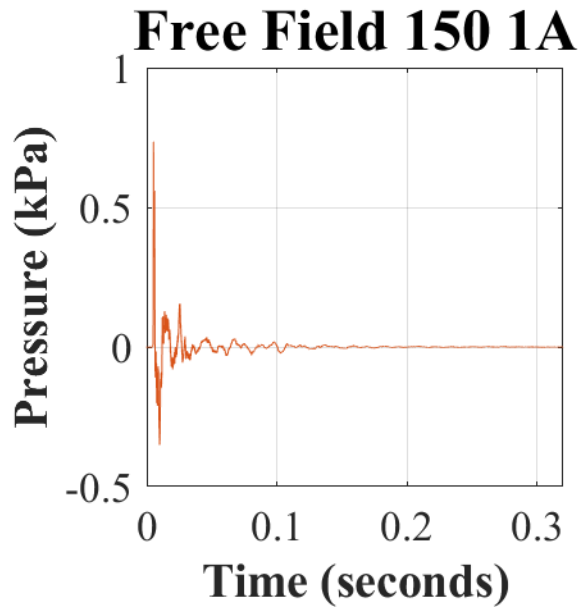


Free Field 150 3A

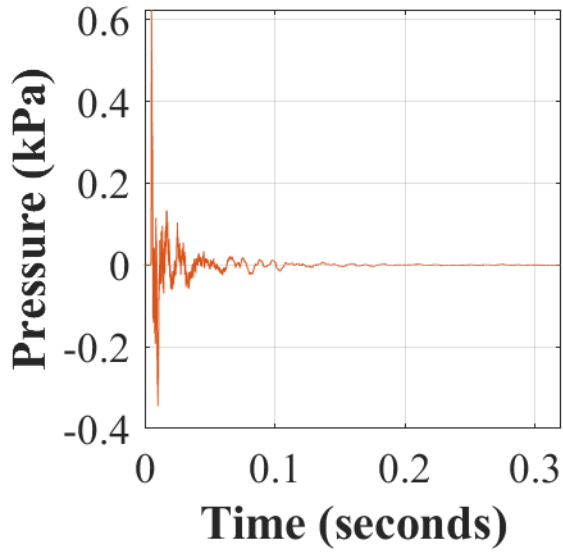


Free Field 150 3B


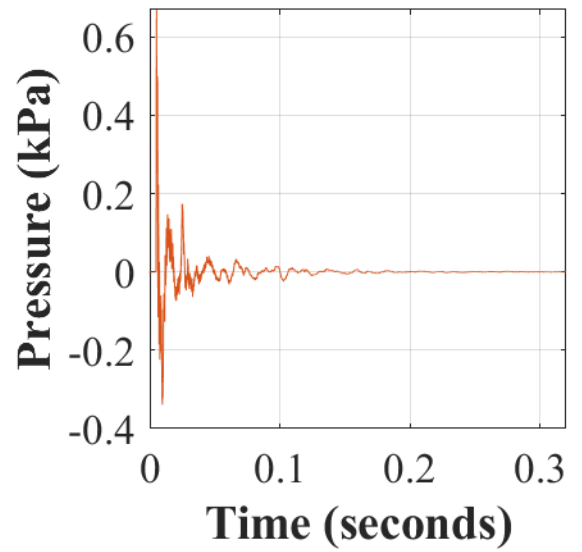


Free Field 150 4A

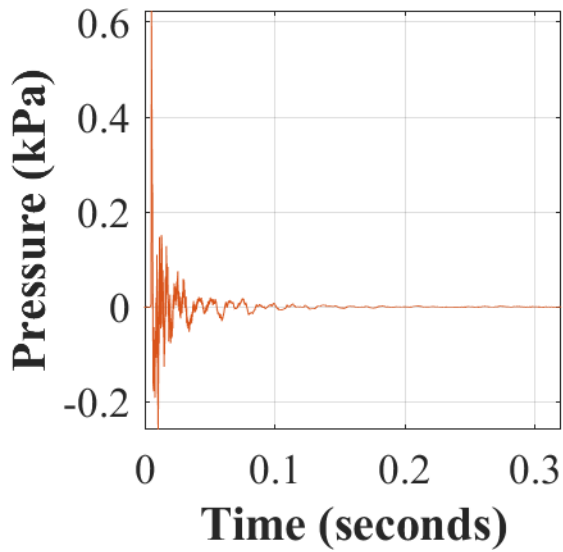





Free Field 150 4B




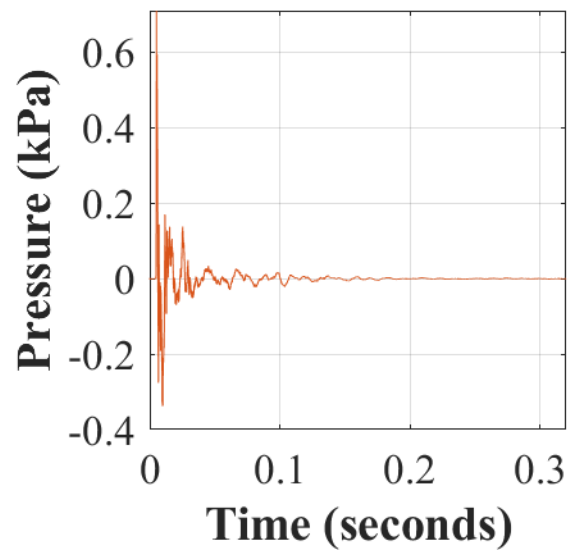


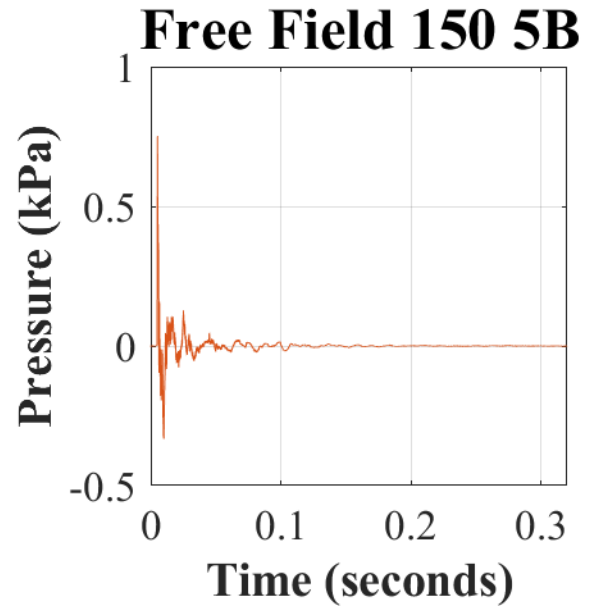
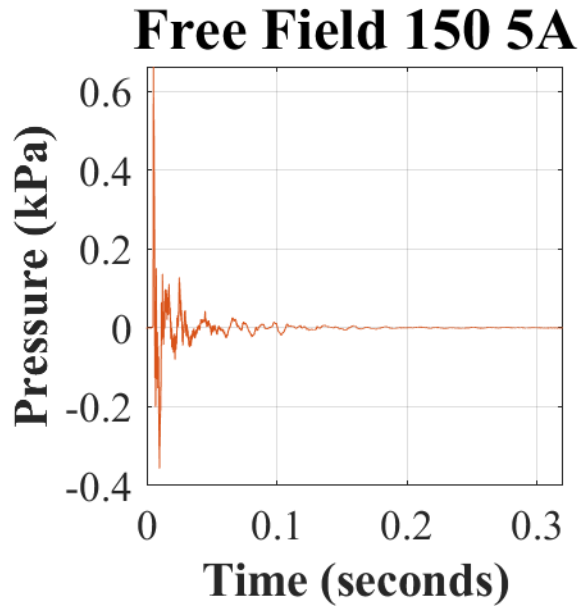


Note. The naming convention for all free-field waveforms is “Free Field LvL Nn”, where ‘Free Field’ indicates that the recording was obtained using the PCB reference microphone, ‘LvL’ is the nominal test level (150 dBp), ‘N’ is the device sample number (1 to 5), and ‘n’ is the device trial (i.e., A or B).

Appendix Q. Recorded waveform (in kilopascals [kPa]) over time (in seconds [s]) of the impulse measured with the free-field probe at 160 dBp and the Supreme[®] Pro-X (MAX) donned.

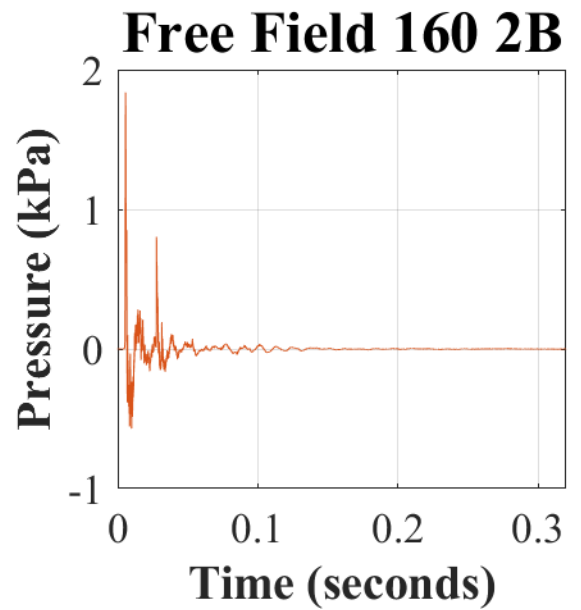
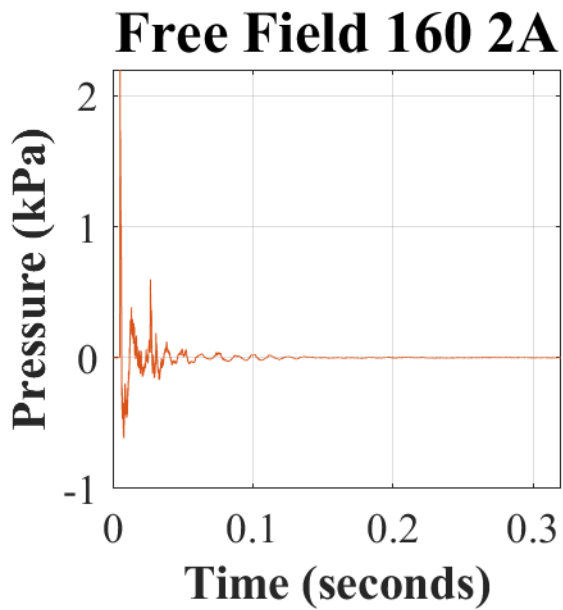
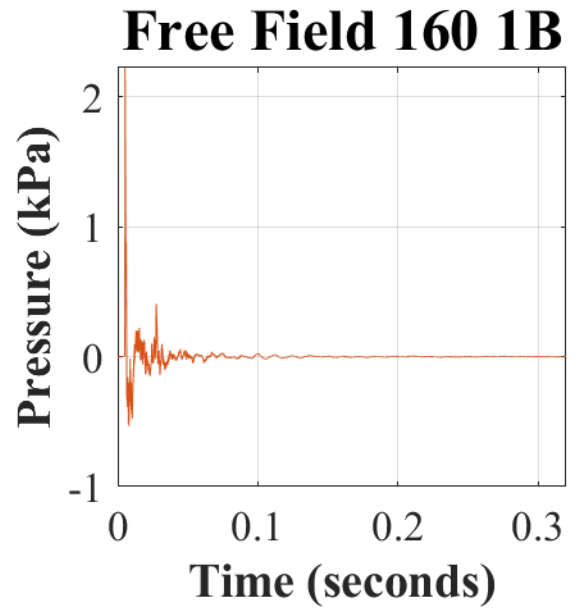
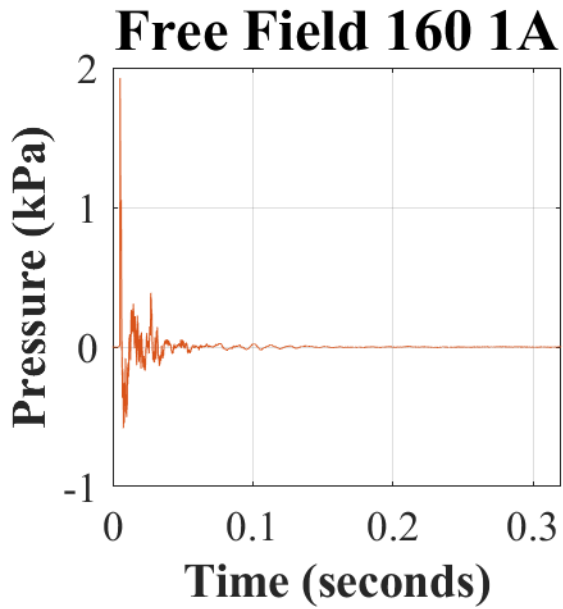


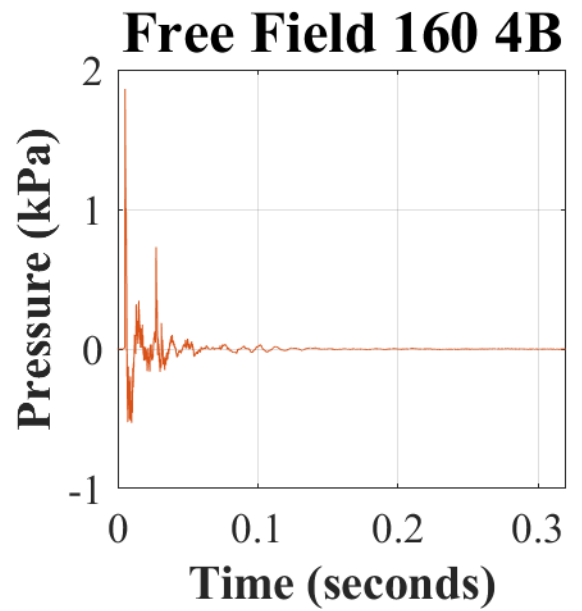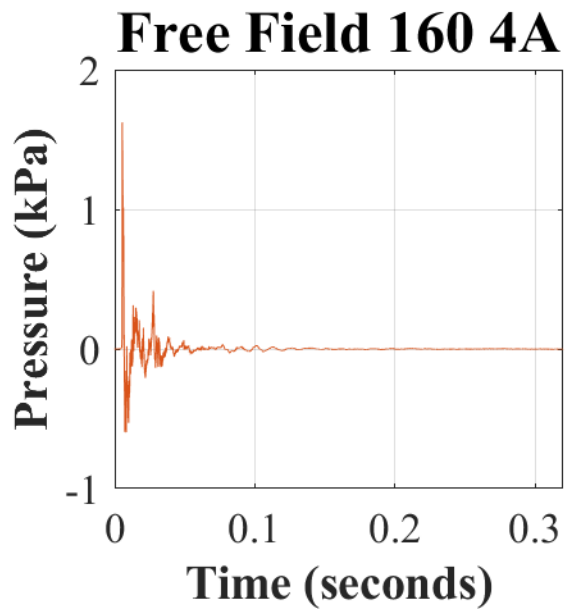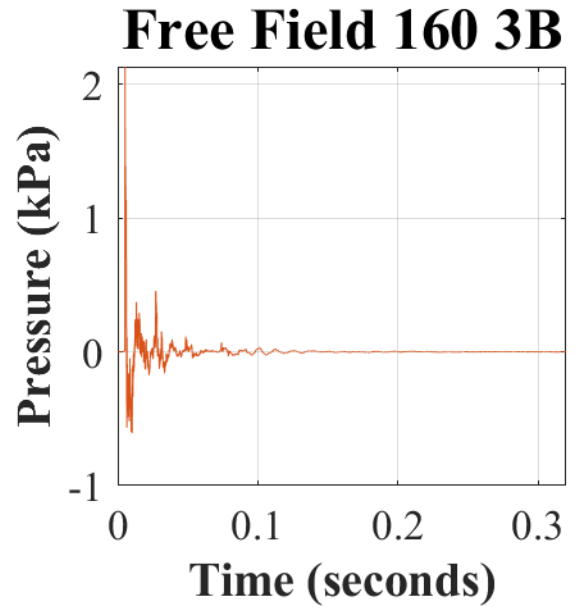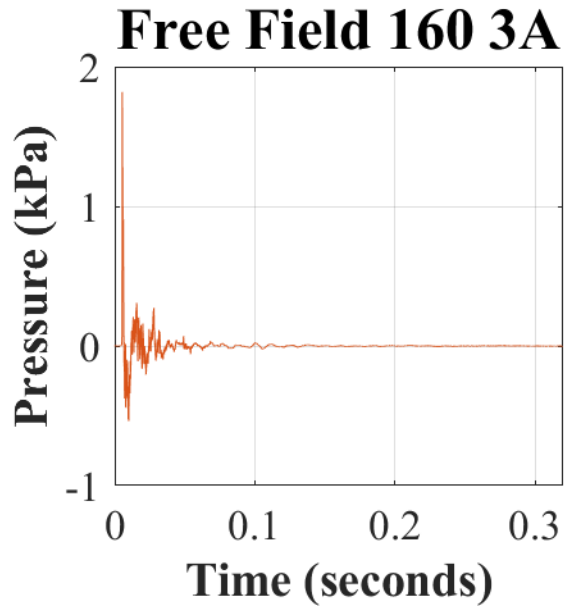

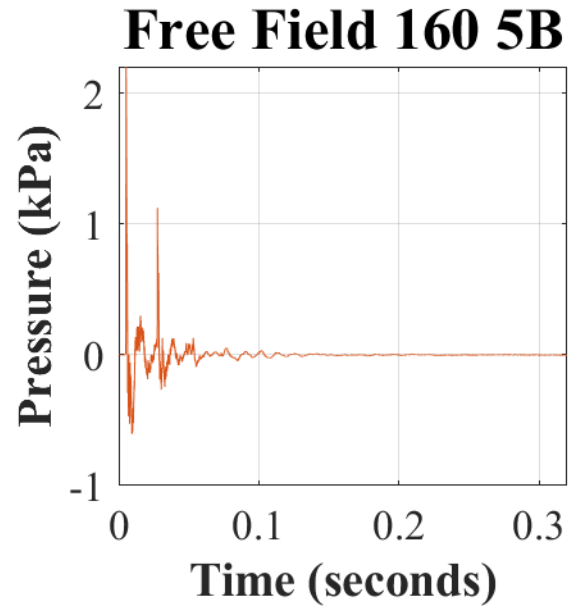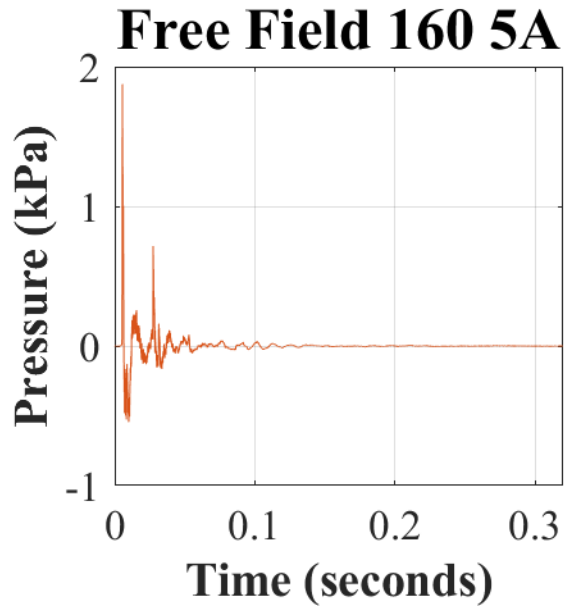


Note. The naming convention for all free-field waveforms is “Free Field LvL Nn”, where ‘Free Field’ indicates that the recording was obtained using the PCB reference microphone, ‘LvL’ is the nominal test level (160 dBp), ‘N’ is the device sample number (1 to 5), and ‘n’ is the device trial (i.e., A or B).


Appendix R. Recorded waveform (in kilopascals [kPa]) over time (in seconds [s]) of the impulse measured with the free-field probe at 170 dBp and the Supreme[®] Pro-X (MAX) donned.

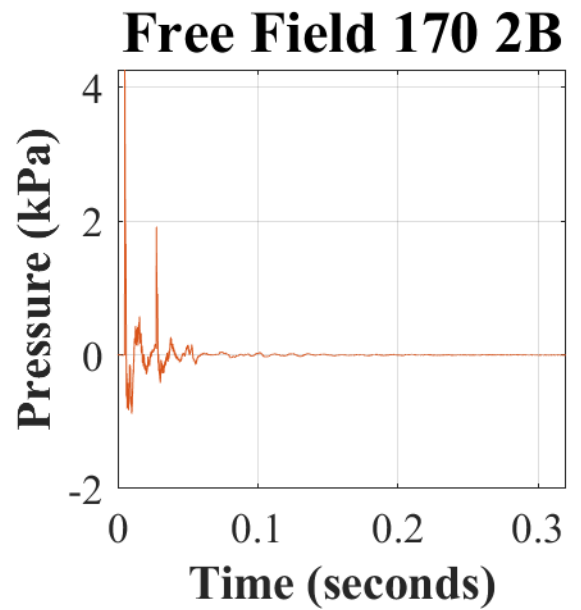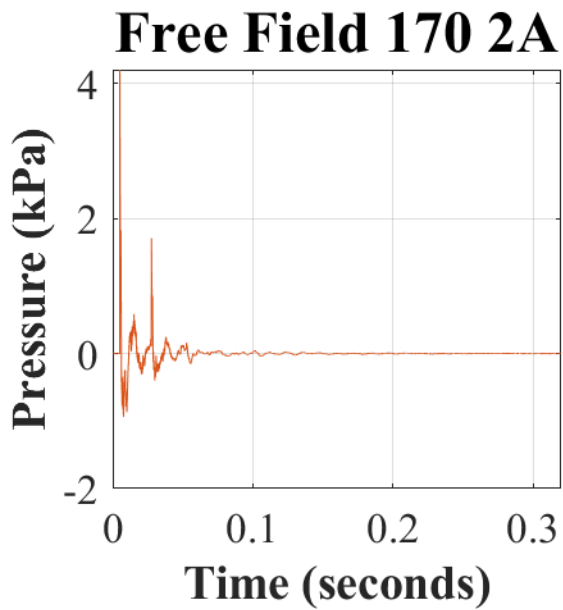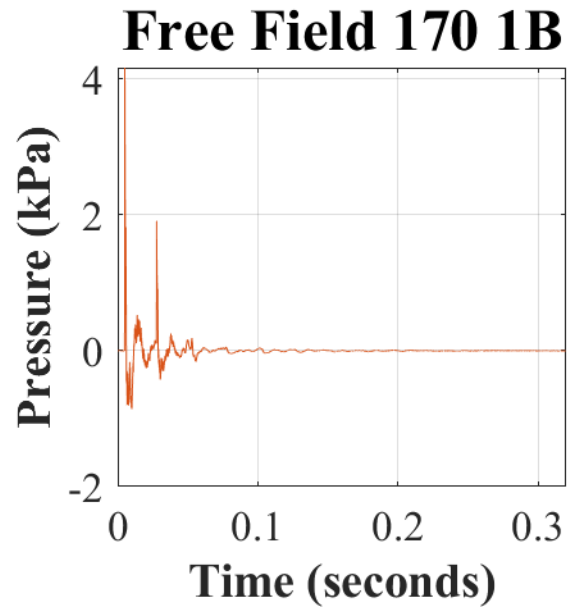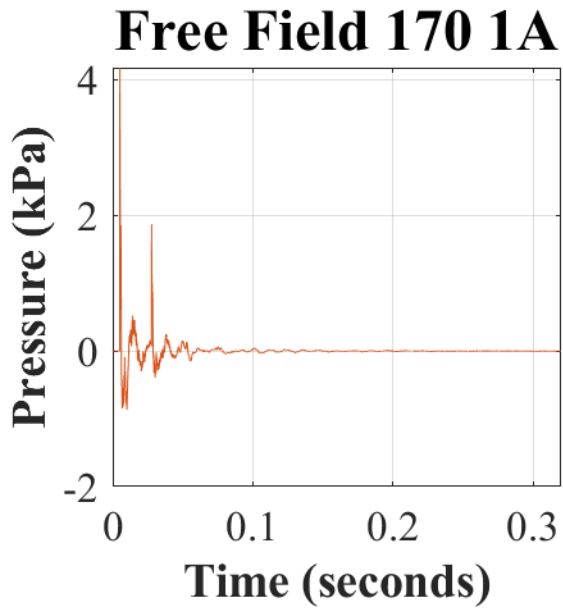


Free Field 170 3A

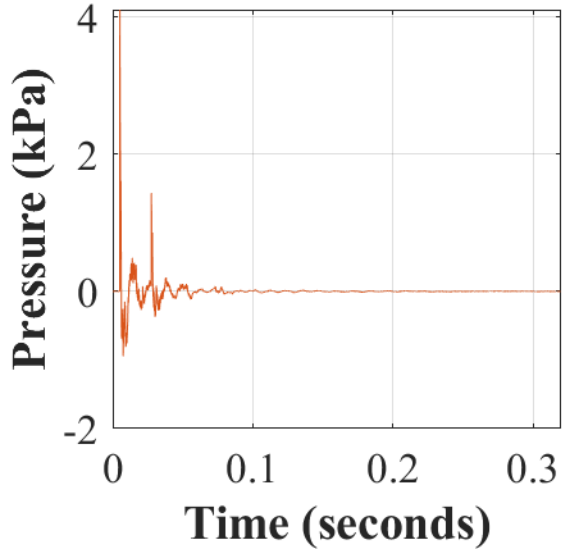


Free Field 170 3B


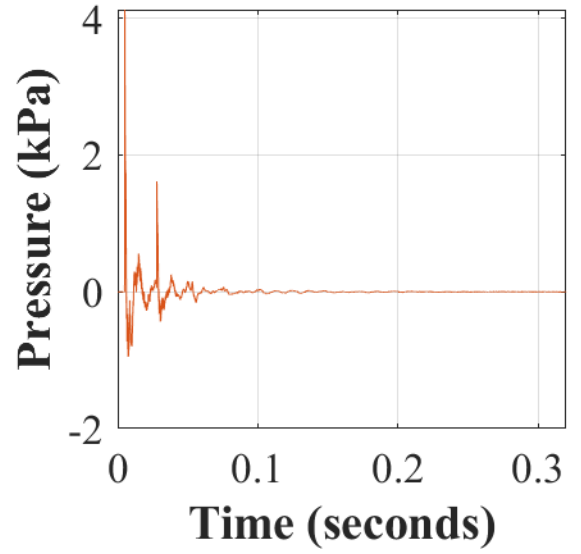


Free Field 170 4A

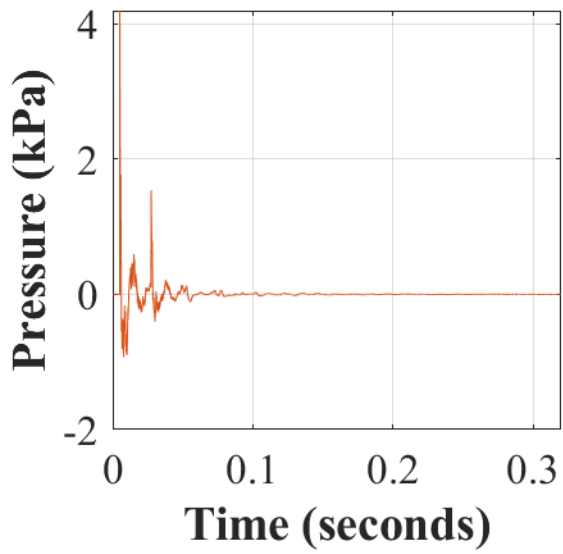

Free Field 170 4B

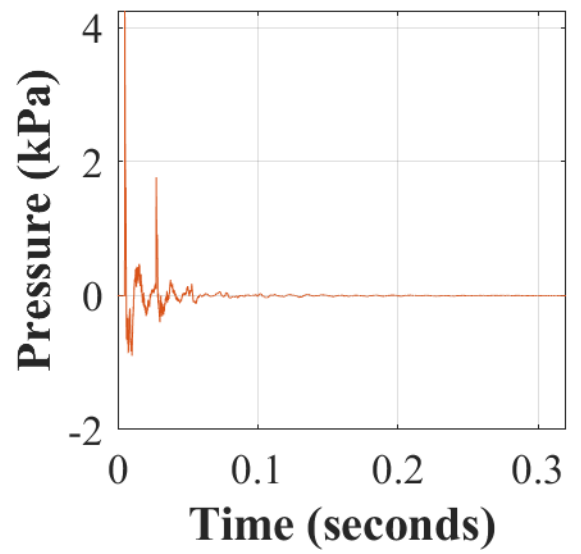

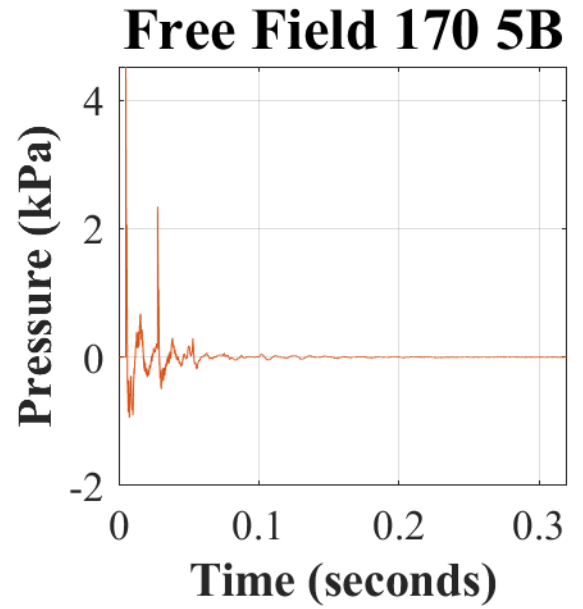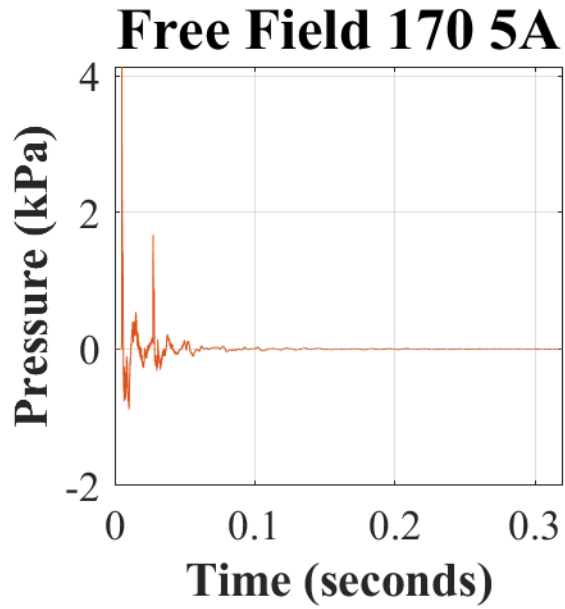

Note. The naming convention for all free-field waveforms is “Free Field LvL Nn”, where ‘Free Field’ indicates that the recording was obtained using the PCB reference microphone, ‘LvL’ is the nominal test level (170 dBp), ‘N’ is the device sample number (1 to 5), and ‘n’ is the device trial (i.e., A or B).