

12

USAARL REPORT NO. 84-6

AD-A140 634

**IN-FLIGHT EVALUATION OF TWO MOLECULAR SIEVE
OXYGEN CONCENTRATION SYSTEMS IN U.S. ARMY
AIRCRAFT (JUH-1H AND JU-216)**

By
William A. Chaffin, Jr.
Bruce F. Hiott
Francis S. Knox III

BIOMEDICAL APPLICATIONS RESEARCH DIVISION

March 1984

DTIC
ELECTRONIC
MAY 1 1984
A

**U.S. ARMY AEROMEDICAL RESEARCH LABORATORY
FORT RUCKER, ALABAMA 36362**

DTIC FILE COPY

USAARL

84 05 01 004

UNCLASSIFIED

SECURITY CLASSIFICATION OF THIS PAGE (When Data Entered)

REPORT DOCUMENTATION PAGE		READ INSTRUCTIONS BEFORE COMPLETING FORM	
1. REPORT NUMBER USAARL Report No. 84-6		2. GOVT ACCESSION NO. A1-A140 634	
3. TITLE (and Subtitle) In-Flight Evaluation of Two Molecular Sieve Oxygen Concentration Systems in U.S. Army Aircraft (JUH-1H and JU-21G)		3. RECIPIENT'S CATALOG NUMBER	
4. AUTHOR(s) William Chaffin, Jr. Bruce F. Hiott Francis S. Knox III		5. TYPE OF REPORT & PERIOD COVERED Final Report	
6. PERFORMING ORGANIZATION NAME AND ADDRESS SGRD-UAB-CB US Army Aeromedical Research Laboratory Fort Rucker, Alabama 36362		6. PERFORMING ORG. REPORT NUMBER	
7. CONTROLLING OFFICE NAME AND ADDRESS US Army Medical Research and Development Command Fort Detrick Frederick, Maryland 21701		8. CONTRACT OR GRANT NUMBER(s)	
8. MONITORING AGENCY NAME & ADDRESS (if different from Controlling Office)		10. PROGRAM ELEMENT, PROJECT, TASK AREA & WORK UNIT NUMBERS 62777A, 3E162777A878, AF 134	
		12. REPORT DATE March 1984	
		13. NUMBER OF PAGES 38	
		15. SECURITY CLASS. (of this report) Unclassified	
		15a. DECLASSIFICATION/DOWNGRADING SCHEDULE	
16. DISTRIBUTION STATEMENT (of this Report) Approved for public release; distribution unlimited.			
17. DISTRIBUTION STATEMENT (of the abstract entered in Block 20, if different from Report)			
18. SUPPLEMENTARY NOTES		Accession For NTIS GRA&I ☒ DTIC TAB ☐ Unannounced ☐ Justification	
19. KEY WORDS (Continue on reverse side if necessary and identify by block number) Molecular sieve Oxygen Concentrators Zeolite Pressure Differential Pressure Swing		Distribution/ Availability Codes Avail and/or Dist Special A-1	
20. ABSTRACT (Continue on reverse side if necessary and identify by block number) See back of form.			

DD FORM 1 JAN 73 1473

EDITION OF 1 NOV 65 IS OBSOLETE

UNCLASSIFIED

SECURITY CLASSIFICATION OF THIS PAGE (When Data Entered)

UNCLASSIFIED

SECURITY CLASSIFICATION OF THIS PAGE(When Data Entered)

20. ABSTRACT:

The logistical problems associated with using high pressure gaseous oxygen systems have encouraged the development of molecular sieve oxygen concentration systems for use on board aircraft. This report summarizes the in-flight static performance characteristics of two such oxygen concentrators installed in a JU-21G fixed-wing, twin-engine turbopropeller aircraft and a JUH-1H turbine-powered helicopter. Flight profiles consisting of five separate flights at altitudes of 1,524, 3,048, 4,572, 6,096, and 7,620 meters (5,000, 10,000, 15,000, 20,000, and 25,000 feet) were flown in the JU-21G and five separate flights at altitudes of 1,524, 3,048 and 4,572 meters were flown in the JUH-1H. Oxygen concentration at flows of 15, 25, 35, and 70 liters per minute were recorded at each altitude. These flows were chosen to represent normal breathing requirements for one- and two-man crews. In all cases, the concentrators met or exceeded the requirements of MIL-R-83178. The use of engine bleed air to drive the oxygen concentrators produced no noticeable effect on aircraft performance.

UNCLASSIFIED

SECURITY CLASSIFICATION OF THIS PAGE(When Data Entered)

NOTICE

Qualified Requesters

Qualified requesters may obtain copies from the Defense Technical Information Center (DTIC), Cameron Station, Alexandria, Virginia. Orders will be expedited if placed through the librarian or other person designated to request documents from DTIC.

Change of Address

Organizations receiving reports from the US Army Aeromedical Research Laboratory on automatic mailing lists should confirm correct address when corresponding about laboratory reports.


Disposition

Destroy this report when it is no longer needed. Do not return it to the originator.

Disclaimer

The views, opinions, and/or findings contained in this report are those of the author(s) and should not be construed as an official Department of the Army position, policy, or decision, unless so designated by other official documentation. Citation of trade names in this report does not constitute an official Department of the Army endorsement or approval of the use of such commercial items.

Reviewed:


KENT A. KIMBALL, PH.D.
Director
Biomedical Applications Research
Division

Released for Publication:


J. D. LaMOTHE, Ph.D.
LTC, MS
Chairman, Scientific Review
Committee


DUDLEY R. PRICE
Colonel, MC, SFS
Commanding

ACKNOWLEDGEMENT

The authors take this opportunity to acknowledge with thanks the many valuable contributions by LTC Philip Taylor and SFC Richard Weber during the data collection, data analysis, and writing/editorial phases of this project.

TABLE OF CONTENTS

	PAGE NO.
List of Illustrations.	2
List of Tables	3
Introduction	4
Apparatus.	6
Procedure.	11
Results.	11
Discussion	26
Conclusions.	27
References Cited	30
Appendix A - Equipment and Manufacturer List	31

LIST OF ILLUSTRATIONS

FIGURE	PAGE NO.
1. Molecular Sieve Block Diagram.	5
2. JU-21G Research Aircraft	7
3. JUH-1H Research Aircraft	8
4. Oxygen Concentrators	9
5. Test Stand	10
6. Oxygen Concentration vs. Altitude in JU-21G (Bendix Unit, Minimum Power)	12
7. Oxygen Concentration vs. Altitude in JU-21G (Bendix Unit, Maximum Power)	13
8. Oxygen Concentration vs. Altitude in JU-21G (Garrett Unit, Minimum Power).	14
9. Oxygen Concentration vs. Altitude in JU-21G (Garrett Unit, Maximum Power).	15
10. Oxygen Concentration vs. Altitude in JUH-1H (Bendix Unit).	16
11. Oxygen Concentration vs. Altitude in JUH-1H (Garrett Unit)	17
12. Oxygen Concentration vs. Altitude in JU-21G (Garrett Unit, Minimum Power). Supplemental Data. . . .	28
13. Oxygen Concentration vs. Altitude in JU-21G (Garrett Unit, Maximum Power). Supplemental Data. . . .	29

LIST OF TABLES


TABLE	PAGE NO.
1. Oxygen Concentration and System Condition Under Static Flow (Bendix/JU-21G)	18
2. Oxygen Concentration and System Condition Under Static Flow (Garrett/JU-21G)	20
3. Oxygen Concentration and System Condition Under Static Flow (Bendix/JUH-1H)	22
4. Oxygen Concentration and System Condition Under Static Flow (Garrett/JUH-1H)	23
5. Oxygen Concentration and System Condition Under Static Flow (Garrett/JU-21G). Supplemental Data	24

INTRODUCTION

In 1947, with the formation of the US Air Force as a separate branch of service, US Army aviation relinquished most of its high-altitude capabilities, requirements, and aircraft, resulting in a role of reduced importance for oxygen delivery systems in the Army aviation environment. Today, however, there are increased mission requirements, both training and operational, which dictate routine flights in certain aircraft to altitudes as high as 7,620 meters (25,000 feet) in an unpressurized cabin. As a result, oxygen systems are again a critical part of US Army aircraft life support systems. Currently, US Army aviation oxygen needs are satisfied only partially by continuous flow and diluter demand gaseous oxygen systems due to space, weight, and logistical limits. Additionally, the effectiveness of these systems is compromised by several factors. The amount of oxygen available during a given flight is limited by the number of high-pressure cylinders carried on board the aircraft. Carrying extra cylinders results in a weight and space penalty which reduces operational aircraft capability. Gaseous systems require frequent refilling which prolongs aircraft turnaround time. There also are high risk safety hazards associated with the storage, servicing, and use of high pressure gaseous oxygen systems; and logistical servicing facilities are not normally available at remote locations.

The logistical problems associated with using high pressure gaseous oxygen systems have encouraged the development of molecular sieve oxygen concentration systems for use on board aircraft. The US Army, Navy, and Air Force are studying the applicability of these systems for use on high performance jet aircraft, turbopropeller aircraft, and turbine-powered helicopters (Ernsting et al., 1980; Knox et al., 1981; Miller et al., 1980; and Pettyjohn et al., 1977).

A typical concentrator contains two canisters or "beds" filled with a synthetic zeolite molecular sieve material of five Angstrom pore size. These two beds are pressurized alternately with bleed air diverted from the compressor stage of the turbine engine. During pressurization, oxygen in the bleed air is separated from nitrogen and then vented through the output port. Nitrogen is trapped in the zeolite molecular sieve material. The bed then is depressurized to the atmosphere as a nitrogen exhaust purge which completes the unit's "pressure swing cycle." During this phase of the cycle, some of the concentrated oxygen from the pressurized bed is bled in the reverse direction through the depressurized bed to assist in the nitrogen purge. Thus, when one bed is concentrating oxygen, the other is being purged of nitrogen. A rotary valve directs the flow of bleed air and also controls the flow of oxygen-enriched air and nitrogen purge. The valve is actuated by a 28-volt DC motor that is powered by the aircraft electrical system. A block diagram of this process is shown as Figure 1. This report summarizes the in-flight static performance characteristics of two such oxygen concentrators installed in a

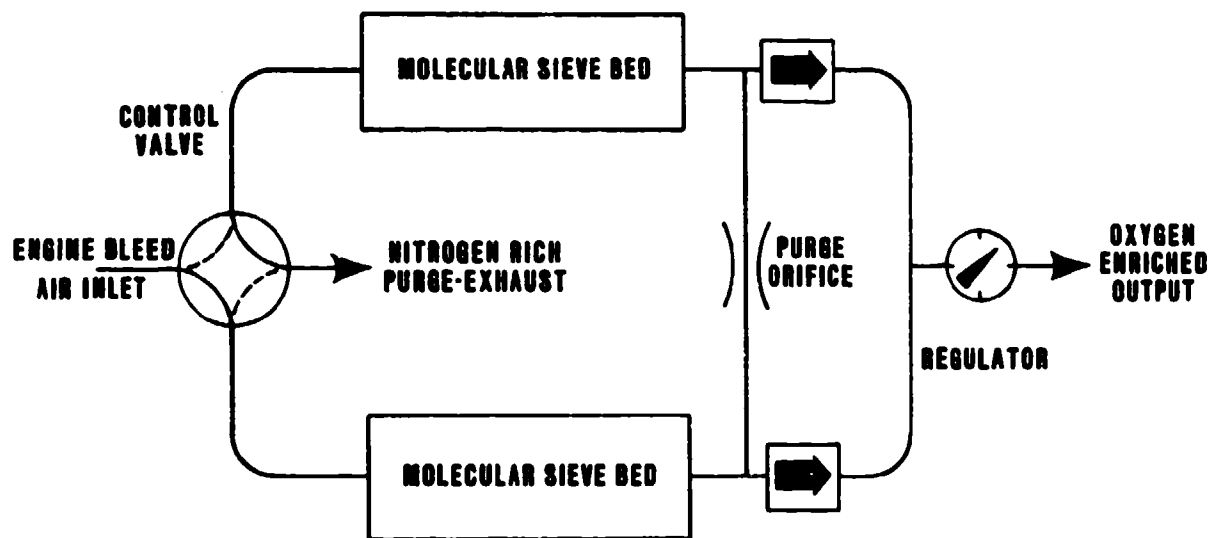

MOLECULAR SIEVE BLOCK DIAGRAM

FIGURE 1. Molecular Sieve Block Diagram

JU-21G fixed-wing, twin-engine, turbopropeller aircraft (Figure 2) and a JUH-1H turbine-powered helicopter (Figure 3). Such an effort is a necessary first step for evaluation of candidate systems within the range of physiological requirements.

METHOD

APPARATUS

Two oxygen concentrators were tested, one manufactured by the Garrett Corporation* and the other by the Bendix Corporation* (Figure 4). Each unit occupies approximately one cubic foot and operates by basically the same method.

In the JU-21G, instrumentation for in-flight testing and data collection was installed in a specially-built test stand (Figure 5). Bleed air from the right engine at 15 to 55 pounds per square inch gauge (psig) was fed into the test stand through a 15.78mm (5/8-inch) internal diameter (ID) oxygen line. A 4.5-liter plenum chamber was installed to facilitate instrumentation and dampen pressure fluctuations caused by the pressure swing of the molecular sieve concentrator. Inlet bleed air pressure was measured by a Validyne differential pressure transducer* and a Harris sight gauge.* Temperature was measured with a Cole-Palmer digital thermometer* before the air was directed from the plenum chamber through the oxygen concentrator. The oxygen-enriched air (product gas) exited the concentrator and passed into a second 4.5-liter plenum chamber where the outlet pressure and temperature again were monitored and recorded using another Validyne differential pressure transducer, Harris sight gauge, and Cole-Palmer digital thermometer. Upon exiting the outlet plenum, the product gas was fed through a 9.5mm (3/8-inch) ID oxygen line to a Technology, Incorporated mass flow meter.* A shutoff valve, in conjunction with a Fischer-Porter rotameter*, was used to set various flows. Oxygen concentration was measured using a fast response Beckman OM-14 oxygen analyzer* equipped with an altitude sensor. A Wallace and Tiernan barometer* was used to measure ambient barometric pressures. Standard aircraft instrumentation was used for torque, engine temperature, airspeed, and altitude measurements. Calibration of instrumentation was maintained on a flight-by-flight basis at both ground level and at the various sampling altitudes.

The same instrumentation package was used for testing in the JUH-1H with the only difference being a slight modification of the test stand to allow for proper securing of the stand to the helicopter's cargo attachment points.

*Indicates product manufacturer listed in Appendix A.



FIGURE 2. JU-21G Research Aircraft.



FIGURE 3. JUH-1H Research Aircraft.

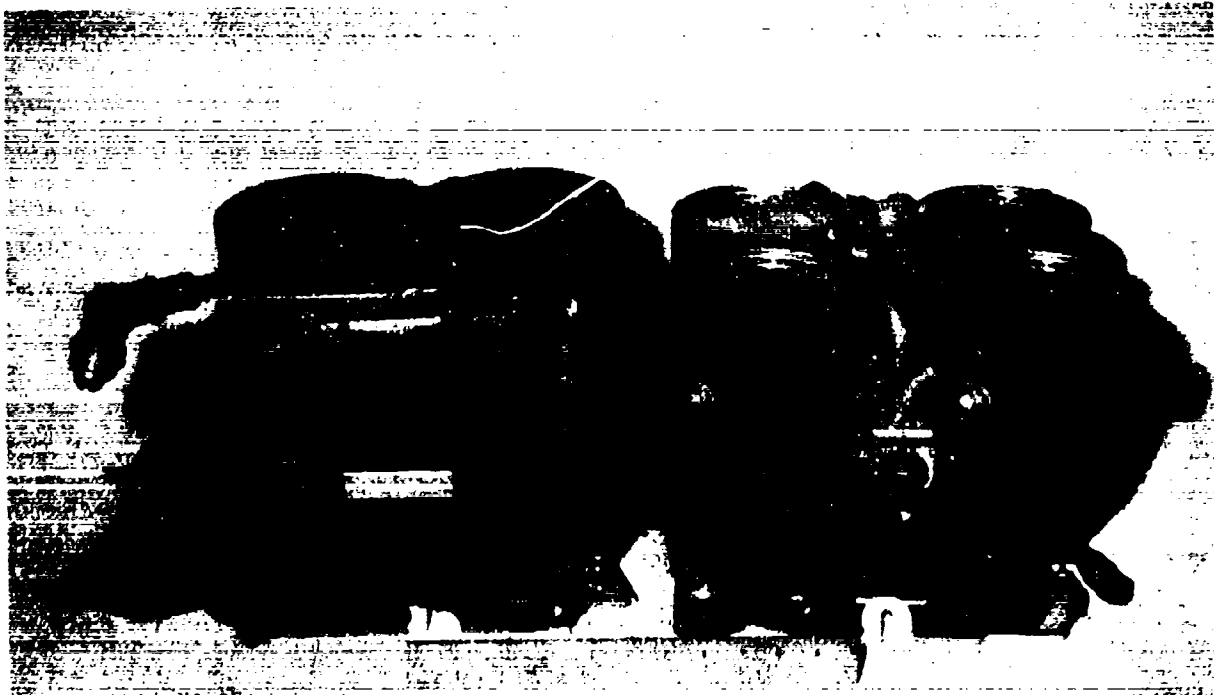


FIGURE 4. Oxygen Concentrators--Bendix Unit (Left), Garrett Unit (Right).

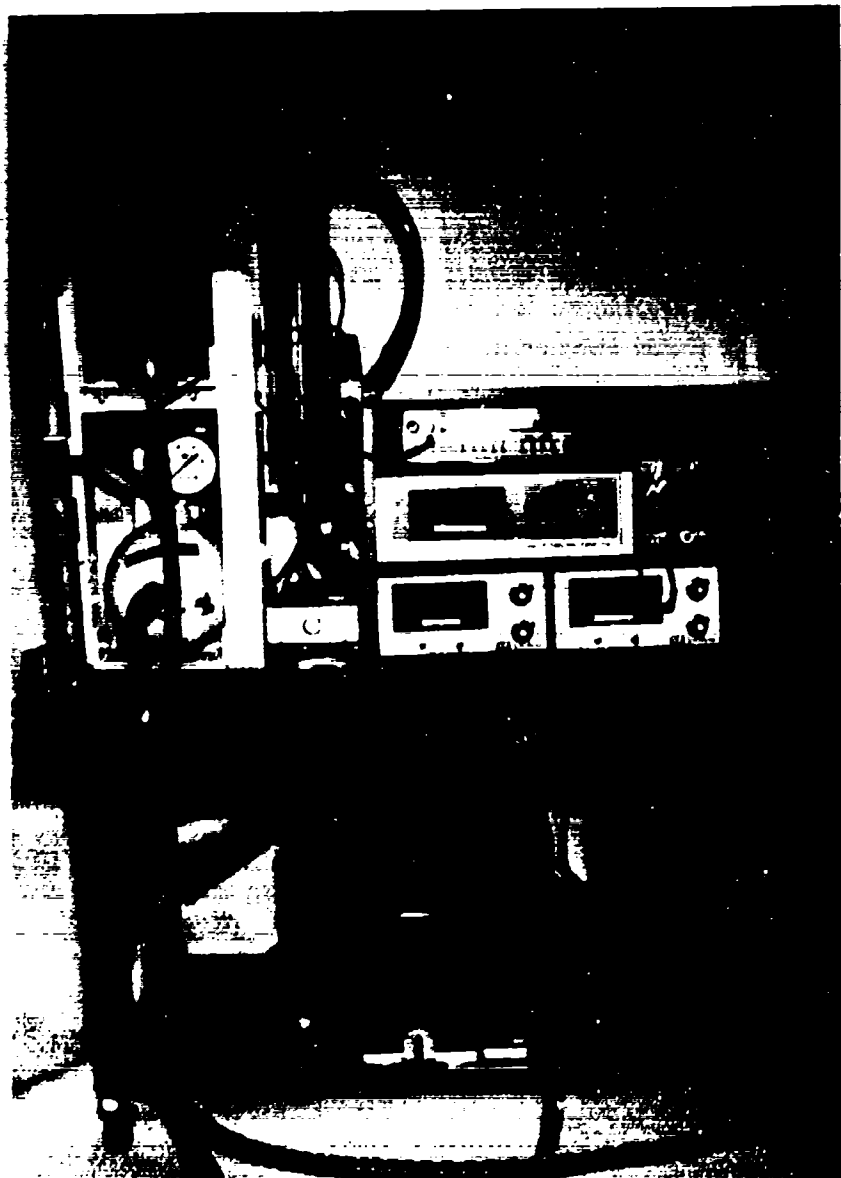


FIGURE 5. Test Stand.

PROCEDURE

In the JU-21G, five separate flights at altitudes of 1,524, 3,048, 4,572, 6,096, and 7,620 meters (5,000, 10,000, 15,000, 20,000, and 25,000 feet) were conducted with each oxygen concentration unit. Four different flows of 15, 25, 35, and 70 liters per minute were chosen to represent normal breathing requirements for one- and two-man crews. Data were recorded for each flow at all altitudes and at both minimum and maximum engine power settings. Minimum power was defined as the power required to fly at 130 knots indicated airspeed (IAS) while maximum power was defined as 208 knots IAS with Interstage Turbine Temperature (ITT) not to exceed 705°C. At these power settings, the inlet bleed air pressures at the oxygen concentrator were consistently in the range of 28 to 55 psig and oxygen-enriched air outlet pressure ranged from 22 to 28 psig, which is well within the limits of the low pressure oxygen regulators designed for use with molecular sieve oxygen concentration units. In the JUH-1H, five separate flights at altitudes of 1,524, 3,048, and 4,572 meters (5,000, 10,000, and 15,000 feet) were conducted with each oxygen concentration unit. Flow rates were the same as in the JU-21G, and the engine power setting was constant over the entire flight test period.

RESULTS

Oxygen concentrations and other system considerations for the JU-21G flights are shown for the Bendix unit in Table 1 and for the Garrett unit in Table 2. Oxygen concentration and system data for the JUH-1H flights are shown in Table 3 for the Bendix unit and in Table 4 for the Garrett unit. Generally, with both units, oxygen concentration decreased with increased flow and increased with higher altitude. In the JU-21G, oxygen concentration generally decreased with the higher engine power setting. However, with the Bendix unit, this condition was reversed in some instances. In all cases, as shown in Figures 6 through 11, oxygen concentration met or exceeded the requirements (indicated by the stippled area) of MIL-R-83178.

Data first recorded upon reaching a new altitude (low flows, Figures 6-9) often showed overlap where it was supposed there should be none. A careful review of data collection procedures revealed that it usually took 4 to 6 minutes for the system to stabilize and be repeatable. In order to test the working hypothesis that the initial readings in Figures 6 through 9 were taken prior to system equilibrium, data were recorded during three additional flights in the JU-21G at each altitude, allowing more time between flow changes and altitude changes for the system to stabilize. The data for the Garrett unit is presented in Table 5 and Figures 12 and 13 for these additional flights. Two low-altitude flights were made with the Bendix unit when the aircraft

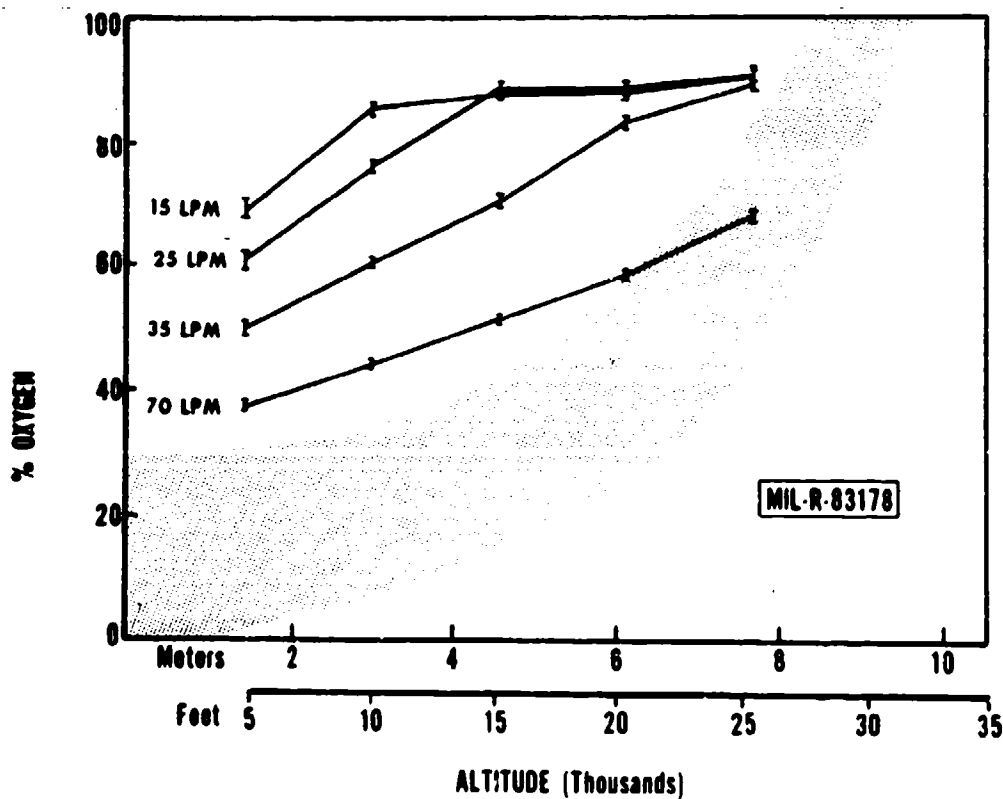


FIGURE 6. Oxygen concentration vs. altitude in JU-21G (Bendix unit, minimum power). Stippled area indicates oxygen requirements of MIL-R-83178. Bars indicate standard deviation at each data point.

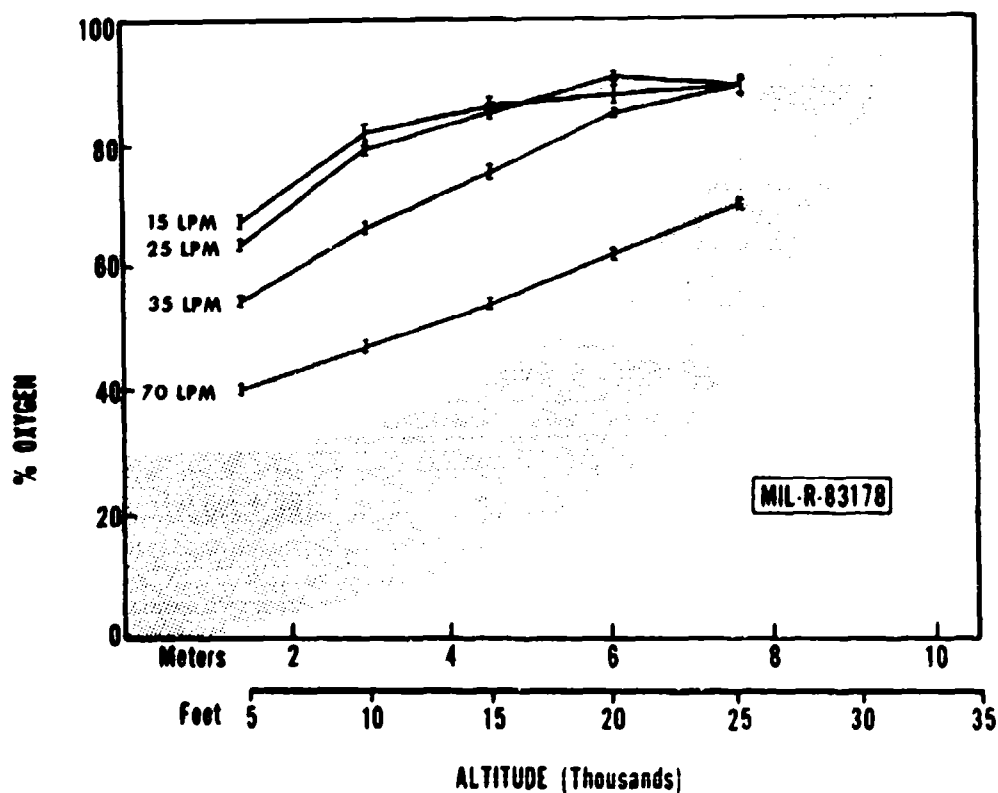


FIGURE 7. Oxygen concentration vs. altitude in JU-21G (Bendix unit, maximum power). Stippled area indicates oxygen requirements of MIL-R-83178. Bars indicate standard deviation at each data point.

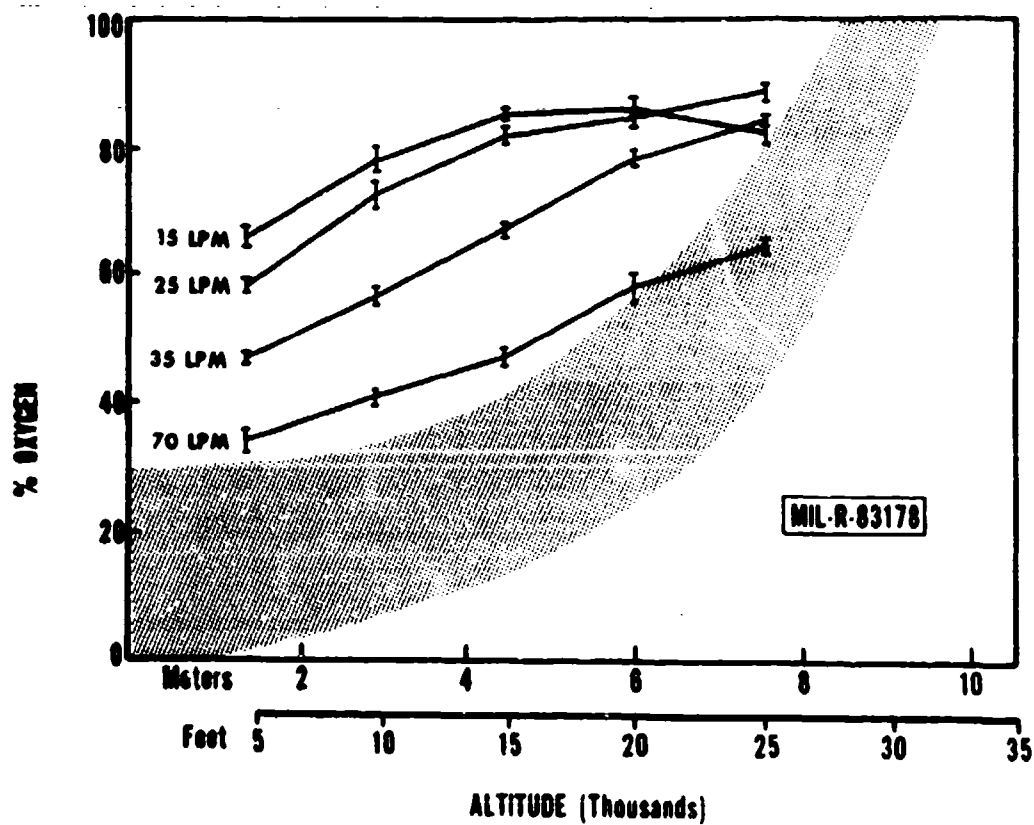


FIGURE 8. Oxygen concentration vs. altitude in JU-21G (Garrett unit, minimum power). Stippled area indicates oxygen requirements of MIL-R-83178. Bars indicate standard deviation at each data point.

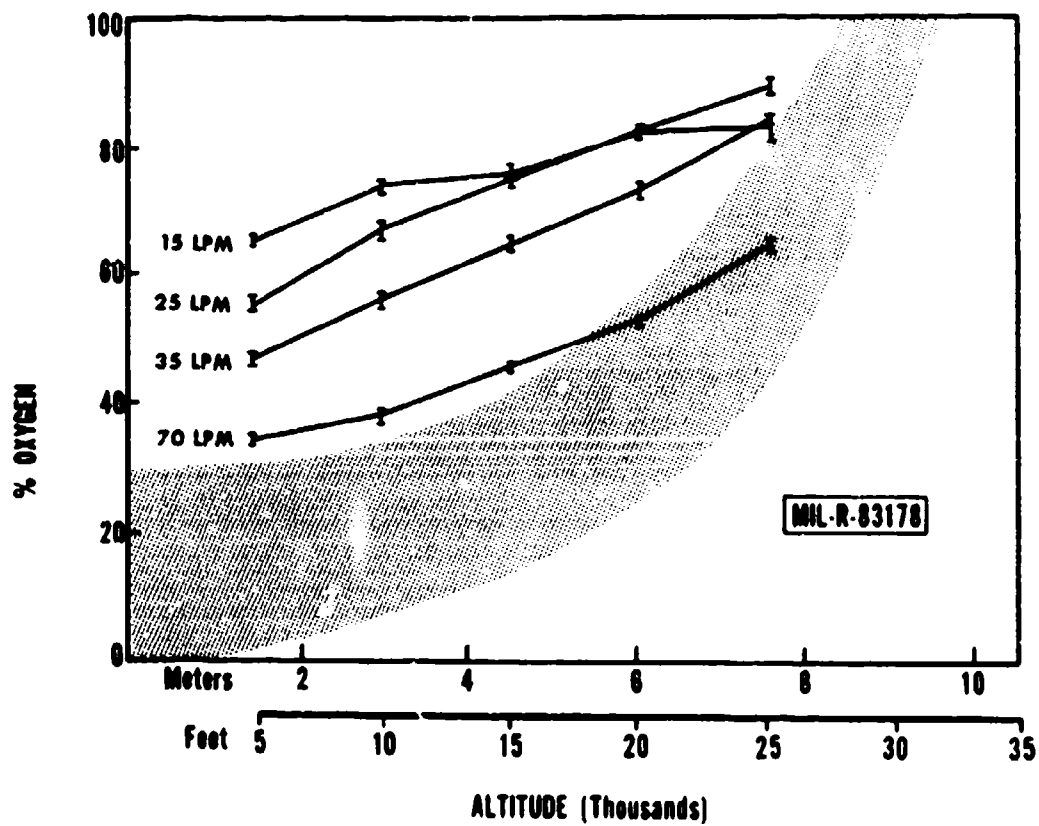


FIGURE 9. Oxygen concentration vs. altitude in JU-21G (Garrett unit, maximum power). Stippled area indicates oxygen requirements of MIL-R-83178. Bars indicate standard deviation at each data point.

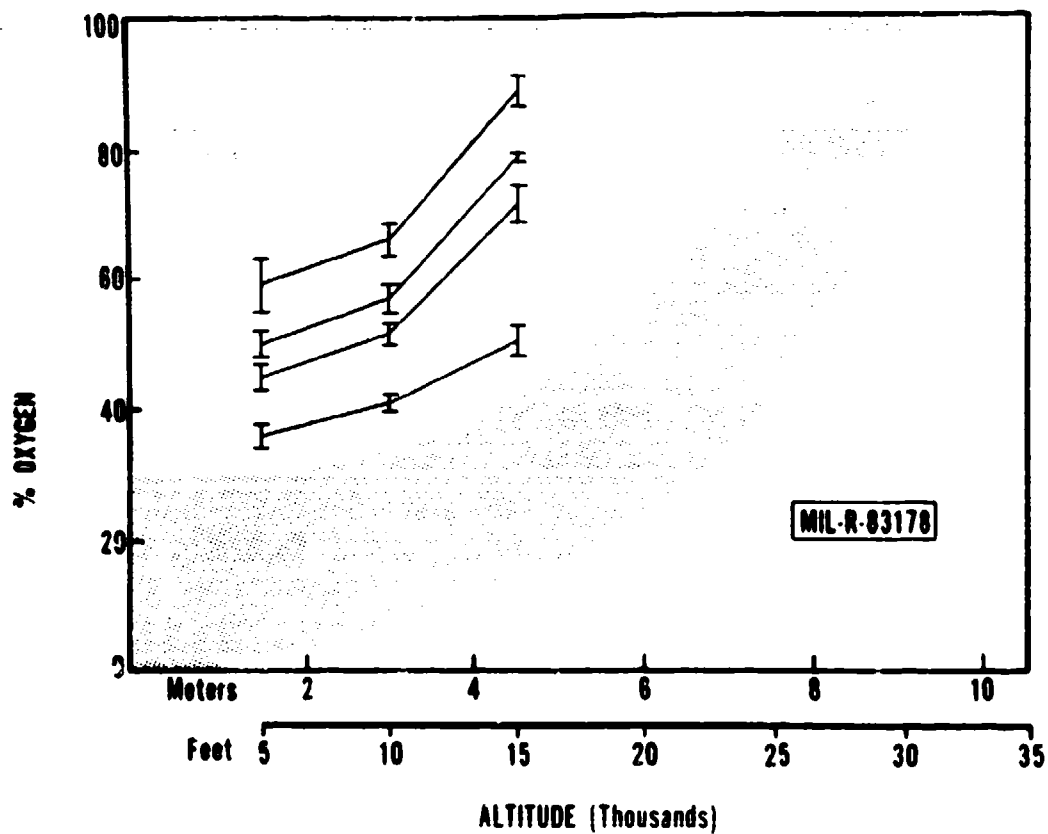


FIGURE 10. Oxygen concentration vs. altitude in JUH-1H (Bendix unit). Stippled area indicates oxygen requirements of MIL-R-83178. Bars indicate standard deviation at each data point.

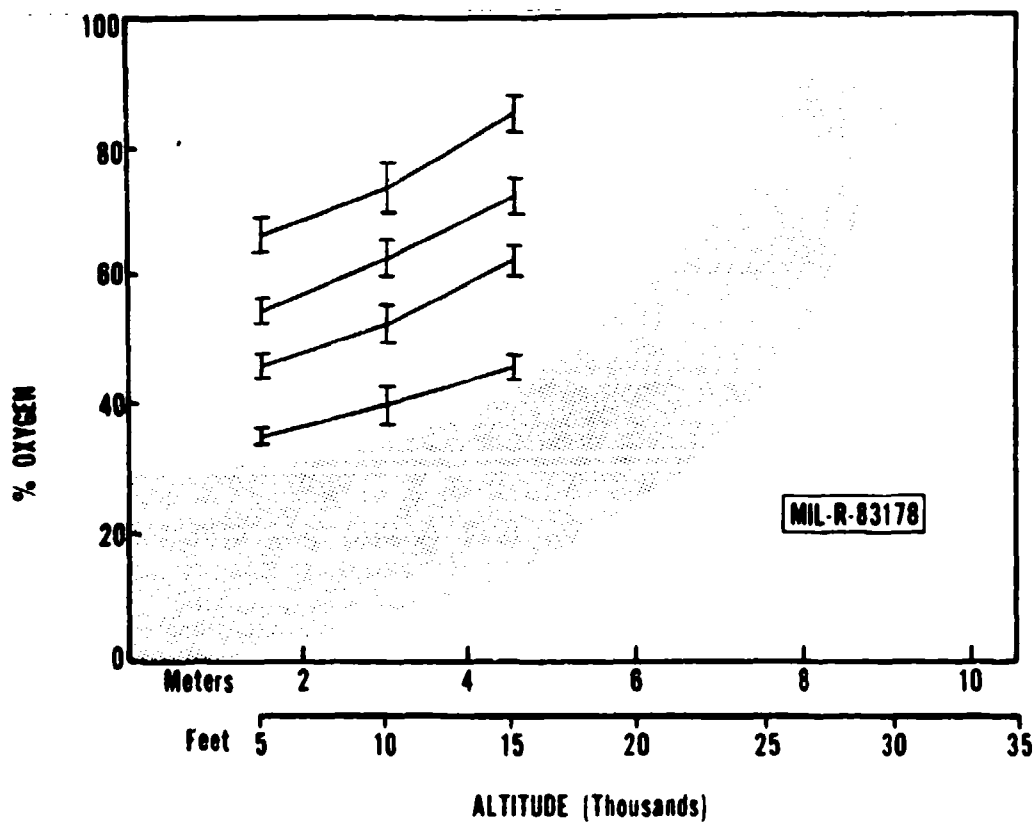


FIGURE 11. Oxygen concentration vs. altitude in JUH-1H (Garrett unit). Stippled area indicates oxygen requirements of MIL-R-83178. Bars indicate standard deviation at each data point.

TABLE 1

OXYGEN CONCENTRATION AND SYSTEM CONDITION UNDER STATIC FLOW (BENDIX/JU-21G)

Altitude (Meters)	Flow (LPM)	Inlet Temp (°C)	Outlet Temp (°C)	Inlet Press (psig)	Outlet Press (psig)	O ₂ Conc $\bar{X}$	(%) S _x
1524 (Min)*	15	41.0	20.1	34.2	30.4	69.3	8.8
	25	41.6	20.6	33.8	30.3	60.8	5.8
	35	41.3	21.9	34.0	30.0	49.7	4.4
	70	42.7	21.6	34.0	28.2	38.3	1.5
1524 (Max)*	15	47.0	23.1	55.2	34.9	67.9	5.2
	25	47.9	23.1	55.2	35.0	63.5	2.9
	35	48.5	23.4	55.0	34.8	54.7	2.4
	70	50.2	23.9	54.2	33.6	40.9	1.7
3048 (Min)	15	47.3	26.1	32.0	28.9	83.6	2.9
	25	46.6	26.5	32.5	28.7	76.5	3.6
	35	45.8	26.6	31.7	28.6	60.3	1.5
	70	45.1	27.1	32.5	27.6	44.6	2.0
3048 (Max)	15	49.4	27.3	49.5	33.8	82.0	7.2
	25	50.4	27.6	49.7	33.6	79.0	3.5
	35	51.2	27.9	50.0	33.4	66.1	2.3
	70	51.7	28.1	49.3	32.5	47.8	1.9
4572 (min)	15	46.7	27.1	30.3	27.8	88.2	6.0
	25	45.3	27.1	30.2	27.5	89.1	5.1
	35	44.4	27.2	30.7	27.6	71.1	4.6
	70	43.9	27.6	30.8	27.5	50.9	3.4
4572 (Max)	15	45.8	27.7	41.5	31.1	86.7	5.4
	25	47.1	27.7	41.8	30.9	85.7	5.5
	35	47.8	27.9	41.8	31.0	75.7	3.9
	70	48.4	28.4	42.0	30.0	53.5	2.7

TABLE 1 (Cont.)

Altitude (Meters)	Flow (LPM)	Inlet Temp (°C)	Outlet Temp (°C)	Inlet Press (psig)	Outlet Press (psig)	O ₂ Conc $\bar{x}$	(%) S _x
6096 (Min)	15	45.4	25.4	29.4	28.8	88.2	5.1
	25	43.8	25.9	28.8	27.7	88.5	4.9
	35	42.9	26.5	30.2	27.6	83.5	4.4
	70	42.1	26.9	30.1	27.7	58.7	2.5
6096 (Max)	15	43.2	25.9	35.0	30.5	86.8	6.1
	25	43.5	26.0	34.8	30.1	90.1	3.6
	35	43.5	26.2	34.8	29.9	85.6	1.9
	70	43.7	26.4	35.0	29.5	61.9	1.7
7620 (Min/Max)**	15	42.3	27.2	29.4	27.8	89.7	5.5
	25	41.9	26.9	29.8	27.5	89.8	5.8
	35	41.6	26.8	29.6	27.4	88.8	5.8
	70	41.5	26.8	29.2	27.2	69.2	2.8

*Minimum power defined as 130 knots IAS. Maximum power defined as 208 knots IAS with ITT not to exceed 705°C.

**At 7620 meters, minimum and maximum power setting is the same.

TABLE 2

OXYGEN CONCENTRATION AND SYSTEM CONDITION UNDER STATIC FLOW (GARRETT/JU-21G)

Altitude (Meters)	Flow (LPM)	Inlet Temp (°C)	Outlet Temp (°C)	Inlet Press (psig)	Outlet Press (psig)	O ₂ Conc $\bar{X}$	S _x
1524 (Min)*	15	35.9	20.8	34.2	27.6	64.5	6.0
	25	38.0	20.5	34.8	27.1	57.7	1.9
	35	39.0	20.5	35.0	26.7	46.3	2.3
	70	40.1	20.5	35.6	26.7	33.7	1.9
1524 (Max)*	15	43.6	21.4	54.2	33.9	64.7	2.0
	25	44.6	21.0	54.5	33.9	55.7	5.9
	35	45.4	21.1	54.5	33.7	46.0	4.1
	70	46.1	21.5	54.2	33.0	34.0	2.7
3048 (Min)	15	43.7	22.1	34.0	27.2	78.1	8.4
	25	43.0	22.3	33.4	27.2	72.6	7.9
	35	42.5	22.5	32.6	26.3	55.9	5.9
	70	42.1	22.6	32.2	25.5	40.3	3.2
3048 (Max)	15	45.9	23.3	53.0	27.4	73.5	4.2
	25	47.0	23.4	52.6	26.8	67.4	6.6
	35	47.8	23.3	53.2	26.0	55.7	4.9
	70	48.3	23.5	50.2	26.0	38.6	4.1
4572 (Min)	15	41.5	25.0	30.0	25.5	84.6	2.2
	25	40.4	24.8	30.8	25.2	80.9	4.7
	35	39.5	24.5	31.2	25.1	67.5	3.6
	70	38.8	26.0	30.8	24.8	47.2	3.9
4572 (Max)	15	38.7	23.6	45.4	24.3	75.7	3.8
	25	40.1	23.1	44.8	24.2	75.1	4.0
	35	41.4	22.8	44.6	24.2	60.0	4.0
	70	42.4	22.9	44.0	23.5	46.0	2.2

TABLE 2 (Cont.)

Altitude (Meters)	Flow (LPM)	Inlet Temp (°C)	Outlet Temp (°C)	Inlet Press (psig)	Outlet Press (psig)	O ₂ Conc $\bar{X}$	(%) S_x
6096 (Min)	15	41.3	23.8	29.2	26.8	86.0	5.8
	25	40.3	24.2	29.2	24.7	84.4	5.4
	35	39.5	24.7	28.8	24.4	78.7	5.2
	70	38.9	24.9	28.8	25.0	57.2	9.4
6096 (Max)	15	39.2	25.8	41.0	25.5	81.2	3.7
	25	40.0	26.0	40.0	24.7	81.8	3.7
	35	40.6	26.2	40.0	24.1	73.5	4.2
	70	41.2	26.3	39.0	23.8	52.7	3.4
7620 (Min/Max)**	15	40.0	25.6	31.2	24.5	82.1	9.5
	25	39.5	25.3	31.6	24.4	88.7	4.6
	35	39.1	25.1	30.8	24.1	83.4	3.4
	70	38.9	24.7	31.4	24.6	63.8	3.3

*Minimum power defined as 130 knots IAS. Maximum power defined as 208 knots IAS with ITT not to exceed 705°C.

**At 7620 meters, minimum and maximum power setting is the same.

TABLE 3

OXYGEN CONCENTRATION AND SYSTEM CONDITION UNDER STATIC FLOW (BENDIX/JUH-1H)

Altitude (Meters)	Flow (LPM)	Inlet Temp (°C)	Outlet Temp (°C)	Inlet Press (psig)	Outlet Press (psig)	O ₂ Conc X	(%) S _x
1524	15	42.7	23.3	53.0	26.8	58.7	4.0
	25	41.9	23.3	53.0	26.5	50.0	2.1
	35	42.1	23.6	52.8	26.3	44.4	2.1
	70	43.2	25.2	52.8	25.1	35.9	1.6
3048	15	42.5	24.1	47.0	25.7	65.3	2.7
	25	42.5	24.1	46.6	25.4	56.6	2.0
	35	42.6	24.2	46.8	25.2	51.3	1.5
	70	43.6	25.6	46.6	24.4	40.8	1.2
4572	15	44.5	21.6	43.1	26.3	89.1	2.8
	25	44.1	19.3	42.9	25.9	79.0	0.6
	35	43.2	17.5	42.7	25.8	71.3	2.7
	70	43.2	16.8	42.4	25.3	50.6	1.8

TABLE 4

OXYGEN CONCENTRATION AND SYSTEM CONDITION UNDER STATIC FLOW (GARRETT/JUH-1H)

Altitude (Meters)	Flow (LPM)	Inlet Temp (°C)	Outlet Temp (°C)	Inlet Press (psig)	Outlet Press (psig)	O ₂ Conc $\bar{x}$	S _x (%)
1524	15	44.4	24.1	52.8	22.2	66.2	2.6
	25	45.1	23.8	52.2	22.1	54.3	2.0
	35	45.6	23.8	52.6	22.0	45.3	1.7
	70	46.7	24.6	52.6	21.3	34.8	1.8
3048	15	46.3	24.1	47.4	22.0	74.0	4.3
	25	46.4	23.7	47.6	22.1	62.4	2.4
	35	46.4	23.3	47.6	22.2	53.2	2.7
	70	47.0	23.7	47.2	21.5	39.7	2.2
4572	15	47.8	19.9	43.7	21.8	85.5	3.1
	25	46.6	18.7	43.1	21.7	72.9	3.0
	35	46.0	17.9	43.0	21.4	62.1	2.3
	70	46.0	17.7	42.7	20.9	45.7	2.0

TABLE 5

OXYGEN CONCENTRATION AND SYSTEM CONDITION UNDER STATIC FLOW (GARRETT/JU-21G)

SUPPLEMENTAL DATA

Altitude (Meters)	Flow (LPM)	Inlet Temp (°C)	Outlet Temp (°C)	Inlet Press (psig)	Outlet Press (psig)	O ₂ Conc $\bar{x}$	S _x
1524 (Min)	15	46.9	26.8	36.1	22.3	77.6	1.4
	25	45.9	26.0	37.0	22.1	59.4	2.9
	35	48.6	25.5	36.8	22.2	49.6	1.0
	70	49.0	25.9	36.4	21.3	36.6	0.3
1524 (Max)	15	50.4	25.2	61.4	23.1	72.8	2.0
	25	52.7	24.9	61.1	23.0	54.4	1.3
	35	53.3	24.7	61.0	22.7	46.0	0.4
	70	57.1	25.5	60.3	21.8	35.2	0.6
3048 (Min)	15	50.5	24.5	34.8	23.1	85.8	4.9
	25	48.3	24.1	34.7	23.0	70.2	6.9
	35	47.8	24.4	34.6	23.1	56.2	1.6
	70	48.2	25.1	30.6	22.5	40.6	1.8
3048 (Max)	15	49.6	25.1	53.6	22.7	75.3	0.8
	25	50.8	25.2	53.6	22.5	60.4	1.4
	35	51.6	25.8	53.2	22.3	51.0	1.2
	70	52.3	26.9	53.0	21.5	37.6	0.4
4572 (Min)	15	49.4	26.1	30.4	22.5	84.4	2.4
	25	48.5	26.1	30.8	22.7	71.4	1.3
	35	48.1	26.1	30.8	22.7	59.1	1.4
	70	48.1	26.8	30.1	21.9	41.4	0.4

TABLE 5 (Cont.)

Altitude (Meters)	Flow (LPM)	Inlet Temp (°C)	Outlet Temp (°C)	Inlet Press (psig)	Outlet Press (psig)	O ₂ Conc $\bar{x}$	(%) S_x
4572 (Max)	15	50.8	26.3	46.3	22.4	76.0	4.5
	25	51.2	26.2	46.4	22.8	64.2	2.7
	35	51.4	26.2	46.4	22.4	55.9	1.1
	70	51.6	27.0	46.2	22.0	39.7	0.7
6096 (Min)	15	51.2	24.9	33.7	23.1	92.1	3.0
	25	47.5	24.0	35.3	22.9	83.2	3.1
	35	47.6	23.5	35.0	22.7	72.3	3.7
	70	48.5	23.5	34.5	22.7	50.4	1.9
6096 (Max)	15	52.5	23.6	40.3	22.7	88.7	4.0
	25	53.3	22.8	40.4	22.6	78.0	3.1
	35	54.1	22.8	40.1	22.4	67.8	2.7
	70	54.7	23.1	40.1	21.9	50.1	2.6
7620 (Min/Max)	15	46.6	21.5	34.0	23.2	90.5	3.7
	25	44.8	20.7	33.9	23.0	88.7	1.7
	35	44.3	20.2	33.9	23.0	78.7	2.8
	70	44.1	20.1	31.9	22.9	56.0	1.3

suffered a lightning strike. The aircraft main electrical inverters malfunctioned and the motor in the Bendix On-Board Oxygen Generating System (OBOGS) unit would not operate in the laboratory after the flight. The unit is being repaired. No additional data for the Bendix unit is reported.

Other aircraft flight parameters which were recorded, but not included in this report were engine torque and ITT or exhaust gas temperature. There was no noticeable difference in the instrumentation readings nor could the pilots "feel" when the concentrators were being driven by bleed air.

DISCUSSION

Static testing of the molecular sieve concept of onboard oxygen concentration systems for the Army aircraft is a necessary first step to insure their physiological adequacy. Although each unit met or exceeded the requirements of MIL-R-83178, the results obtained in the JUH-1H helicopter differed from those obtained in the JU-21G fixed-wing aircraft. A comparison of these results shows that the Garrett unit performed similarly in both aircraft when the JU-21G was at maximum power. The Bendix unit, however, in some instances, produced a lower oxygen concentration in the JUH-1H than in the JU-21G. A comparison of these data with the data in Table 1 of Ernsting et al. (1980) reveals that operation of these units in flight produces oxygen concentrations slightly higher with the Garrett unit and slightly lower with the Bendix unit than the respective values obtained during tests in the hypobaric chamber.

The oxygen concentration process of the molecular sieve depends on many factors including flow, inlet temperature, inlet pressure, and the pressure differential across the molecular sieve bed. Additionally, although the cause has not been definitely determined, the resistance of the nitrogen exhaust purge hose seems to be a factor and attention should be directed to the design of an exhaust port to maximize oxygen concentration. The differences in oxygen concentration reported here and those reported by Ernsting are probably a result of differences in all of these factors. One notable difference in test procedures was our use of heated engine bleed air instead of unheated laboratory instrument air as used in Ernsting's hypobaric chamber tests. Both units have internal pressure regulators which limit the inlet pressure to between 25 and 28 psig. This effectively eliminates the effect of bleed air pressure changes that might result from differing engine power settings since even minimum engine power settings produce bleed air pressure in excess of 25 psig.

The use of engine bleed air to drive the oxygen concentrators produced no noticeable effect on aircraft performance.

During the upcoming toxicology phase of this project, in which tests will be conducted to determine whether or not any harmful substances from

bleed air exhaust are passed through the molecular sieve, the noted variables will be studied more closely and an attempt will be made to optimize them for maximum oxygen production.

The results in Table 5 and Figures 12 and 13 confirm the hypothesis that some early readings were taken prior to system equilibrium. This means that the first set of data is slightly more conservative in stating oxygen output at low flows and at the lower altitudes.

The primary objective of the study was to assess the physiological adequacy of these molecular sieve oxygen concentration units in order to qualify them for human use so that dynamic-human interface can be studied in flight. The results obtained indicate that both units generate enough oxygen to support two human subjects in a dynamic breathing study. There is a possibility that two aviators under high workload conditions (e.g. Night NOE with NVG) would require minute volumes greater than these systems can produce.

CONCLUSIONS

Oxygen production by each of the molecular sieve oxygen concentrators studied met or exceeded the requirements of MIL-R-83178 at all flows and altitudes. Both units have shown themselves capable of producing the oxygen required at normal minute volumes for a one- or two-man crew on the JUH-1H and JU-21G aircraft. However, in cases where no air mix is allowed and the aviators are under high stress, it would be possible for two aviators to attempt to overbreathe the system. Prior to initial human interface studies, however, it will be necessary to complete product gas toxicology tests to insure that contaminants from aircraft engine bleed air are not passed through the concentrators in harmful amounts.

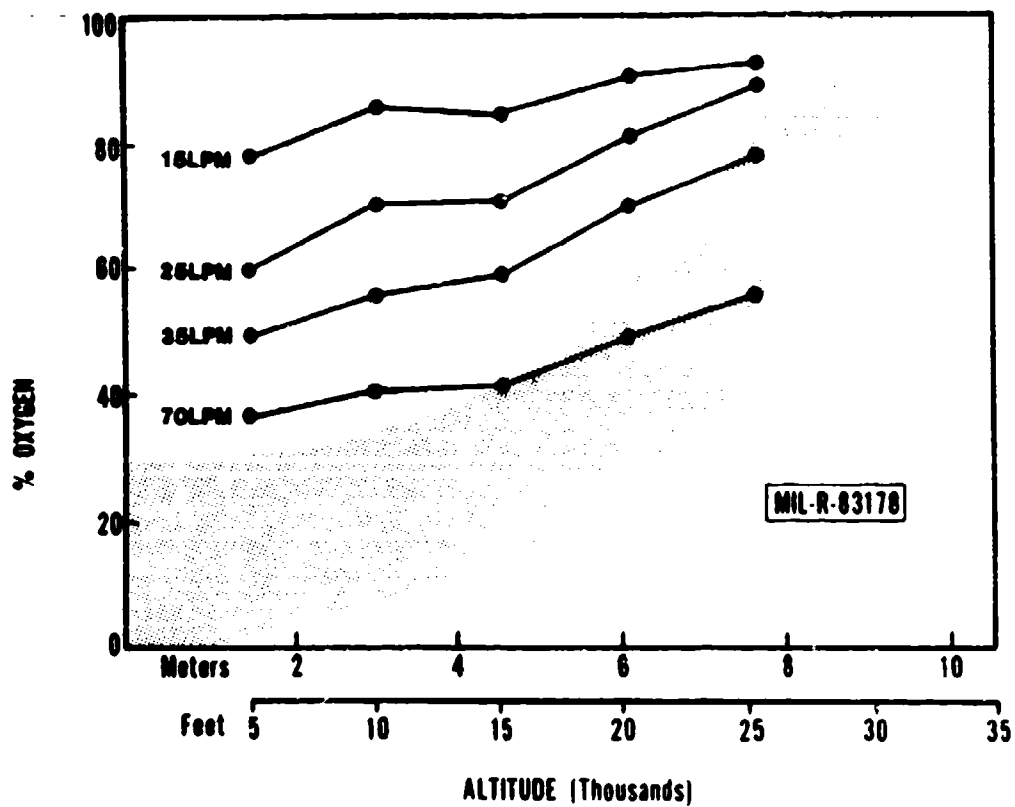


FIGURE 12. Garrett Minimum Power - JU-21G. (Supplemental Data)

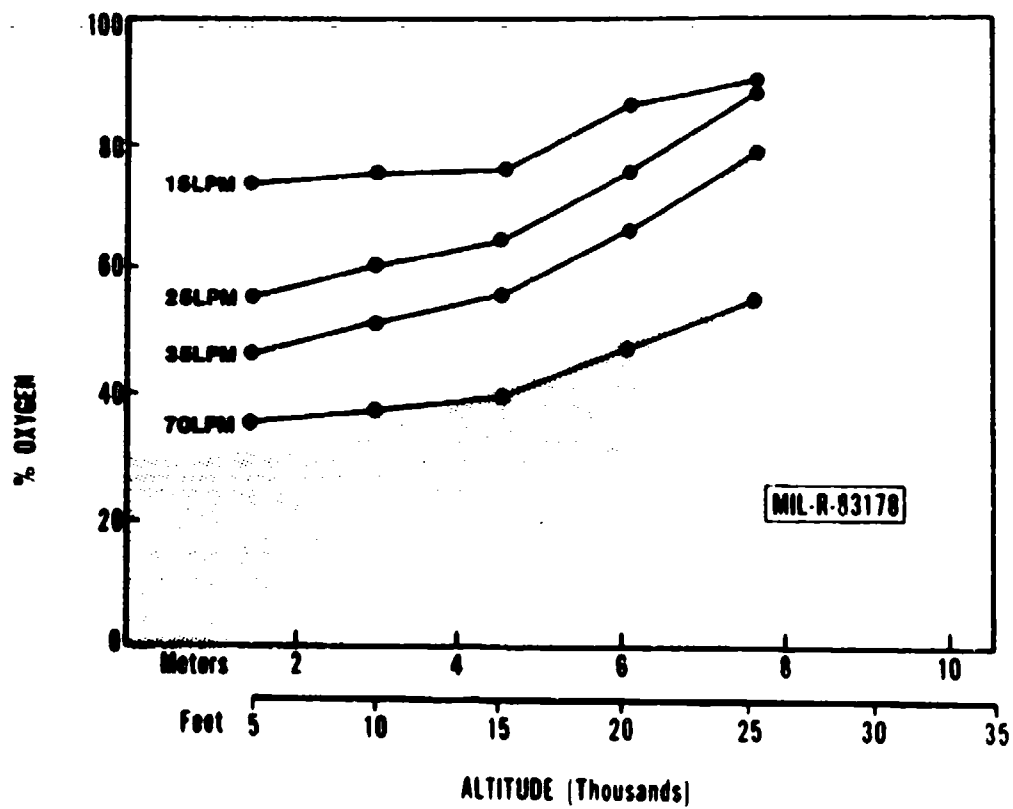


FIGURE 13. Garrett Maximum Power - JU-21G. (Supplemental Data)

REFERENCES CITED

- Ernsting, J., Armstrong, R. N., Hiott, B. F., and Holden, R. D. 1980. *A physiological evaluation of two types of molecular sieve generation systems*. Preprints of the scientific program, Aerospace Medical Association, 1980 Annual Scientific Meeting; Anaheim, CA. pp. 131-132.
- Knox, F. S., Hiott, B. F., Alexander, J., Jr., and Biggs, F. 1981. *Evaluation of onboard oxygen systems for U.S. Army aircraft*. Preprints of the Scientific Program, Aerospace Medical Association, 1981 Annual Scientific Meeting; San Antonio, TX. pp. 195-196.
- Miller, R. L., Ikels, K. G., Lamb, M. J., Brooks, E. J., and Ferguson, R. H. 1980. *Molecular sieve generation of aviator's oxygen: Performance of a prototype under simulated flight conditions*. Aviation, Space and Environmental Medicine 51(7):665-673
- Pettyjohn, F. S., McNeil, R. J., Akers, L. A., Rice, G. P., and Piper, C. F. 1977. *Aeromedical evaluation of the Army molecular sieve oxygen generation (AMSOG) systems*. Fort Rucker, AL: U.S. Army Aeromedical Research Laboratory. USAARL Report 77-10.
- Department of Defense. 1974. *General Specifications for Regulator, Oxygen, Diluter Demand, and Automatic Pressure Breathing*. Washington, DC: Dept. of Defense. MIL-R-83178.

APPENDIX A

EQUIPMENT AND MANUFACTURER LIST

EQUIPMENT AND MANUFACTURER LIST

Molecular Sieve Oxygen Generator
Model 2202490-1-1
Serial #49-R1
AiResearch Mfg Co. of California
Garrett Corporation

Validyne Differential Pressure
Transducer
1914 Londelius Street
Northridge, California 91324

Technology Incorporated, Mass
Flow Meter
Dayton, Ohio 45431

Harris Pressure Gauge
Melbourne, Florida 32901

Wallace and Tiernan Barometer
Belleville, New Jersey 07109

Molecular Sieve Oxygen Concentrator
Model 99251-3261009-0105
Serial #90801 5E
*Bendix Instruments and Life Support
Division
Davenport, Iowa 52802

Beckman OM-14 Oxygen Analyzer
2500 Harbor Boulevard
Fullerton, California 92634

Cole-Palmer Digital Thermometer
Chicago, Illinois 60648

Fischer-Porter Rotameter
Warminster, Pennsylvania 18974

*Now known as Clifton Precision

INITIAL DISTRIBUTION

Commander
US Army Natick R & D Laboratories
ATTN: Tech Librarian
Natick, MA 01760

Commander
US Army Research Institute of
Environmental Medicine
Natick, MA 01760

US Navy
Naval Sub Med Rsch Lab
Med Library, Naval Submarine Base
Box 900
Groton, CT 06340

US Army Avionics R & D Activity
ATTN: DAVAA-O
Fort Monmouth, NJ 07703

Cdr/Dir
US Army Combat Surveillance &
Target Acquisition Lab
ATTN: DELCS-D
Fort Monmouth, NJ 07703

US Army R & D Technical
Support Activity
Fort Monmouth, NJ 07703

Commander
10th Medical Laboratory
ATTN: DEHE (Audiologist)
APO New York 09180

Chief
Benet Weapons Laboratory
LCWSL, USA ARRADCOM
ATTN: DRDAR-LCB-TL
Watervliet Arsenal
Watervliet, NY 12189

Commander
Naval Air Development Center
Biophysics Lab (ATTN: George Kydd)
Code 60B1
Warminster, PA 18974

Human Factors Engr Div
Acft & Crew Systems Tech Dir
Naval Air Development Center
Warminster, PA 18974

Naval Air Development Center
Tech Info Div
Technical Support Department
Warminster, PA 18974

Commander
Naval Air Development Center
ATTN: Code 6022 (Mr. Brindle)
Warminster, PA 18974

Dr. E. Hendler
Code 6003
Naval Air Development Center
Warminster, PA 18974

Director
Army Audiology & Speech Center
Walter Reed Army Medical Center
Forest Glen Section, Bldg 156
Washington, DC 20012

Director
Walter Reed Army Institute
of Research
Washington, DC 20012

Commander
US Army Institute of
Dental Research
Walter Reed Army Medical Center
Washington, DA 20012

Uniformed Services University
of the Health Sciences
4301 Jones Bridge Road
Bethesda, MD 20014

Commanding Officer
Naval Medical R & D Command
National Naval Medical Center
Bethesda, MD 20014

Under Secretary of Defense for
Research and Engineering
ATTN: Mil Asst for Medical
and Life Sciences
Washington, DC 20301

Director of Professional Services
Office of The Surgeon General
Department of the Air Force
Washington, DC 20314

Naval Air Systems Command
Tech Library Air 950D
Rm 278, Jefferson Plaza II
Department of the Navy
Washington, DC 20361

US Navy
Naval Research Lab Library
Code 1433
Washington, DC 20375

US Navy
Naval Research Lab Library
Shock & Vibration Info Ctr
Code 8404
Washington, DC 20375

Harry Diamond Laboratories
Scientific & Technical
Information Offices
2800 Powder Mill Road
Adelphi, MD 20783

Director
US Army Human Engineering
Laboratory
ATTN: Tech Library
Aberdeen Proving Ground, MD
21005

US Army Material Systems
Analysis Agency
ATTN: Reports Dist
Aberdeen Proving Ground, MD
21005

US Army Ordnance Center
and School
Library, Bldg 3071
ATTN: ATSL-DOSL
Aberdeen Proving Ground, MD
21005

Director
Ballistics Research Lab
ATTN: DRDAR-TSB-C (STINFO)
Aberdeen Proving Ground, MD
21005

US Army Environmental Hygiene
Agency Library, Bldg E2100
Aberdeen Proving Ground, MD
21010

Commander
US Army Med Rsch Institute
of Chemical Defense
Aberdeen Proving Ground, MD
21010

Technical Library
Chemical Systems Laboratory
Aberdeen Proving Ground, MD 21010

Commander
US Army Medical R & D Command
ATTN: SGRD-RMS (Mrs. Madigan)
Fort Detrick
Frederick, MD 21701

Commander
US Army Med Rsch Institute
of Infectious Diseases
Fort Detrick
Frederick, MD 21701

Commander
US Army Med Bioengineering
R & D Laboratory
Fort Detrick
Frederick, MD 21701

Dir of Biol & Med Sciences Div
Office of Naval Research
800 N. Quincy Street
Arlington, VA 22217

Defense Technical
Information Center
Cameron Station, VA 22314

US Army Materiel Development &
Readiness Command
ATTN: DRCSG
5001 Eisenhower Avenue
Alexandria, VA 22333

US Army Foreign Science &
Technology Center
ATTN: DRXST-IS1
220 7th Street, NE
Charlottesville, VA 22901

Commander
US Army Transportation School
ATTN: ATSP-TD-ST
Fort Eustis, VA 23604

Commander
US Army Airmobility Laboratory
ATTN: Library
Fort Eustis, VA 23604

US Army Training and
Doctrine Command
ATTN: ATCD
Fort Monroe, VA 23651

Commander
US Army Training and
Doctrine Command
ATTN: Surgeon
Fort Monroe, VA 23651

US Army Research and
Technology Laboratory
Structures Laboratory Library
NASA Langley Research Center
Mail Stop 266
Hampton, VA 23665

US Navy
Naval Aerospace Medical
Institute Library
Bldg 1953, Code 102
Pensacola, FL 32508

US Air Force
Armament Development and
Test Center
Eglin Air Force Base, FL 32542

Colonel Stanley C. Knapp
US Central Command
CCSG MacDill AFB, FL 33608

Redstone Scientific Information
Center
DRDMI-TBD
US Army Missile R & D Command
Redstone Arsenal, AL 35809

Air University Library
(AUL/LSE)
Maxwell AFB, AL 36112

Commander
US Army Aeromedical Center
Ft Rucker, AL 36362

Commander
US Army Avn Center &
Fort Rucker
ATTN: ATZQ-CDR
Ft Rucker, AL 36362

Director
Directorate of Combat
Developments
Bldg 507
Ft Rucker, AL 36362

Director
Directorate of Training
Development
Bldg 502
Ft Rucker, AL 36362

Chief
Army Research Institute
Field Unit
Ft Rucker, AL 36362

Commander
US Army Safety Center
Ft Rucker, AL 36362

Commander
US Army Aviation Center
& Fort Rucker
ATTN: ATZQ-T-ATL
Ft Rucker, AL 36362

Commander
US Army Aircraft
Development Test Activity
ATTN: STEBG-MP-QA
Cairns AAF
Ft Rucker, AL 36362

President
US Army Aviation Board
Cairns AAF
Ft Rucker, AL 36362

Canadian Army Liaison Officer
Bldg 602
Ft Rucker, AL 36362

Netherlands Army Liaison Office
Bldg 602
Ft Rucker, AL 36362

German Army Liaison Office
Bldg 602
Ft Rucker, AL 36362

British Army Liaison Office
Bldg 602
Ft Rucker, AL 36362

French Army Liaison Office
Bldg 602
Ft Rucker, AL 36362

US Army Research and
Technology Labs
Propulsion Laboratory MS 77-5
NASA Lewis Research Center
Cleveland, OH 44135

Human Engineering Division
Air Force Aerospace Medical
Research Laboratory
ATTN: Technical Librarian
Wright Patterson AFB, OH
45433

US Air Force Institute of
Technology (AFIT/LDE)
Bldg 640, Area B
Wright-Patterson AFB, OH 45433

John A. Dellinger, MS, ATP
Univ of Ill - Willard Airport
Savoy, IL 61874

Henry L. Taylor
Director
Institute of Aviation
Univ of Ill - Willard Airport
Savoy, IL 61874

Commander
US Army Troop Support and
Aviation Material Readiness Cmd
ATTN: DRSTS-W
St Louis, MO 63102

Commander
US Army Aviation Systems Command (Prov)
ATTN: SGRD-UAX-AL (Maj Lacy)
Bldg 105
4300 Goodfellow Boulevard
St Louis, MO 63166

Commander
US Army Aviation Systems Command (Prov)
ATTN: DRDAV-E
4300 Goodfellow Blvd
St Louis, MO 63166

Commander
US Army Aviation Systems Command (Prov)
ATTN: Library
4300 Goodfellow Blvd
St Louis, MO 63166

Commanding Officer
Naval Biodynamics Laboratory
PO Box 24907
Michoud Station
New Orleans, LA 70129

Federal Aviation Administration
Civil Aeromedical Institute
ATTN: Library
Box 25082
Oklahoma City, OK 73125

US Army Field Artillery School
ATTN: Library
Snow Hall, Room 14
Fort Sill, OK 73503

Commander
US Army Academy of Health Sciences
ATTN: Library
Ft Sam Houston, TX 78234

Commander
US Army Health Services Command
ATTN: Library
Ft Sam Houston, TX 78234

Commander
US Army Institute of
Surgical Research
Ft Sam Houston, TX 78234

US Air Force
Aerospace Medical Division
School of Aerospace Medicine
Aeromedical Library/TSK-4
Brooks AFB, TX 78235

US Army
Dugway Proving Ground
Technical Library
Bldg 5330
Dugway, UT 84022

Dr. Diane Damos
Psychology Department
Arizona State University
Tempe, AZ 85287

US Army Yuma Proving Ground
Technical Library
Yuma, AZ 85364

US Army White Sands Missile Range
Technical Library Division
White Sands Missile Range
New Mexico, 88002

US Air Force
Flight Test Center
Technical Library, Stop 238
Edwards AFB, CA 93523

US Army Aviation Engineering
Flight Activity
ATTN: DAVTE-M (Tech Lib)
Edwards AFB, CA 93523

US Navy
Naval Weapons Center
Tech Library Division
Code 2333
China Lake, CA 93555

US Army Combat Developments
Experimental Command
Technical Library
Hq, USACDEC
Box 22
Ft Ord, CA 93941

Aeromechanics Laboratory
US Army Rsch & Tech Labs
Ames Research Center, M/S 215-1
Moffett Field, CA 94035

Commander
Letterman Army Institute of Rsch
ATTN: Med Rsch Library
Presidio of San Francisco
CA 94129

Sixth US Army
ATTN: SMA
Presidio of San Francisco
CA 94129

Director
Naval Biosciences Laboratory
Naval Supply Center, Bldg 844
Oakland, CA 94625

Col G. Stebbing
DAO-AMLOUS B
Box 36, US Embassy
FPO New York 09510

Staff Officer, Aerospace Medicine
RAF Staff
British Embassy
3100 Massachusetts Ave, NW
Washington, DA 20008

Department of Defence
R.A.N. Resch Laboratory
P.O. Box 706
Darlinghurst, N.S.W. 2010
Australia

Canadian Society of Avn Med
c/o Acad of Med, Toronto
ATTN: Ms Carmen King
288 Bloor Street West
Toronto, Ontario
M5S 1V8

Canadian Air Line Pilot's Assn
MAJ J. Soutendam (Ret)
1300 Steeles Ave East
Brampton, Ontario, Canada
L6T 1A2

Canadian Forces Med Ln Off
Canadian Defence Ln Staff
2450 Massachusetts Ave, NW
Washington, DC 20008

Commanding Officer
404 Maritime Training Squadron
Canadian Forces Base Greenwood
Greenwood, N.S. BOP 1N0 Canada
ATTN: Aeromed Tng Unit

Officer Commanding
School of Operational and
Aerospace Medicine
DCIEM
PO Box 2000
1133 Sheppard Avenue West
Downsview, Ontario, Canada
M3M 3B9

National Defence Headquarters
101 Colonel By Drive
Ottawa, Ontario Canada
K1A 0K2
ATTN: DPM