

HDL-TM-92-5

April 1992



AD-A250 757



2

## Double-Sided Wafer Alignment Techniques

by Timothy J. Mermagen  
Bruce R. Geil

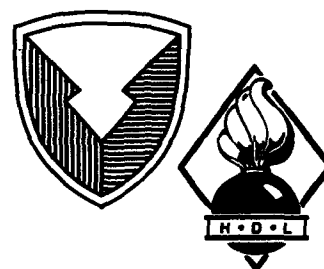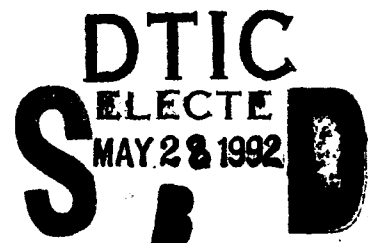

U.S. Army Laboratory Command  
**Harry Diamond Laboratories**  
Adelphi, MD 20783-1197

Approved for public release; distribution unlimited.

92-13998



92 5 27 071

The findings in this report are not to be construed as an official Department of the Army position unless so designated by other authorized documents.

Citation of manufacturer's or trade names does not constitute an official endorsement or approval of the use thereof.

Destroy this report when it is no longer needed. Do not return it to the originator.


| REPORT DOCUMENTATION PAGE                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |                                                             |                                                            | Form Approved<br>OMB No. 0704-0188                |                                                                       |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------|------------------------------------------------------------|---------------------------------------------------|-----------------------------------------------------------------------|
| Public reporting burden for this collection of information is estimated to average 1 hour per response, including the time for reviewing instructions, searching existing data sources, gathering and maintaining the data needed, and completing and reviewing the collection of information. Send comments regarding this burden estimate or any other aspect of this collection of information, including suggestions for reducing this burden, to Washington Headquarters Services, Directorate for Information Operations and Reports, 1215 Jefferson Davis Highway, Suite 1204, Arlington, VA 22202-4302, and to the Office of Management and Budget, Paperwork Reduction Project (0704-0188), Washington, DC 20503. |                                                             |                                                            |                                                   |                                                                       |
| 1. AGENCY USE ONLY (Leave blank)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |                                                             | 2. REPORT DATE<br>April 1992                               |                                                   | 3. REPORT TYPE AND DATES COVERED<br>Final, from 17 Oct 90 to 1 Feb 91 |
| 4. TITLE AND SUBTITLE<br>Double-Sided Wafer Alignment Techniques                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |                                                             |                                                            | 5. FUNDING NUMBERS<br><br>PE: 62120               |                                                                       |
| 6. AUTHOR(S)<br>Timothy J. Mermagen and Bruce R. Geil                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |                                                             |                                                            |                                                   |                                                                       |
| 7. PERFORMING ORGANIZATION NAME(S) AND ADDRESS(ES)<br>Harry Diamond Laboratories<br>2800 Powder Mill Road<br>Adelphi, MD 20783-1197                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |                                                             |                                                            | 8. PERFORMING ORGANIZATION<br>REPORT NUMBER       |                                                                       |
| 9. SPONSORING/MONITORING AGENCY NAME(S) AND ADDRESS(ES)<br>Naval Surface Warfare Center<br>Dahlgren Laboratory<br>Dahlgren, VA 22448                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |                                                             |                                                            | 10. SPONSORING/MONITORING<br>AGENCY REPORT NUMBER |                                                                       |
| 11. SUPPLEMENTARY NOTES<br>AMS code: 612120.H250000<br>HDL PR: 122523                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |                                                             |                                                            |                                                   |                                                                       |
| 12a. DISTRIBUTION/AVAILABILITY STATEMENT<br><br>Approved for public release; distribution unlimited.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |                                                             |                                                            | 12b. DISTRIBUTION CODE                            |                                                                       |
| 13. ABSTRACT (Maximum 200 words)<br><br>A project was undertaken by the Harry Diamond Laboratories to develop a double-sided wafer alignment technique by which special-purpose devices could be fabricated using in-house equipment. The approach developed was inexpensive and did not require infrared alignment methods for viewing through the wafer. A double-sided alignment technique with two different accuracies was developed for use on an ordinary optical mask aligner. These methods were highly successful and are in active use today.                                                                                                                                                                   |                                                             |                                                            |                                                   |                                                                       |
| 14. SUBJECT TERMS<br>Double-sided wafer alignment, double polished wafers, optical mask aligner                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |                                                             |                                                            | 15. NUMBER OF PAGES<br>14                         |                                                                       |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |                                                             |                                                            | 16. PRICE CODE                                    |                                                                       |
| 17. SECURITY CLASSIFICATION<br>OF REPORT<br>Unclassified                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | 18. SECURITY CLASSIFICATION<br>OF THIS PAGE<br>Unclassified | 17. SECURITY CLASSIFICATION<br>OF ABSTRACT<br>Unclassified | 20. LIMITATION OF ABSTRACT<br>UL                  |                                                                       |

## Contents

|                                               | Page |
|-----------------------------------------------|------|
| 1. Introduction .....                         | 5    |
| 2. Alignment Technique .....                  | 6    |
| 2.1 Lower Alignment Accuracy Technique .....  | 6    |
| 2.2 Higher Alignment Accuracy Technique ..... | 8    |
| 3. Results .....                              | 12   |
| 4. Conclusions .....                          | 12   |
| Acknowledgements .....                        | 12   |
| Distribution .....                            | 13   |

## Figures

|                                                                                    |    |
|------------------------------------------------------------------------------------|----|
| 1. Lower accuracy alignment technique .....                                        | 7  |
| 2. Alignment windows .....                                                         | 8  |
| 3. Semiconductor ignitor chip .....                                                | 8  |
| 4. Higher accuracy alignment technique .....                                       | 9  |
| 5. Edge alignment window with symbol bar .....                                     | 10 |
| 6. Scanning electron microscope photographs of cantilever beam accelerometer ..... | 11 |

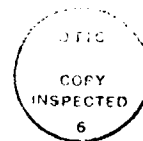

|                      |                                     |
|----------------------|-------------------------------------|
| <b>Accession For</b> |                                     |
| NTIS GRA&I           | <input checked="" type="checkbox"/> |
| DTIC TAB             | <input type="checkbox"/>            |
| Unannounced          | <input type="checkbox"/>            |
| Justification        |                                     |
| By                   |                                     |
| Distribution/        |                                     |
| Availability Codes   |                                     |
| Dist                 | Avail and/or Special                |
| A-1                  |                                     |

# 1. Introduction

Front-to-back wafer alignment has been a problem for the semiconductor industry because of the cost and limited availability of the specialized equipment needed to easily perform this task. The user of an optical contact printer cannot see through the wafer to align the pattern on the front of the wafer to that on the back, as is possible with an infrared contact printer. In optical contact printing, therefore, problems with wafer rotation and displacement arise when the front and back patterns must be aligned. To solve these problems, a mask alignment technique has been designed in the Semiconductor Engineering and Materials Technology (SEMT) Facility of the Harry Diamond Laboratories (HDL). This technique allows the user to contact print quickly with a front-to-back alignment accuracy of better than 50  $\mu\text{m}$  without the use of expensive through-the-wafer alignment equipment.

Two separate projects required accurately aligned photolithography on both sides of double-polished silicon wafers. The first project was fabrication of a chip for an in-house research program.<sup>1</sup> The second was fabrication of floating cantilever beams to be used as accelerometer switches.<sup>2</sup> The technique developed for aligning the patterns on the front and back of a wafer for these projects is described in this report.

---

<sup>1</sup>Judith McCullen, Robert B. Reams, and Jonathan M. Terrell, *Failure Analysis of Loaded SCI Primers*, Harry Diamond Laboratories, HDL-PR-91-3 (September 1991).

<sup>2</sup>Theodore V. Blomquist and Timothy J. Mermagen, *Fabrication Process for Cantilever Beam Type Micromechanical Switch*, in preparation.

## 2. Alignment Technique

The alignment technique developed at HDL was devised for use with a one-to-one (no reduction) mask aligner. This technique was used with two alignment accuracies for the projects mentioned above; variations of this technique can also be used to pattern integrated circuits.

### 2.1 Lower Alignment Accuracy Technique


In the lower accuracy technique, the sides and flat of the wafer are used for aligning a mask to a wafer on a one-to-one mask aligner; figure 1a shows the mask used for this alignment accuracy. The mask consists of the first-level pattern with inter-level alignment marks (for same-side mask alignment) and the wafer edge windows. A *window* is an area where the chrome surface of a photomask has been removed, leaving the glass substrate uncovered. This allows for through-the-mask viewing.

Window C is used to align the flat of the wafer (fig. 1b and 2a). The user aligns the flat to the 500- $\mu\text{m}$  bar separating the two 1000- $\mu\text{m}$ -wide alignment windows. The lower part of window C is used to help find the flat of the wafer when higher magnifications are used. The user then aligns the flat as well as possible. When the back side of the wafer is imaged, this flat alignment will correct for rotational problems and correct for  $y$ -axis shift.

Once the flat of the wafer is aligned, the next step is the alignment of the wafer edge. Windows A and B are used for aligning the right or left edge of the wafer. These large windows contain a 100- $\mu\text{m}$  bar that is used for aligning the wafer edge (see fig. 1c and 2b). Whichever edge/window is selected for alignment, the opposite edge/window must be used when the back of the wafer is aligned. This allows the die spacing to originate from the same side of the wafer, so that the front and back patterns on the wafer are aligned.

This alignment scheme produces better than 50- $\mu\text{m}$  accuracy. This technique was successfully used to produce over 4000 test chips for an in-house research program (see fig. 3).

**Figure 1. Lower accuracy alignment technique (a) mask, (b) flat alignment window, and (c) edge alignment window.**

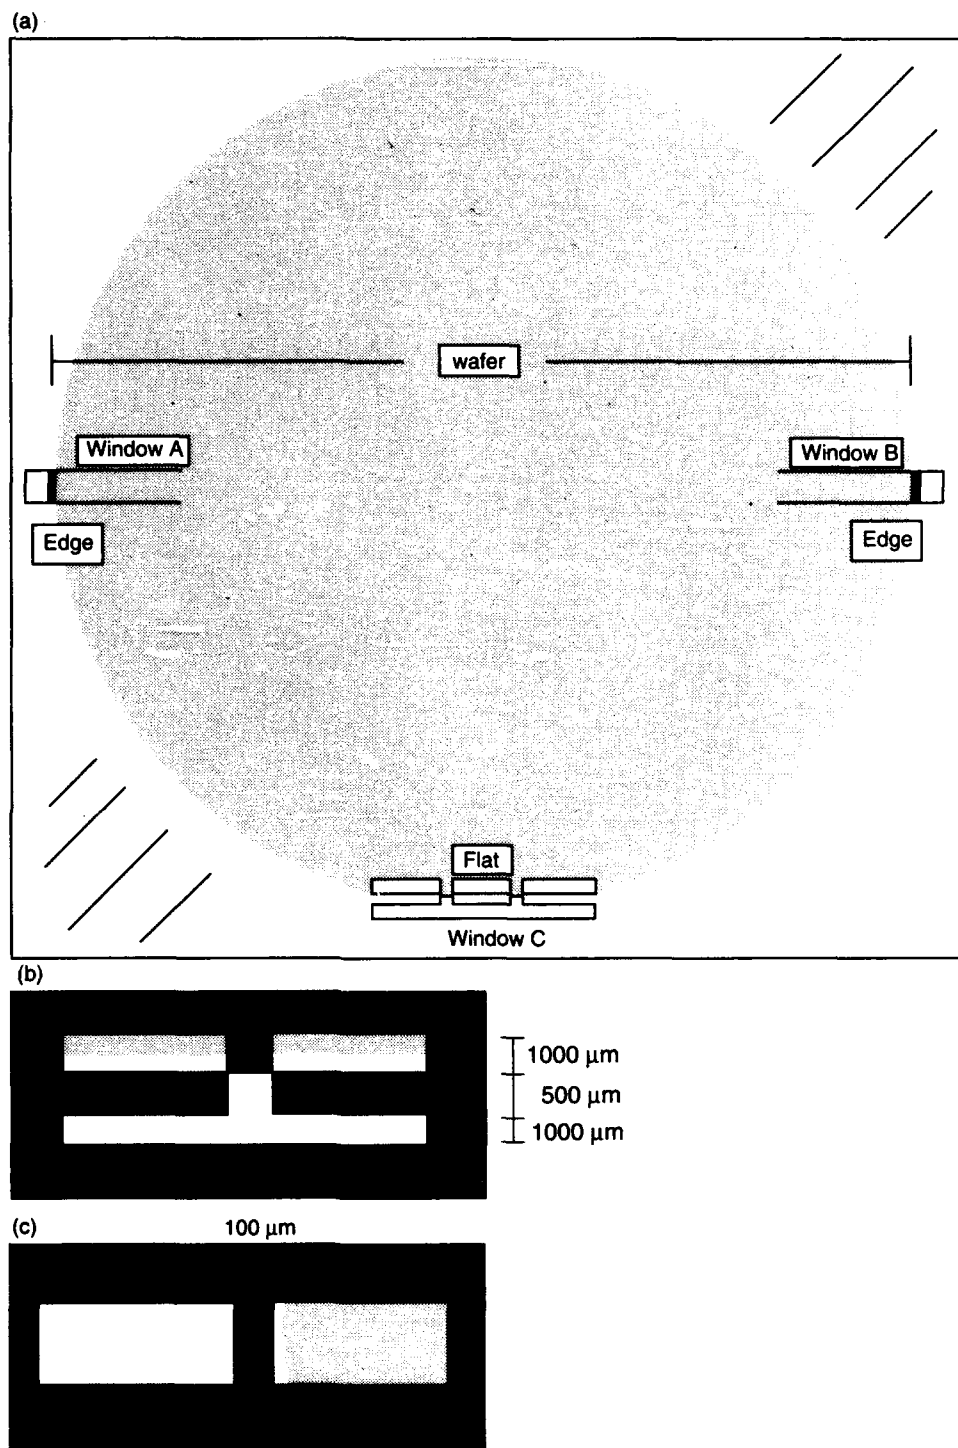

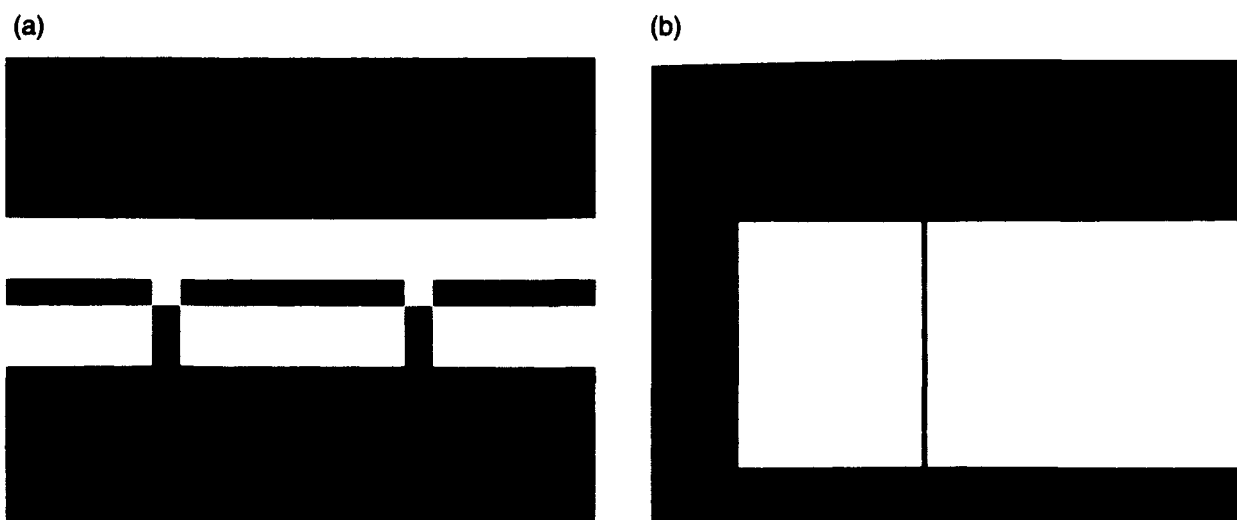


Figure 2. Alignment windows: (a) flat and (b) edge alignment window with 100- $\mu\text{m}$  bar.

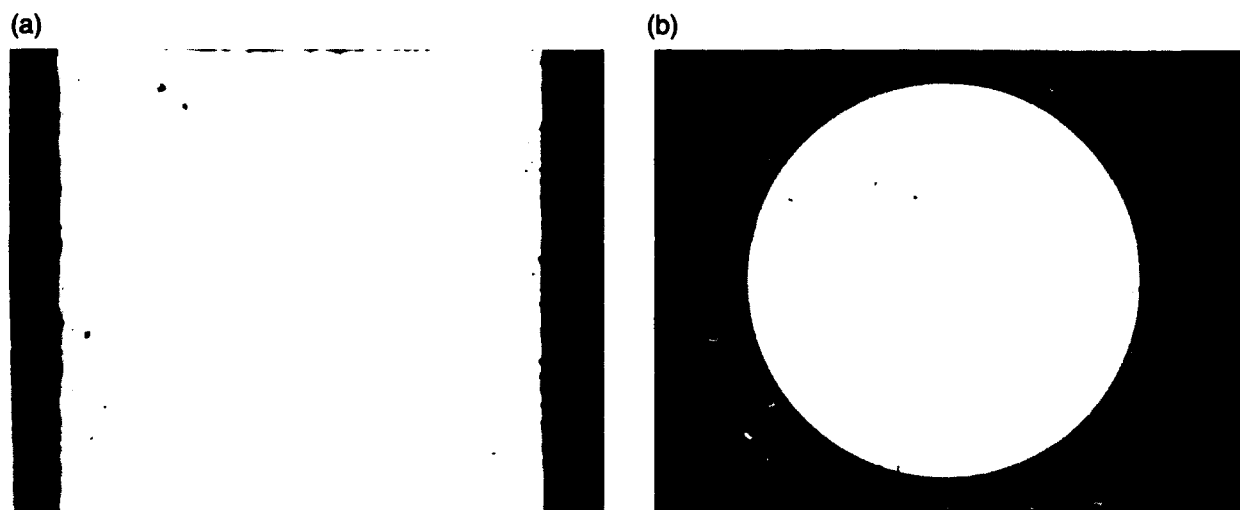





Figure 3. Semiconductor ignitor chip: (a) front view and (b) back view.

## 2.2 Higher Alignment Accuracy Technique

The second alignment technique also uses the sides and flat of the wafer to align a mask set on a one-to-one mask aligner, but it provides much higher accuracy (25  $\mu\text{m}$ ) and is much more difficult and time consuming to use. This mask alignment technique was used in the fabrication of floating cantilever beams.

The mask used in this technique has similar alignment windows to the previously described alignment mask. Window C is used in the same manner as in the first alignment mask: for aligning the flat of the wafer to correct for image rotation; it also aligns the wafer in the  $y$ -axis (fig. 4a and 4b). Again, once the flat is aligned, the wafer edge alignment is performed.


**Figure 4. Higher accuracy alignment technique: (a) mask, (b) flat alignment window, and (c) edge alignment window.**

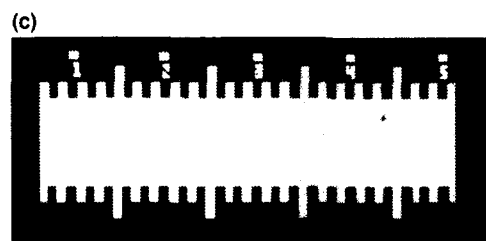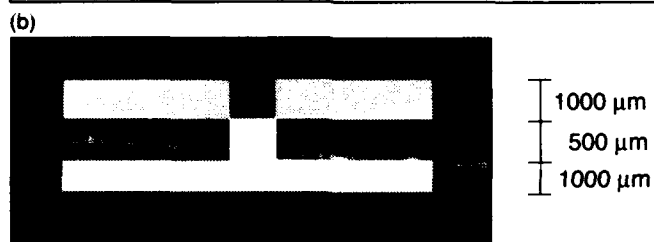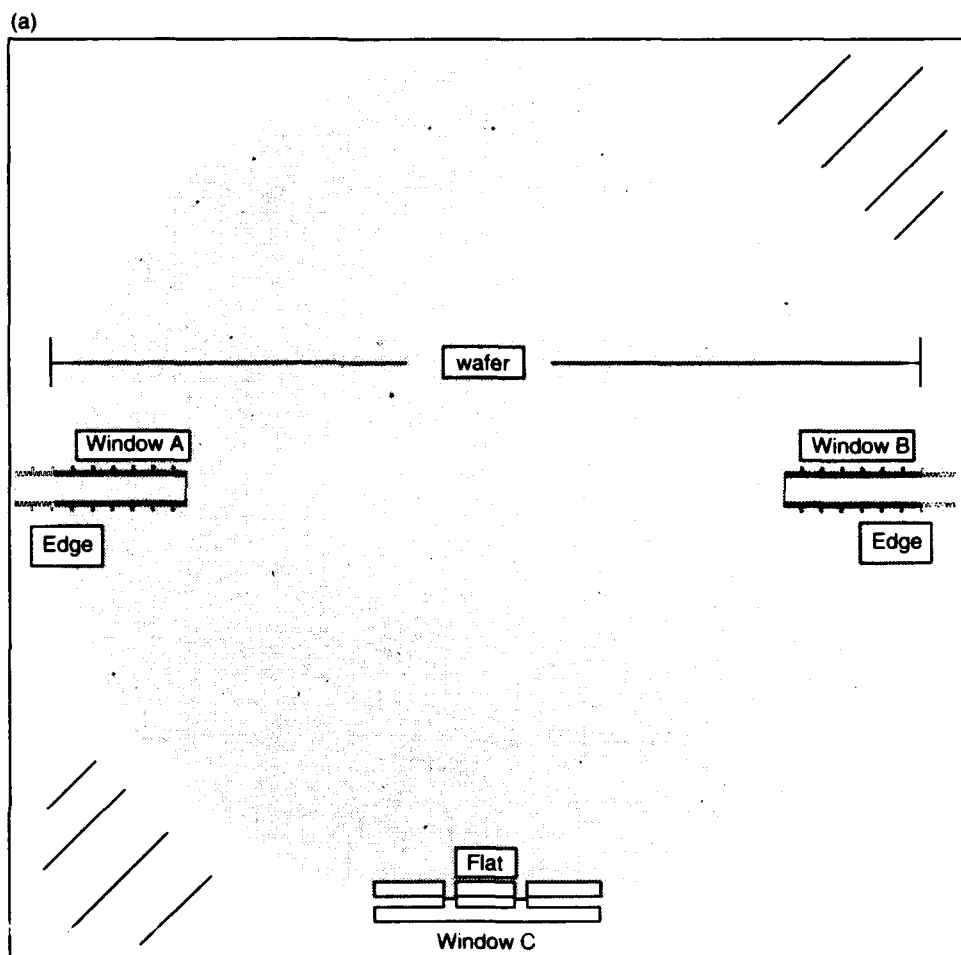

This alignment scheme produces better than 25- $\mu\text{m}$  accuracy from front to back of the wafer. Several hundred cantilever accelerometers were produced using this method (see fig. 6).

Figure 1 consists of two panels, (a) and (b), each showing a horizontal bar with a series of small, dark, rectangular blocks along its bottom edge. Panel (a) shows a single trial with a single correct response, indicated by a single block. Panel (b) shows a single trial with multiple correct responses, indicated by multiple blocks. The blocks are arranged in a regular, repeating pattern along the bottom edge of the bar.

**Figure 6. Scanning electron microscope photographs of cantilever beam accelerometer: (a) top view and (b) side view.**

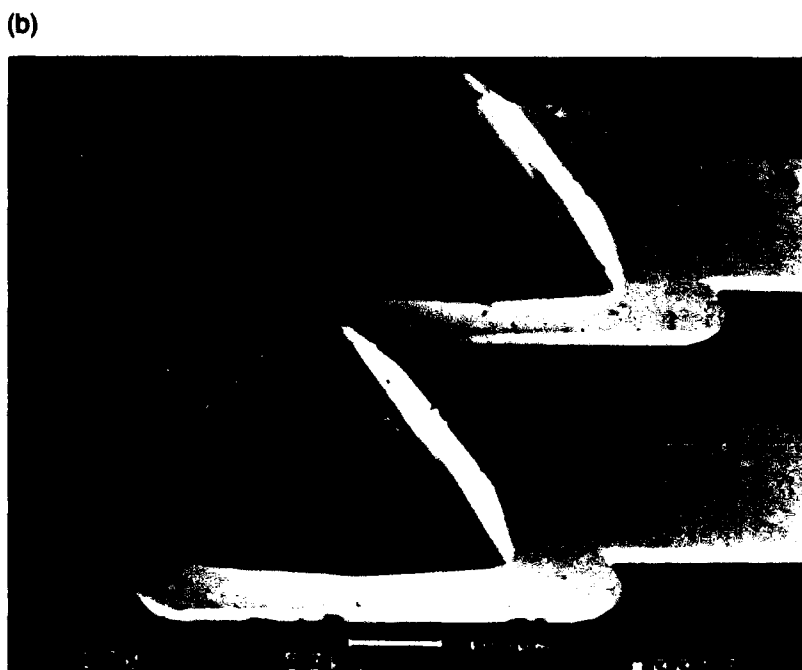

### **3. Results**

The results obtained with these alignment techniques have been very promising. With these techniques, we have produced over 4000 chips in support of the in-house research program and over 200 cantilever beam accelerometers. We have achieved a front-to-back wafer alignment accuracy of better than 50  $\mu\text{m}$  with the lower accuracy technique and 25  $\mu\text{m}$  with the higher accuracy technique on an ordinary optical contact printer.

### **4. Conclusions**

The alignment techniques discussed here were very successful in aligning patterns on the top and back of a wafer and were used in producing chips and cantilever beam accelerometers. These techniques allow an inexpensive optical mask aligner system to be used to achieve much the same results as a more expensive infrared mask aligner.

### **Acknowledgements**

The authors wish to acknowledge the assistance of two people in the work reported herein: Bernard Rod, HDL, for his work on the cantilever beam accelerometers; and Judith McCullen, HDL, for her untiring feedback on the alignment strategies and optical tooling of the in-house test chips and the cantilever beam accelerometer chips. The authors would also want to thank the rest of the Semiconductor Engineering and Materials Technology group for their support in this program.

## Distribution

Administrator  
Defense Technical Information Center  
Attn DTIC-DDA (2 copies)  
Cameron Station, Building 5  
Alexandria, VA 22304-6145

Under Secretary of Defense for Research  
& Engineering  
Attn Research & Advanced Tech  
Attn Asst to Sec/Atomic Energy  
Attn Dep Asst Sec/Energy Environment & Safety  
Attn Dep Under Sec/Res & Advanced Tech  
Attn Dep Under Sec/Test & Evaluation  
Department of Defense  
Washington, DC 20301

Commander  
CECOM R&D Tech Library  
Attn ASQNC-ELC-IS-L-R  
FT Monmouth, NJ 07703-5018

Director  
US Army Ballistic Research Laboratory  
Attn SLCBR  
Attn SLCBR-AM  
Attn SLCBR-X  
Attn SLCBR-TB-VL  
Aberdeen Proving Ground, MD 21005-5066

Director  
US Army Electronic Warfare Laboratory,  
LABCOM  
Attn SLCET-D, Electronic Technology  
& Devices Lab  
Attn ASQNC-ELC-IS, Information Services  
Div  
FT Monmouth, NJ 07703-5601

Director  
US Army Electronics Technology & Devices  
Lab, LABCOM  
Attn SLCET-E  
Attn SLCET-ER  
Attn SLCET-ER-S  
Attn SLCET-I, Microelectronics  
Attn SLCET-IA  
FT Monmouth, NJ 07703-5601

Commander  
US Army Materiel Command  
Attn AMCDE, Dir for Dev & Engr  
Attn AMCDE-R, Sys Eval & Testing  
Attn AMCNC, Nuclear-Chemical Ofc  
5001 Eisenhower Ave  
Alexandria, VA 22333-0001

Director  
Naval Research Laboratory  
Attn Code 2620, Tech Library Br  
Washington, DC 20375

Commander  
Naval Surface Weapons Center  
Attn Code WA501, Navy Nuc Prgms Ofc  
Attn Code WA52  
Attn Microelectronics, R. Goetz  
Attn E-43, Technical Library  
Attn WA50  
White Oak, MD 20910

Commander  
Naval Surface Weapons Center  
Attn Code WR, Research & Technology Dept  
Attn DX-21 Library Div  
Attn H22, J. Bean  
Attn H22, Richard Porter  
Dahlgren Laboratory  
Dahlgren, VA 22448

## **Distribution (cont'd)**

Booz Allen & Hamilton, Inc.  
Attn J. Terrell  
4330 East-West Highway  
Bethesda, MD 20814

US Army Laboratory Command  
Attn AMSLC-DL, Dir, Corporate Labs

Installation Support Activity  
Attn SLCIS-CC, Legal Office

USAISC  
Attn AMSLC-IM-VA, Admin Ser Br  
Attn AMSLC-IM-VP, Tech Pub Br  
(2 copies)

Harry Diamond Laboratories  
Attn Laboratory Directors  
Attn SLCHD-TL, Library (3 copies)  
Attn SLCHD-TL, Library (Woodbridge)  
Attn SLCHD-NW, Deputy Director  
Attn SLCHD-NW, J. M. McGarrity  
Attn SLCHD-NW-CS, Chief  
Attn SLCHD-NW-E, Chief  
Attn SLCHD-NW-EH, Chief  
Attn SLCHD-NW-EP, Chief  
Attn SLCHD-NW-ES, Chief  
Attn SLCHD-NW-P, Chief  
Attn SLCHD-NW-RP, Chief

Harry Diamond Laboratories (cont'd)  
Attn SLCHD-NW-RS, Chief  
Attn SLCHD-NW-TN, Chief  
Attn SLCHD-NW-TS, Chief  
Attn SLCHD-D, R. Gilbert  
Attn SLCHD-NW-EP, J. R. Miletta  
Attn SLCHD-NW-P, D. Davis  
Attn SLCHD-NW-RP, J. Benedetto  
Attn SLCHD-NW-RP, K. W. Bennett  
Attn SLCHD-NW-RP, T. V. Blomquist  
Attn SLCHD-NW-RP, H. Boesch  
Attn SLCHD-NW-RP, M. DeLancey  
Attn SLCHD-NW-RP, T. Griffin  
Attn SLCHD-NW-RP, A. J. Lelis  
Attn SLCHD-NW-RP, B. McLean  
Attn SLCHD-NW-RP, R. Moore  
Attn SLCHD-NW-RP, T. Oldham  
Attn SLCHD-NW-RP, C. Pennise  
Attn SLCHD-NW-RP, R. B. Reams  
Attn SLCHD-NW-RP, B. J. Rod  
Attn SLCHD-NW-RP, T. Taylor  
Attn SLCHD-NW-RS, H. Brandt  
Attn SLCHD-NW-TS, H. Eisen  
Attn SLCHD-TA-ES, R. Goodman  
Attn SLCHD-NW-RP, J. McCullen  
Attn SLCHD-NW-RP, B. Geil (10 copies)  
Attn SLCHD-NW-RP, T. Mermagen  
(15 copies)