

MTL TR 92-27


AD-A251 664



AD

2

THERMAL EXPANSION MEASUREMENTS OF POLYMER MATRIX COMPOSITES AND SYNTACTICS

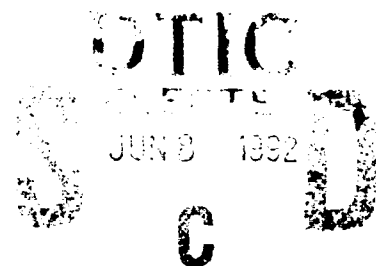

LOUISE C. SENGUPTA and WILLIAM A. SPURGEON
CERAMICS RESEARCH BRANCH

April 1992

Approved for public release; distribution unlimited.



US ARMY
LABORATORY COMMAND
MATERIALS TECHNOLOGY LABORATORY



92

024

92-14804



U.S. ARMY MATERIALS TECHNOLOGY LABORATORY
Watertown, Massachusetts 02172-0001

The findings in this report are not to be construed as an official Department of the Army position, unless so designated by other authorized documents.

Mention of any trade names or manufacturers in this report shall not be construed as advertising nor as an official indorsement or approval of such products or companies by the United States Government.

DISPOSITION INSTRUCTIONS

Destroy this report when it is no longer needed.
Do not return it to the originator.

UNCLASSIFIED

SECURITY CLASSIFICATION OF THIS PAGE (When Data Entered)

REPORT DOCUMENTATION PAGE		READ INSTRUCTIONS BEFORE COMPLETING FORM
1. REPORT NUMBER MTL TR 92-27	2. GOVT ACCESSION NO.	3. RECIPIENT'S CATALOG NUMBER
4. TITLE (and Subtitle) THERMAL EXPANSION MEASUREMENTS OF POLYMER MATRIX COMPOSITES AND SYNTACTICS		5. TYPE OF REPORT & PERIOD COVERED Final Report
		6. PERFORMING ORG. REPORT NUMBER
7. AUTHOR(s) Louise C. Sengupta and William A. Spurgeon		8. CONTRACT OR GRANT NUMBER(s)
9. PERFORMING ORGANIZATION NAME AND ADDRESS U.S. Army Materials Technology Laboratory Watertown, Massachusetts 02172-0001 SLCMT-EMC		10. PROGRAM ELEMENT, PROJECT, TASK AREA & WORK UNIT NUMBERS
11. CONTROLLING OFFICE NAME AND ADDRESS U.S. Army Laboratory Command 2800 Powder Mill Road Adelphi, Maryland 20783-1145		12. REPORT DATE April 1992
		13. NUMBER OF PAGES 14
14. MONITORING AGENCY NAME & ADDRESS (if different from Controlling Office)		15. SECURITY CLASS. (of this report) Unclassified
		15a. DECLASSIFICATION/DOWNGRADING SCHEDULE
16. DISTRIBUTION STATEMENT (of this Report) Approved for public release; distribution unlimited.		
17. DISTRIBUTION STATEMENT (of the abstract entered in Block 20, if different from Report)		
18. SUPPLEMENTARY NOTES		
19. KEY WORDS (Continue on reverse side if necessary and identify by block number) Polymer matrix composites Glass reinforced composites Coefficients of thermal expansion (CTE) Thermal expansion Syntactics		
20. ABSTRACT (Continue on reverse side if necessary and identify by block number) (SEE REVERSE SIDE)		

Block No. 20**ABSTRACT**

The coefficients of thermal expansion (CTE) of various polymer matrix materials were measured using a thermal mechanical analyzer. The measurements include a set of standard materials used as calibration materials for the instrument. The data for the base polymers, syntactics, and E and S-2 glass-reinforced polyester matrix composites were obtained in the temperature range from -77°C to 120°C . The results for all of the polymeric materials, especially for the epoxy and epoxy syntactic (above 65°C), are nonlinear. The CTE of the syntactics were reduced by a factor of ~ 2 for the base resins. The data taken for the glass-reinforced composites show peaks and/or humps in the thermal expansion. These features are believed to be from the formation of voids within the plies of the composite laminate. The irregular behavior of the thermal expansion was minimized by thermal annealing under load conditions, whereas annealing in free-space does not significantly dampen this behavior. The thermal expansion of the material appears to be directly related to the fiber loading.

CONTENTS

	Page
INTRODUCTION	1
EXPERIMENTAL	1
RESULTS AND DISCUSSION	2
CONCLUDING REMARKS	11



Approved	by	
Special Agent		
Inspector		
Supervisor		
Dist. Special		
A-1		

INTRODUCTION

In order to properly develop a composite material or structure which may be exposed to even moderate excursions in temperature, it is necessary to know the thermal behavior of the composite and its constituent materials. In addition, in order to bond these composites together for fabrication of dielectric skins or other applications, knowledge of the coefficients of thermal expansion (CTE) of the components is essential.

The relationship for the thermal expansion of a solid is:

$$\Delta L = \alpha L \Delta T \quad (1)$$

where α is in units ($1/^\circ\text{C}$), ΔL is the change in length (mm), length (mm), and ΔT is the temperature change. Equation 1 assumes a linear relationship with α being the slope of the line.

EXPERIMENTAL

The resins that were measured were 50.0 parts by weight (PBW) EPON® 828 (Shell Chemical) epoxy combined with 50.0 PBW EPON® V-40 polyamide curing agent (Shell Chemical) and Owens Corning (E-780) polyester combined 1 PBW MEKP and 0.1 PBW co-naphthanate. The epoxy syntactic was fabricated using 52.0 PBW EPON® 828, 43.3 EPON V-40, and 4.6 PBW Grace Syntactics (Type S) microballoons. The polyester syntactic was 94.2 PBW polyester (E-780), 1 PBW MEKP, 0.1 PBW co-naphthanate, and 4.3 PBW microballoons. The resins and syntactics were processed in air using the standard cure cycle for the resins. The S-2 glass and E-glass composites contained the following fabrics:

- JP Stevens (JPS) S-2 glass fabric, style 016781, an 8.8 oz. five harness satin weave, 55 picks by 57 ends with a JPS 09827 finish.
- A 5 x 5, S-2 glass with 24 oz. woven roving with an Owens Corning 463 finish.
- A 3 x 1, S-2 glass with 27 oz. woven roving with an Owens Corning 933 finish, nominally equivalent to JPS 09827 finish.
- A (0,90) 18 oz. stitched E-glass fabric.

The composites were fabricated by hand laminating the layers of fabric with wet polyester resin (Owens Corning E-780) and subsequently processing the composites using the standard vacuum bag cure cycle for this polyester-based material.

All of the samples were subsequently cut into 1/4" x 3/4" pieces. Flat parallel top and bottom sections are essential for accurate data acquisition since contact with the entire sample surface with the expansion probe is required.

The thermal expansion data was obtained using a Perkin Elmer, Series 7 Thermal Mechanical Analyzer. The experimental conditions consisted of: an applied load of 10 mN, a temperature ramp of 5°C/min to 40°C/min, and temperature ranges of -77°C to 120°C for the polymers and 30°C to 400°C for the nonpolymeric materials used for standards. The best results were obtained by surrounding the sample chamber with liquid nitrogen thereby providing a thermal sink for consequently stabilizing the temperature ramp.

As a check on the calibration of the instrument, the CTEs of several standard materials were measured. The results are shown in Table 1. The percentage error is the difference between the average of two or more measurements and available literature values.¹

Table 1. THE COEFFICIENTS OF THERMAL EXPANSION, α ($1/^\circ\text{C}$)
FOR SOME STANDARD MATERIALS

Material	Measured ($1/^\circ\text{C}$)	Error (%)
Steel	11.4×10^{-6}	4
Silica	42.5×10^{-6}	8
Teflon	14.6×10^{-5}	Not Known
Aluminum	23.8×10^{-6}	4

The increased error for the silica sample is due to the measurement nearing the sensitivity limit of the instrument. The above results indicate that the results for unknown polymeric material based systems may, therefore, be accurate within $\sim 4\%$ since the order of magnitude is around 10^{-6} .

RESULTS AND DISCUSSION

As shown in Figures 1a and 1b, respectively, the thermal expansion data obtained for epoxy and epoxy syntactic are nonlinear. The figures show that the epoxy resin and syntactic have two distinct thermal expansion behaviors in this temperature range. The thermal expansion of the epoxy resin increases nonlinearly above 60°C , while the syntactic shows a similar increase above $\sim 70^\circ\text{C}$. For the epoxy resin, the ratio of the thermal expansion found in the first temperature region (30°C to 60°C), to that of the second (60°C to 120°C) is 2.8. For the epoxy syntactic, the ratio of the thermal expansion found in the first region (30°C to 70°C) to that of the second region (70°C to 120°C) is 2.1. The epoxy resin thus appears to be more nonlinear in behavior than the syntactic. As shown in Figures 2a and 2b, similar behavior is observed for the polyester resin and the polyester syntactic. Table 2 summarizes the thermal expansion measurements obtained for the resins (polyester and epoxy and their syntactics).

Table 2. THE COEFFICIENTS OF THERMAL EXPANSION (CTE),
 α ($1/^\circ\text{C}$) FOR RESINS AND RESIN SYNTACTICS

Material	TEC ($1/^\circ\text{C}$)
Polyester	90.4×10^{-6}
Polyester Syntactic	45.9×10^{-6}
Epoxy	72.5×10^{-6} , 20.4×10^{-5}
Epoxy Syntactic	54.7×10^{-6} , 11.5×10^{-5}

1. Handbook for Physics and Chemistry. 55th Edition. R. C. Weast, ed., CRC Press, Cleveland, OH, 1975, p. D152.

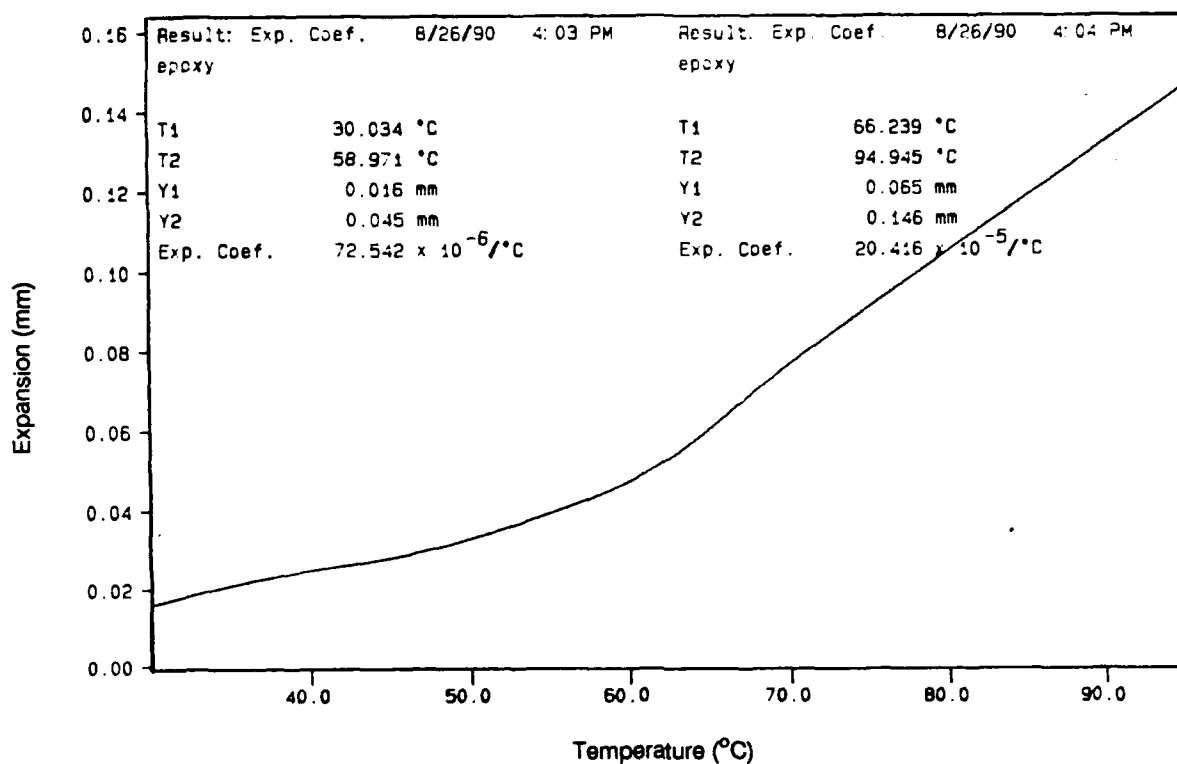


Figure 1a. The thermal expansion of epoxy resin.

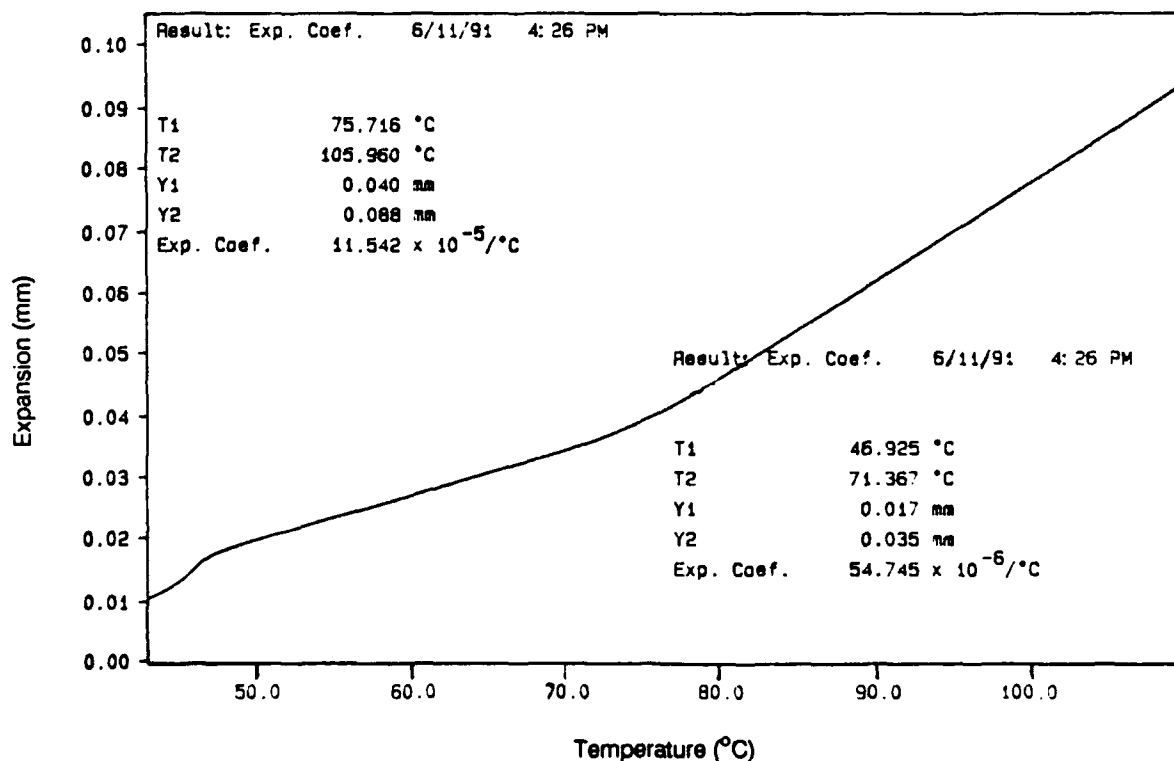


Figure 1b. The thermal expansion of epoxy syntactic.

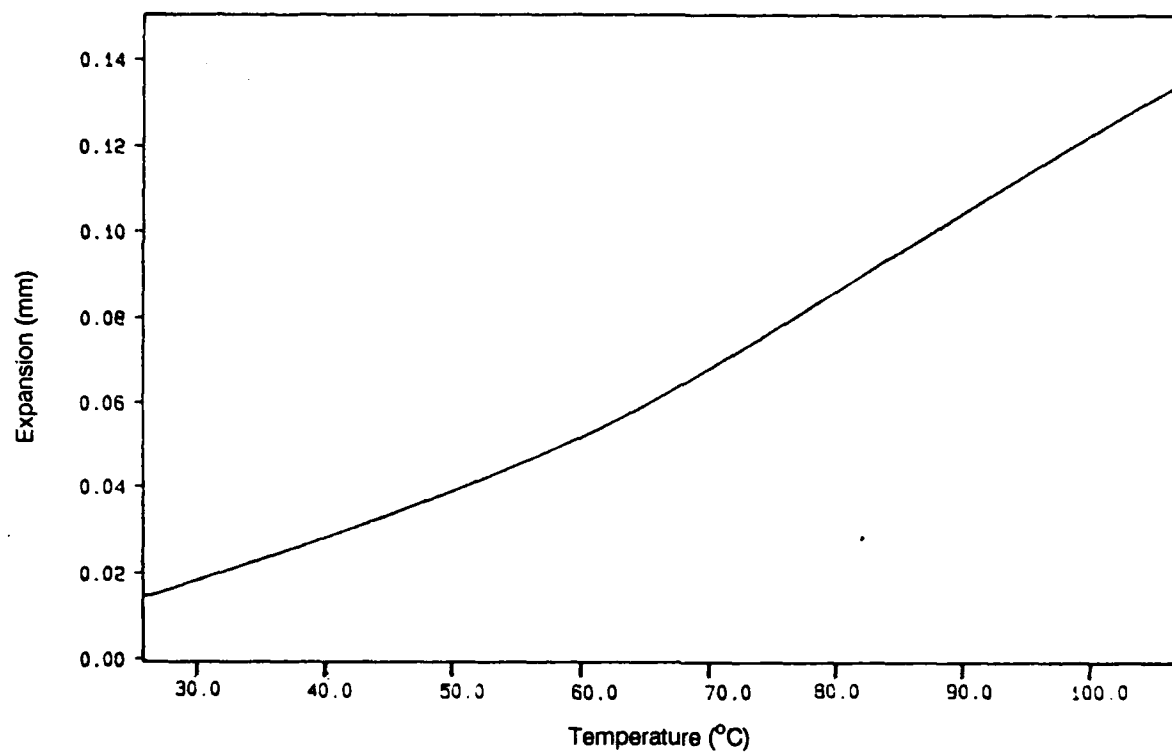


Figure 2a. The thermal expansion of polyester resin.

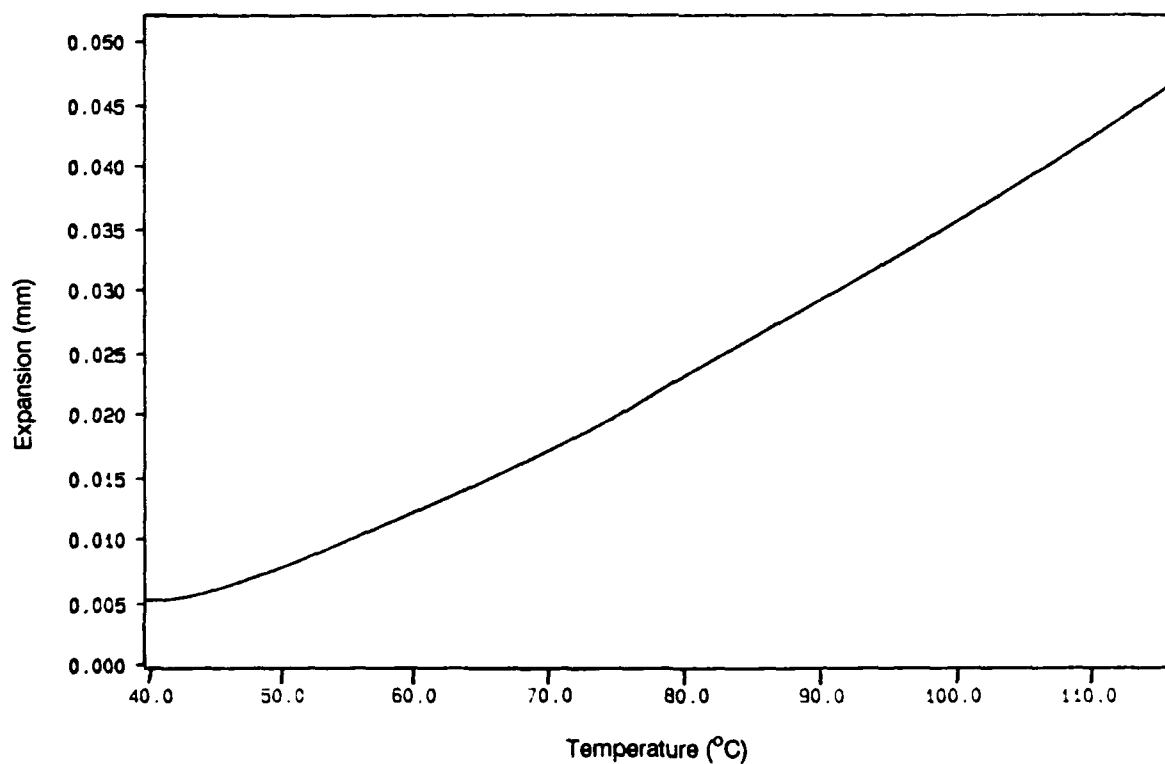


Figure 2b. The thermal expansion of polyester syntactic.

The expansion of the polyester syntactic is reduced by a factor of 2 when compared to the base polymer. The epoxy syntactic displays a reduction of 1.3 in the first region of the thermal expansion and a reduction of about 2 in the second region of expansion as compared to the epoxy resin. As observed, bonding the syntactics to the higher CTE base resins or to lower CTE glass-reinforced composites (to be discussed) at elevated temperatures may result in the fracturing of the syntactic.

Thermal expansion measurements were also obtained for composites fabricated from the glass fabrics listed above. The thermal expansion data from 30°C to 120°C for the S-2 glass (8.8 oz.) polyester resin matrix composite was taken both as parallel (see Figure 3a) and perpendicular (see Figure 3b) to the fibers. In addition, the thermal expansion was obtained for a composite fabricated from the same fabric that had been treated with polypyrrole (measured parallel to the fibers). As expected, the treatment does not alter the thermal expansion properties (see Figure 4). Figures 5a and 5b display the results obtained for the E-glass composite. Figures 6a and 6b show the data obtained for the S-2 glass 5 x 5 (24 oz.) composite. Figures 7a and 7b show the results for the S-2 glass 3 x 1 (27 oz.) composite. Table 3 summarizes the results obtained for the thermal expansions of the various composites examined which were measured both perpendicular and parallel to the laminate fibers. The values reported here reflect measurements obtained on samples which were annealed for various times in order to minimize error due to strain in the material.

Table 3. THE CTE, α ($1/^\circ\text{C}$) FOR THE COMPOSITE MATERIALS MEASURED PARALLEL AND PERPENDICULAR TO THE FIBERS. ALL TEXTILES ARE WITHIN A POLYESTER RESIN

Material	Perpendicular to Fibers ($1/^\circ\text{C}$)	Parallel to Fibers ($1/^\circ\text{C}$)
E-Glass	78.1×10^{-6}	15.0×10^{-6}
S-2, 5 x 5 (24 oz.)	28.7×10^{-6}	5.0×10^{-6}
		8.0×10^{-6}
S-2 (8.8 oz.)	41.7×10^{-6}	Polypyrrole Treated 10.2×10^{-6}
S-2, 3 x 1 (27 oz.)	81.5×10^{-6}	14.9×10^{-6}

The E-glass and S-2, 3 x 1 (27 oz.) composites have CTEs which are similar in value and show a ratio of the CTE measured perpendicular over the parallel measurement of about 5.3. In contrast, the S-2, 5 x 5 (24 oz.) composite shows a ratio of 6 between the perpendicular and parallel measurement of the thermal expansion. The S-2 glass (8.8 oz.) composite shows a difference in the measurements taken parallel and perpendicular to the fibers of the fabric of about 4.8. The S-2 glass (8.8 oz.) composite (when measured perpendicular to the fabric) has a CTE about the same as the polyester syntactic, whereas the E-glass and the S-2 glass 3 x 1 (27 oz.) composites when measured perpendicular to the fibers have a CTE about the same as the polyester resin itself. This type of thermal behavior is expected since the expansion is directly related to the volume filling fraction, V_{RESIN} , Young's modulus (tensile modulus), E_{RESIN} , of the resin and inversely related to the volume filling, V_{FIBERS} , and Young's modulus, E_{FIBERS} of the fibers, as seen from the following expression²

$$\alpha_{\text{COMPOSITE}} = \alpha_{\text{FIBER}} \frac{5V_{\text{RESIN}} E_{\text{RESIN}} \alpha_{\text{RESIN}}}{V_{\text{FIBER}} E_{\text{FIBER}}} \quad (2)$$

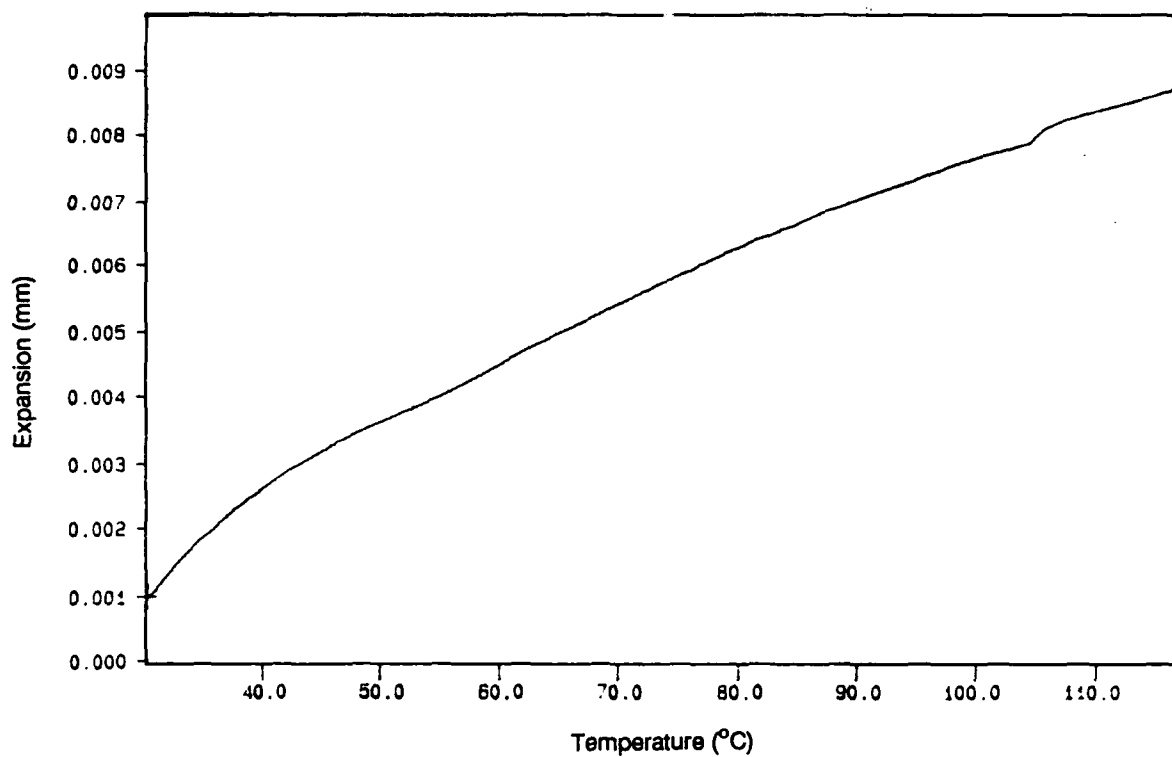


Figure 3a. The thermal expansion for a S-2 glass (8.8 oz.) polyester resin matrix composite parallel to the fibers.

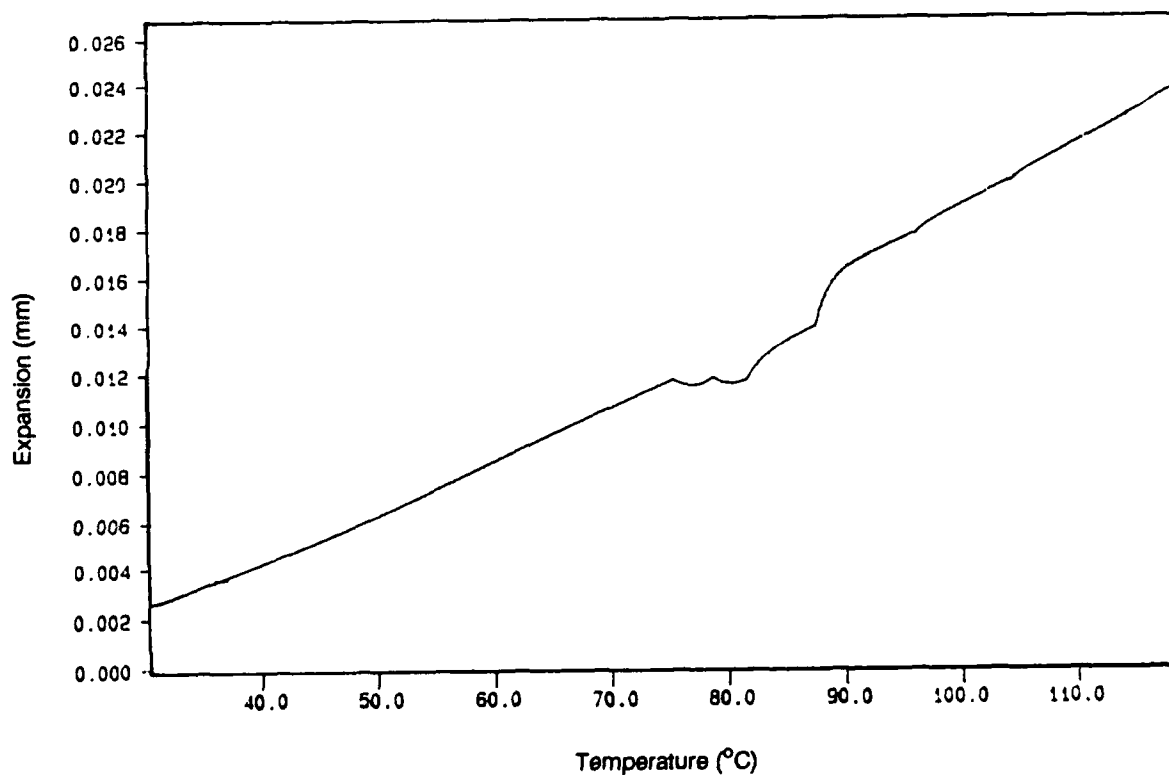


Figure 3b. The thermal expansion for a S-2 glass (8.8 oz.) polyester resin matrix composite perpendicular to the fibers.

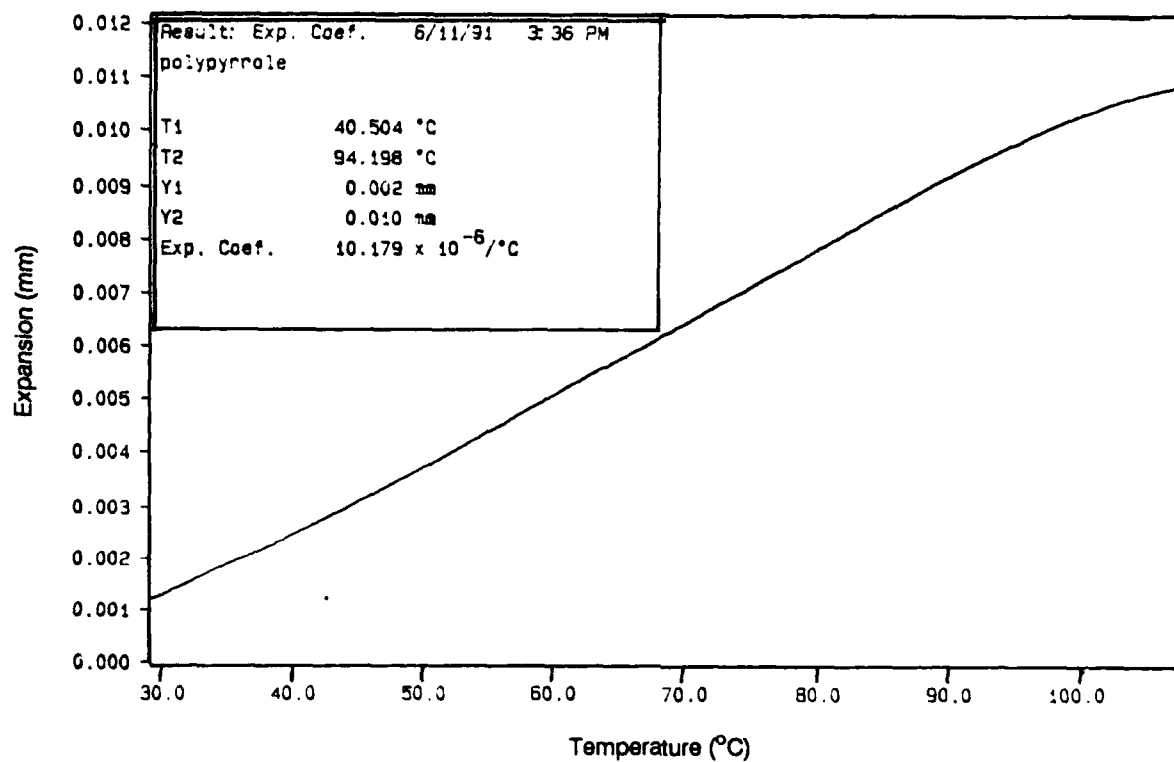


Figure 4. The thermal expansion for a polypyrrole treated S-2 glass (8.8 oz.) polyester resin matrix composite (parallel to fibers).

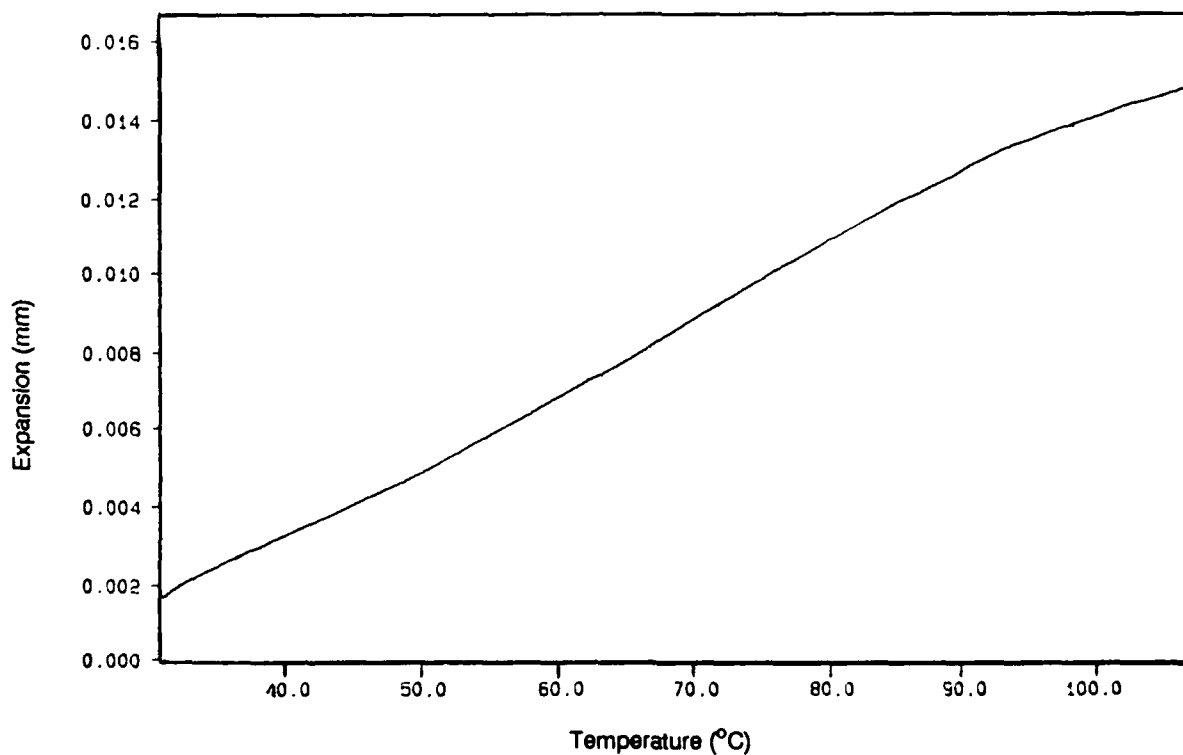


Figure 5a. The thermal expansion for an E-glass polyester resin matrix composite parallel to the fibers.

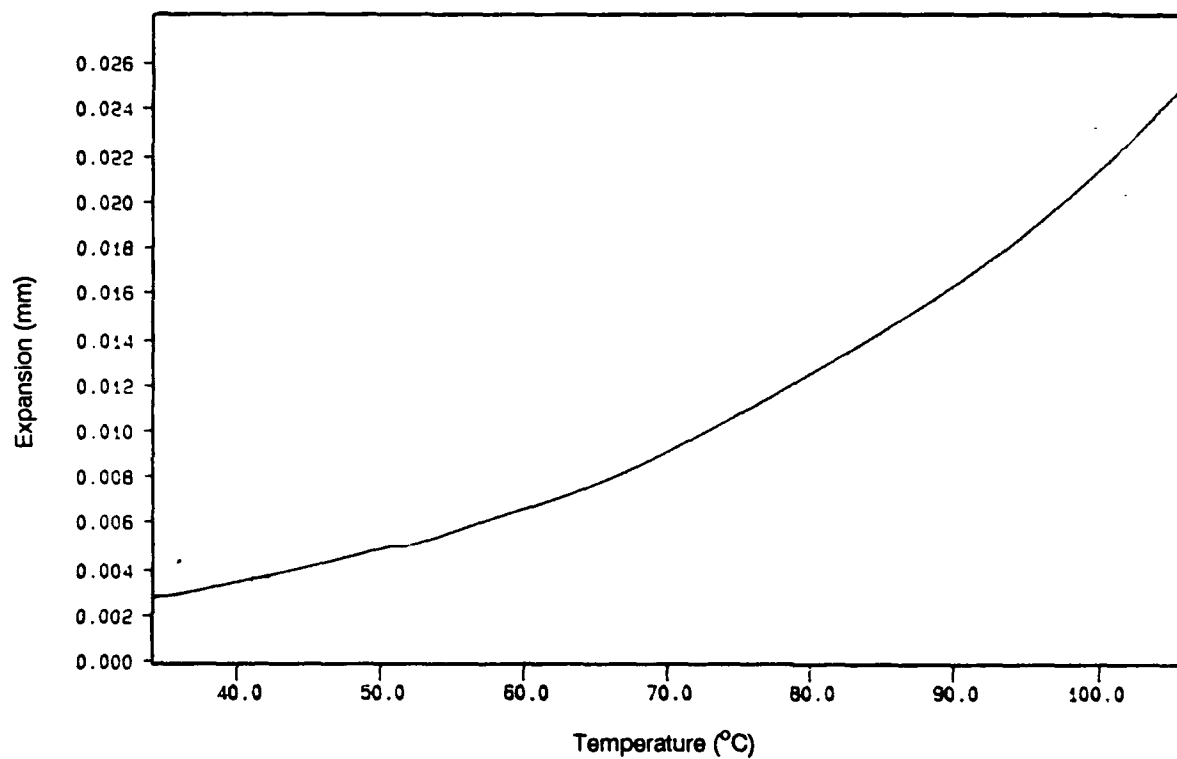


Figure 5b. The thermal expansion for an E-glass polyester

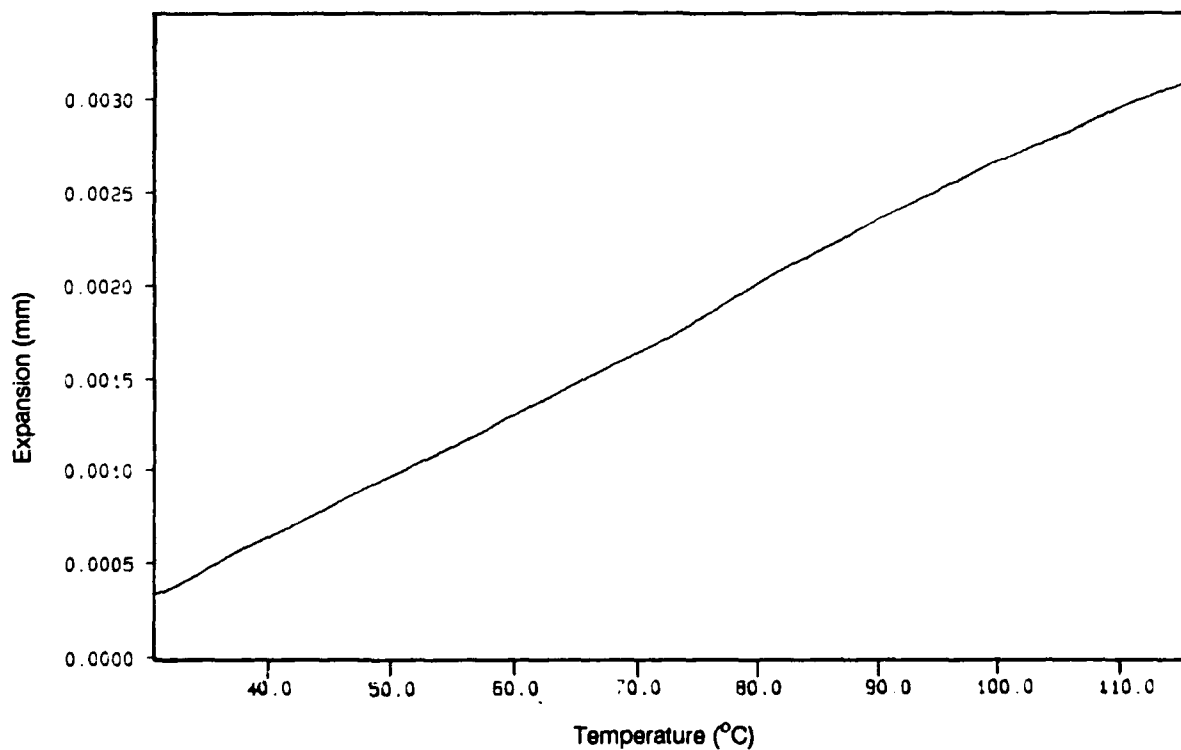


Figure 6a. The thermal expansion for a S-2 glass 5 x 5 (24 oz.)

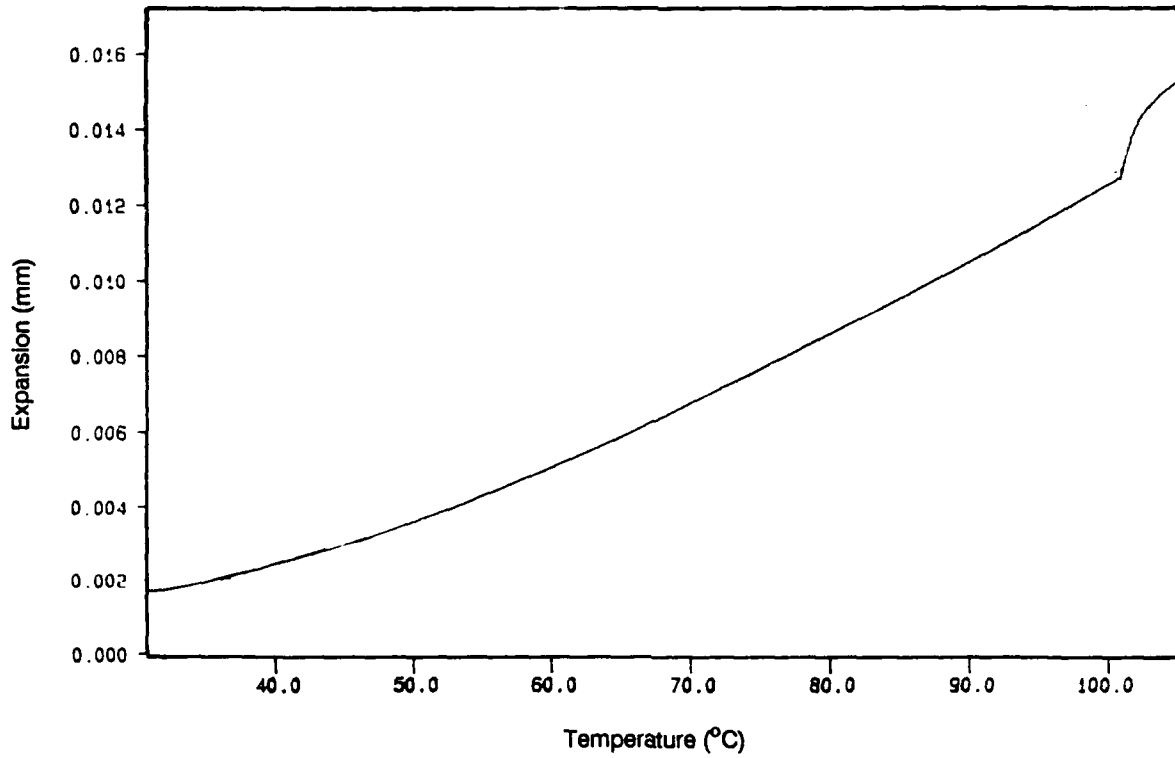


Figure 6b. The thermal expansion for a S-2 glass 5 x 5 (24 oz.) polyester

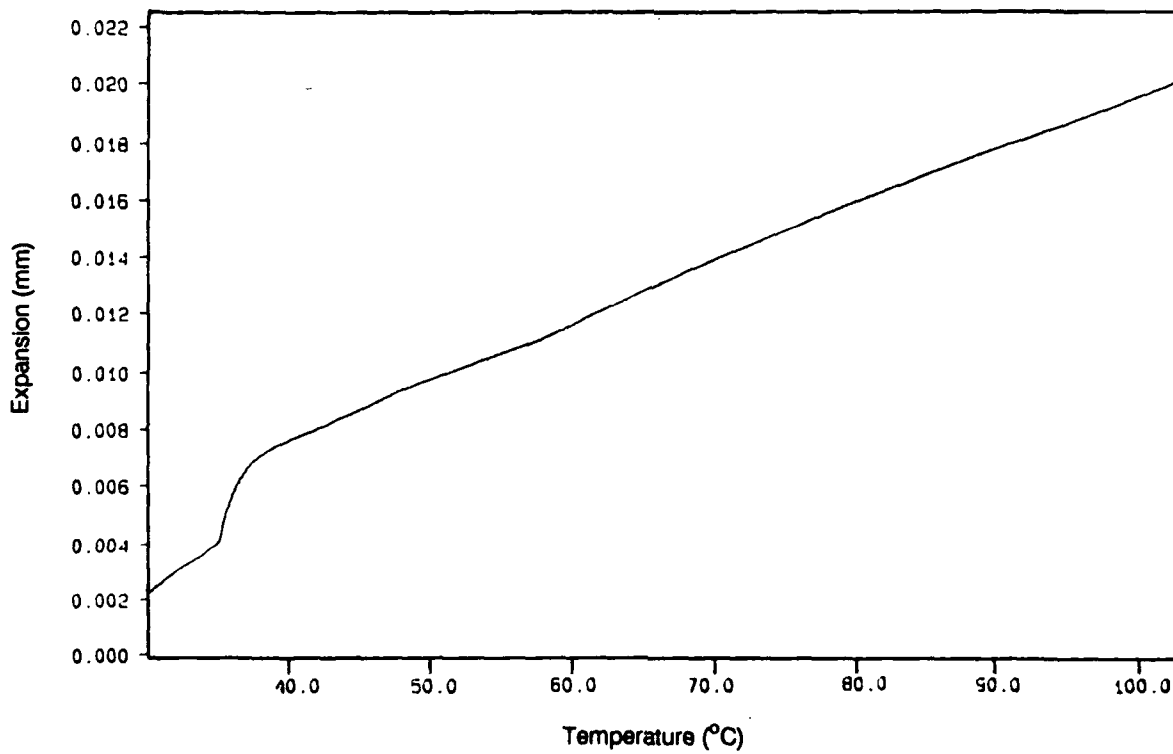


Figure 7a. The thermal expansion for a S-2 glass 3 x 1 (27 oz.) polyester

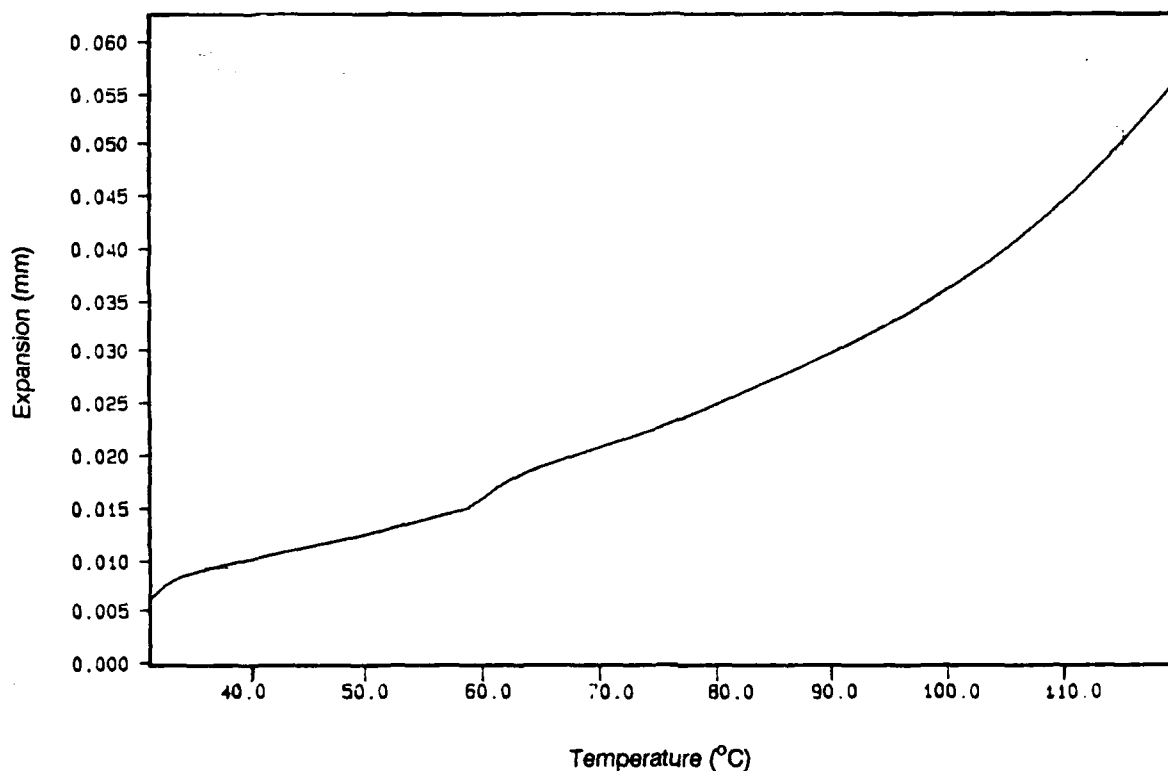


Figure 7b. The thermal expansion for a S-2 glass 3 x 2 (27 oz.) polyester resin matrix composite perpendicular to the fibers.

The fiber volume filling fraction is somewhat smaller for the E-glass and 27 oz. S-2 glass composites. It is also observed the CTEs for the E-glass and S-2 glass 27 oz. composites were higher than those measured for the 8.8 oz. S-2 and the 24 oz. S-2 glass composites; therefore, this behavior is consistent with Equation 2 above.

The composites consistently show an erratic behavior in the expansion coefficient when measured parallel to the fibers. A representative result is shown in Figure 8 for the S-2 glass 5 x 5 (24 oz.) composite. This type of behavior may be caused by small voids which are present in the lamination. The behavior is eliminated or lessened when the samples are annealed under an applied force; however, annealing in an oven without an applied load and then subsequently acquiring the data does not eliminate this behavior as readily. The results reported in Table 3 were all taken after this conditioning treatment.

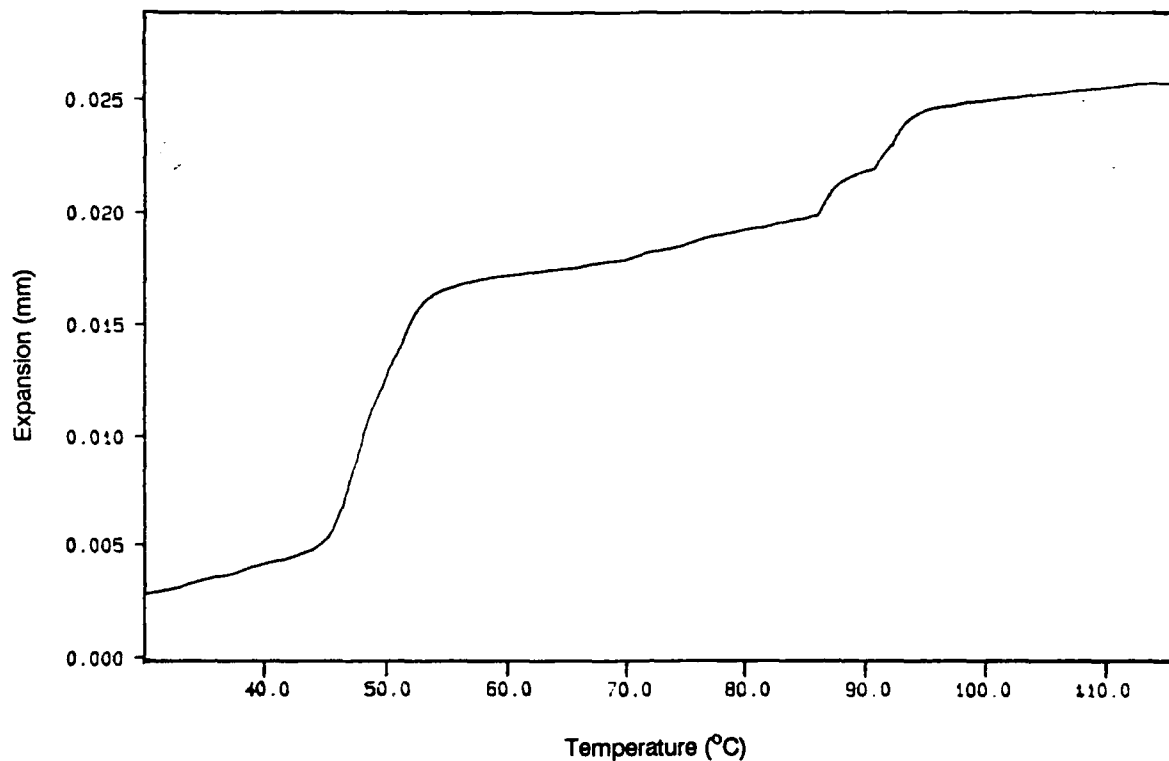


Figure 8. The thermal expansion for S-2 glass composite showing a very nonlinear behavior caused by the inclusion of voids in the laminate.

CONCLUDING REMARKS

The coefficients of thermal expansion for polyester resin, polyester syntactic, epoxy and epoxy syntactic, and glass-polyester resin matrix composites have been determined using a thermal mechanical analyzer. The thermal behavior for the polymers is generally nonlinear and the epoxy resin and syntactic composites show an exaggerated nonlinearity above 60°C. The thermal expansion for the composites is related to the volume filling fraction of the fibers and increases when measured perpendicular to the fibers. An interesting erratic thermal expansion is observed for all the composites when measured parallel to the resin and may be related to voids within the lamination. Further study on the effect of annealing and force on this behavior should be carried out in the future.

DISTRIBUTION LIST

No. of Copies	To
1	Office of the Under Secretary of Defense for Research and Engineering, The Pentagon, Washington, DC 20301
1	Commander, U.S. Army Laboratory Command, 2800 Powder Mill Road, Adelphi, MD 20783-1145
1	ATTN: AMSLC-IM-TL
1	AMSLC-CT
2	Commander, Defense Technical Information Center, Cameron Station, Building 5, 5010 Duke Street, Alexandria, VA 22304-6145
2	ATTN: DTIC-FDAC
1	MIA/CINDAS, Purdue University, 2595 Yeager Road, West Lafayette, IN 47905
1	Commander, Army Research Office, P.O. Box 12211, Research Triangle Park, NC 27709-2211
1	ATTN: Information Processing Office
1	Commander, U.S. Army Materiel Command, 5001 Eisenhower Avenue, Alexandria, VA 22333
1	ATTN: AMCSCI
1	Commander, U.S. Army Materiel Systems Analysis Activity, Aberdeen Proving Ground, MD 21005
1	ATTN: AMXSY-MP, H. Cohen
1	Commander, U.S. Army Missile Command, Redstone Scientific Information Center, Redstone Arsenal, AL 35898-5241
1	ATTN: AMSMI-RD-CS-R/Doc
1	AMSMI-RLM
2	Commander, U.S. Army Armament, Munitions and Chemical Command, Dover, NJ 07801
2	ATTN: Technical Library
1	Commander, U.S. Army Natick Research, Development and Engineering Center, Natick, MA 01760-5010
1	ATTN: Technical Library
1	Commander, U.S. Army Satellite Communications Agency, Fort Monmouth, NJ 07703
1	ATTN: Technical Document Center
1	Commander, U.S. Army Tank-Automotive Command, Warren, MI 48397-5000
1	ATTN: AMSTA-ZSK
1	AMSTA-TSL, Technical Library
1	Commander, White Sands Missile Range, NM 88002
1	ATTN: STEWS-WS-VT
1	President, Airborne, Electronics and Special Warfare Board, Fort Bragg, NC 28307
1	ATTN: Library
1	Director, U.S. Army Ballistic Research Laboratory, Aberdeen Proving Ground, MD 21005
1	ATTN: SLCBR-TSB-S (STINFO)
1	Commander, Dugway Proving Ground, UT 84022
1	ATTN: Technical Library, Technical Information Division
1	Commander, Harry Diamond Laboratories, 2800 Powder Mill Road, Adelphi, MD 20783
1	ATTN: Technical Information Office
1	Director, Benet Weapons Laboratory, LCWSL, USA AMCCOM, Watervliet, NY 12189
1	ATTN: AMSMC-LCB-TL
1	AMSMC-LCB-R
1	AMSMC-LCB-RM
1	AMSMC-LCB-RP
3	Commander, U.S. Army Foreign Science and Technology Center, 220 7th Street, N.E., Charlottesville, VA 22901-5396
3	ATTN: AIFRTC, Applied Technologies Branch, Gerald Schlesinger
1	Commander, U.S. Army Aeromedical Research Unit, P.O. Box 577, Fort Rucker, AL 36360
1	ATTN: Technical Library

No. of Copies	To
1	Commander, U.S. Army Aviation Systems Command, Aviation Research and Technology Activity, Aviation Applied Technology Directorate, Fort Eustis, VA 23604-5577 ATTN: SAVDL-E-MOS
1	U.S. Army Aviation Training Library, Fort Rucker, AL 36360 ATTN: Building 5906-5907
1	Commander, U.S. Army Agency for Aviation Safety, Fort Rucker, AL 36362 ATTN: Technical Library
1	Commander, USACDC Air Defense Agency, Fort Bliss, TX 79916 ATTN: Technical Library
1	Commander, Clarke Engineer School Library, 3202 Nebraska Ave., N, Ft. Leonard Wood, MO 65473-5000 ATTN: Library
1	Commander, U.S. Army Engineer Waterways Experiment Station, P.O. Box 631, Vicksburg, MS 39180 ATTN: Research Center Library
1	Commandant, U.S. Army Quartermaster School, Fort Lee, VA 23801 ATTN: Quartermaster School Library
1	Naval Research Laboratory, Washington, DC 20375 ATTN: Code 5830
2	Dr. G. R. Yoder - Code 6384
1	Chief of Naval Research, Arlington, VA 22217 ATTN: Code 471
1	Edward J. Morrissey, WRDC/MLTE, Wright-Patterson Air Force Base, OH 45433-6523
1	Commander, U.S. Air Force Wright Research & Development Center, Wright-Patterson Air Force Base, OH 45433-6523 ATTN: WRDC/MLLP, M. Forney, Jr.
1	WRDC/MLBC, Mr. Stanley Schulman
1	NASA - Marshall Space Flight Center, MSFC, AL 35812 ATTN: Mr. Paul Schuerer/EH01
1	U.S. Department of Commerce, National Institute of Standards and Technology, Gaithersburg, MD 20899 ATTN: Stephen M. Hsu, Chief, Ceramics Division, Institute for Materials Science and Engineering
1	Committee on Marine Structures, Marine Board, National Research Council, 2101 Constitution Avenue, N.W., Washington, DC 20418
1	Librarian, Materials Sciences Corporation, 930 Harvest Drive, Suite 300, Blue Bell, PA 19422
1	Charles Stark Draper Laboratory, 68 Albany Street, Cambridge, MA 02139
1	Wyman-Gordon Company, Worcester, MA 01601 ATTN: Technical Library
1	General Dynamics, Convair Aerospace Division P.O. Box 748, Forth Worth, TX 76101 ATTN: Mfg. Engineering Technical Library
1	Plastics Technical Evaluation Center, PLASTEC, ARDEC Bldg. 355N, Picatinny Arsenal, NJ 07806-5000 ATTN: Harry Pebly
1	Department of the Army, Aerostructures Directorate, MS-266, U.S. Army Aviation R&T Activity - AVSCOM, Langley Research Center, Hampton, VA 23665-5225
1	NASA - Langley Research Center, Hampton, VA 23665-5225
1	U.S. Army Propulsion Directorate, NASA Lewis Research Center, 2100 Brookpark Road, Cleveland, OH 44135-3191
1	NASA - Lewis Research Center, 2100 Brookpark Road, Cleveland, OH 44135-3191
2	Director, U.S. Army Materials Technology Laboratory, Watertown, MA 02172-0001 ATTN: SLCMT-TML
2	Authors

U.S. Army Materials Technology Laboratory
Watertown, Massachusetts 02172-0001
THERMAL EXPANSION MEASUREMENTS OF
POLYMER MATRIX COMPOSITES AND SYNTACTICS -
Louise C. Sengupta and William A. Spurgeon

AD UNCLASSIFIED
UNLIMITED DISTRIBUTION
Key Words

Technical Report MTL TR 92-27, April 1992, 14 pp-
illus-tables

The coefficients of thermal expansion (CTE) of various polymer matrix materials were measured using a thermal mechanical analyzer. The measurements include a set of standard materials used as calibration materials for the instrument. The data for the base polymers, syntactics, and E and S-2 glass-reinforced polyester matrix composites were obtained in the temperature range from -77°C to 120°C. The results for all of the polymeric materials, especially for the epoxy and epoxy syntactic (above 65°C), are nonlinear. The CTE of the syntactics were reduced by a factor of ~2 for the base resins. The data taken for the glass-reinforced composites show peaks and/or humps in the thermal expansion. These features are believed to be from the formation of voids within the plies of the composite laminate. The irregular behavior of the thermal expansion was minimized by thermal annealing under load conditions, whereas annealing in free-space does not significantly dampen this behavior. The thermal expansion of the material appears to be directly related to the fiber loading.

U.S. Army Materials Technology Laboratory
Watertown, Massachusetts 02172-0001
THERMAL EXPANSION MEASUREMENTS OF
POLYMER MATRIX COMPOSITES AND SYNTACTICS -
Louise C. Sengupta and William A. Spurgeon

AD UNCLASSIFIED
UNLIMITED DISTRIBUTION
Key Words

Technical Report MTL TR 92-27, April 1992, 14 pp-
illus-tables

The coefficients of thermal expansion (CTE) of various polymer matrix materials were measured using a thermal mechanical analyzer. The measurements include a set of standard materials used as calibration materials for the instrument. The data for the base polymers, syntactics, and E and S-2 glass-reinforced polyester matrix composites were obtained in the temperature range from -77°C to 120°C. The results for all of the polymeric materials, especially for the epoxy and epoxy syntactic (above 65°C), are nonlinear. The CTE of the syntactics were reduced by a factor of ~2 for the base resins. The data taken for the glass-reinforced composites show peaks and/or humps in the thermal expansion. These features are believed to be from the formation of voids within the plies of the composite laminate. The irregular behavior of the thermal expansion was minimized by thermal annealing under load conditions, whereas annealing in free-space does not significantly dampen this behavior. The thermal expansion of the material appears to be directly related to the fiber loading.

U.S. Army Materials Technology Laboratory
Watertown, Massachusetts 02172-0001
THERMAL EXPANSION MEASUREMENTS OF
POLYMER MATRIX COMPOSITES AND SYNTACTICS -
Louise C. Sengupta and William A. Spurgeon

AD UNCLASSIFIED
UNLIMITED DISTRIBUTION
Key Words

Technical Report MTL TR 92-27, April 1992, 14 pp-
illus-tables

The coefficients of thermal expansion (CTE) of various polymer matrix materials were measured using a thermal mechanical analyzer. The measurements include a set of standard materials used as calibration materials for the instrument. The data for the base polymers, syntactics, and E and S-2 glass-reinforced polyester matrix composites were obtained in the temperature range from -77°C to 120°C. The results for all of the polymeric materials, especially for the epoxy and epoxy syntactic (above 65°C), are nonlinear. The CTE of the syntactics were reduced by a factor of ~2 for the base resins. The data taken for the glass-reinforced composites show peaks and/or humps in the thermal expansion. These features are believed to be from the formation of voids within the plies of the composite laminate. The irregular behavior of the thermal expansion was minimized by thermal annealing under load conditions, whereas annealing in free-space does not significantly dampen this behavior. The thermal expansion of the material appears to be directly related to the fiber loading.

U.S. Army Materials Technology Laboratory
Watertown, Massachusetts 02172-0001
THERMAL EXPANSION MEASUREMENTS OF
POLYMER MATRIX COMPOSITES AND SYNTACTICS -
Louise C. Sengupta and William A. Spurgeon

AD UNCLASSIFIED
UNLIMITED DISTRIBUTION
Key Words

Technical Report MTL TR 92-27, April 1992, 14 pp-
illus-tables

The coefficients of thermal expansion (CTE) of various polymer matrix materials were measured using a thermal mechanical analyzer. The measurements include a set of standard materials used as calibration materials for the instrument. The data for the base polymers, syntactics, and E and S-2 glass-reinforced polyester matrix composites were obtained in the temperature range from -77°C to 120°C. The results for all of the polymeric materials, especially for the epoxy and epoxy syntactic (above 65°C), are nonlinear. The CTE of the syntactics were reduced by a factor of ~2 for the base resins. The data taken for the glass-reinforced composites show peaks and/or humps in the thermal expansion. These features are believed to be from the formation of voids within the plies of the composite laminate. The irregular behavior of the thermal expansion was minimized by thermal annealing under load conditions, whereas annealing in free-space does not significantly dampen this behavior. The thermal expansion of the material appears to be directly related to the fiber loading.