

SAMPLE	TUE-4-1
baseline solution	BMS
	[10 mM MES pH 7.0 in 0.15 M (8.85 g/L) NaCl + 0.025 M (~2.5 g/L) CaCl ₂]
Date	20-Sep-04
Biosensor	30
pH optode	77
Hardware	Model 1 with PMT at 600 V

total volume 4850 uL

always removed same volume as was to be injected

Data from measurement of sample and standards:

vol (uL)	soln	conc (ppb)	biosensor ΔV_{obs}	pH optode ΔV
100	GW	??	0.107	0.022
100	DCA standard	100	0.312	0.026
50	DCA standard	100	0.157	0.013
25	DCA standard	100	0.086	0.007

Data for correlation of pH response:

(performed in same baseline solution as above)

use correlation for biosensor 30 and pH optode 77 on separate worksheet

$$\text{so } \Delta V_{pH} (\text{bio30}) = \Delta V_{pH} (\text{pH77}) * 3.58$$

so ΔV_{pH} experienced by biosensor is:

vol (uL)	soln	conc (ppb)	biosensor ΔV_{pH}
100	GW	??	0.079
100	DCA standard	100	0.093
50	DCA standard	100	0.047
25	DCA standard	100	0.025

then, since:

$$\Delta V_{obs} = \Delta V_{pH} + \Delta V_{DCA}$$

can calculate ΔV_{DCA} (biosensor response due to DCA only):


vol (uL)	soln	conc (ppb)	biosensor ΔV_{DCA}
100	GW	??	0.028
100	DCA standard	100	0.219
50	DCA standard	100	0.110
25	DCA standard	100	0.061

Report Documentation Page				Form Approved OMB No. 0704-0188	
Public reporting burden for the collection of information is estimated to average 1 hour per response, including the time for reviewing instructions, searching existing data sources, gathering and maintaining the data needed, and completing and reviewing the collection of information. Send comments regarding this burden estimate or any other aspect of this collection of information, including suggestions for reducing this burden, to Washington Headquarters Services, Directorate for Information Operations and Reports, 1215 Jefferson Davis Highway, Suite 1204, Arlington VA 22202-4302. Respondents should be aware that notwithstanding any other provision of law, no person shall be subject to a penalty for failing to comply with a collection of information if it does not display a currently valid OMB control number.					
1. REPORT DATE 01 DEC 2005		2. REPORT TYPE Final		3. DATES COVERED -	
4. TITLE AND SUBTITLE Fiber Optic Biosensors for Contaminant Monitoring: Appendix D				5a. CONTRACT NUMBER	
				5b. GRANT NUMBER	
				5c. PROGRAM ELEMENT NUMBER	
6. AUTHOR(S) Olsen, Roger * Reardon, Ken				5d. PROJECT NUMBER CU-0115	
				5e. TASK NUMBER	
				5f. WORK UNIT NUMBER	
7. PERFORMING ORGANIZATION NAME(S) AND ADDRESS(ES) Camp Dresser & McKee, Inc. 1331 17th Street, Suite 1200 Denver, CO 80202 * Colorado State University Chemical Engineering 100 Glover Fort Collins, CO 80523-1320				8. PERFORMING ORGANIZATION REPORT NUMBER	
9. SPONSORING/MONITORING AGENCY NAME(S) AND ADDRESS(ES) Environmental Security Technology Certification Program 901 N. Stuart Street, Suite 303 Arlington VA 22203				10. SPONSOR/MONITOR'S ACRONYM(S) ESTCP	
				11. SPONSOR/MONITOR'S REPORT NUMBER(S)	
12. DISTRIBUTION/AVAILABILITY STATEMENT Approved for public release, distribution unlimited					
13. SUPPLEMENTARY NOTES The original document contains color images.					
14. ABSTRACT					
15. SUBJECT TERMS					
16. SECURITY CLASSIFICATION OF:			17. LIMITATION OF ABSTRACT UU	18. NUMBER OF PAGES 3	19a. NAME OF RESPONSIBLE PERSON
a. REPORT unclassified	b. ABSTRACT unclassified	c. THIS PAGE unclassified			

Calculation with no corrections:

0

vol (uL) soln	conc (ppb)	Δ conc (ppb)	biosensor Δ Vobs
100 GW	??		0.107
100 DCA standard	100	2.1	0.312
50 DCA standard	100	1.0	0.157
25 DCA standard	100	0.5	0.086

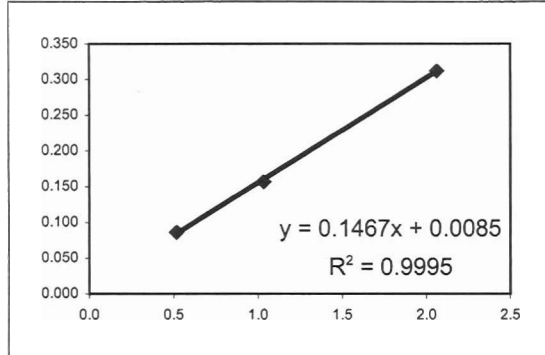

GW Δ C = 0.7
GW DCA = 32.6

Calculation including mass removed effects only:

Initial concentration in baseline solution is:

0 ppb


Then starting conc in vial is:

0 ppb

Guess GW conc

32 ppb

vol (uL)	soln	conc (ppb)	conc after spike	Δ conc (ppb)	biosensor Δ Vobs
100	GW	??	0.7	0.7	0.107
100	DCA standard	100	2.7	2.0	0.312
50	DCA standard	100	3.7	1.0	0.157
25	DCA standard	100	4.2	0.5	0.086

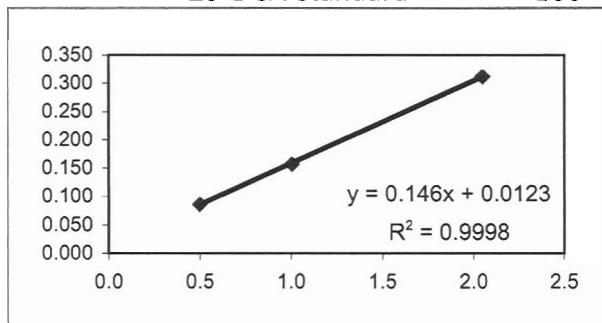

0.6
31.5

Calculation including volume & pH effects:

Initial concentration in baseline solution is:

0 ppb


Then starting conc in vial is:

0 ppb

Guess GW conc

9 ppb

vol (uL) soln	conc (ppb)	conc after spike	Δ conc (ppb)	biosensor ΔV_{DCA}
100 GW	??	0.2	0.2	0.028
100 DCA standard	100	2.2	2.1	0.219
50 DCA standard	100	3.3	1.0	0.110
25 DCA standard	100	3.8	0.5	0.061

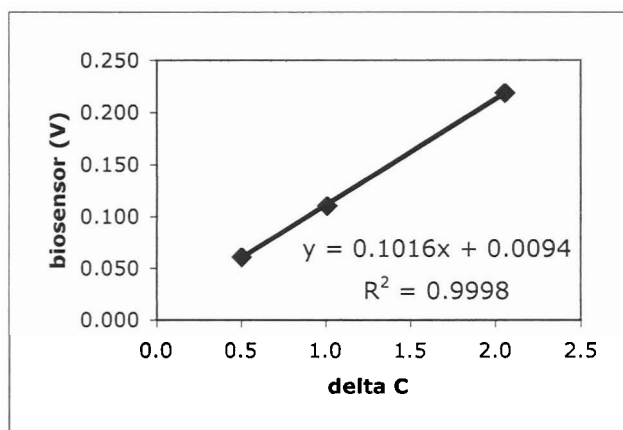

GW $\Delta C =$ 0.2

GW DCA = 9.0